

TIMING CHAIN COVER SUB–ASSY (1GR–FE)(From August, 2004)

COMPONENTS


170DO–04

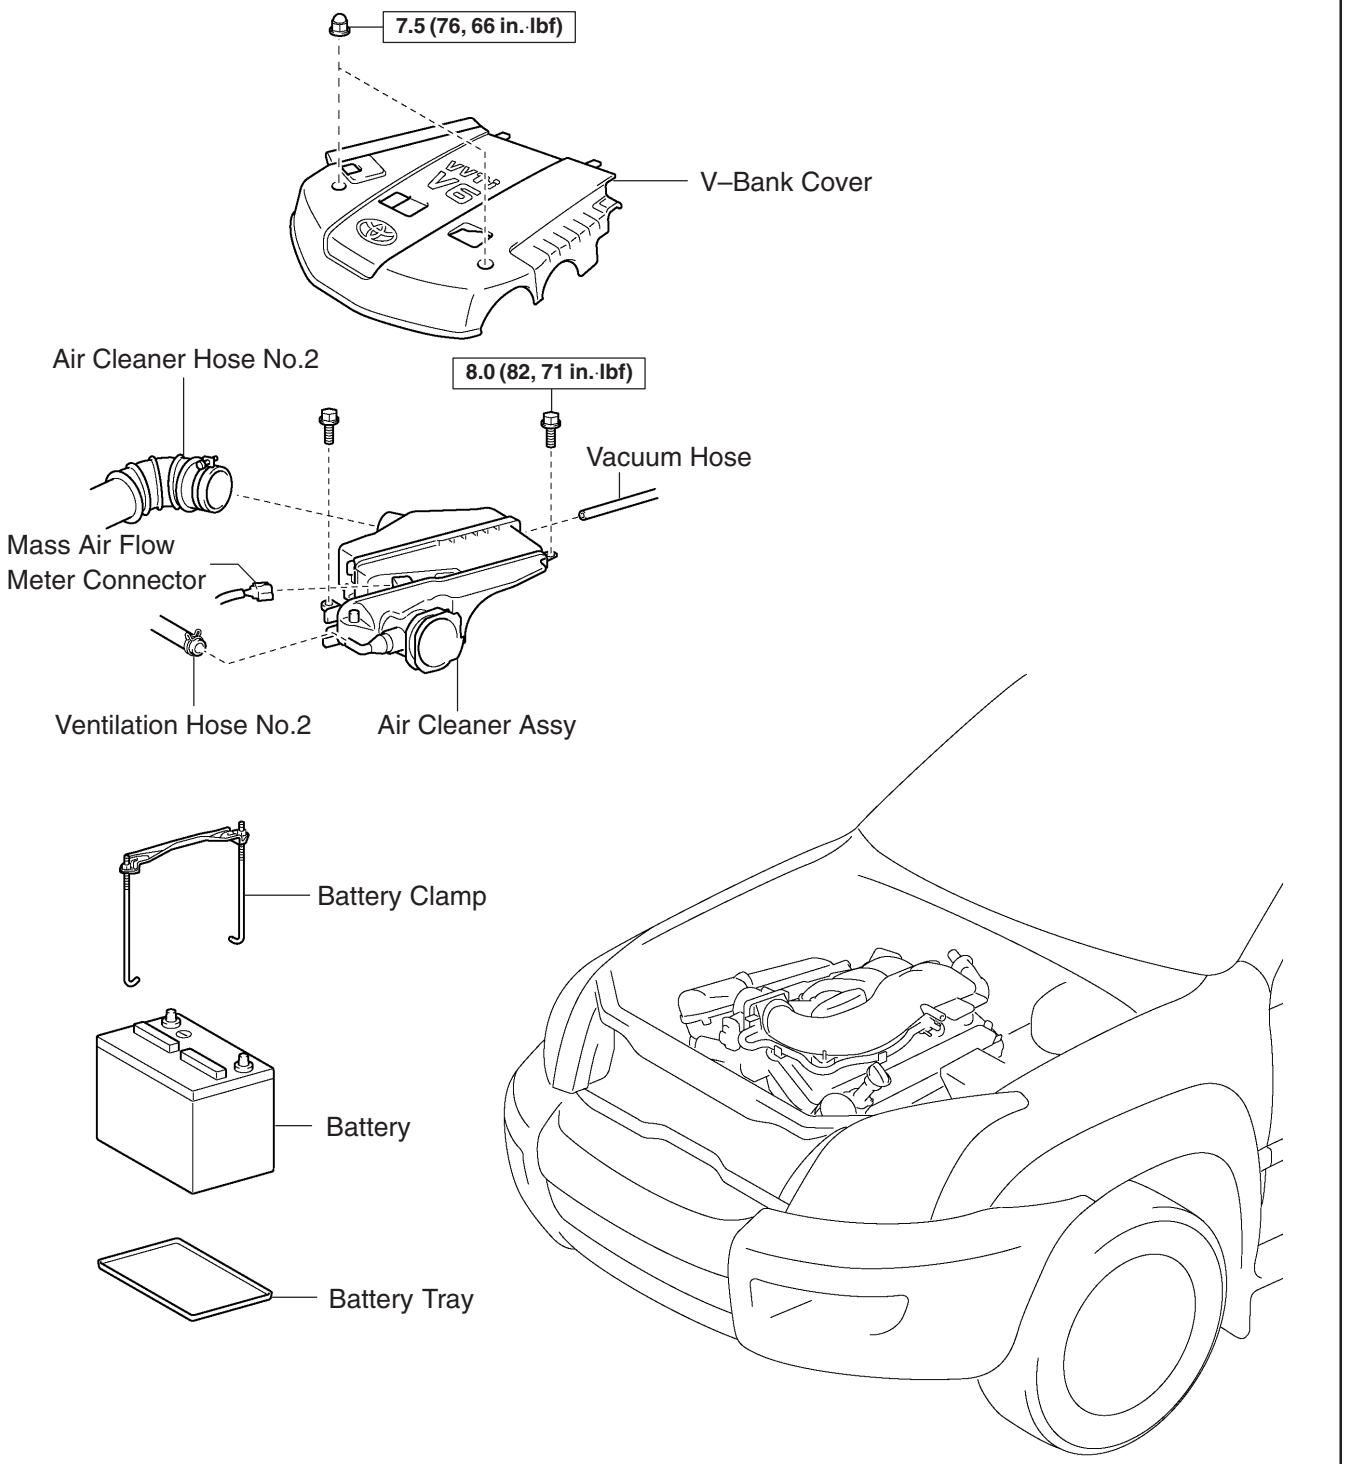

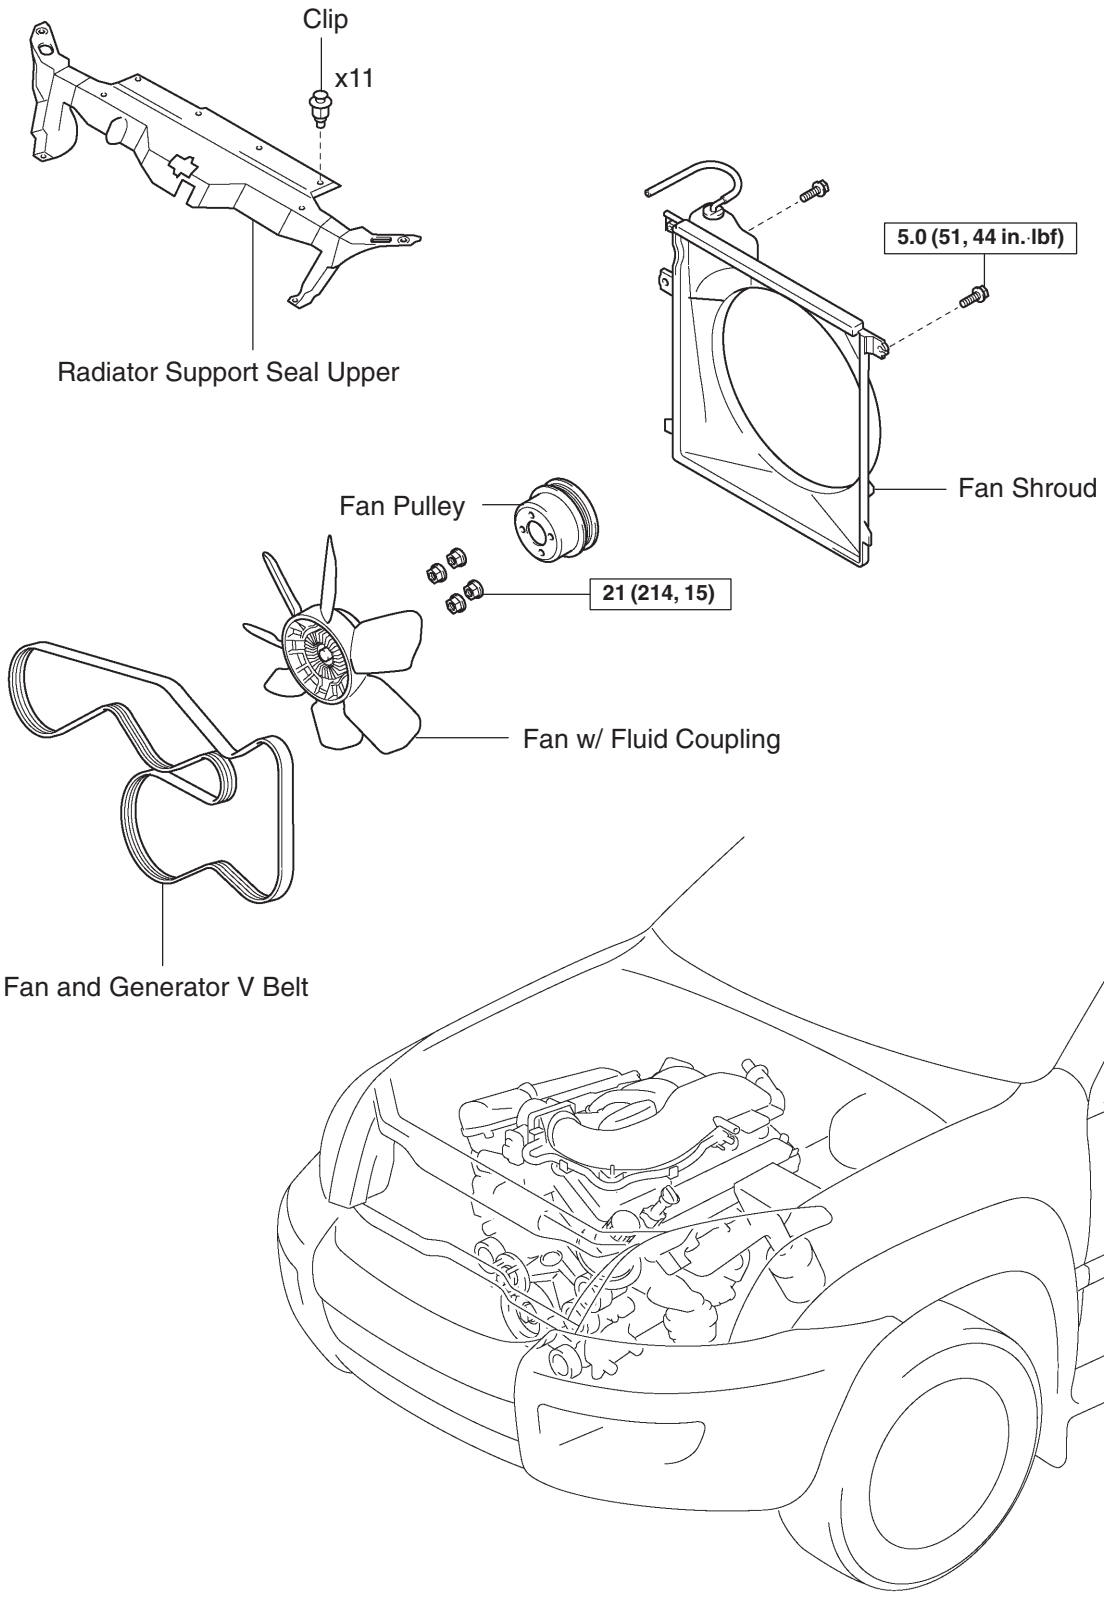

Y N·m (kgf·cm, ft·lbf) : Specified torque


A78621

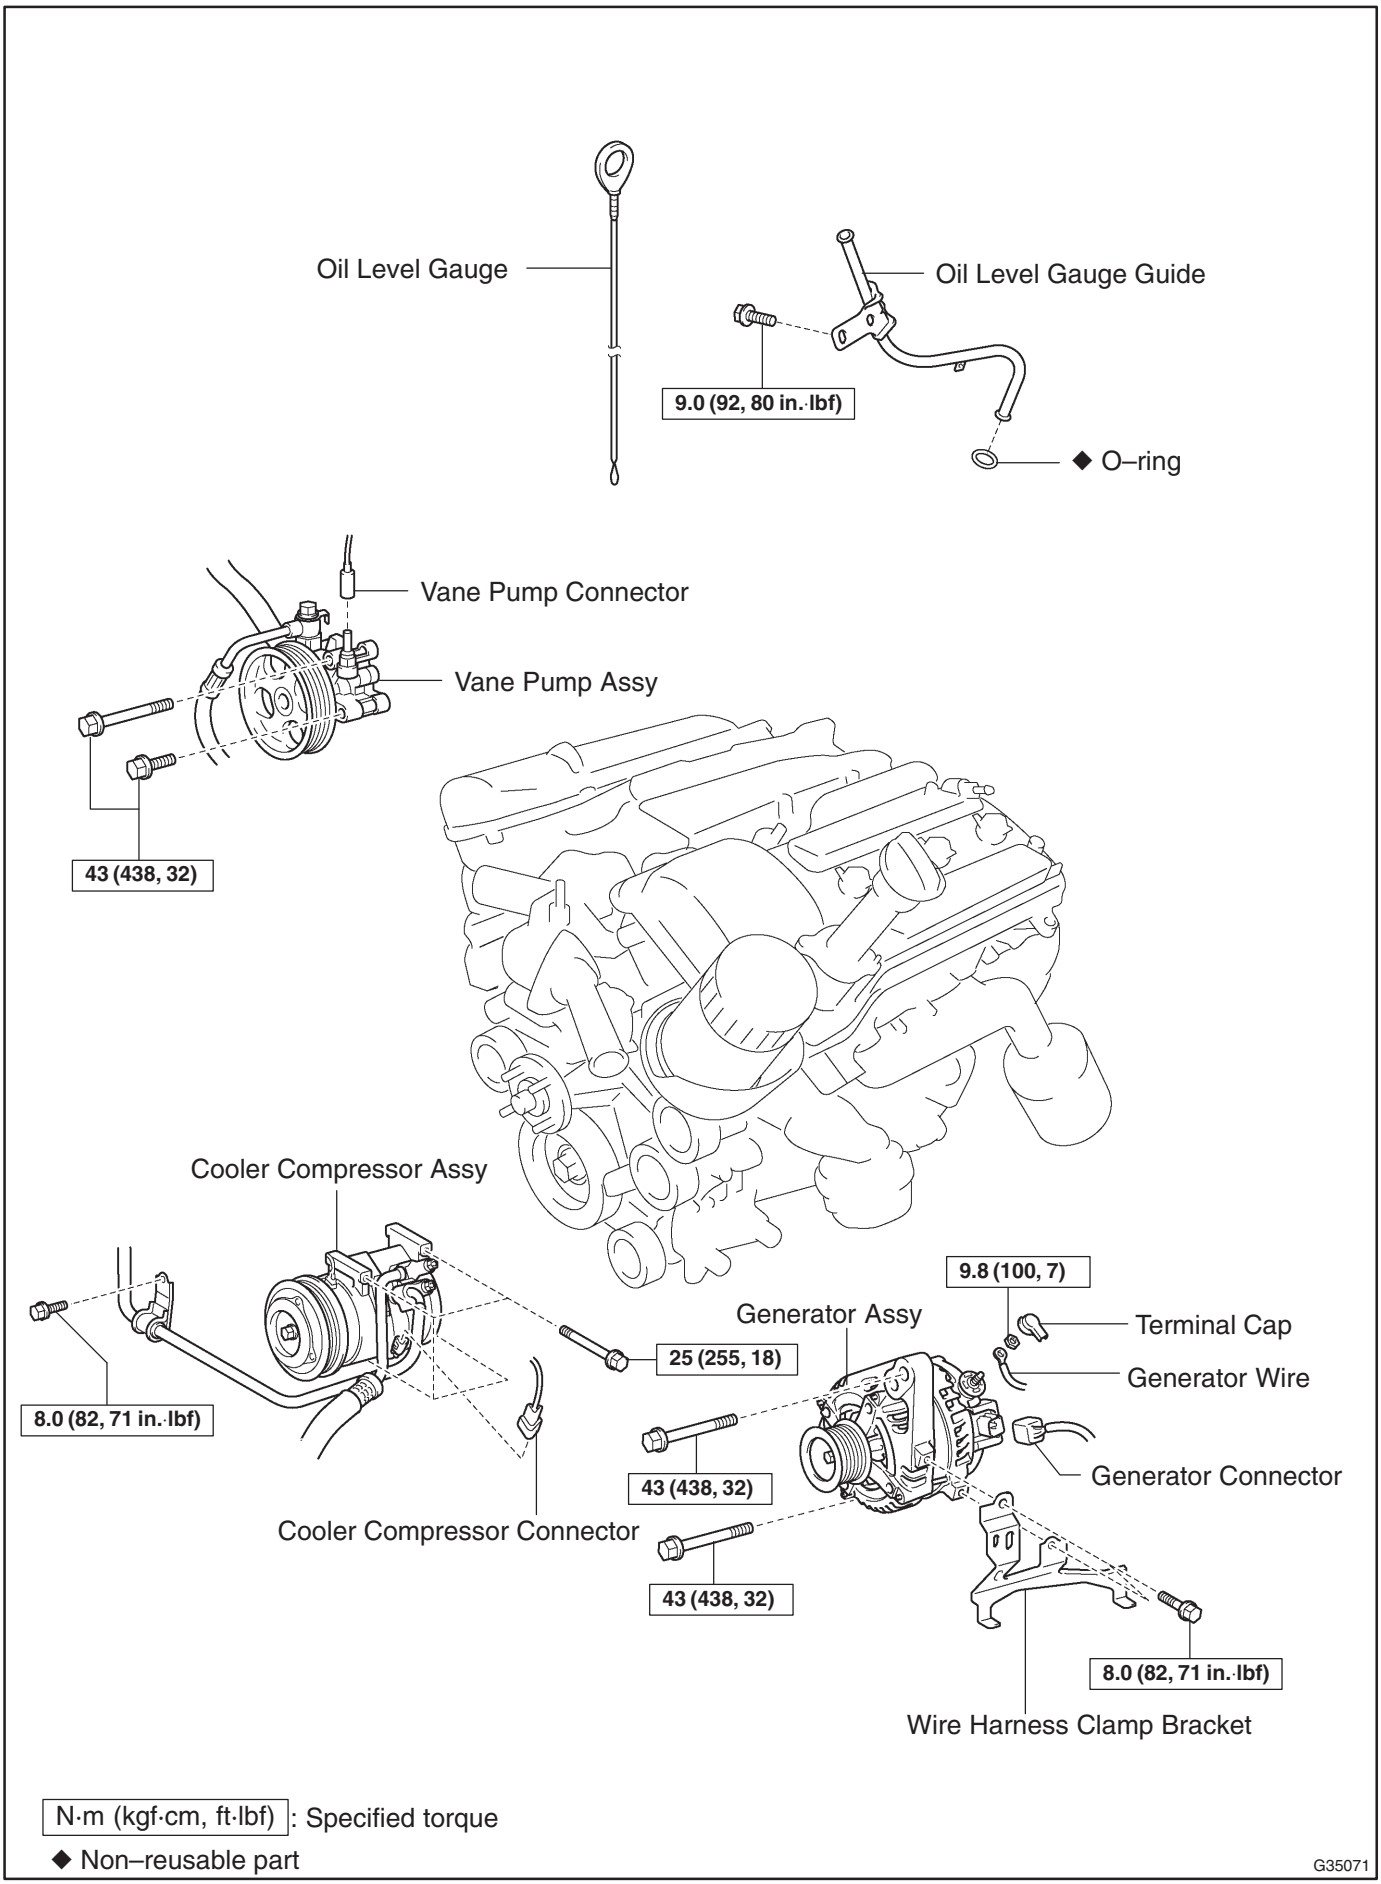

N·m (kgf·cm, ft·lbf) : Specified torque

◆ Non–reusable part


G35071

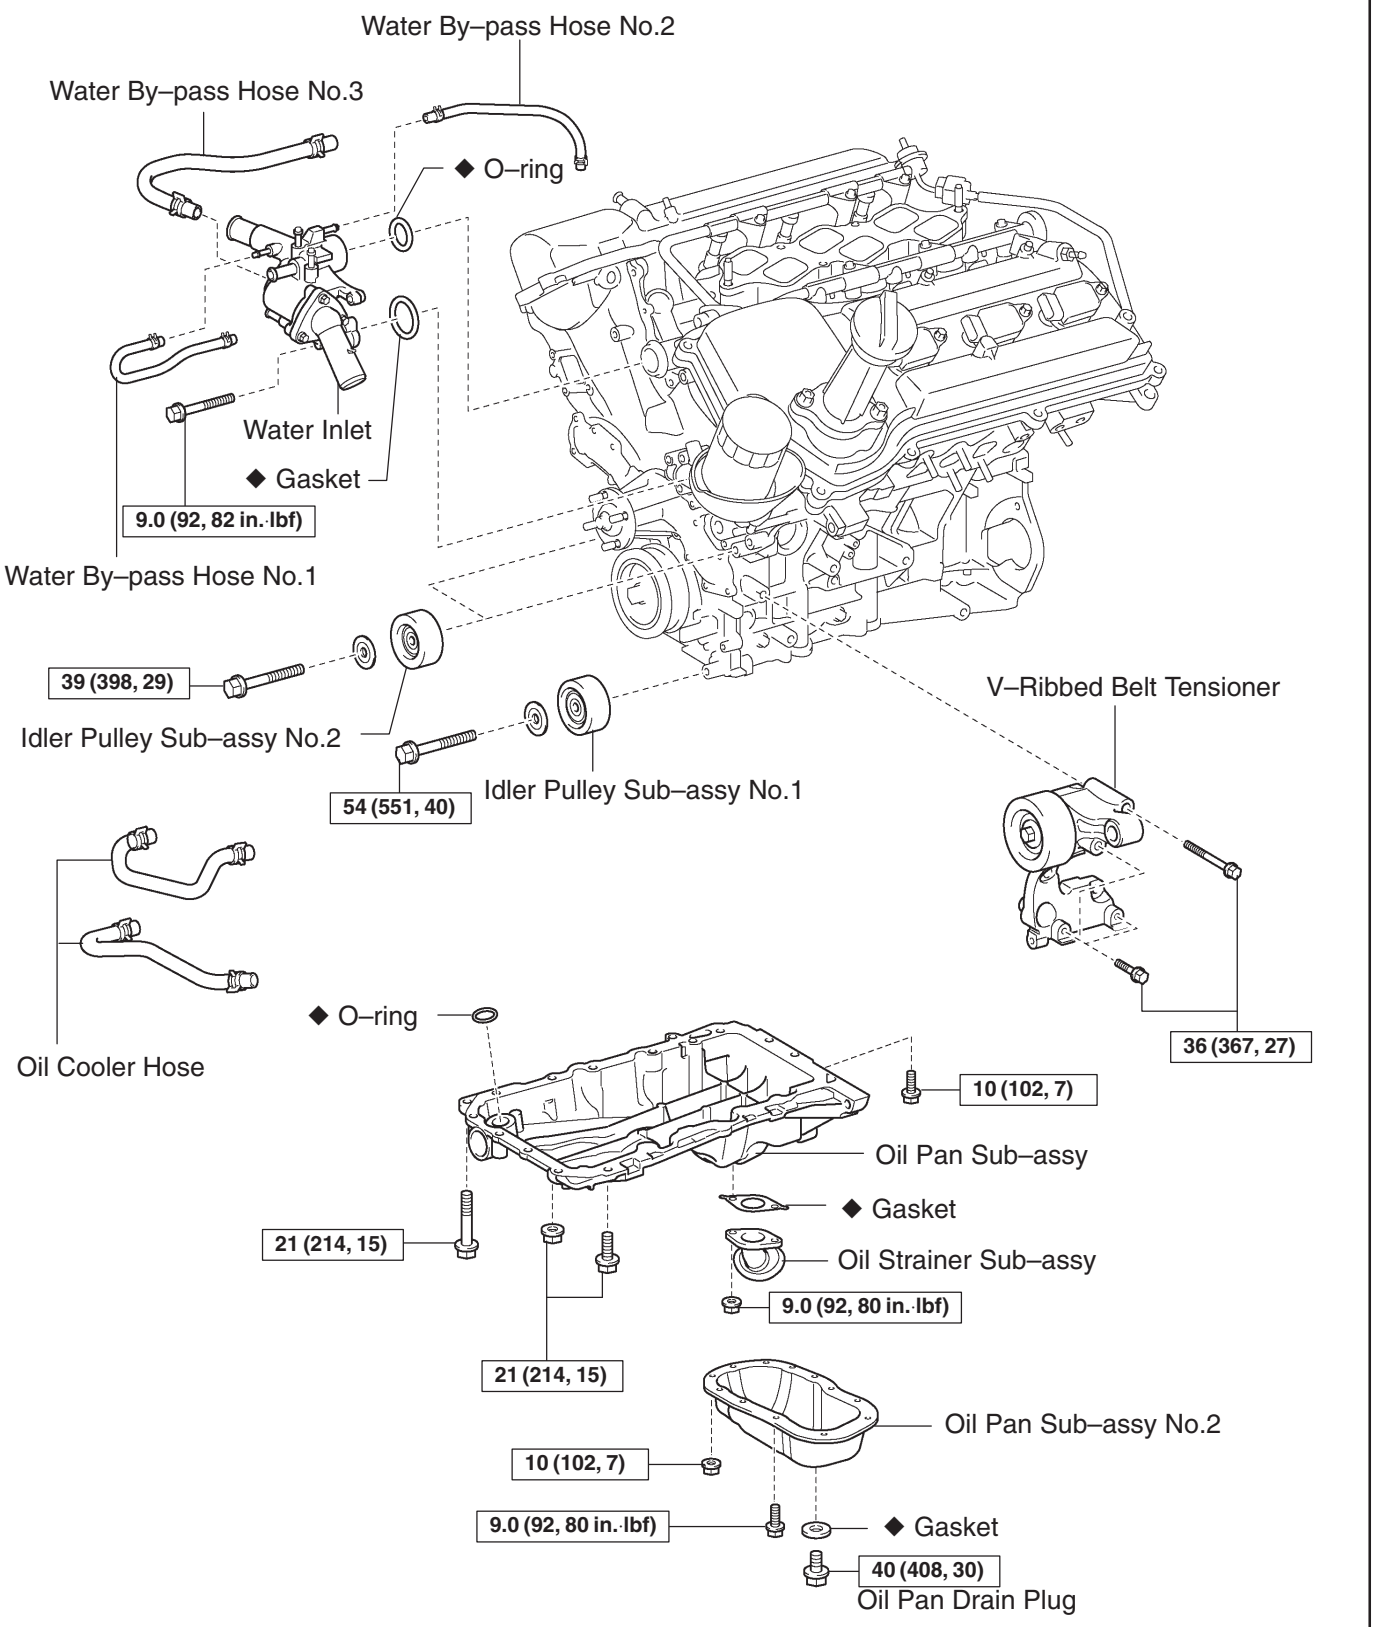


N·m (kgf·cm, ft·lbf): Specified torque

◆ Non–reusable part

G35072

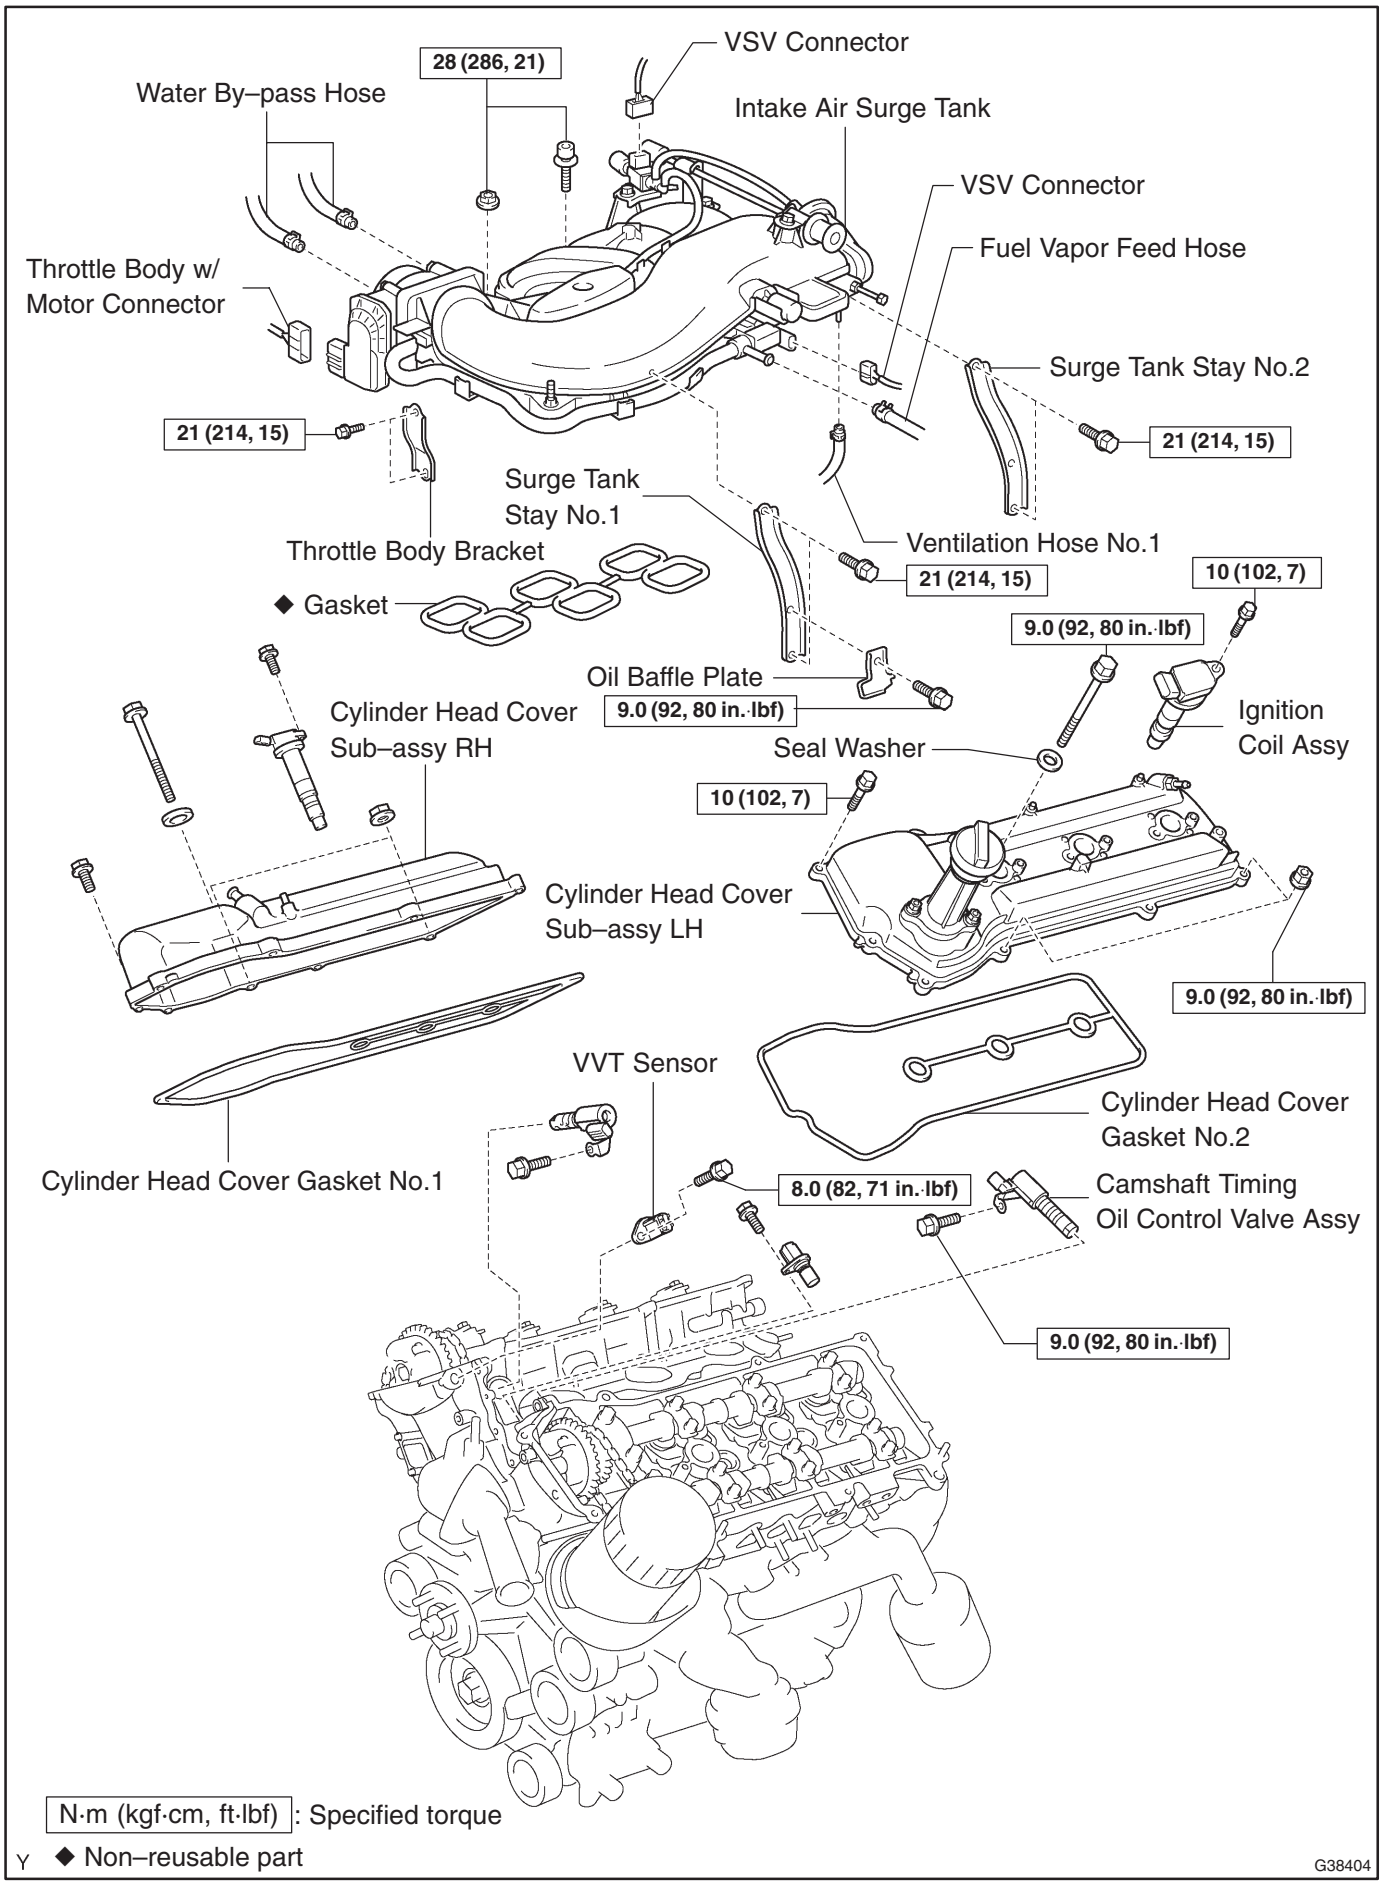
VSV Connector
28 (286, 21)
Water By–pass Hose
Intake Air Surge Tank
VSV Connector
Fuel Vapor Feed Hose
Throttle Body w/
Motor Connector
Surge Tank Stay No.2
21 (214, 15)
21 (214, 15)
Surge Tank
Stay No.1
Ventilation Hose No.1
Throttle Body Bracket
21 (214, 15)
10 (102, 7)
◆ Gasket
9.0 (92, 80 in.·lbf)
Oil Baffle Plate
9.0 (92, 80 in.·lbf)
Ignition
Coil Assy
Cylinder Head Cover
Sub–assy RH
Seal Washer
10 (102, 7)
Cylinder Head Cover
Sub–assy LH
9.0 (92, 80 in.·lbf)
VVT Sensor
Cylinder Head Cover
Gasket No.2
Cylinder Head Cover Gasket No.1
8.0 (82, 71 in.·lbf)
Camshaft Timing
Oil Control Valve Assy
9.0 (92, 80 in.·lbf)
N·m (kgf·cm, ft·lbf): Specified torque
◆ Non–reusable part
G38404

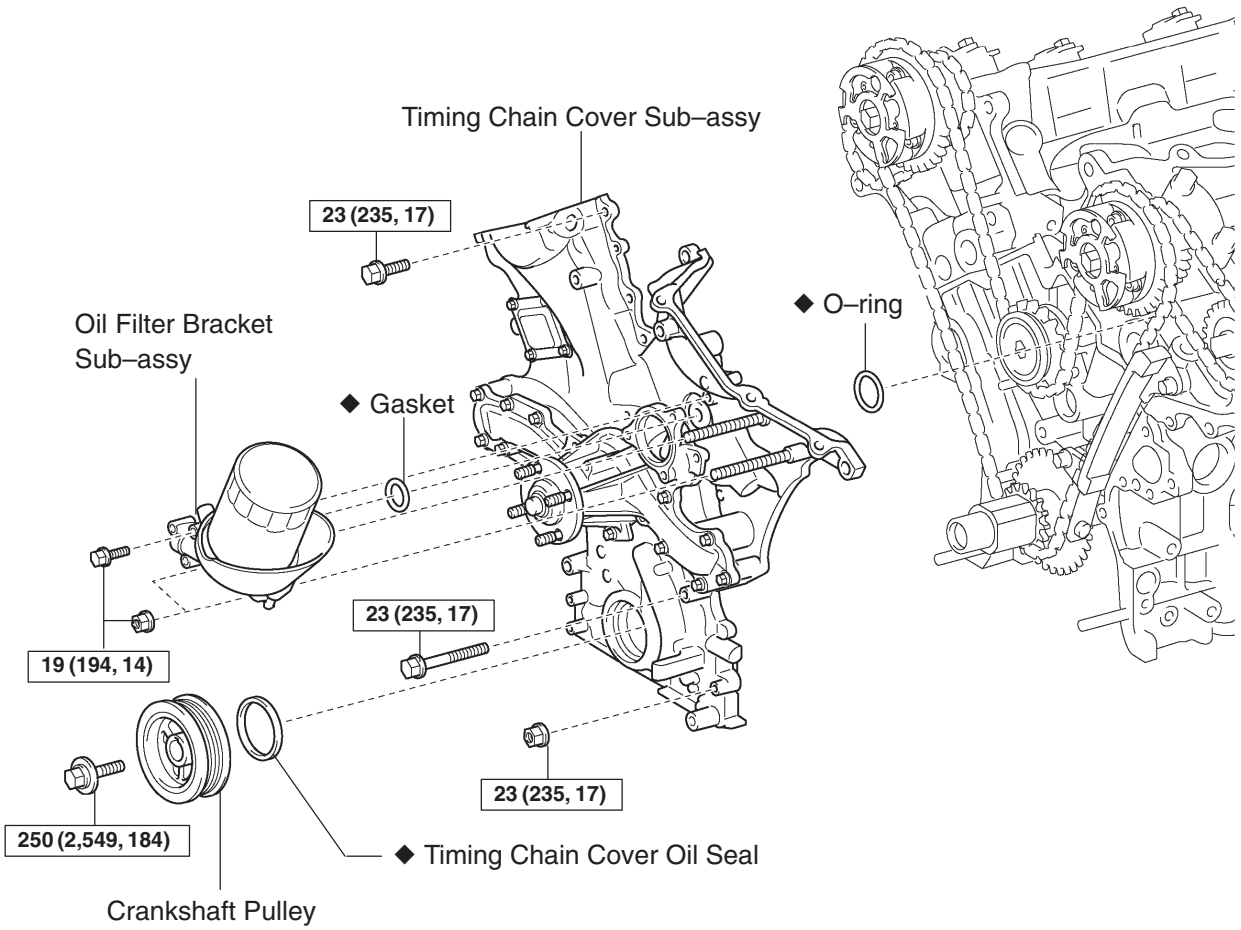

N·m (kgf·cm, ft·lbf) : Specified torque

◆ Non–reusable part

Y

G38100