

INJECTION OR SUPPLY PUMP ASSY (1KZ–TE)

110L5–01

COMPONENTS

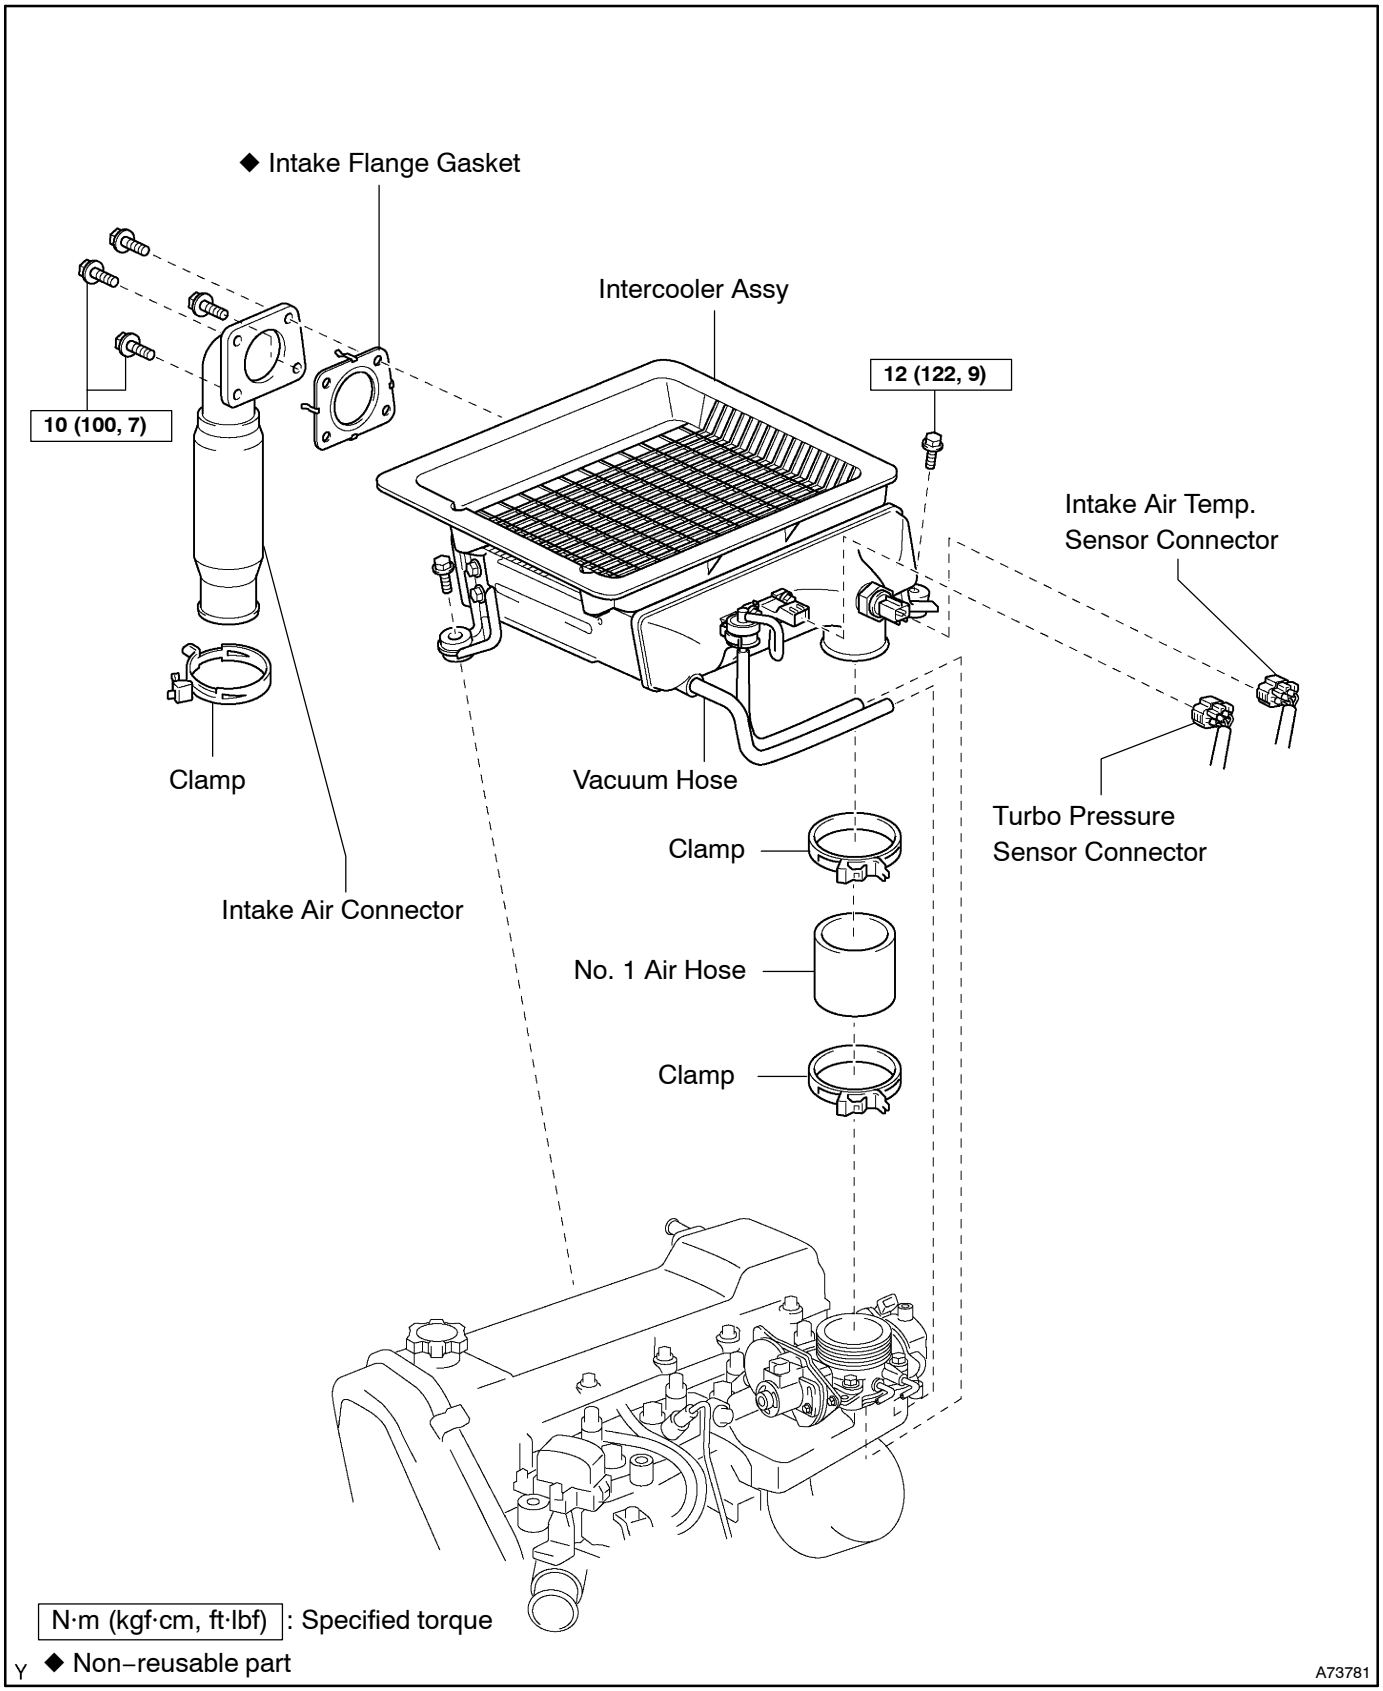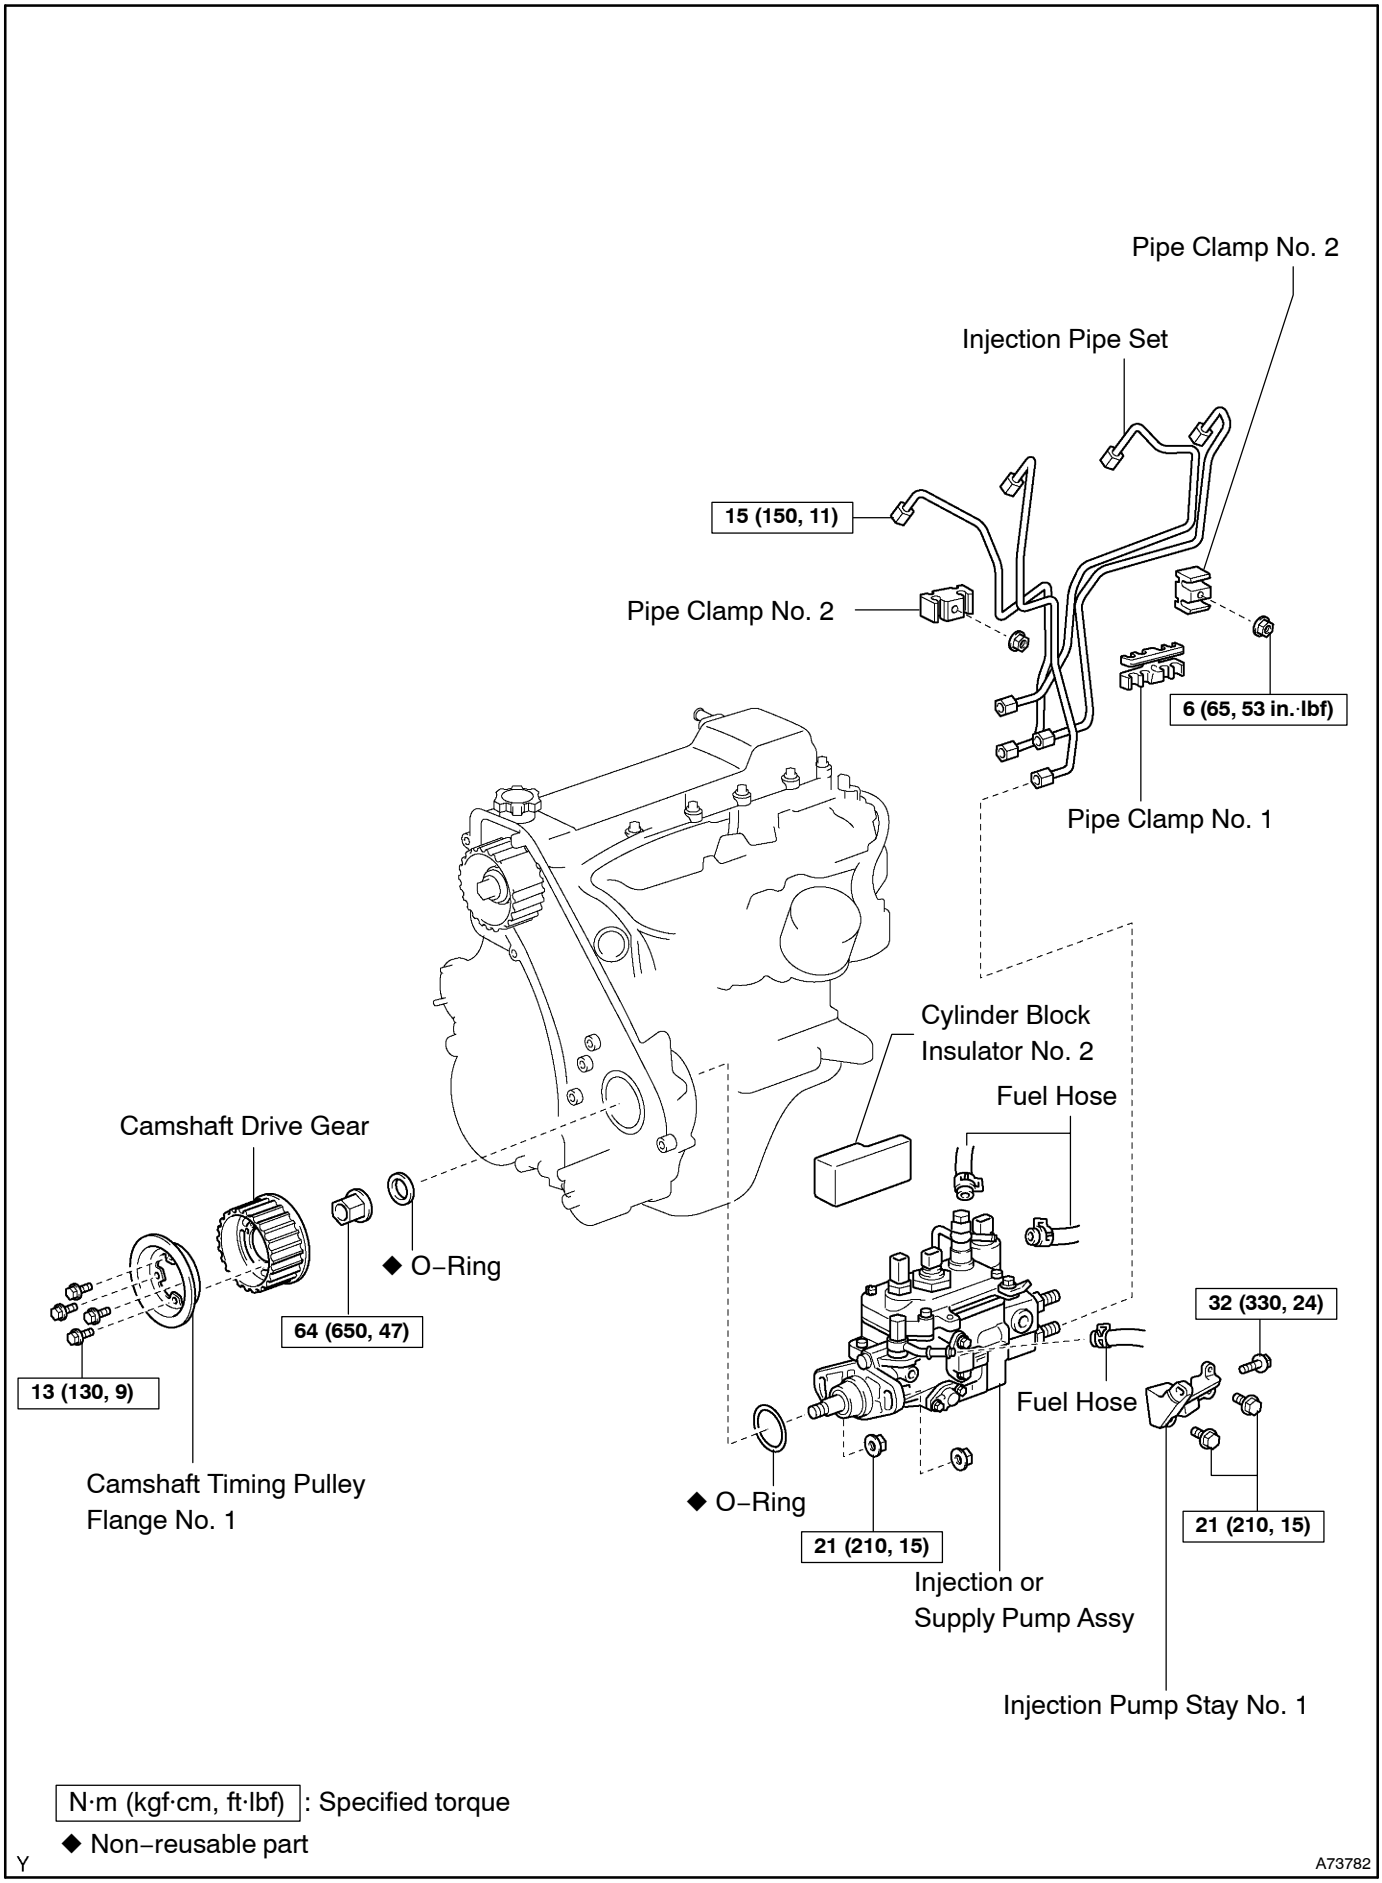


Pipe Clamp No. 2
Injection Pipe Set
15 (150, 11)
Pipe Clamp No. 2
6 (65, 53 in.·lbf)
Pipe Clamp No. 1
Cylinder Block
Insulator No. 2
Fuel Hose
Camshaft Drive Gear
◆ O–Ring
64 (650, 47)
13 (130, 9)
Camshaft Timing Pulley
Flange No. 1
32 (330, 24)
Fuel Hose
◆ O–Ring
21 (210, 15)
21 (210, 15)
Injection or
Supply Pump Assy
Injection Pump Stay No. 1
N·m (kgf·cm, ft·lbf) : Specified torque
◆ Non–reusable part
Y
A73782