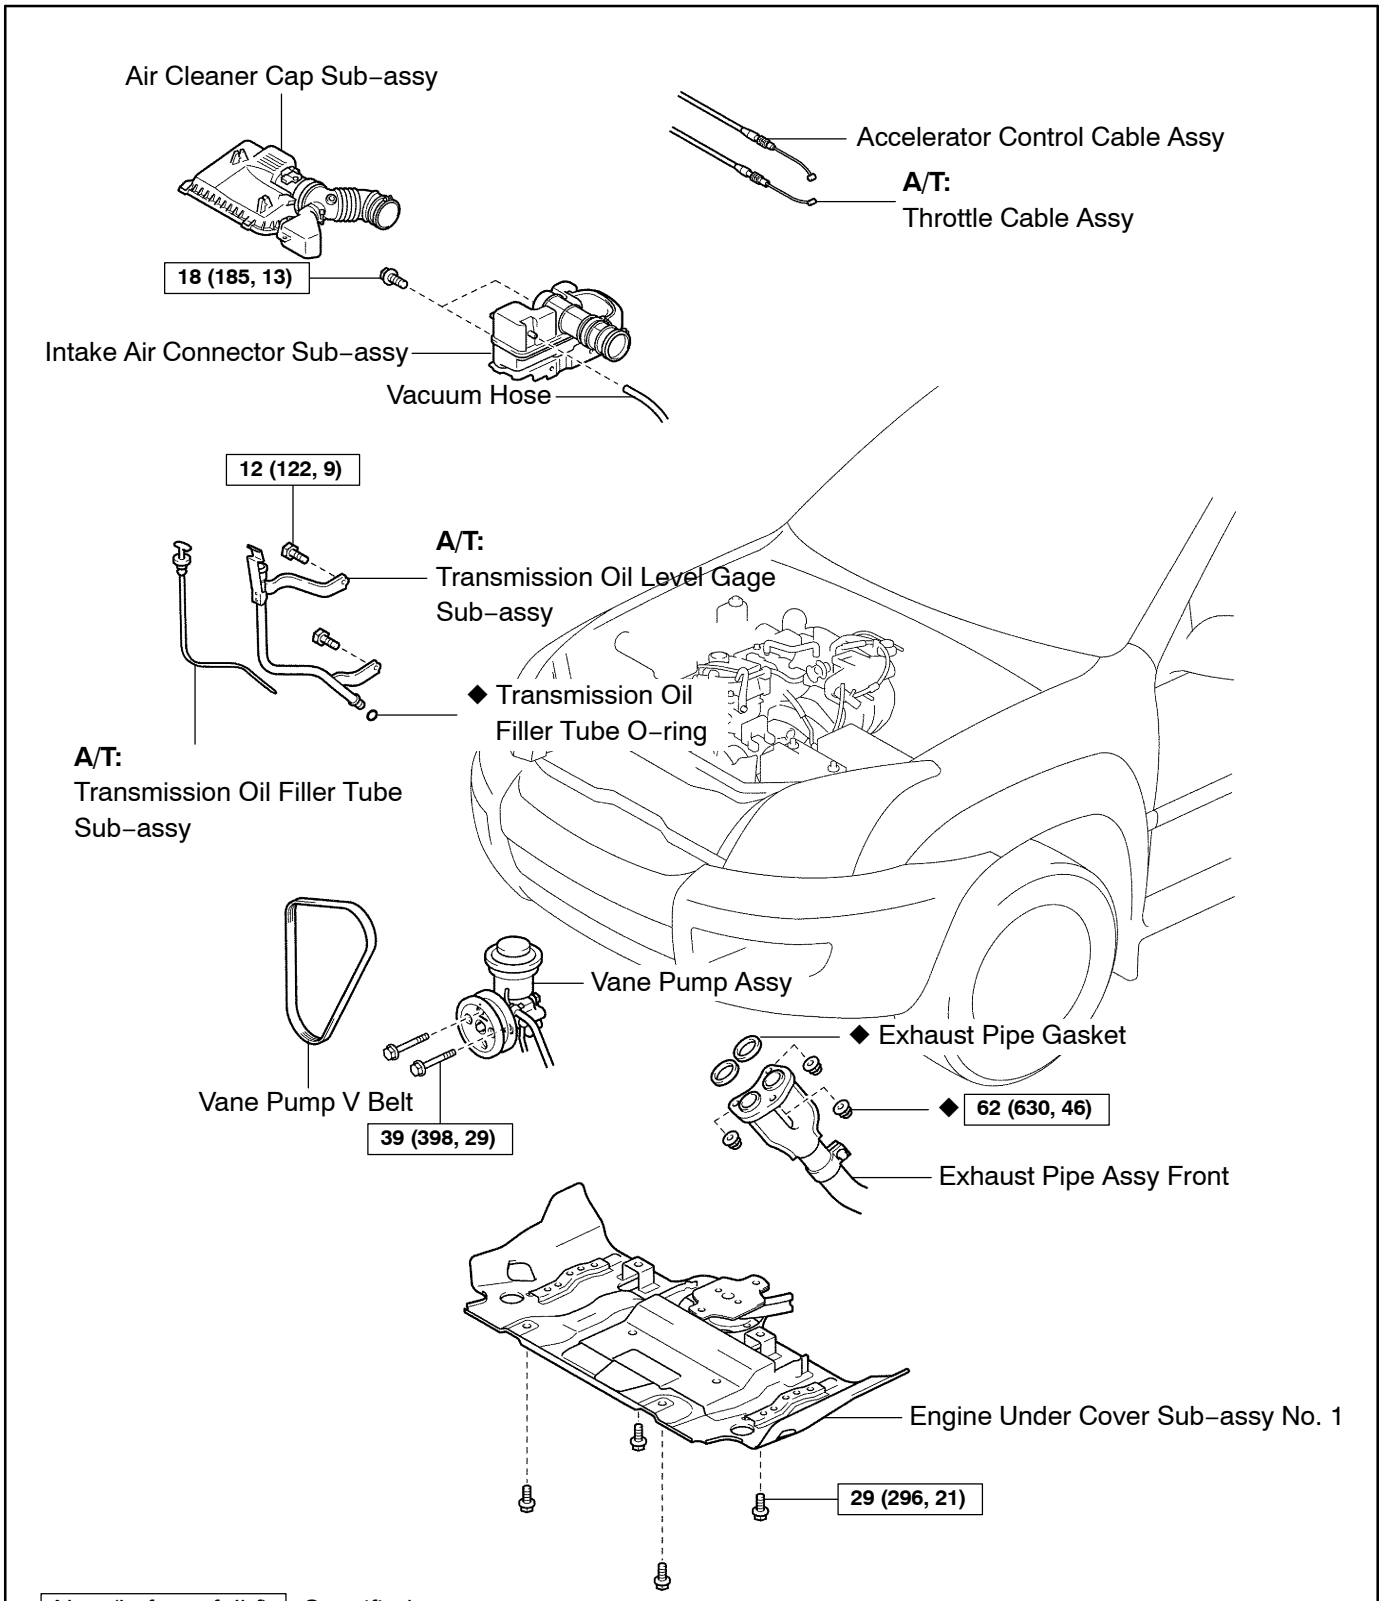
CYLINDER HEAD GASKET (3RZ–FE)

COMPONENTS

14125–02

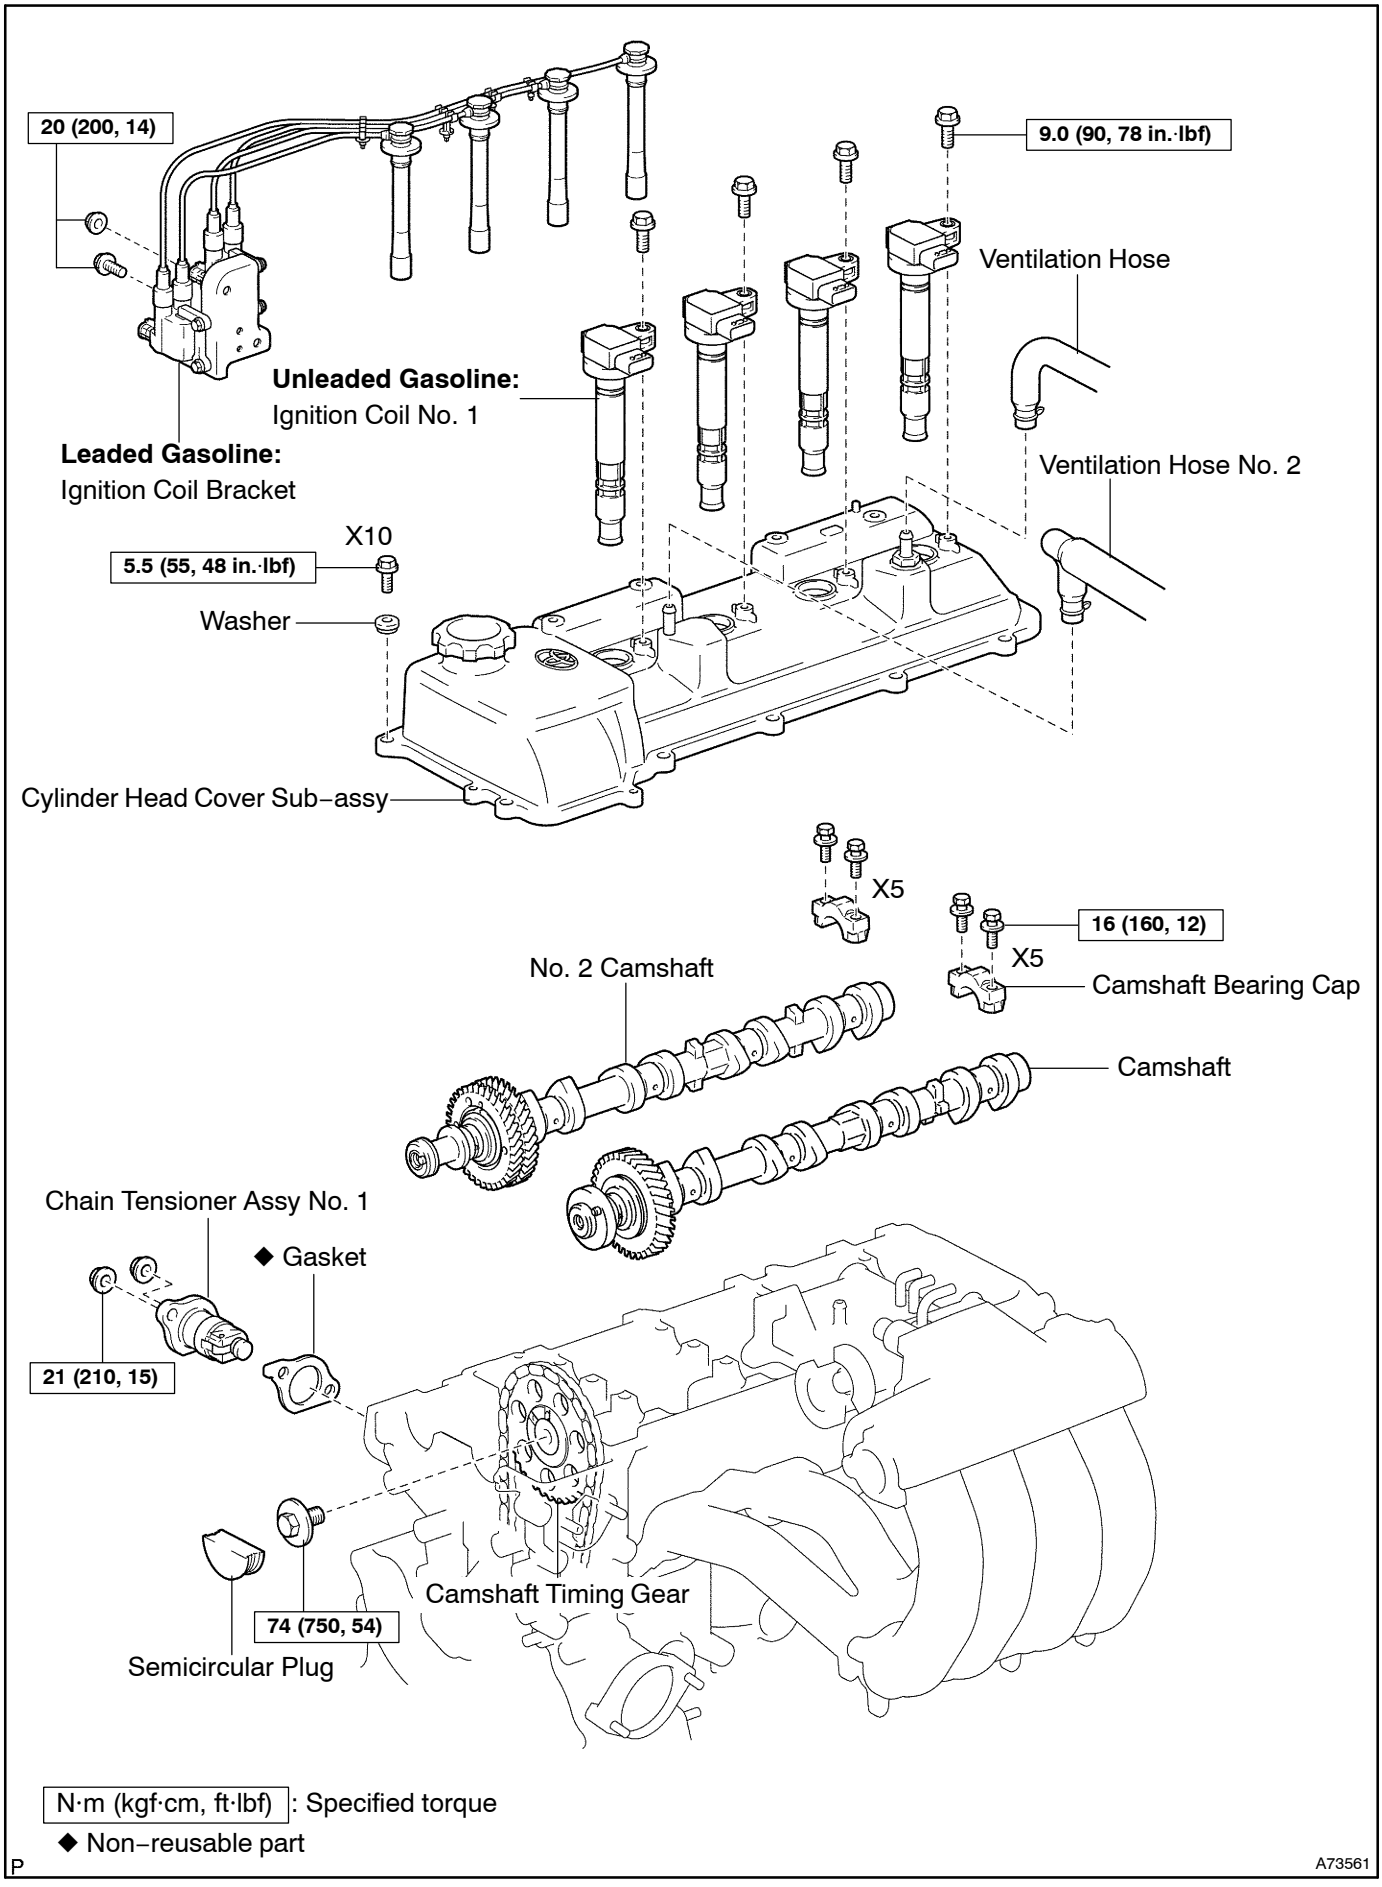


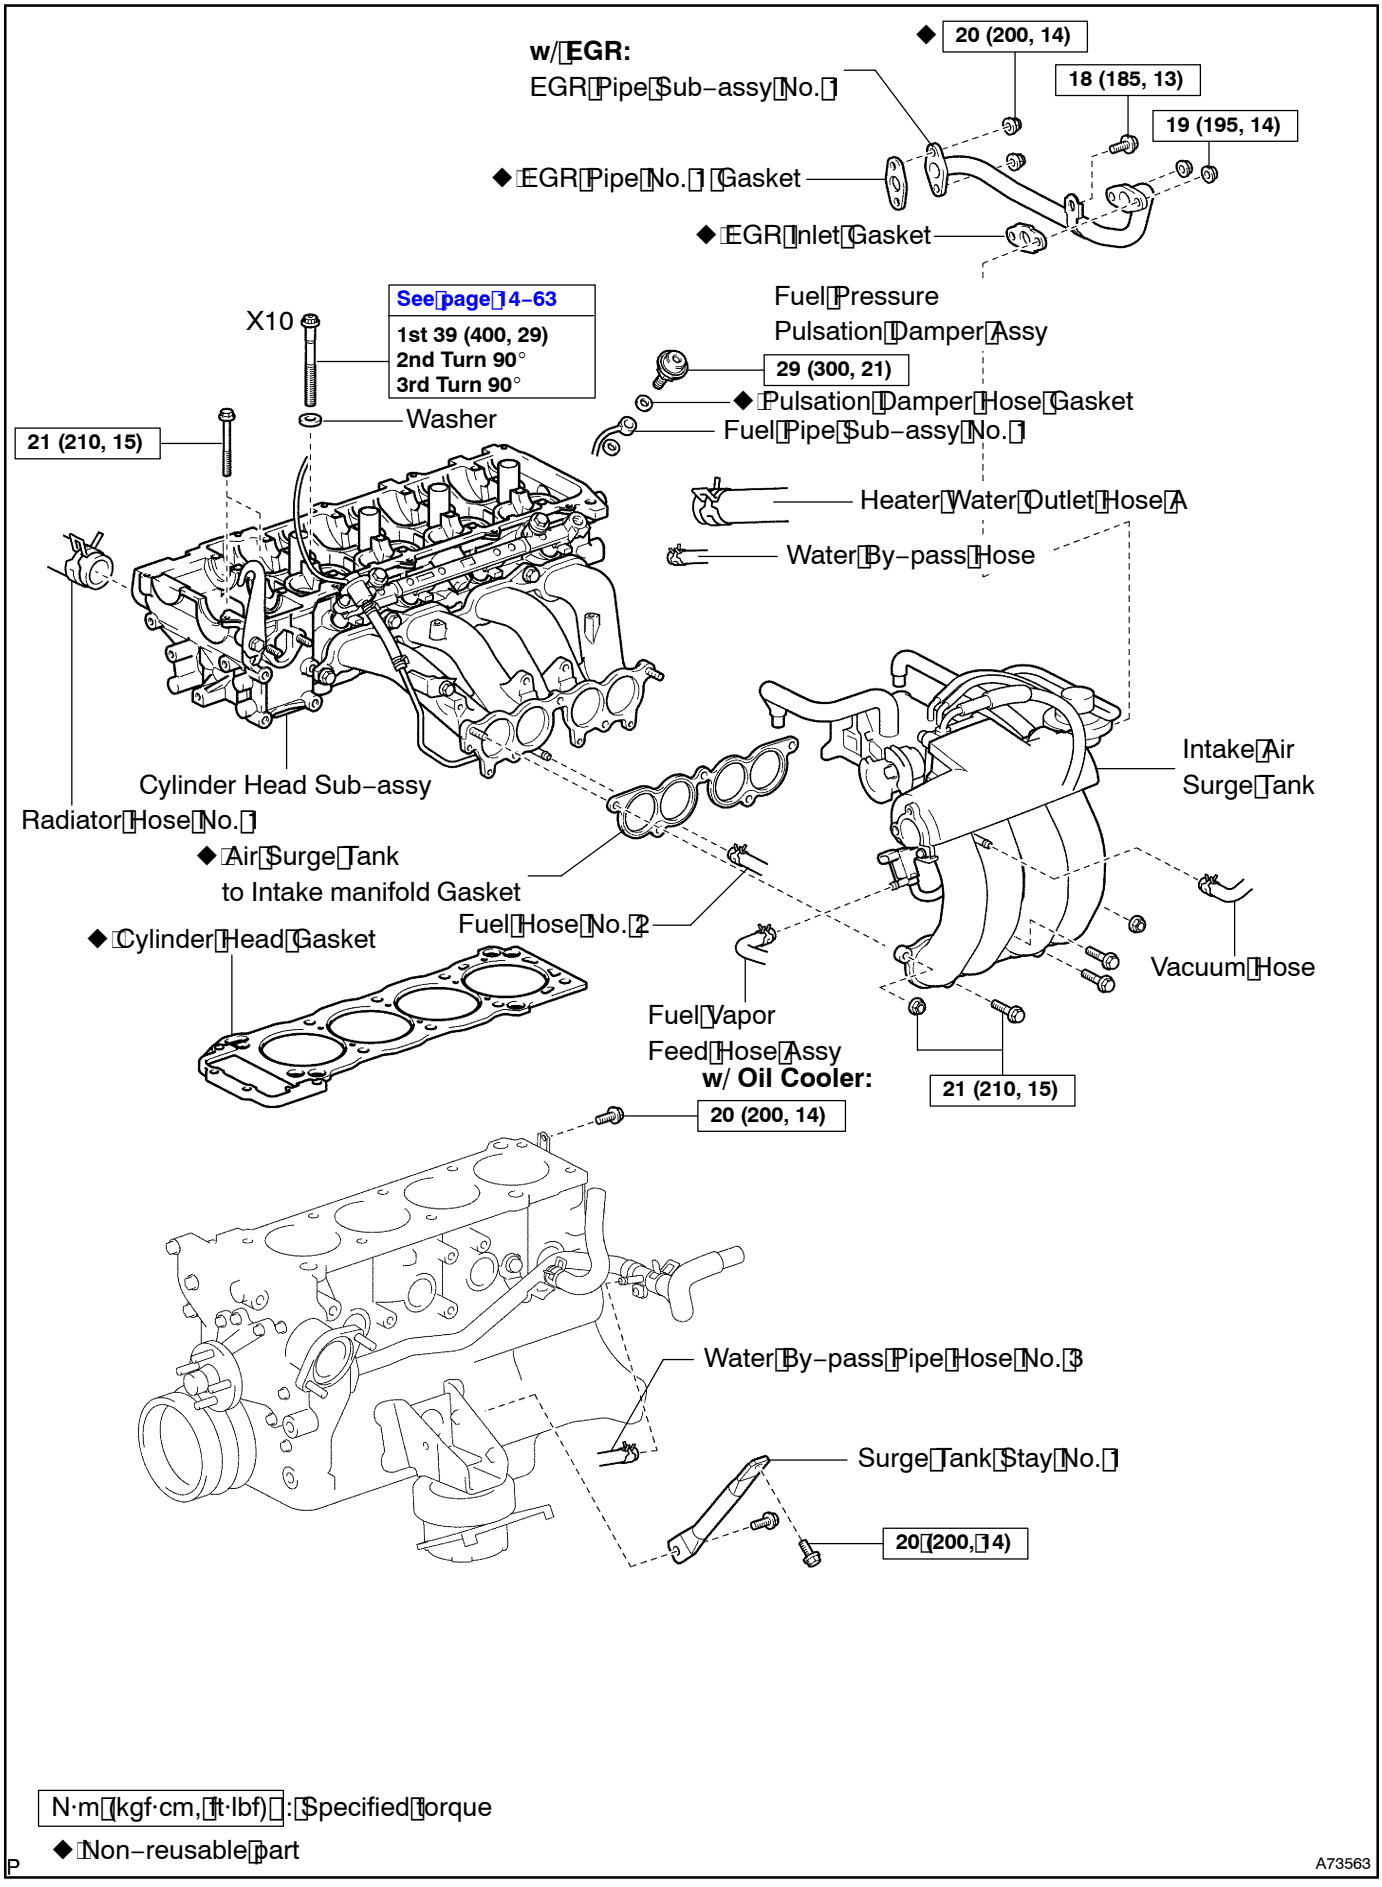
N·m (kgf·cm, ft·lbf) : Specified torque

◆ Non–reusable part

P

A73562


20 (200, 14)
9.0 (90, 78 in.·lbf)
Ventilation Hose
Unleaded Gasoline:
Ignition Coil No. 1
Leaded Gasoline:
Ignition Coil Bracket
Ventilation Hose No. 2
X10
5.5 (55, 48 in.·lbf)
Washer
Cylinder Head Cover Sub–assy
X5
16 (160, 12)
X5
No. 2 Camshaft
Camshaft Bearing Cap
Camshaft
Chain Tensioner Assy No. 1
◆ Gasket
21 (210, 15)
Camshaft Timing Gear
74 (750, 54)
Semicircular Plug
N·m (kgf·cm, ft·lbf) : Specified torque
◆ Non–reusable part
P
A73561


w/ EGR:
EGR Pipe Sub–assy No. 1
◆ 20 (200, 14)
18 (185, 13)
19 (195, 14)
◆ EGR Pipe No. 1 Gasket
◆ EGR Inlet Gasket
See page 14–63
X10
1st 39 (400, 29)
2nd Turn 90°
3rd Turn 90°
Washer
21 (210, 15)
Fuel Pressure
Pulsation Damper Assy
29 (300, 21)
◆ Pulsation Damper Hose Gasket
Fuel Pipe Sub–assy No. 1
Heater Water Outlet Hose A
Water By–pass Hose
Intake Air
Surge Tank
Cylinder Head Sub–assy
Radiator Hose No. 1
◆ Air Surge Tank
to Intake manifold Gasket
Fuel Hose No. 2
◆ Cylinder Head Gasket
Vacuum Hose
Fuel Vapor
Feed Hose Assy
w/ Oil Cooler:
21 (210, 15)
20 (200, 14)
Water By–pass Pipe Hose No. 3
Surge Tank Stay No. 1
20 (200, 14)
N·m (kgf·cm, ft·lbf) : Specified torque
◆ Non–reusable part
A73563