


CYLINDER HEAD GASKET (1KD–FTV)


COMPONENTS

1411R–01

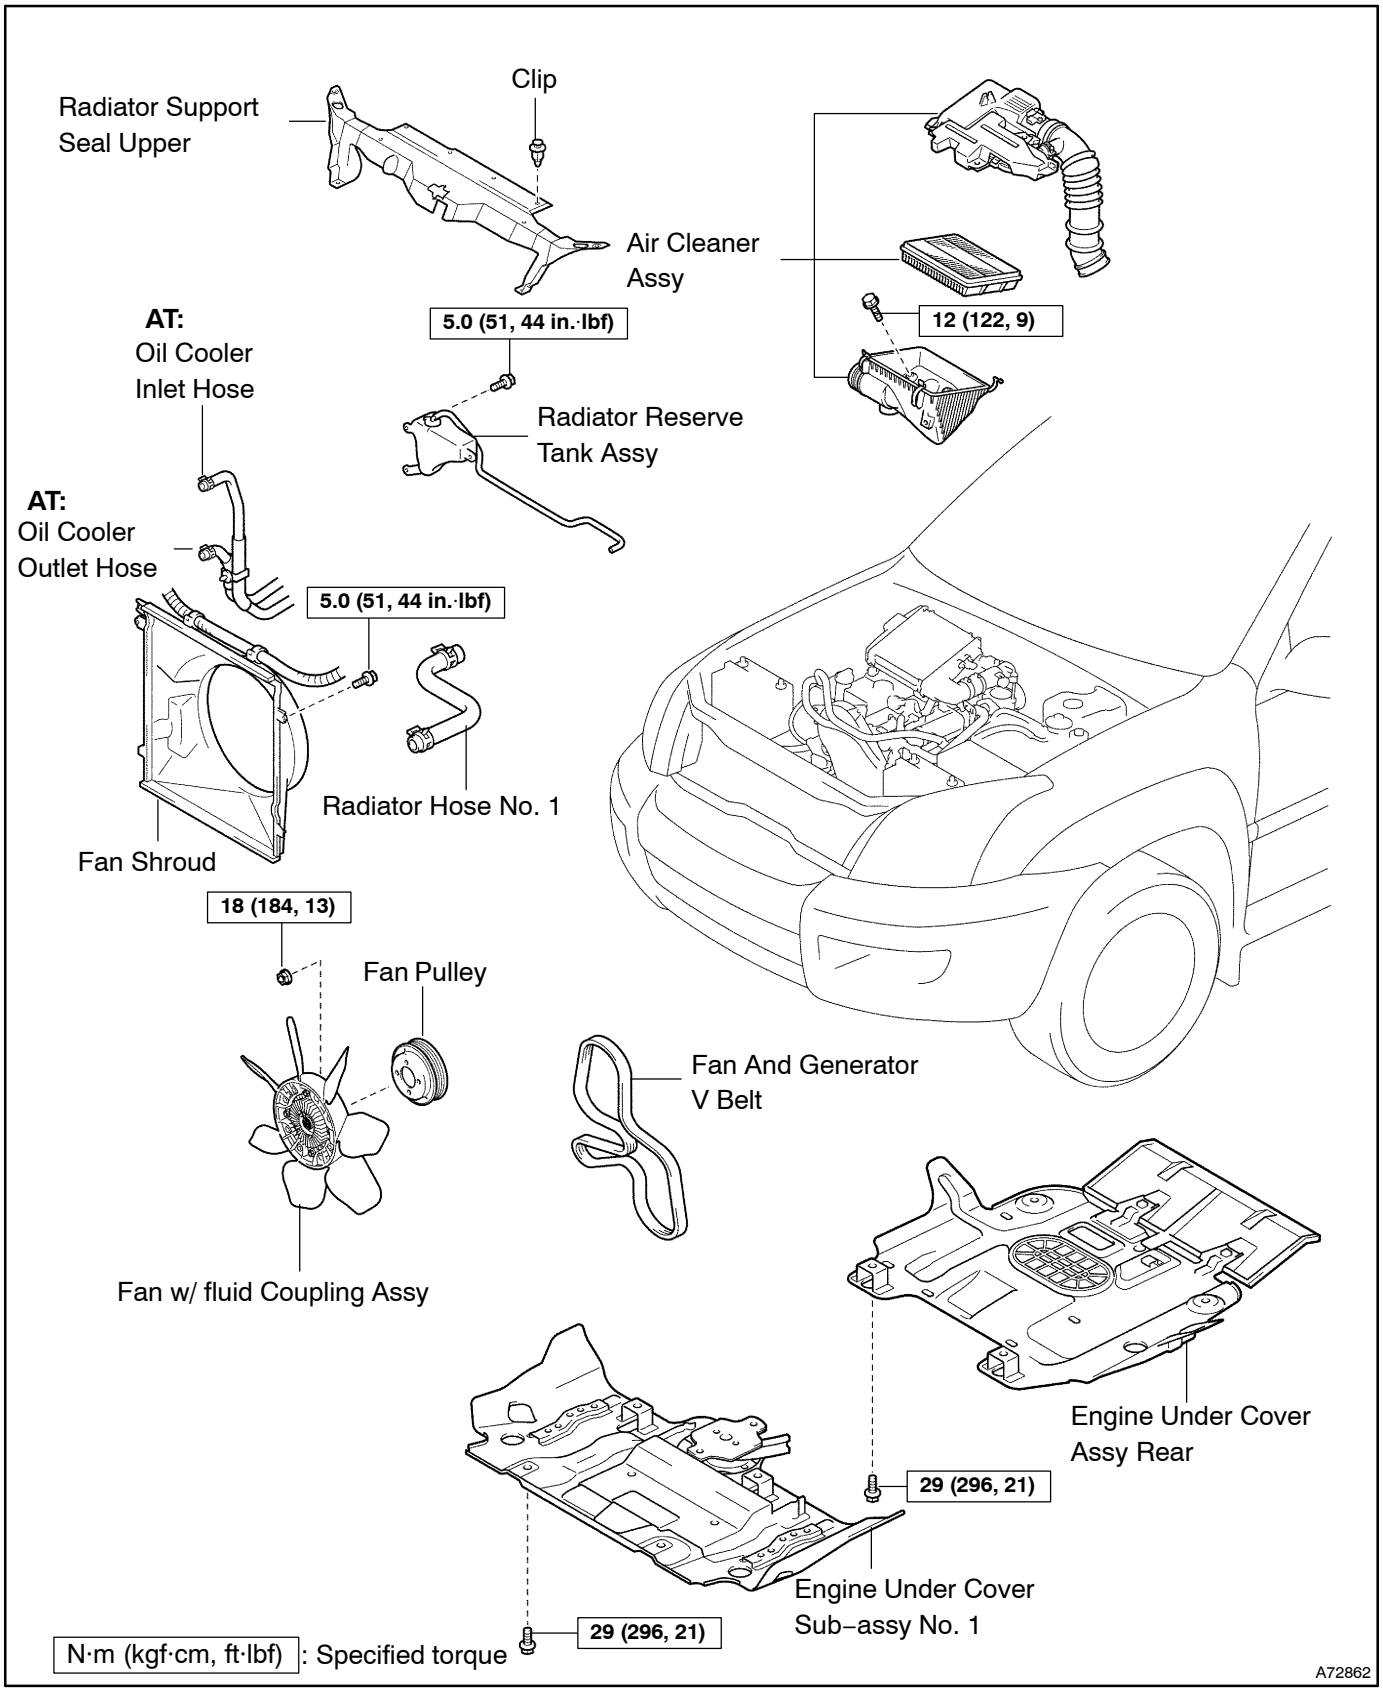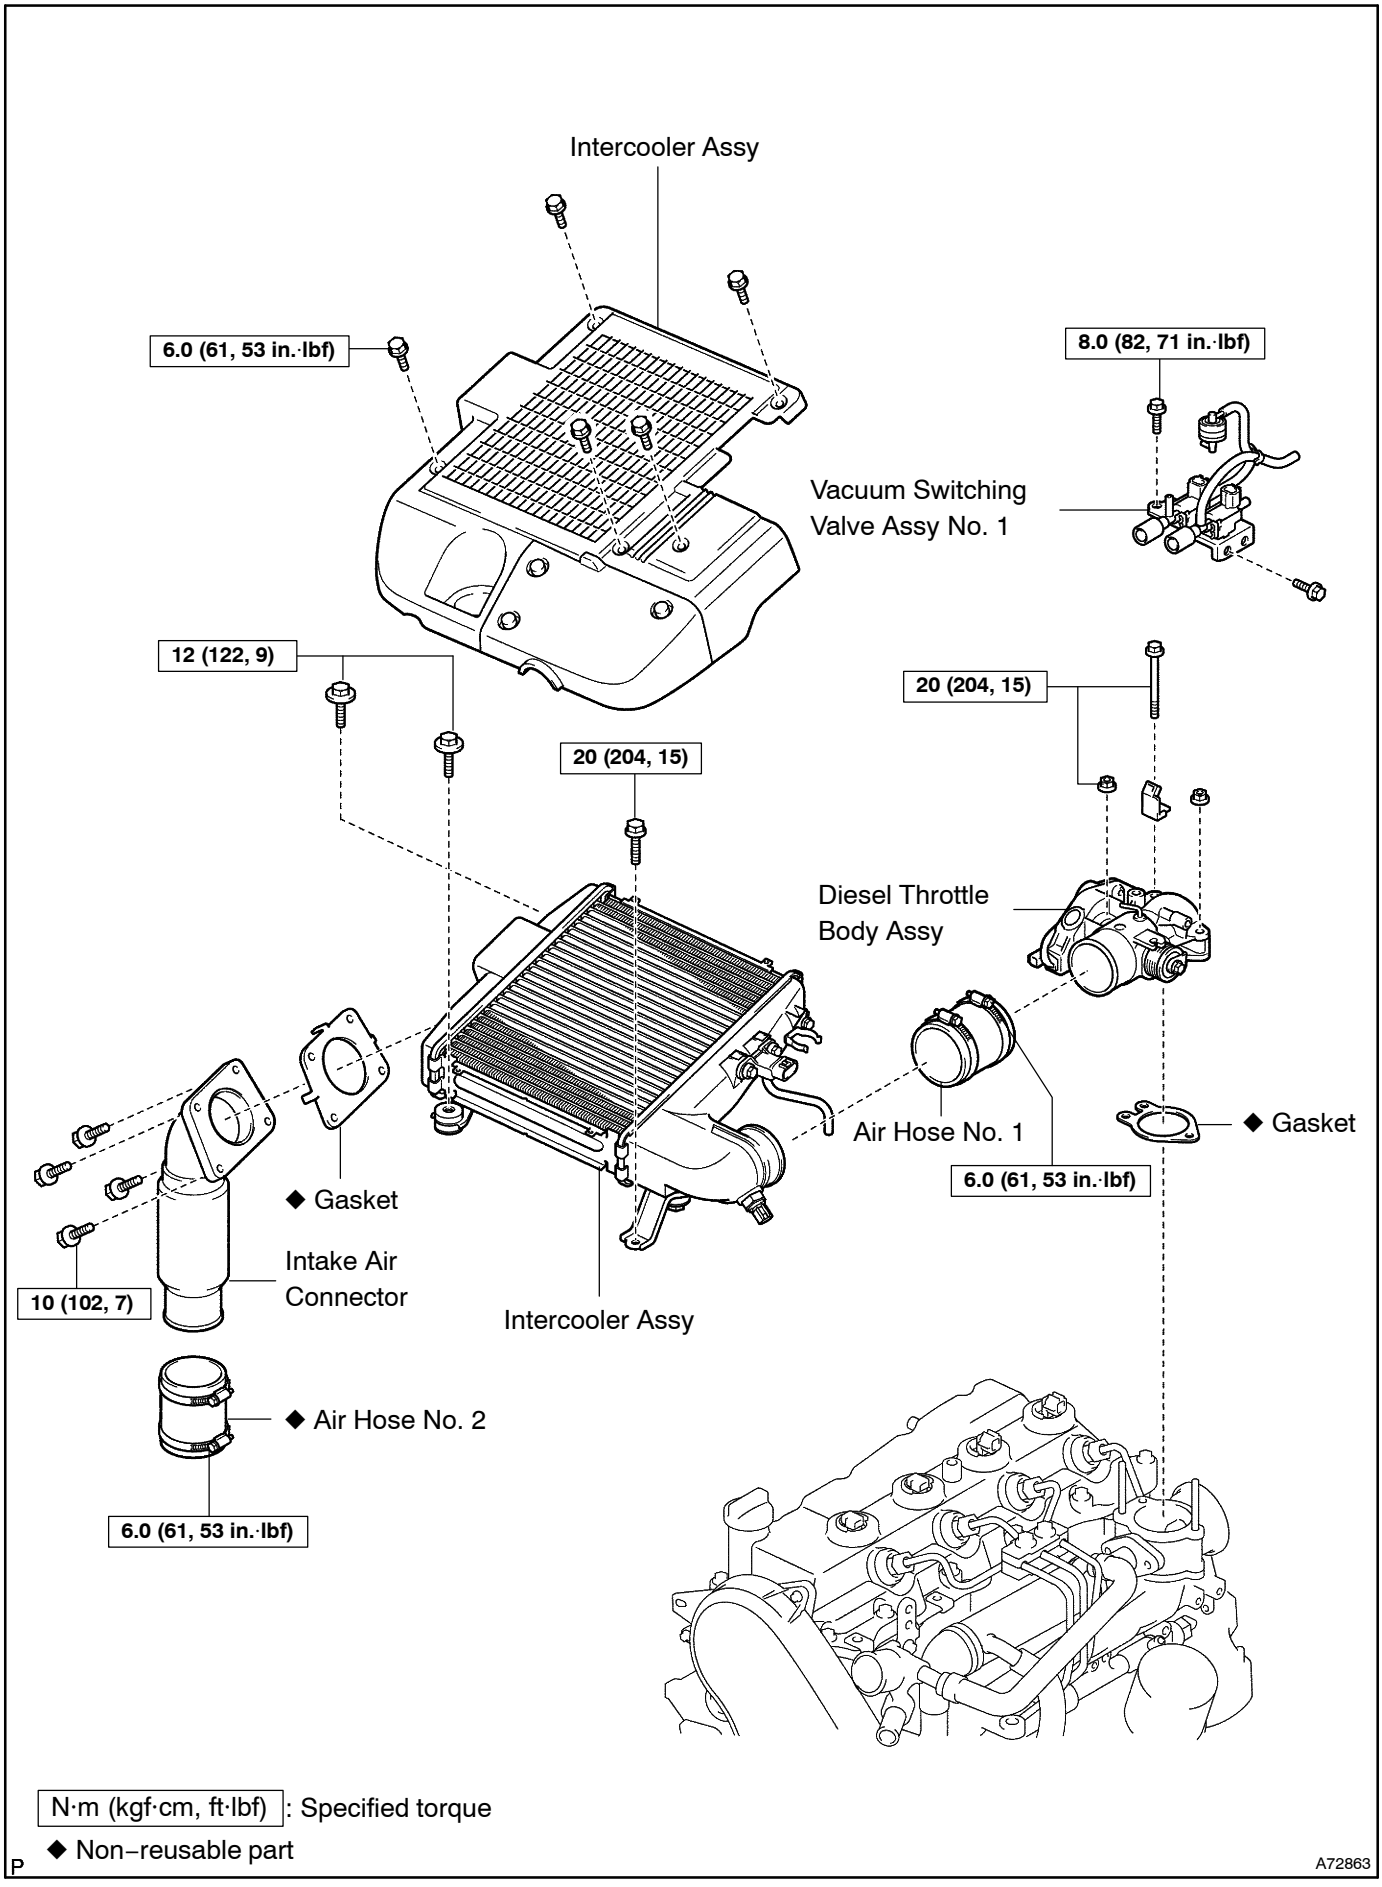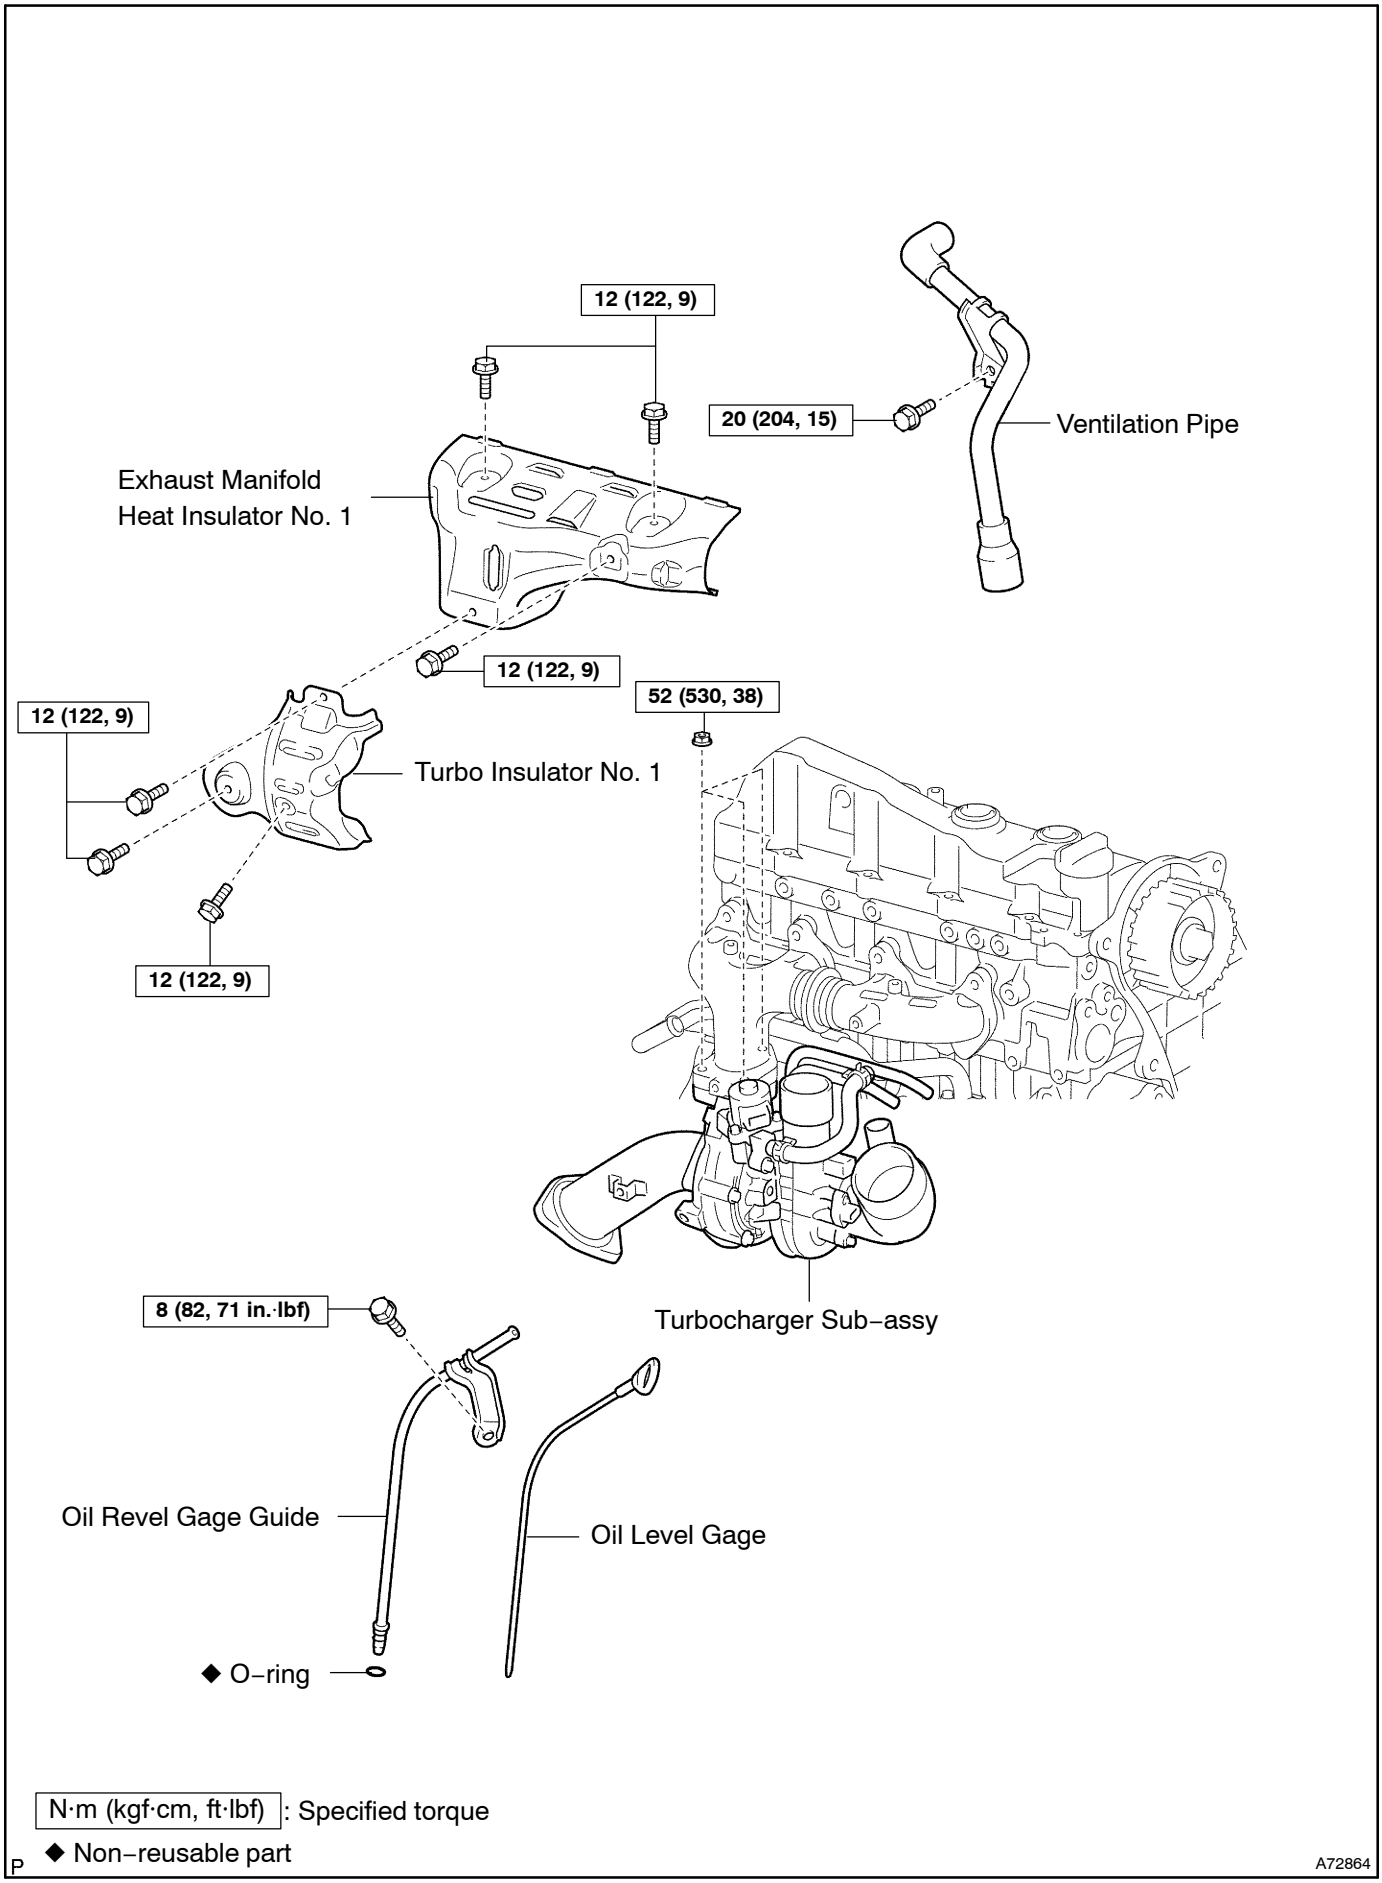



Intercooler Assy
6.0 (61, 53 in.·lbf)
8.0 (82, 71 in.·lbf)
Vacuum Switching Valve Assy No. 1
12 (122, 9)
20 (204, 15)
20 (204, 15)
Diesel Throttle Body Assy
◆ Gasket
Intake Air Connector
10 (102, 7)
Intercooler Assy
Air Hose No. 1
6.0 (61, 53 in.·lbf)
◆ Gasket
◆ Air Hose No. 2
6.0 (61, 53 in.·lbf)
N·m (kgf·cm, ft·lbf) : Specified torque
◆ Non–reusable part
P
A72863


12 (122, 9)
20 (204, 15)
Ventilation Pipe
Exhaust Manifold
Heat Insulator No. 1
12 (122, 9)
52 (530, 38)
12 (122, 9)
Turbo Insulator No. 1
12 (122, 9)
8 (82, 71 in.·lbf)
Turbocharger Sub–assy
Oil Revel Gage Guide
Oil Level Gage
◆ O–ring
N·m (kgf·cm, ft·lbf) : Specified torque
◆ Non–reusable part
A72864

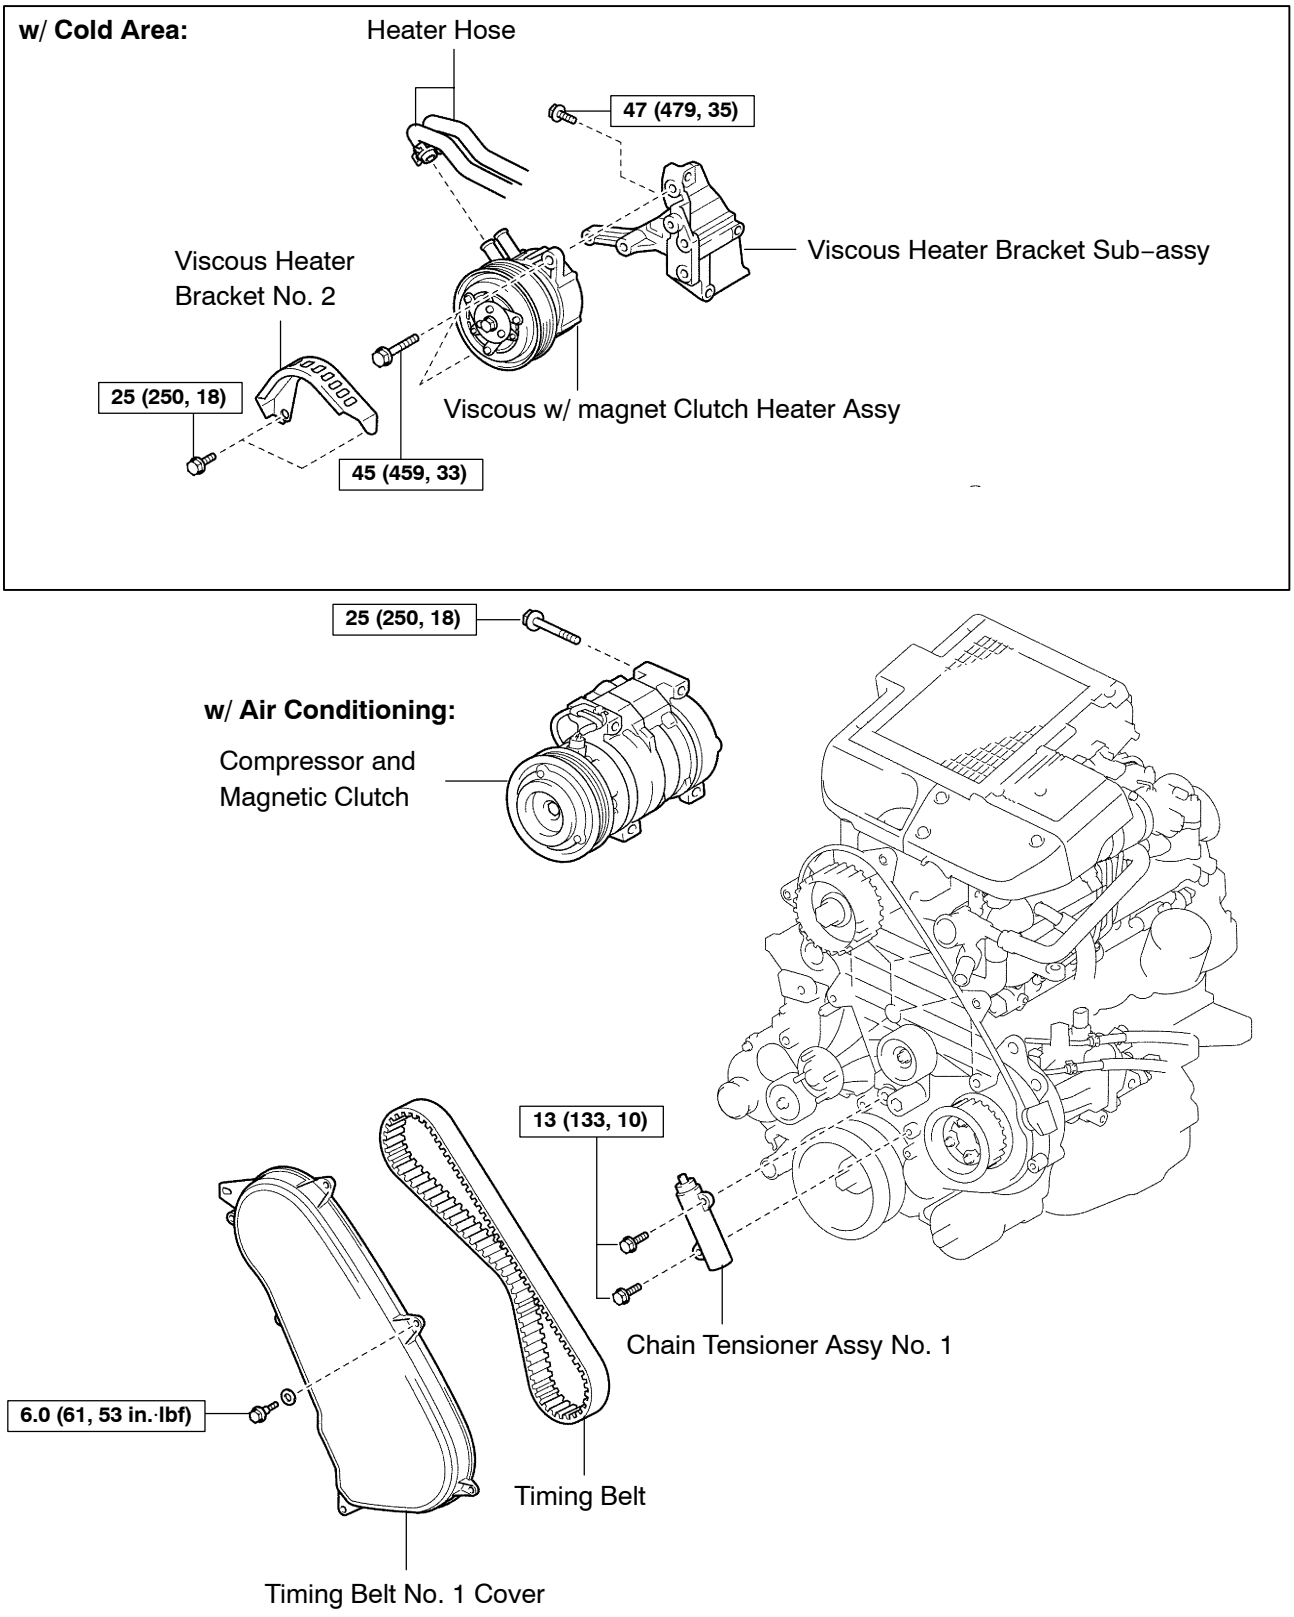

P N·m (kgf·cm, ft·lbf): Specified torque


A72865

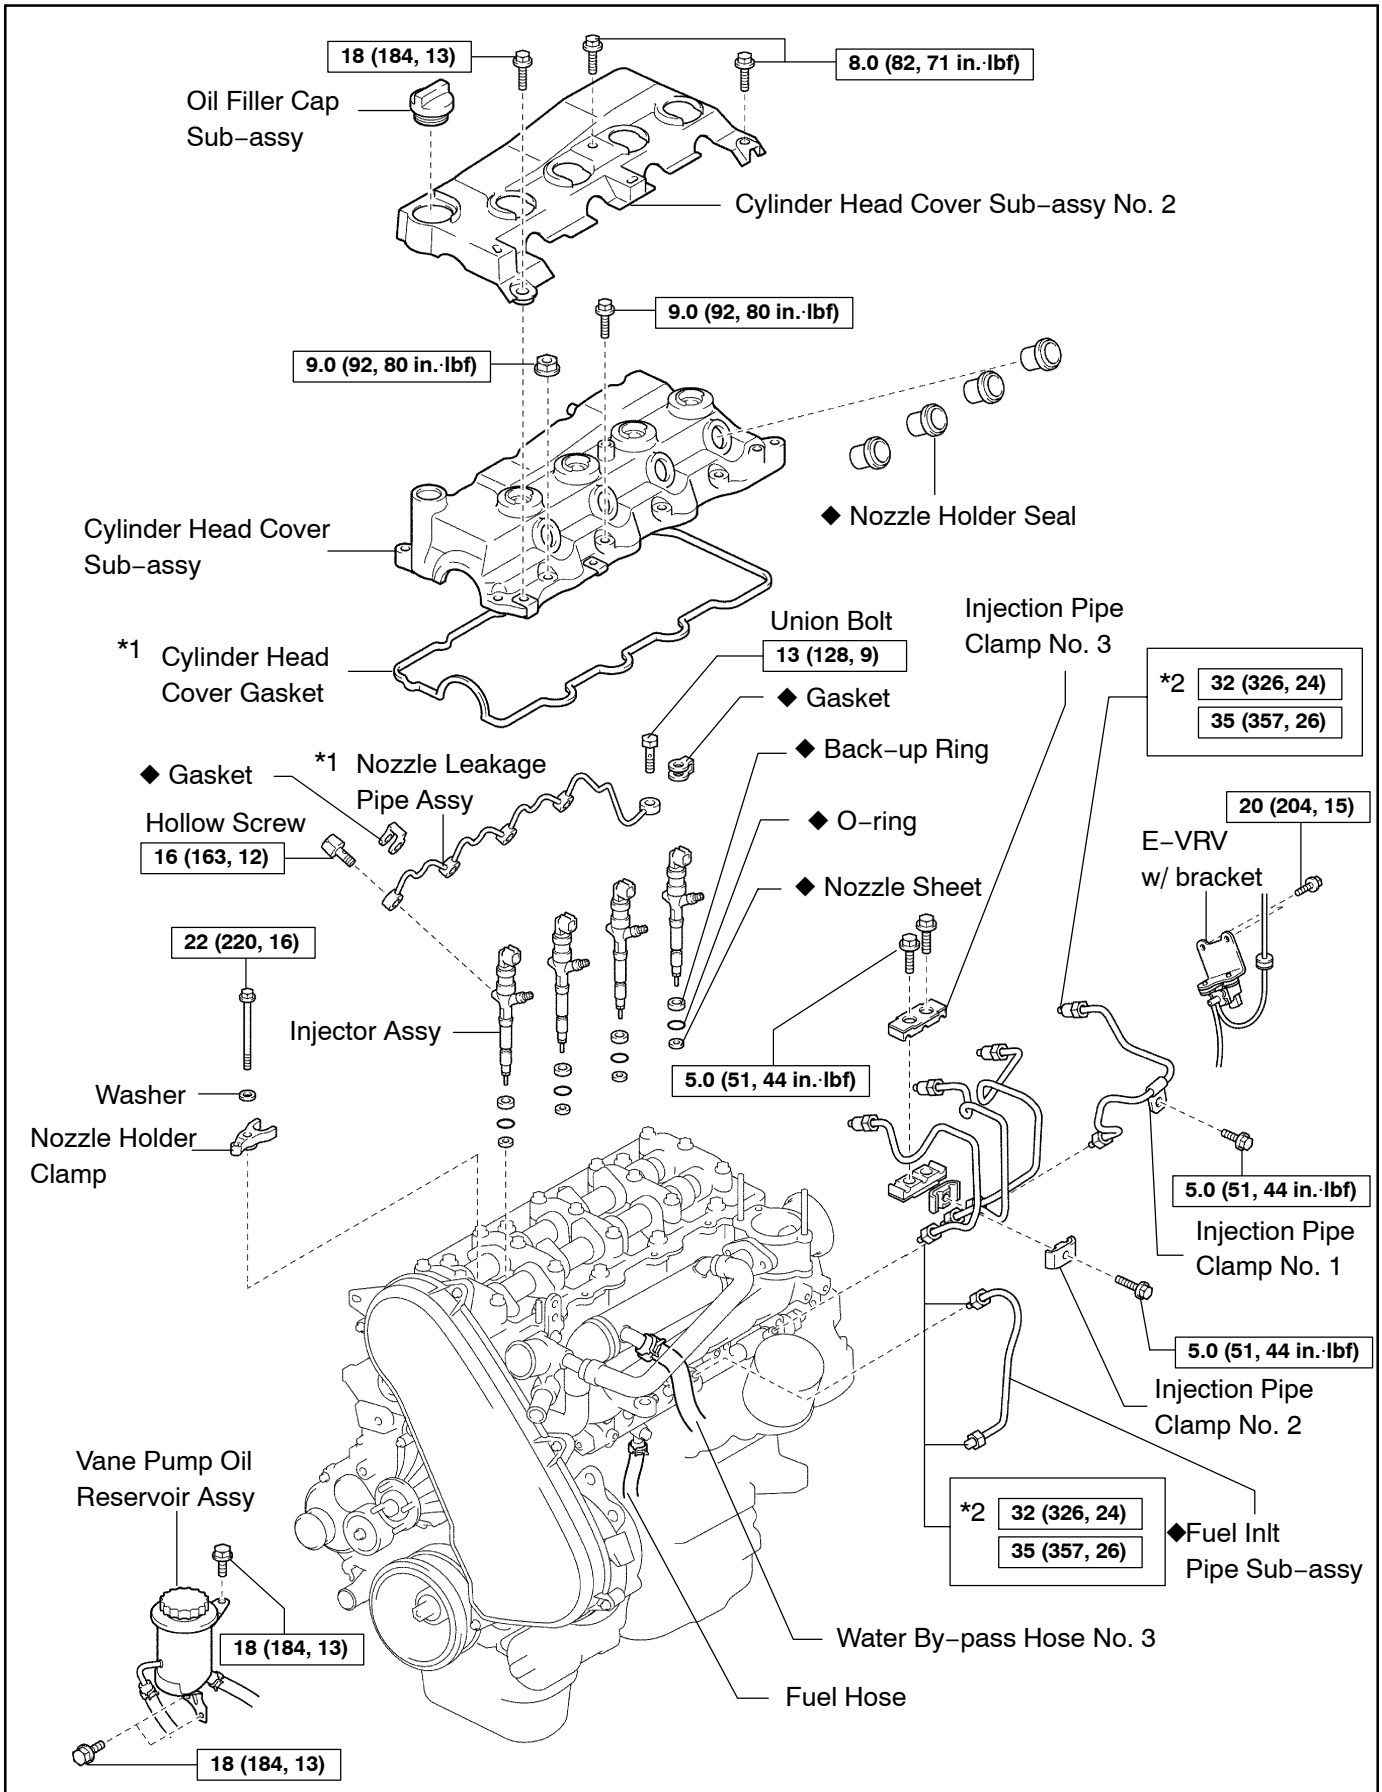

N·m (kgf·cm, ft·lbf) : Specified torque
◆ Non–reusable part
*1 Replace only if damaged
*2 For use with SST

P

A72866

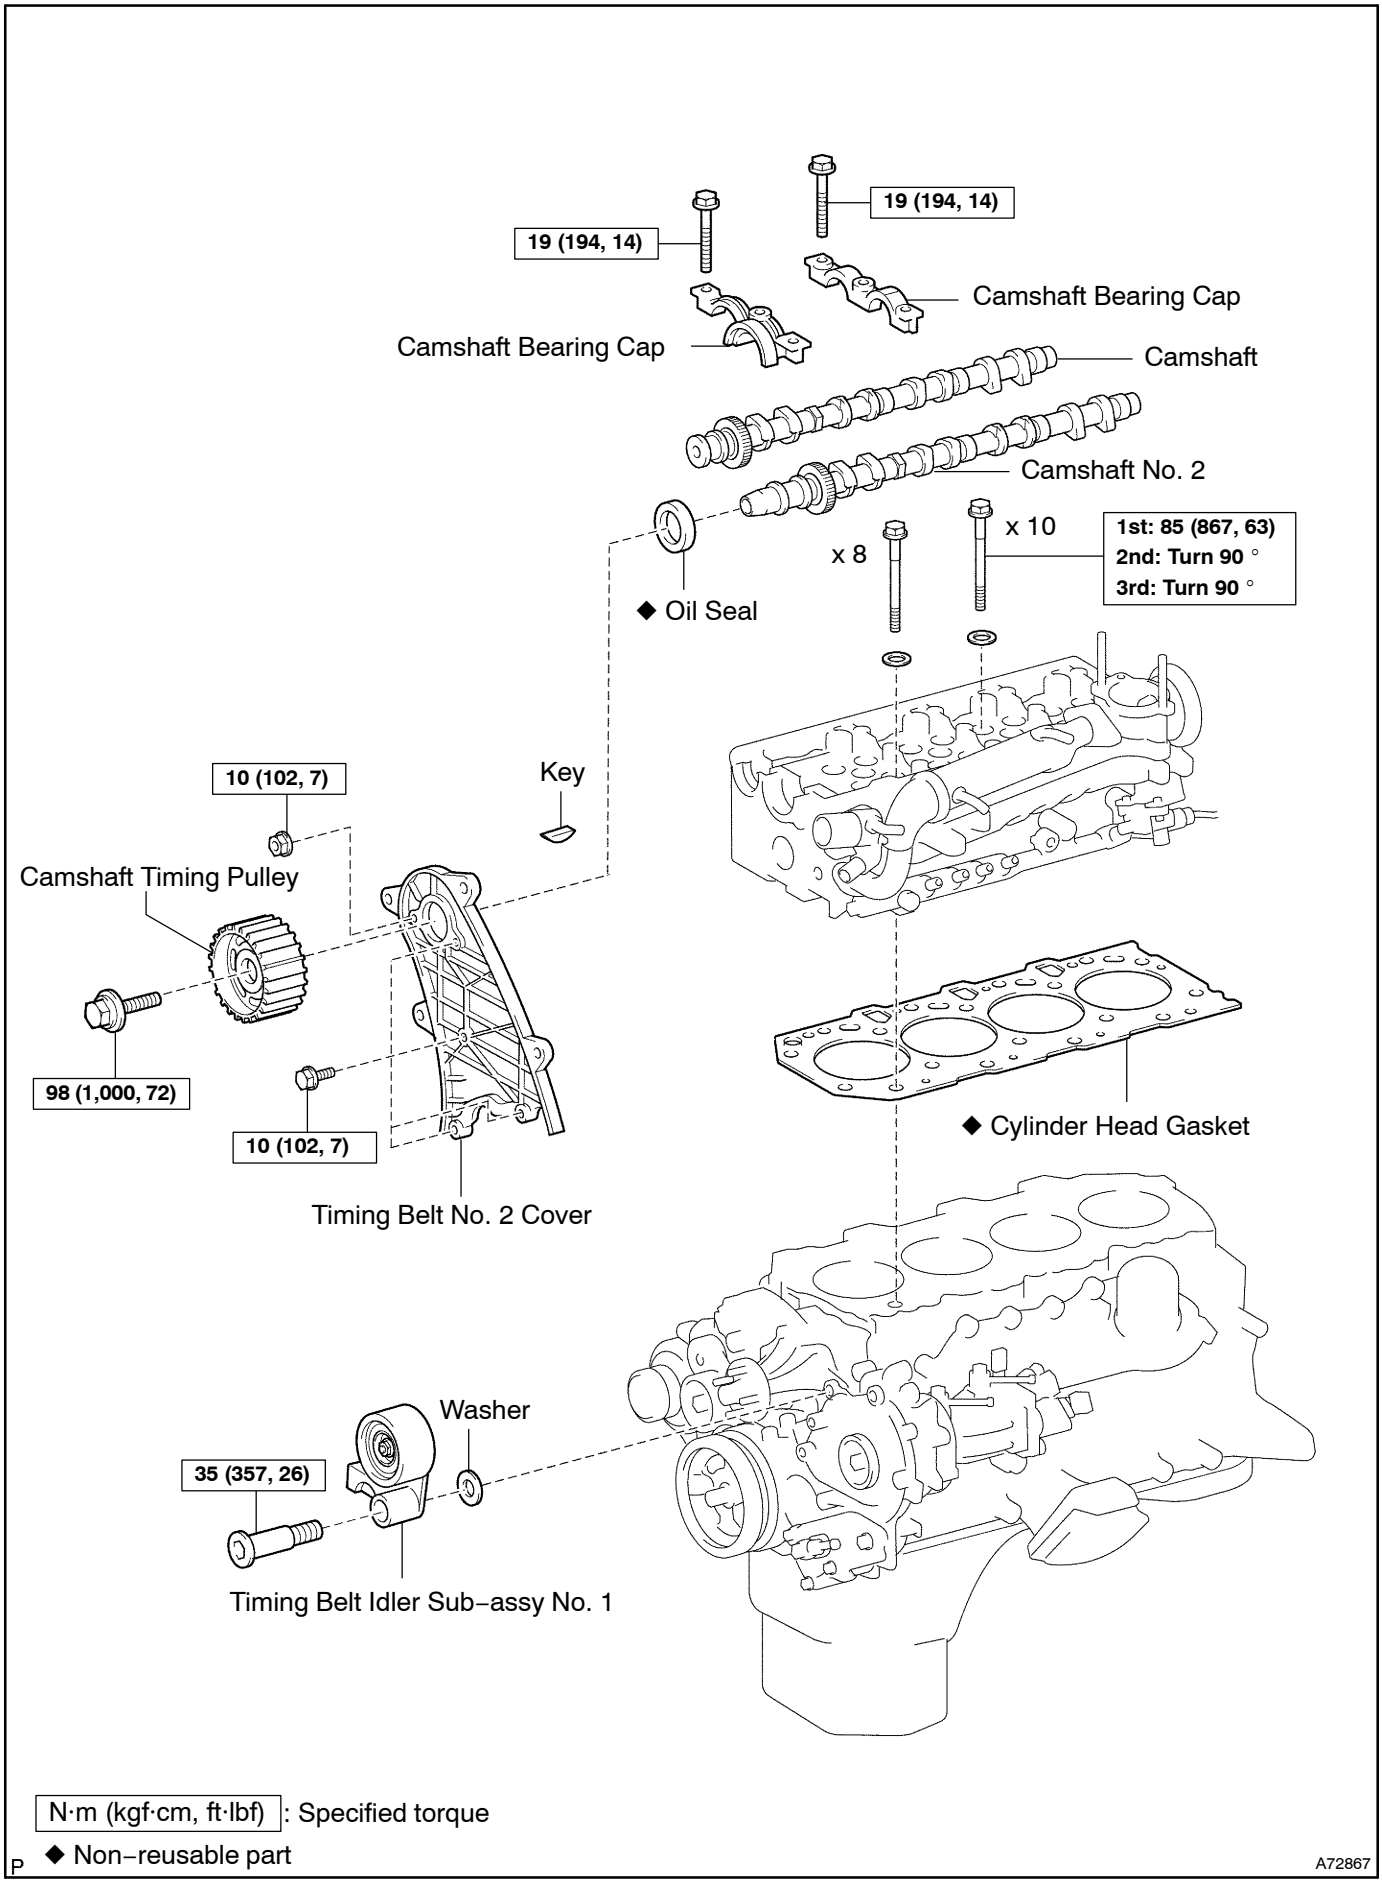
19 (194, 14)
19 (194, 14)
Camshaft Bearing Cap
Camshaft Bearing Cap
Camshaft
Camshaft No. 2
x 8
x 10
1st: 85 (867, 63)
2nd: Turn 90 °
3rd: Turn 90 °
◆ Oil Seal
10 (102, 7)
Key
Camshaft Timing Pulley
98 (1,000, 72)
10 (102, 7)
Timing Belt No. 2 Cover
◆ Cylinder Head Gasket
Washer
35 (357, 26)
Timing Belt Idler Sub–assy No. 1
N·m (kgf·cm, ft·lbf): Specified torque
◆ Non–reusable part
A72867