


WATER PUMP ASSY (1KD–FTV)

COMPONENTS

160HF–01

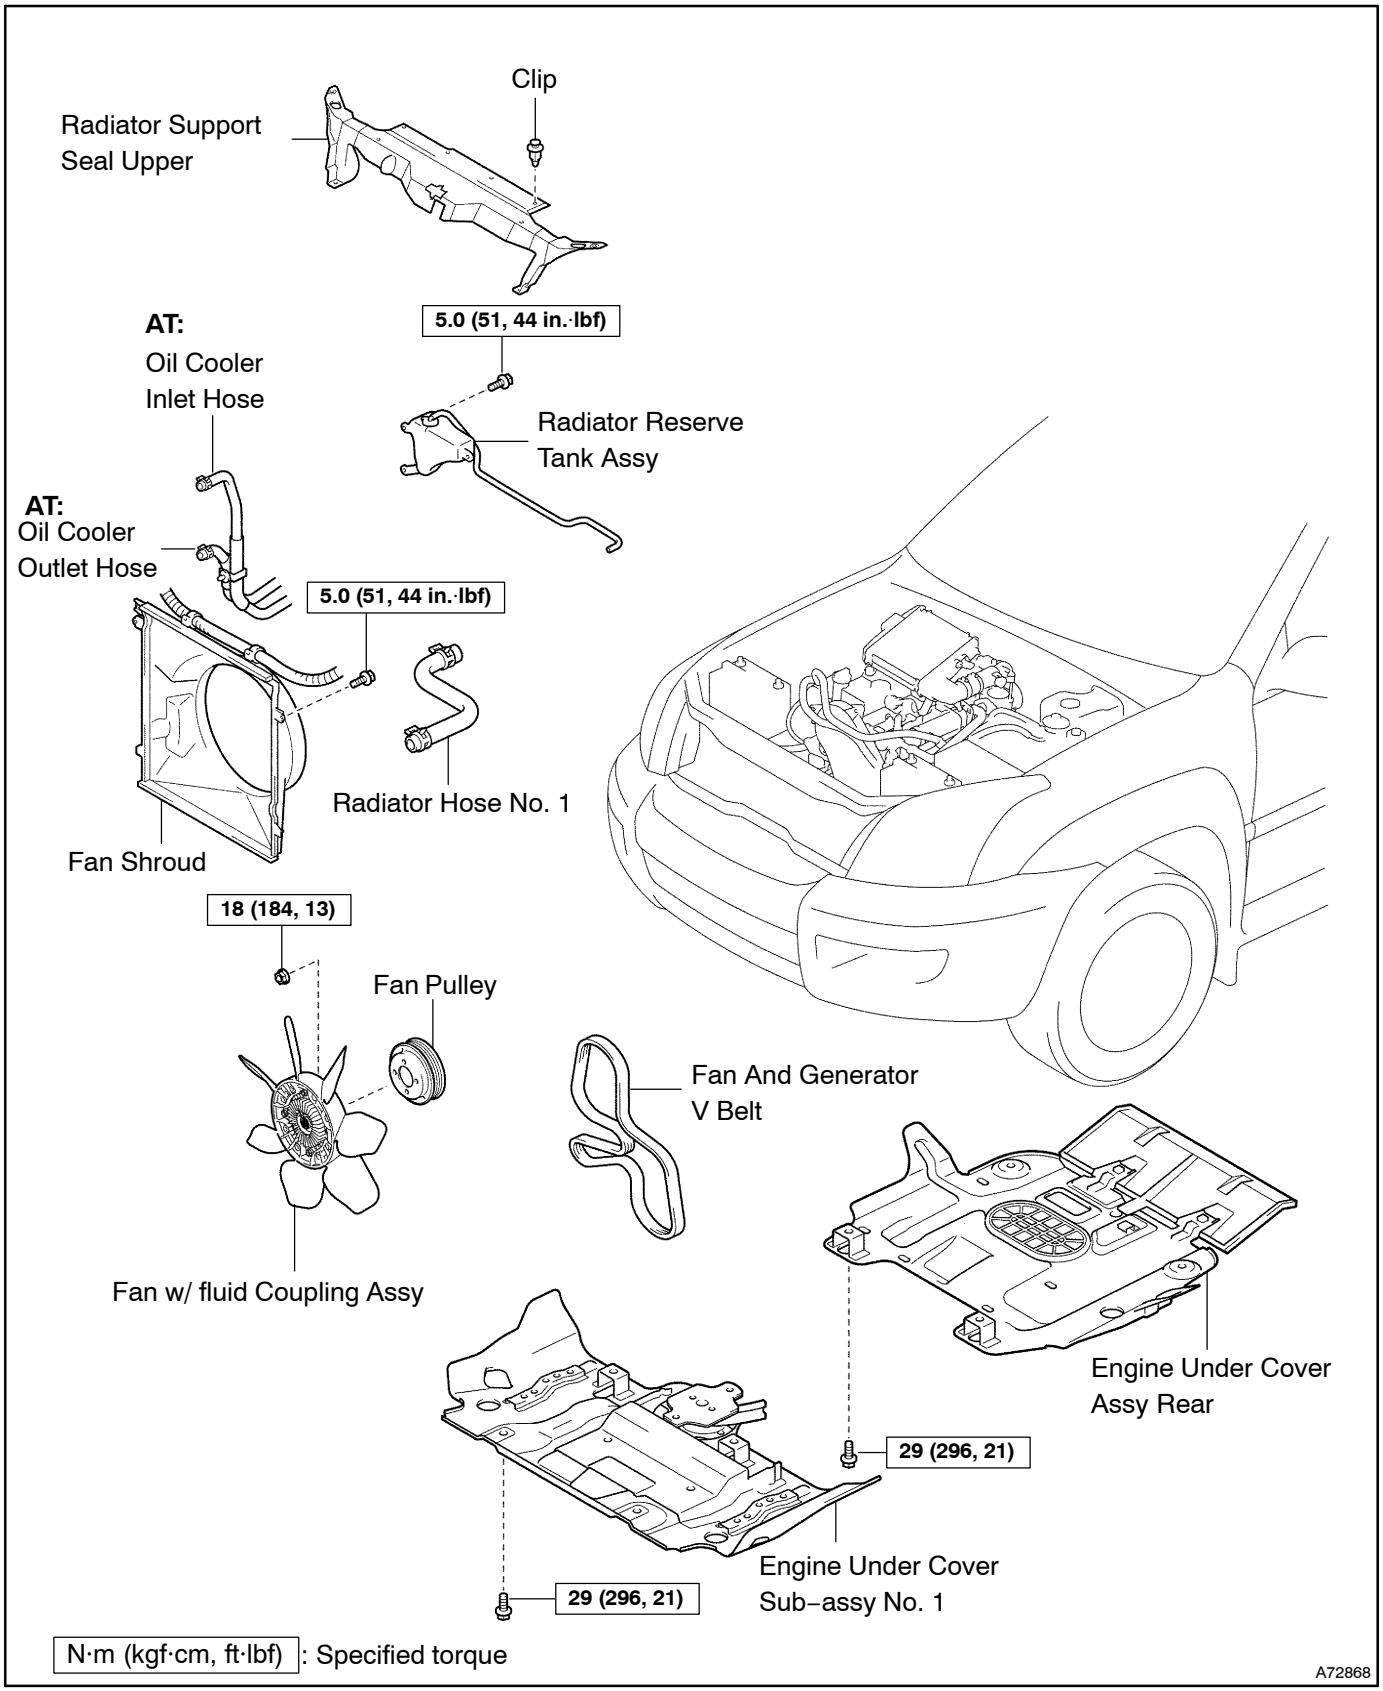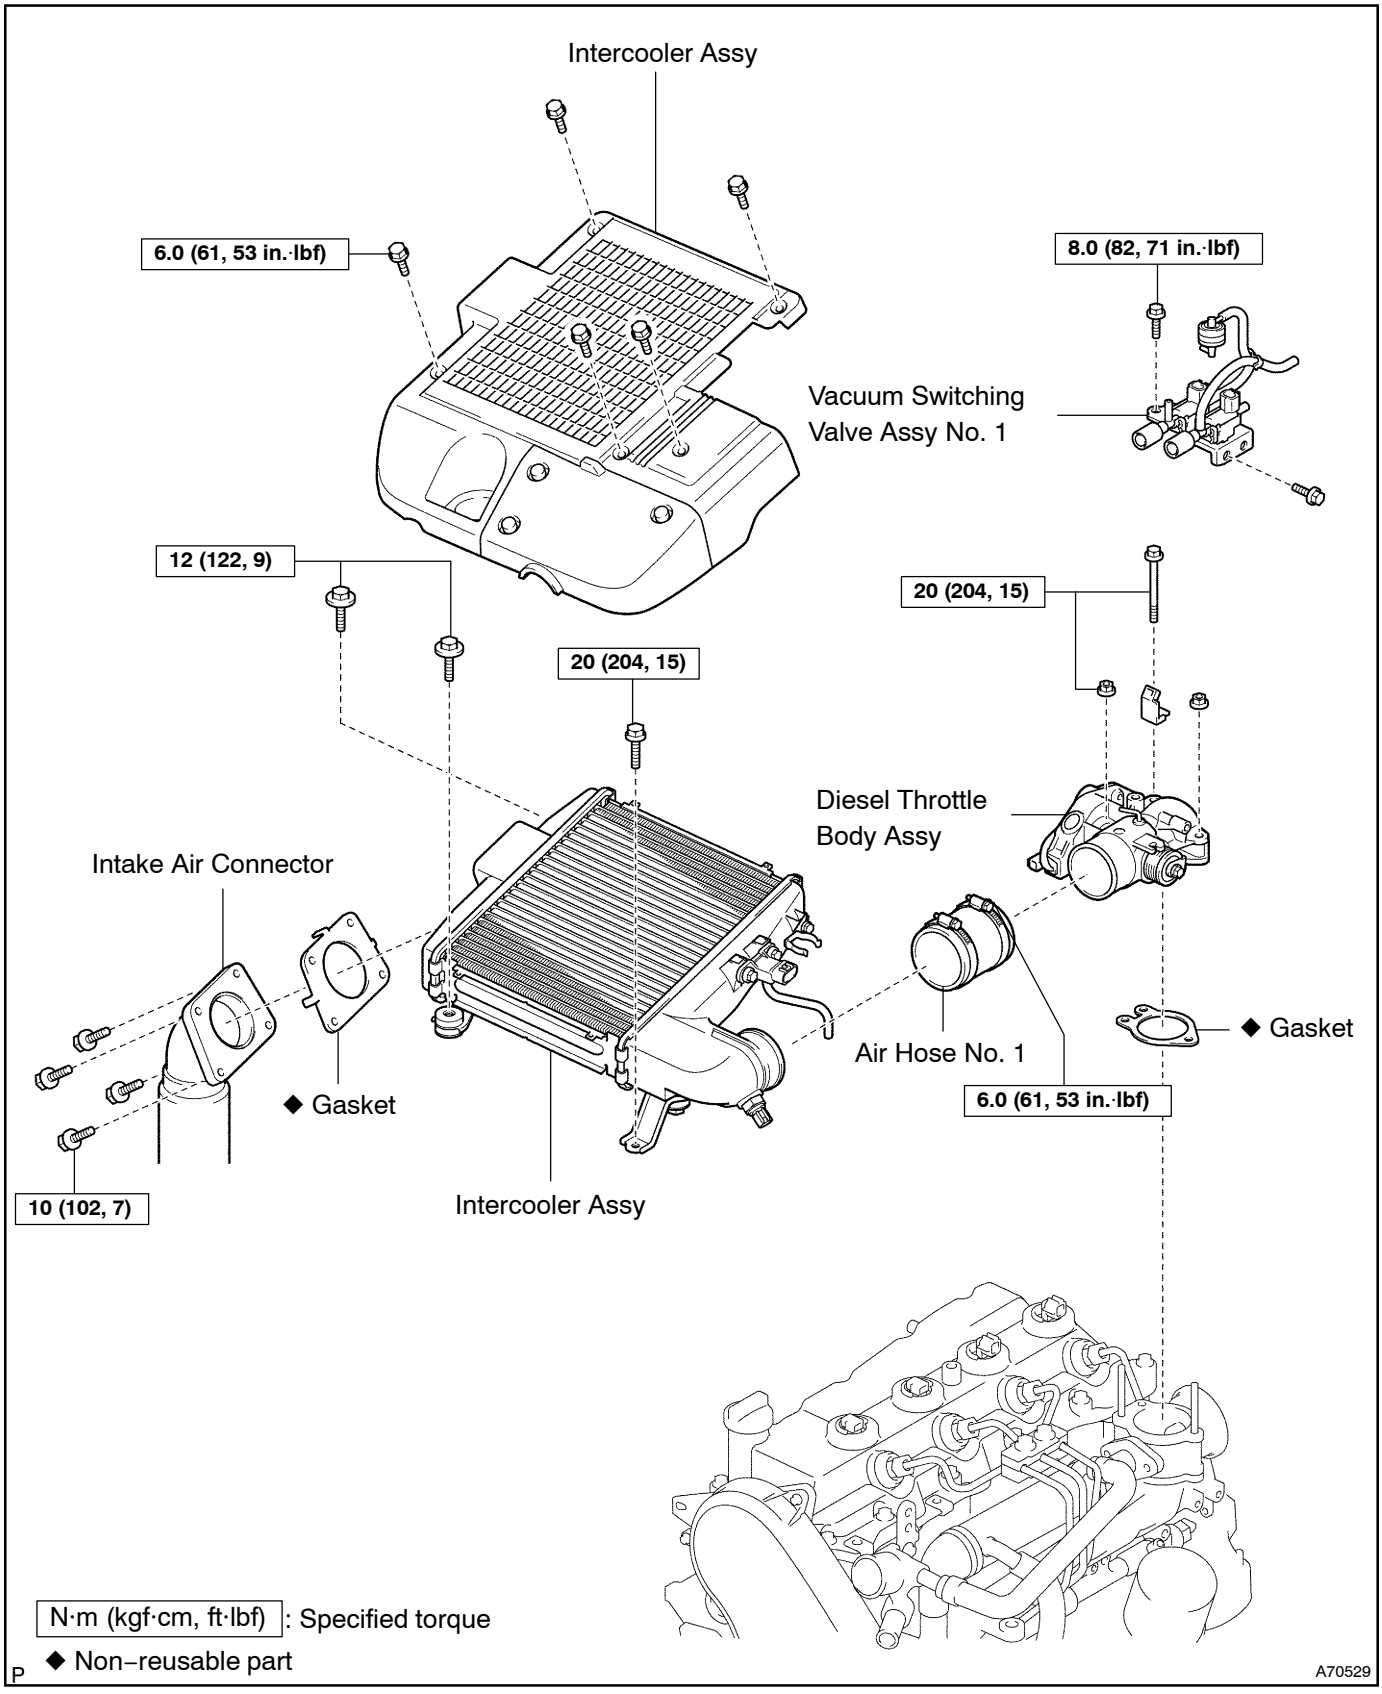



Intercooler Assy
6.0 (61, 53 in.·lbf)
8.0 (82, 71 in.·lbf)
Vacuum Switching Valve Assy No. 1
12 (122, 9)
20 (204, 15)
20 (204, 15)
Diesel Throttle Body Assy
Intake Air Connector
◆ Gasket
◆ Gasket
Air Hose No. 1
6.0 (61, 53 in.·lbf)
10 (102, 7)
Intercooler Assy
N·m (kgf·cm, ft·lbf) : Specified torque
◆ Non–reusable part
A70529

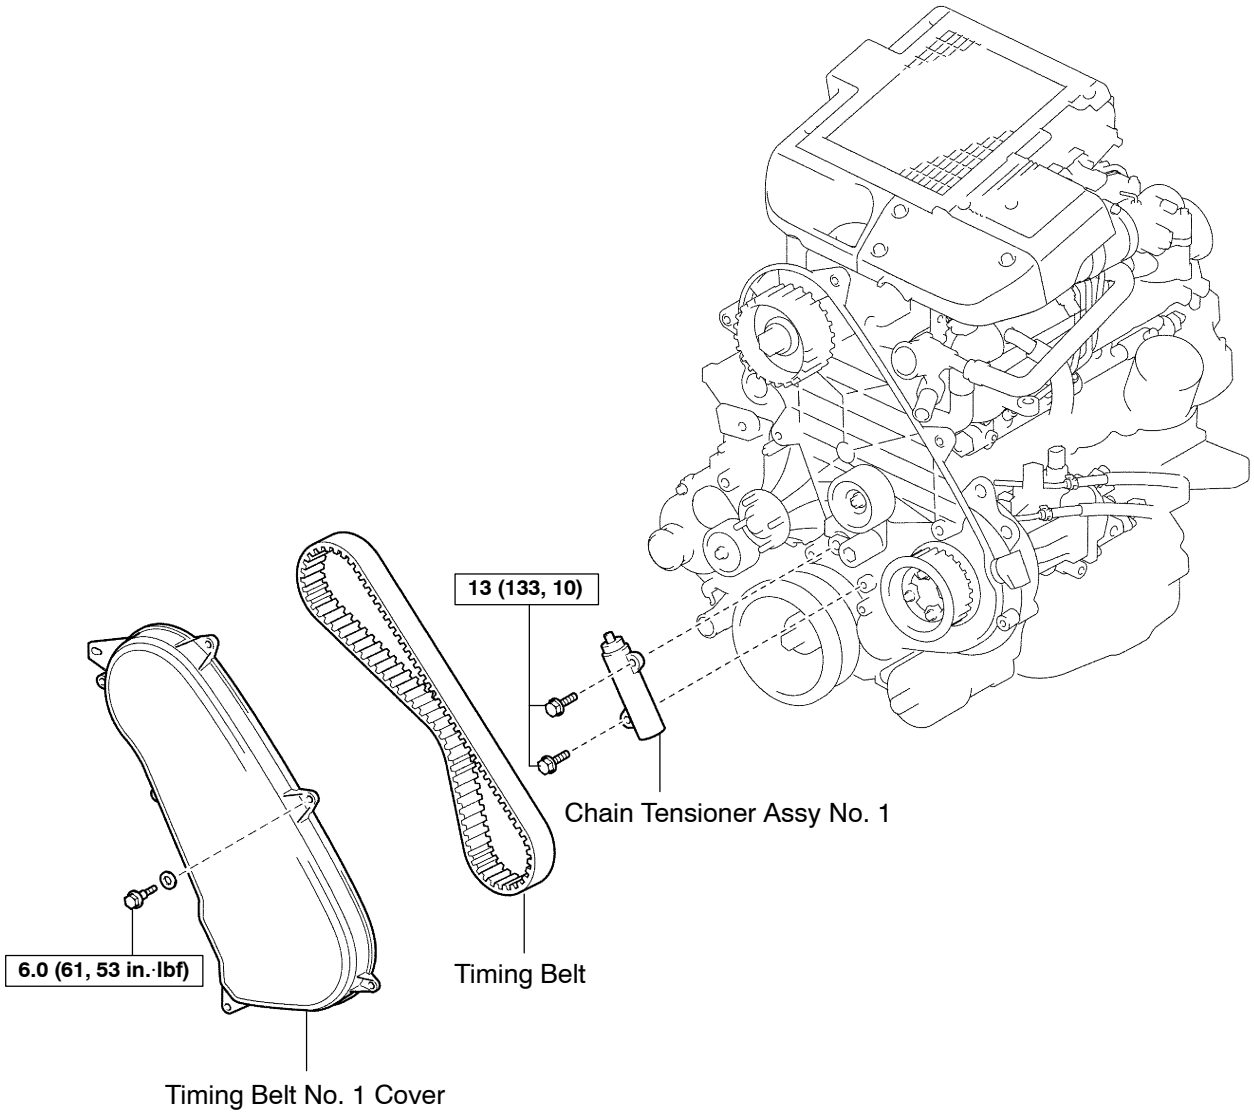

P


N·m (kgf·cm, ft·lbf) : Specified torque

A72859

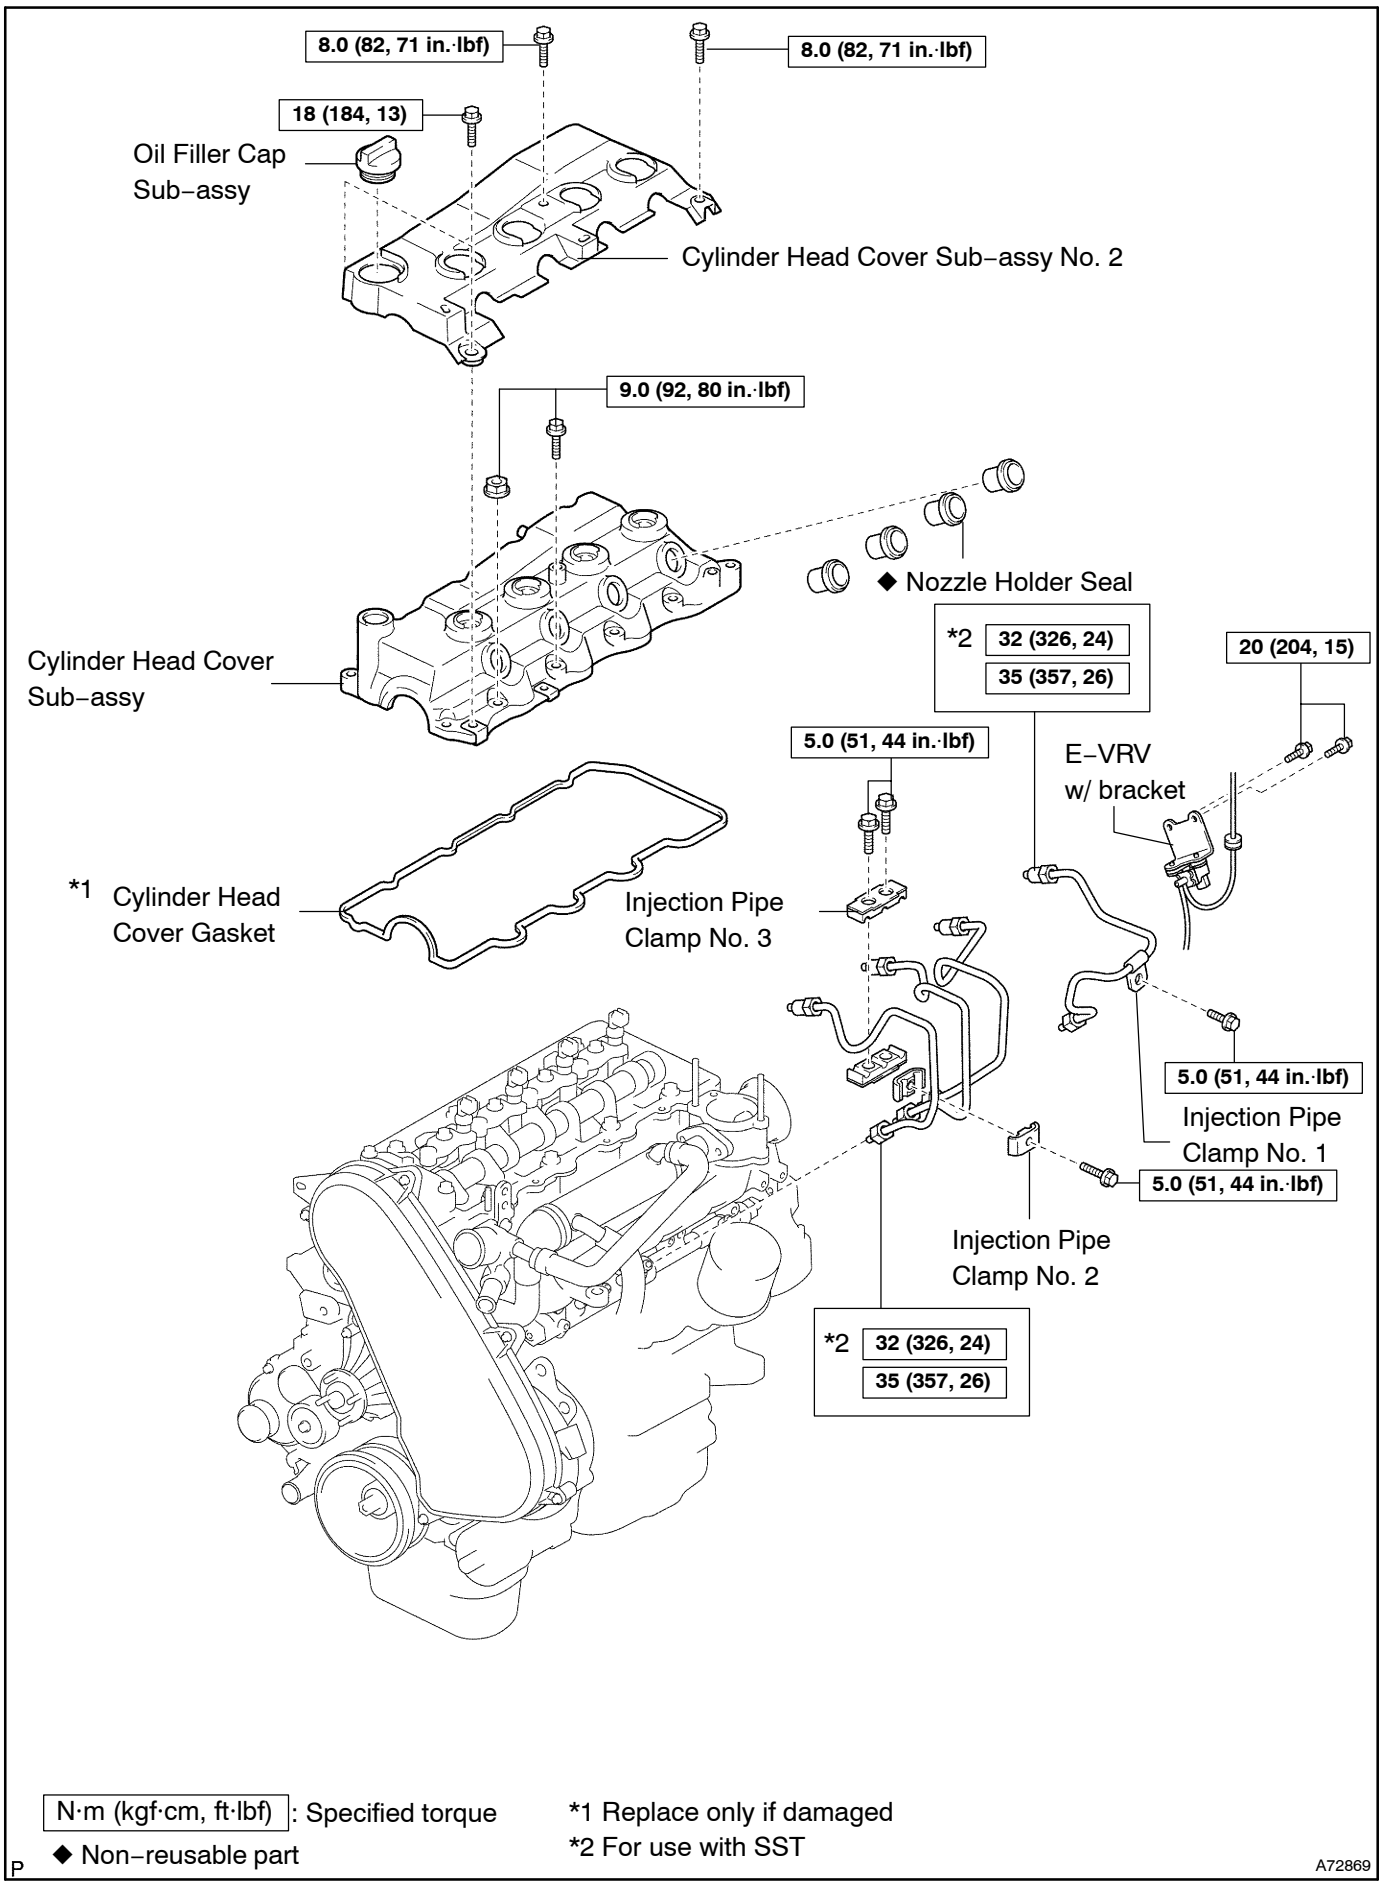

N·m (kgf·cm, ft·lbf) : Specified torque
◆ Non–reusable part
*1 Replace only if damaged
*2 For use with SST

P A72869

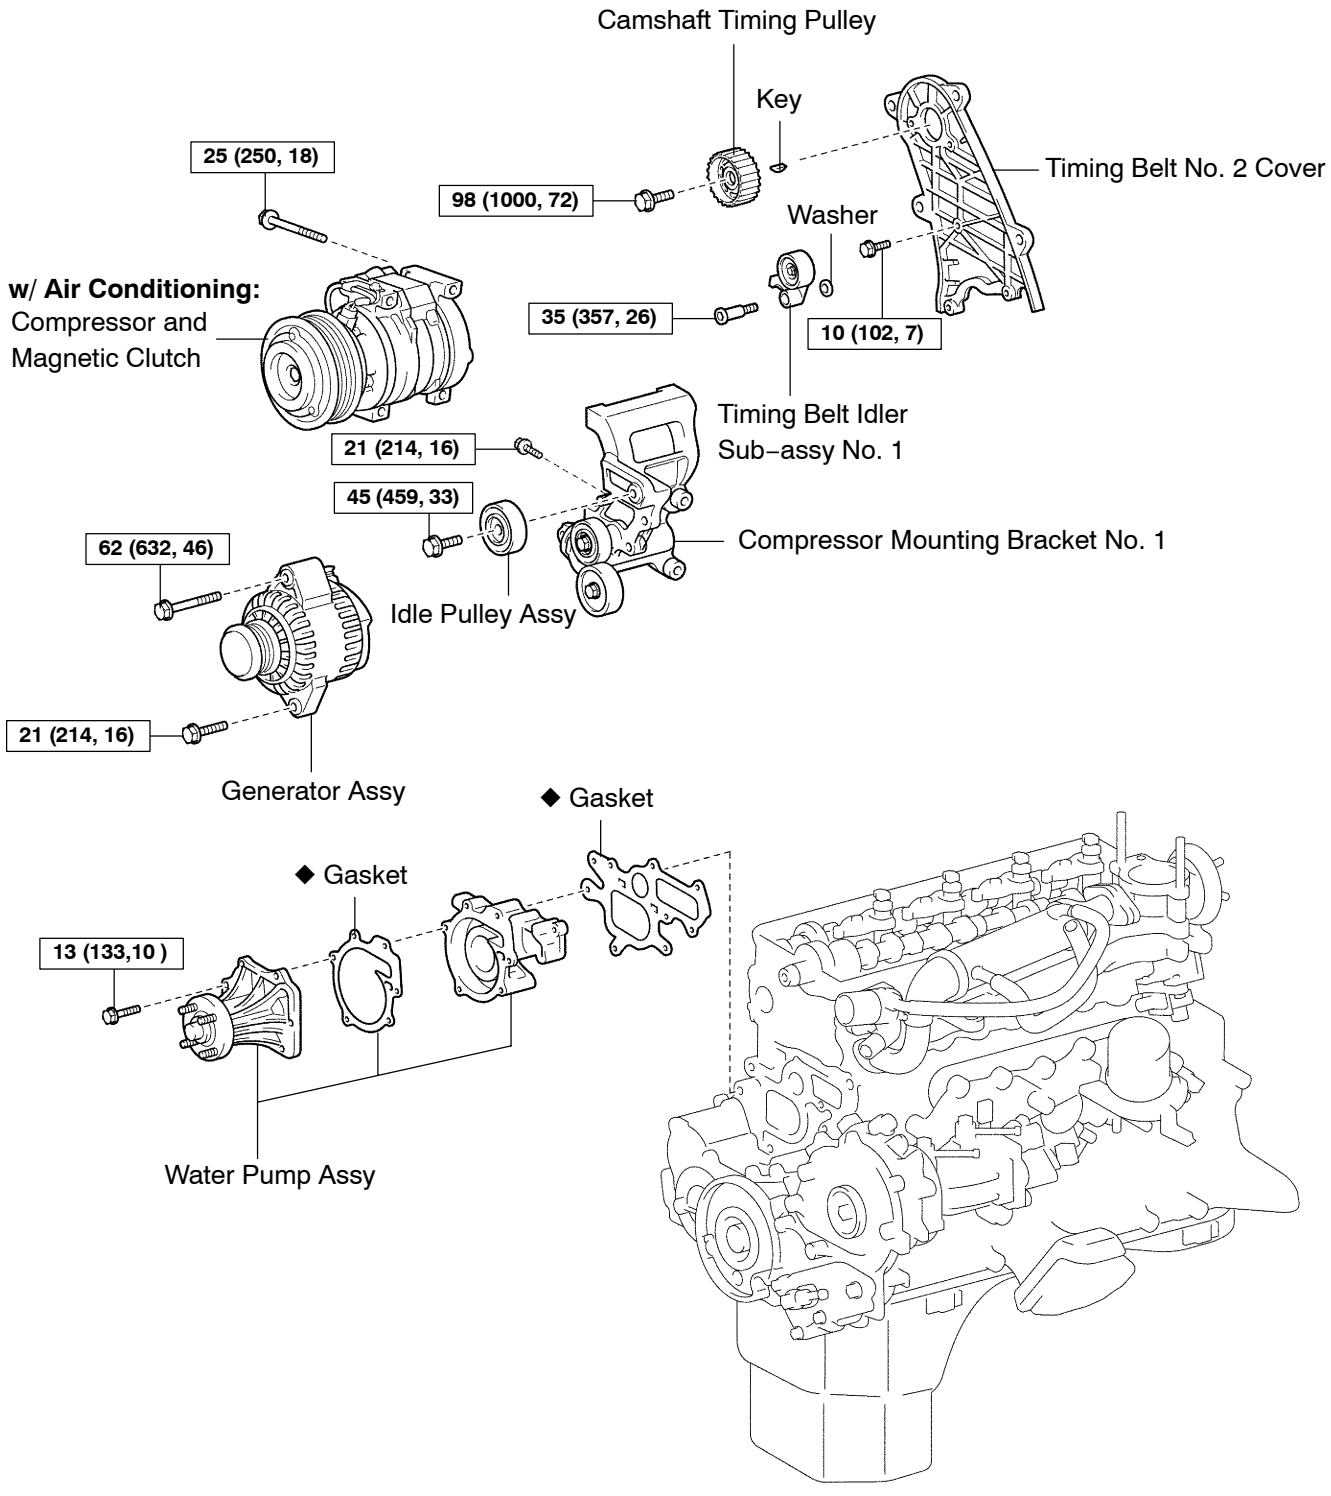
Camshaft Timing Pulley
Key
Timing Belt No. 2 Cover
25 (250, 18)
98 (1000, 72)
Washer
w/ Air Conditioning:
Compressor and
Magnetic Clutch
35 (357, 26)
10 (102, 7)
Timing Belt Idler
Sub–assy No. 1
21 (214, 16)
45 (459, 33)
Compressor Mounting Bracket No. 1
62 (632, 46)
Idle Pulley Assy
21 (214, 16)
Generator Assy
◆ Gasket
◆ Gasket
13 (133,10)
Water Pump Assy
N·m (kgf·cm, ft·lbf) : Specified torque
◆ Non–reusable part
A72870