
PARK/NEUTRAL POSITION SWITCH ASSY (ATM)

400TQ–01


REPLACEMENT

1. SEPARATE BATTERY NEGATIVE TERMINAL

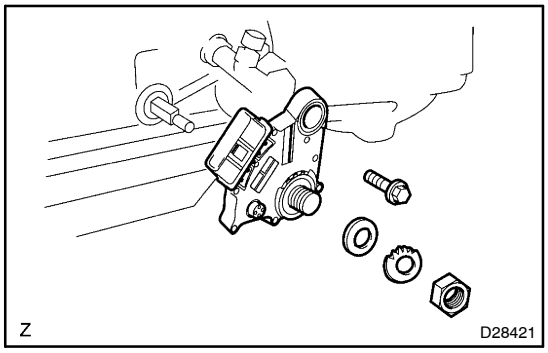


2. REMOVE PARK/NEUTRAL POSITION SWITCH ASSY

(a) Using a screwdriver, unstake the lock washer.
(b) Remove the nut, lock washer and grommet.
(c) Remove the bolt and park/neutral position switch.

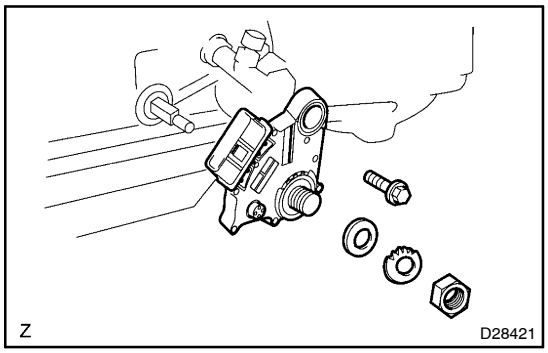

3. INSTALL PARK/NEUTRAL POSITION SWITCH ASSY

(a) Install the park/neutral position switch onto the manual valve lever shaft and temporarily tighten the adjusting bolt.

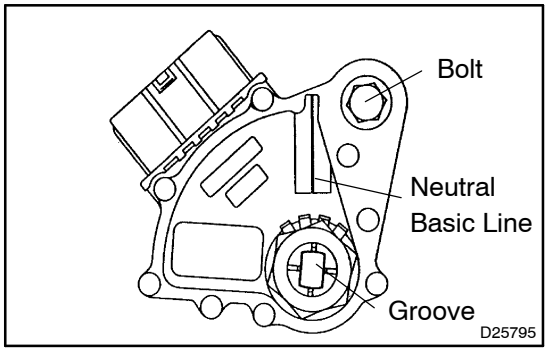

(b) Install the grommet and a new lock washer. Install the nut.
Torque: 6.9 N·m (70 kgf·cm, 61 in.·lbf)
(c) Using the manual valve lever shaft, fully turn the manual lever shaft back and back off 2 notches. It is now in neutral.
(d) Align the neutral basic line with the switch groove, and tighten the adjusting bolt.
Torque: 13 N·m (130 kgf·cm, 9 ft·lbf)
(e) Bend the tabs of the lock washer.

HINT:
Bend at least 2 of the lock washer tabs.

4. CONNECT BATTERY NEGATIVE TERMINAL
5. ADJUST SHIFT LEVER POSITION (See page 40–68)
6. INSPECT SHIFT LEVER POSITION (See page 40–68)
7. INSPECT PARK/NEUTRAL POSITION SWITCH ASSY (See page 40–4)
8. ADJUST PARK/NEUTRAL POSITION SWITCH ASSY (See page40–4)