
THROTTLE CABLE ASSY (3RZ–FE)

400TW–01

ADJUSTMENT

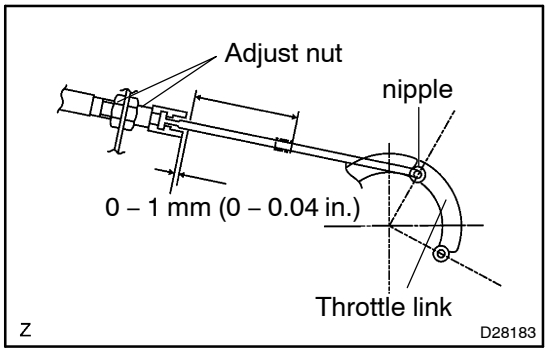

1. ADJUST THROTTLE CABLE ASSY

(a) Completely insert the nipple at the tip of the cable into the hole on the throttle link.

NOTICE:

Do not bent or twist the wire.

(b) Fit the wire into groove on the throttle link.

(c) With the throttle fully closed, adjust the adjust nut and hold it so that the tip of the mark (stake)for cable adjustment protrudes 0 to 1mm from the boot tip.

Torque: 15 N·m (150 kgf·cm, 11 ft·lbf)

Standard distance: 0 – 1 mm (0 – 0.04 in.)

NOTICE:

- **During this procedure, check that the boot fits into the adjuster securely and the cable has no deflection.**
- **Adjust nut must be fit into the groove of the bracket securely.**