RADIO RECEIVER ASSY


670LG–01

REPLACEMENT

HINT:


COMPONENTS: See page 67–2

1. **REMOVE CONSOLE UPPER PANEL GARNISH NO.2 (SEPARATED FRONT SEAT TYPE) (See page 71–13)**
2. **REMOVE CONSOLE UPPER PANEL GARNISH NO.1 (SEPARATED FRONT SEAT TYPE) (See page 71–13)**
3. **REMOVE INSTRUMENT PANEL GARNISH SUB–ASSY LH(See page 71–13)**
4. **REMOVE INSTRUMENT PANEL GARNISH SUB–ASSY RH(See page 71–13)**
5. **REMOVE INSTRUMENT CLUSTER FINISH PANEL COVER (W/ FIELD MONITOR) (See page 71–13)**
6. **REMOVE INTEGRATION CONTROL & PANEL ASSY(See page 71–13)**

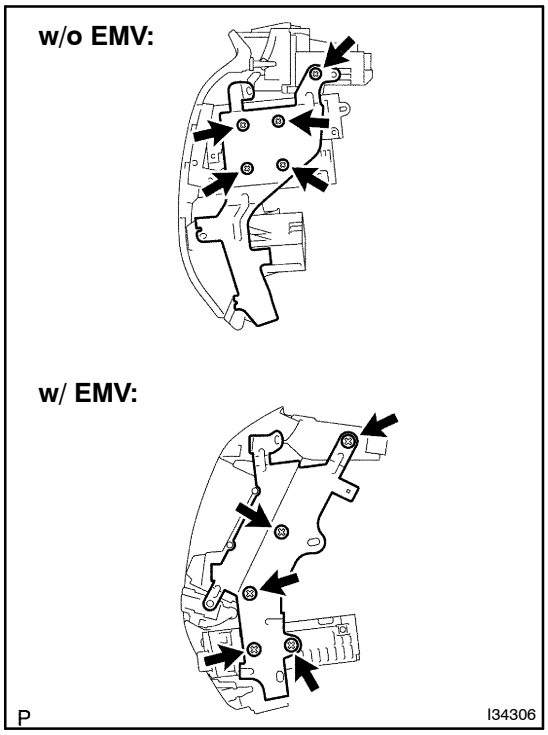


7. **REMOVE RADIO BRACKET NO.1**

(a) Remove the 5 screws.

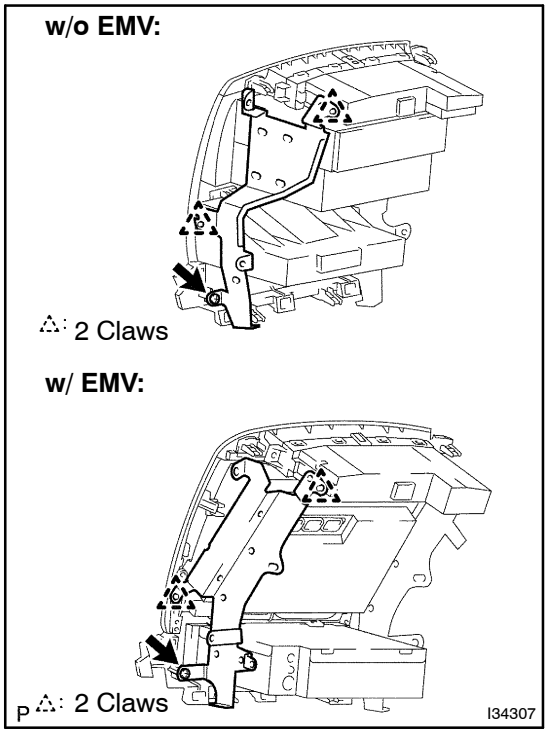


(b) Remove the screw.
(c) Releace the 2 claws and remove the radio bracket No.1.

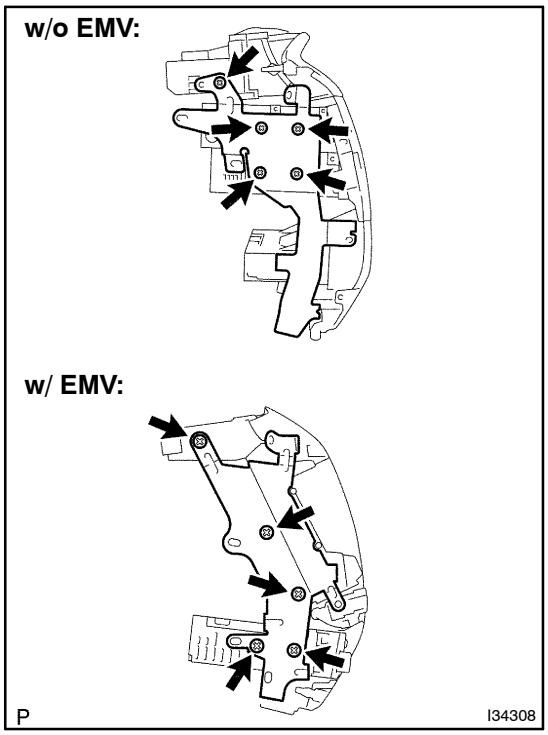

8. REMOVE RADIO BRACKET NO.2


(a) Remove the 5 screws.

w/o EMV:

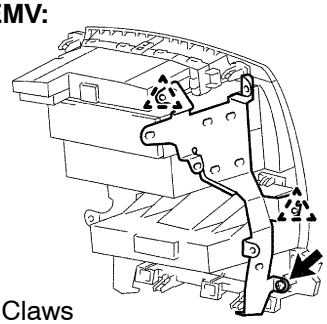

△: 2 Claws

w/ EMV:

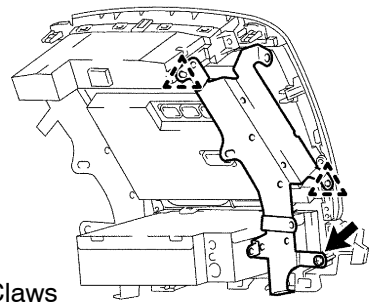


P △: 2 Claws

I34309

(b) Remove the screw.


(c) Releace the 2 claws and remove the radio bracket No.2.

w/o EMV:

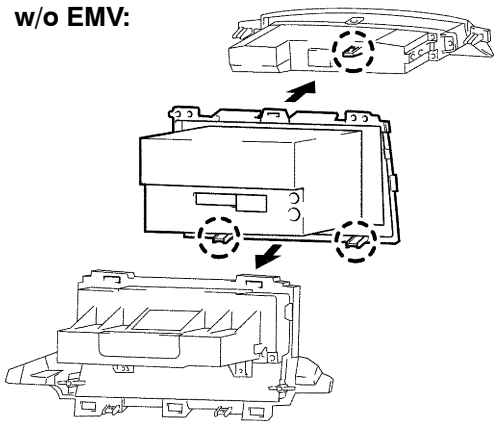

◌: 2 Claws

w/ EMV:

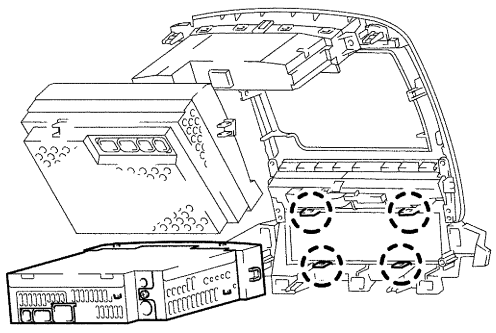

P ◌: 2 Claws

I34310

9. REMOVE RADIO RECEIVER ASSY

(a) Remove the claws and remove the radio receiver assy.