AMPLIFIER ANTENNA ASSY

670LQ–01

REPLACEMENT

HINT:

COMPONENTS: See page 67–2

1. REMOVE ROOF HEADLINING ASSY (5 DOOR BODY TYPE)(See page 76–58)

2. REMOVE ROOF HEADLINING ASSY (3 DOOR BODY TYPE)(See page 76–54)

HINT:

Refer to the instructions for removal of the sun roof or removal roof headlining assy.


3. REMOVE AMPLIFIER ANTENNA ASSY

(a) Disconnect the connectors.

(b) 5 Door:
Remove the 4 bolts.
3 Door:
Remove the 3 bolts.

(c) 5 Door:
Remove the 17 clamps and amplifier antenna assy.
3 Door:
Remove the 15 clamps and amplifier antenna assy.

5 Door:

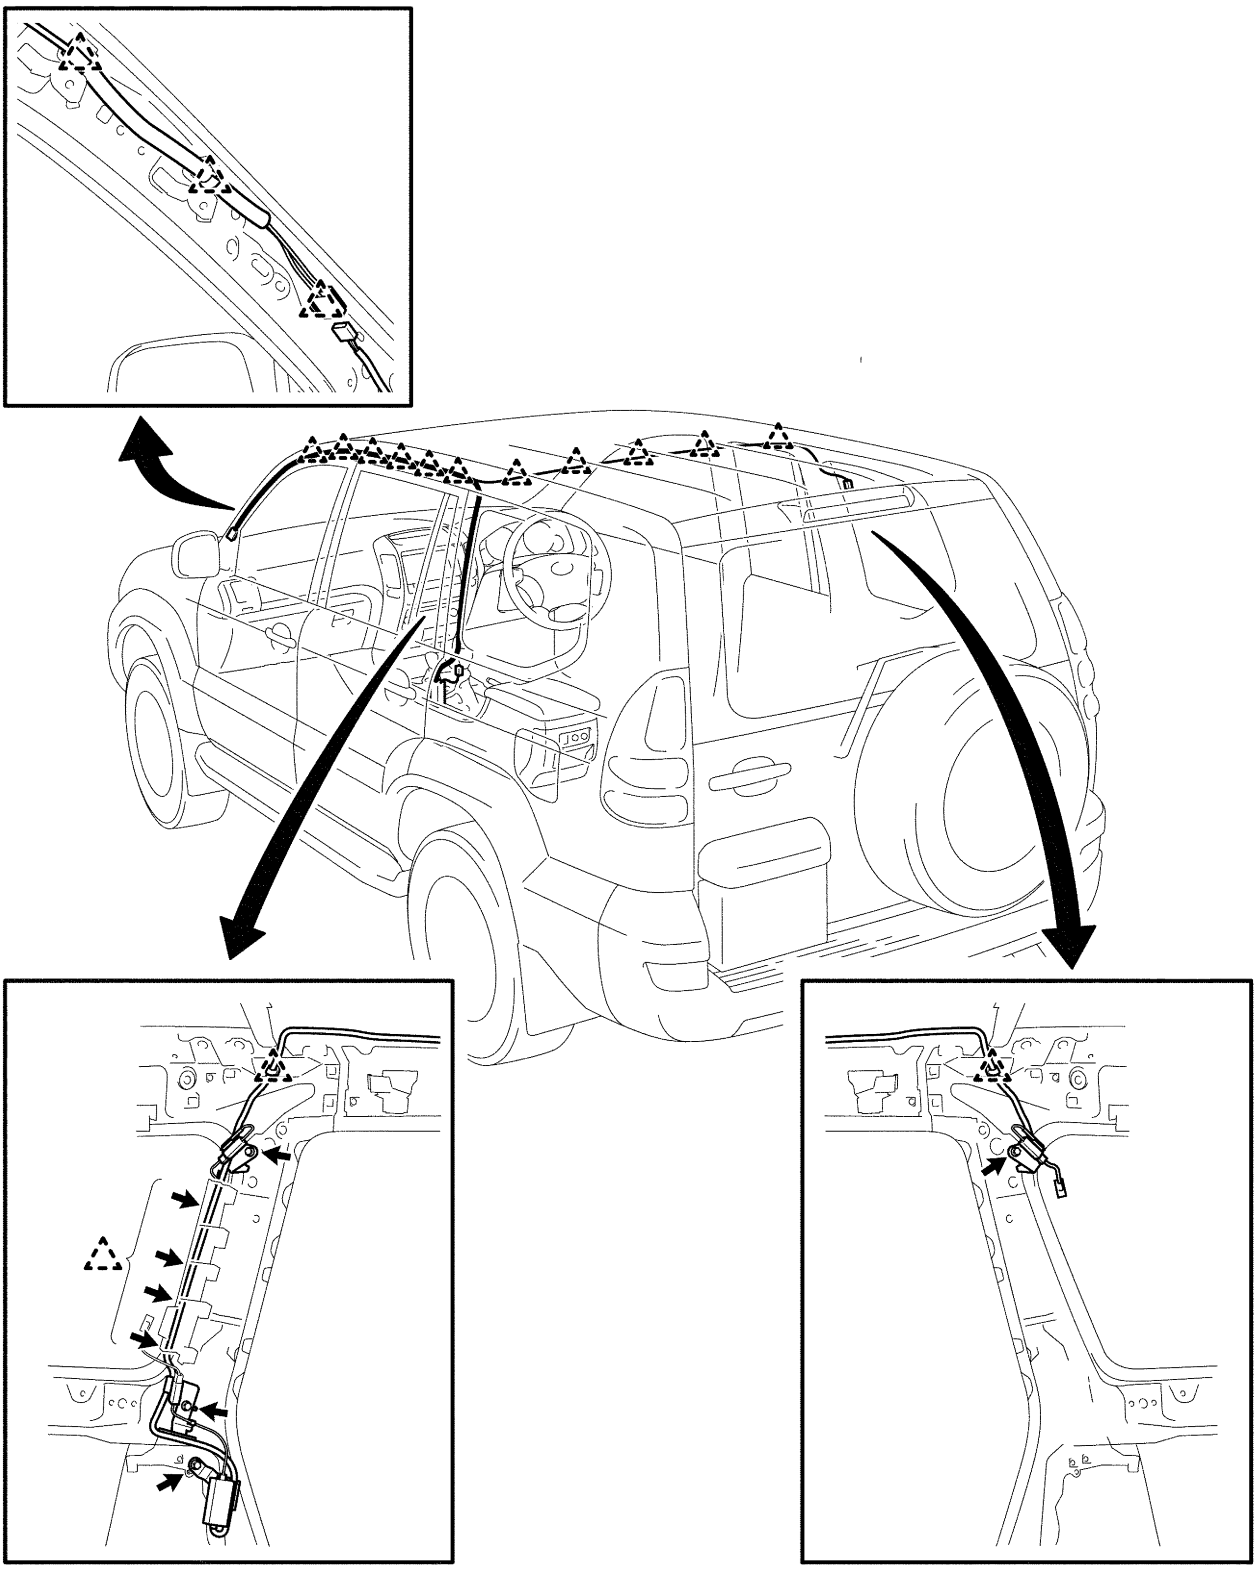


P △: 17 Clamps

E65972

I34333

3 Door:

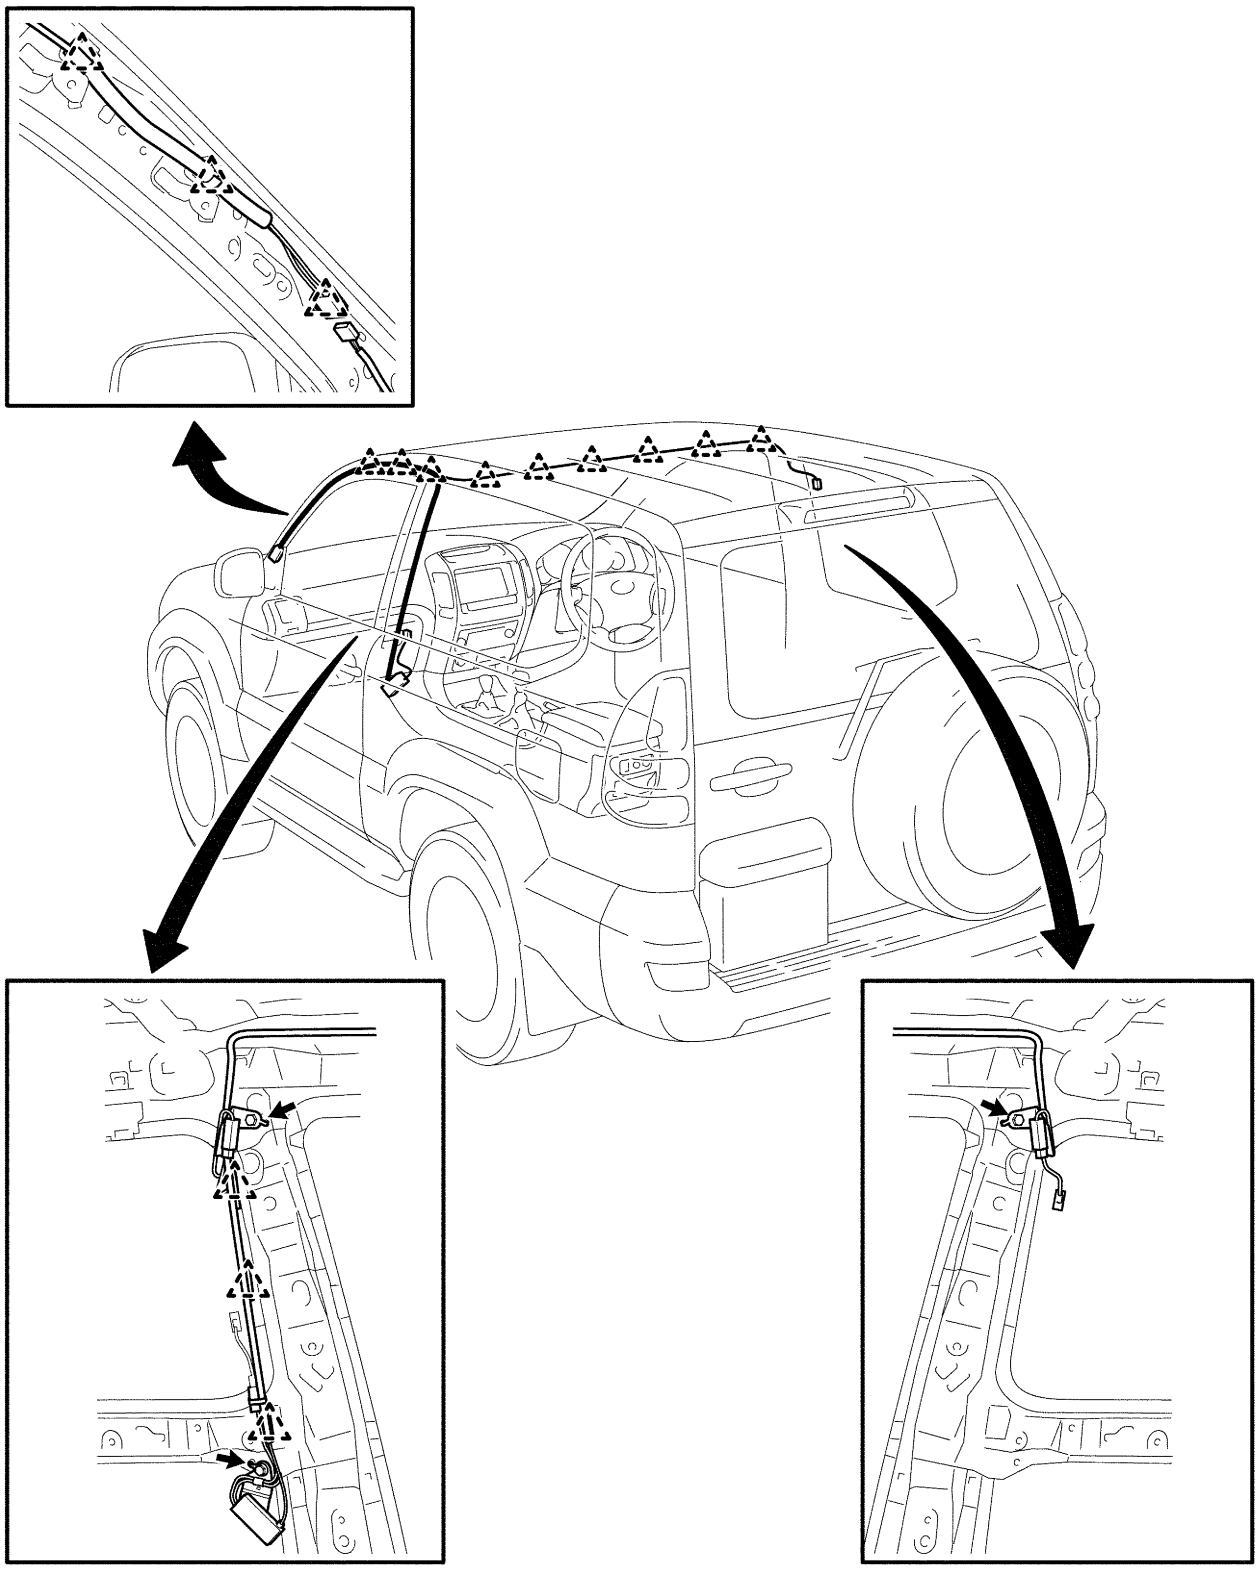

P △: 15 Clamps

E65973

I34334

4. INSTALL AMPLIFIER ANTENNA ASSY

(a) 5 Door:
Install the 4 bolts.
3 Door:
Install the 3 bolts.
Torque: 8 N·m (82 kgf·cm, 71 in.·lbf)

(b) Connect the connectors.

5. INSTALL ROOF HEADLINING ASSY (5 DOOR BODY TYPE)

6. INSTALL ROOF HEADLINING ASSY (3 DOOR BODY TYPE)