

760PP–01

REPLACEMENT

HINT:
The installation is in the reverse order of the removal. However, when there is a special point concerning the illustration, it is indicated.

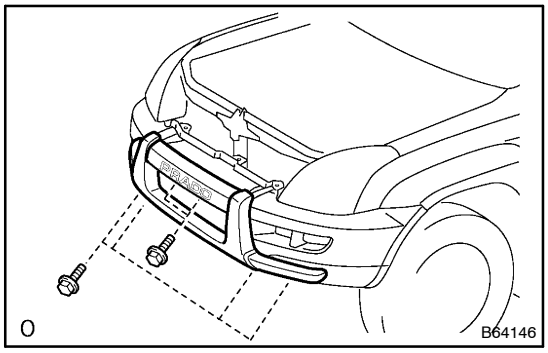


1. REMOVE FRONT BUMPER GUARD
(a) Remove the 6 bolts and bumper guard.

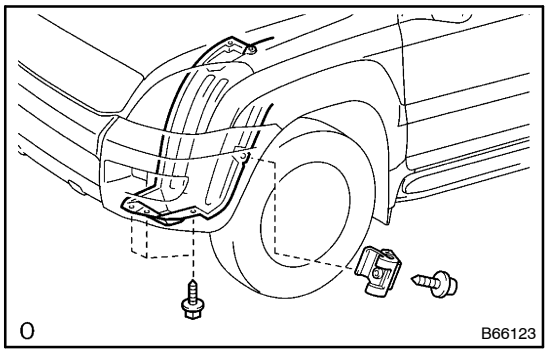

2. REMOVE FRONT FENDER LINER LH
(a) Remove the 2 screws.
(b) Using a screwdriver, disengage the pin, as shown in the illustration.
(c) Remove the front part of the fender liner.

3. REMOVE FRONT FENDER LINER RH
HINT:
Use the same procedures above for the LH side.

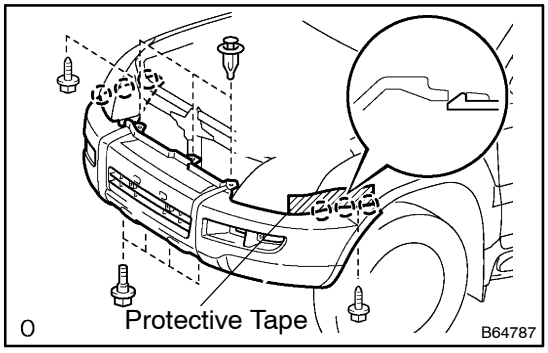

4. REMOVE FRONT BUMPER COVER
(a) Put protective tape under the front fender.
(b) w/ Fog lamp:
Disconnect the fog lamp connector.
(c) Remove the 2 screws and 4 bolts.
(d) Using a screwdriver, disengage the 6 claws and remove the bumper cover.
HINT:
Tape the screwdriver tip before use.

5. REMOVE FRONT BUMPER ENERGY ABSORBER
6. REMOVE FRONT BUMPER REINFORCEMENT SUB–ASSY
(a) Remove the 4 nuts and bumper reinforcement sub–assy.
7. REMOVE FRONT BUMPER REINFORCEMENT PLATE LH
(a) Disengage the claws and remove the reinforcement plate.
8. REMOVE FRONT BUMPER REINFORCEMENT PLATE RH
(a) Disengage the claws and remove the reinforcement plate.
9. REMOVE FRONT BUMPER GUARD RETAINER
(a) Remove the 4 nuts from bumper guard retainer.
(b) Disengage the claws and remove the bumper guard retainer.

10. REMOVE FRONT BUMPER MOULDING INSERT

(a) Disengage the claws and remove the 4 bumper moulding insert.

11. REMOVE FRONT BUMPER HOLE COVER LH (W/O FOG LAMP)

(a) Disengage the claws and remove the bumper hole cover RH.

12. REMOVE FRONT BUMPER HOLE COVER RH (W/O FOG LAMP)

13. REMOVE FRONT FOG LAMP ASSY RH (W/ FOG LAMP)

14. REMOVE FRONT FOG LAMP ASSY LH (W/ FOG LAMP)

15. REMOVE FRONT BUMPER GUARD RETAINER


(a) Disengage the claws and remove the bumper guard retainer.

16. REMOVE FRONT BUMPER REINFORCEMENT PLATE CENTER

17. INSTALL FRONT BUMPER REINFORCEMENT SUB–ASSY

(a) Install the bumper reinforcement with the 4 nuts.

Torque: 65 N·m (663 kgf·cm, 48 ft·lbf)

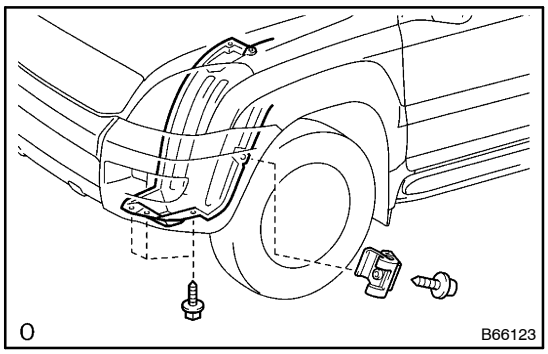

18. INSTALL FRONT FENDER LINER LH

(a) Push in the pin to engage the pin, as shown in the illustration.

19. INSTALL FRONT FENDER LINER RH

(a) Push in the pin to engage the pin, as shown in the illustration.