FRONT DOOR BELT MOULDING LH


760PZ-01

REPLACEMENT

HINT:

- The installation is in the reverse order of the removal.
- On the RH side, use the same procedures as on the LH side.

1. **REMOVE POWER WINDOW REGULATOR MASTER SWITCH ASSY (See page 75–12)**
2. **REMOVE FRONT DOOR LOWER FRAME BRACKET GARNISH LH (See page 75–12)**
3. **REMOVE FRONT DOOR INSIDE HANDLE BEZEL LH (See page 75–12)**
4. **REMOVE FRONT ARMREST ASSY LH (See page 75–12)**
5. **REMOVE FRONT DOOR TRIM BOARD SUB–ASSY LH (See page 75–12)**
6. **REMOVE FRONT DOOR SERVICE HOLE COVER LH (See page 75–12)**
7. **REMOVE OUTER REAR VIEW MIRROR ASSY LH (See page 75–12)**
8. **REMOVE FRONT DOOR WINDOW FRAME MOULDING REAR LH (See page 76–33)**

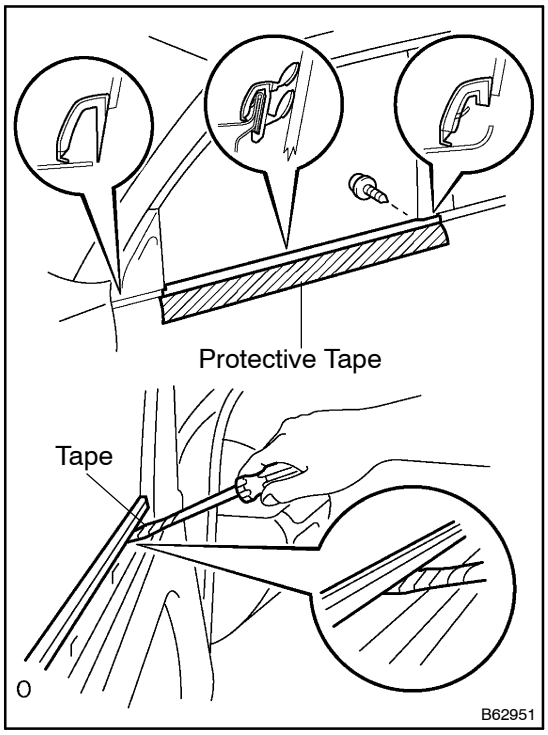

9. REMOVE FRONT DOOR BELT MOULDING LH

(a) Put protective tape under the moulding.

(b) Remove the screw.

(c) Using a screwdriver or moulding remover, disengage the claw and remove the moulding.

HINT:

Tape the screwdriver tip before use.