
RADIATOR SIDE SUPPORT (ASSY)

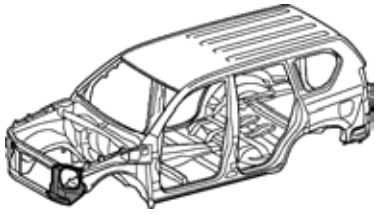

F43223A


With the radiator upper support removed.

Symbol meaning

: Remove Weld Points

F43223B

REMOVAL

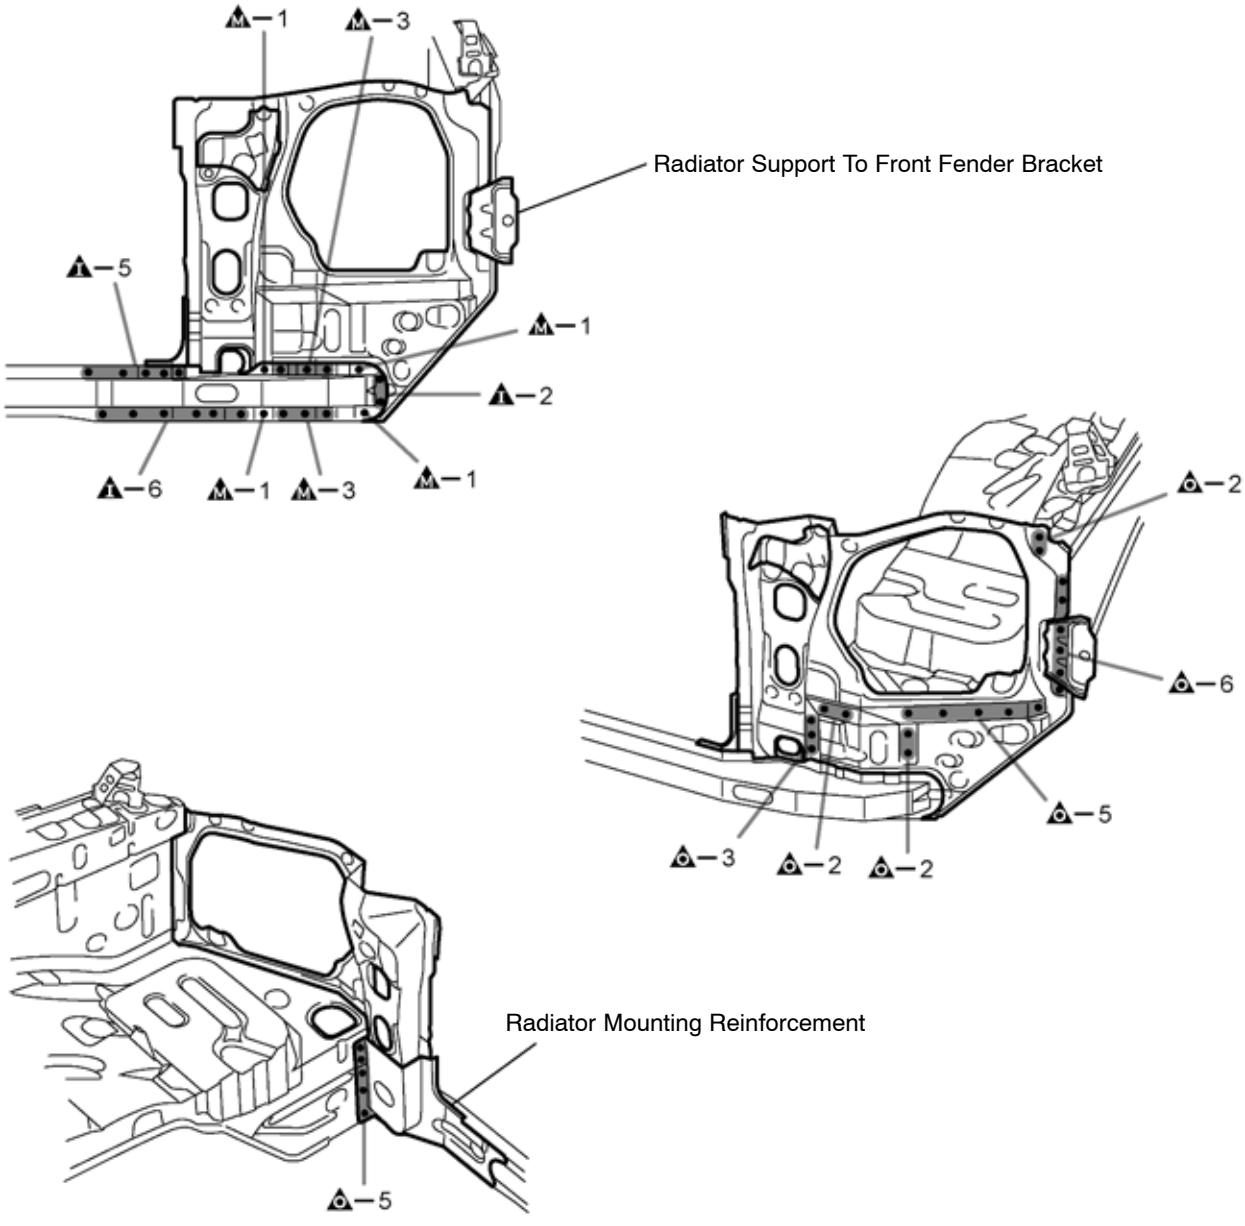

F43223

REMOVAL POINT


1 Remove the radiator support to front fender bracket and radiator mounting reinforcement at the same time.

Symbol meaning

O M I : Plug Weld

F43224B

INSTALLATION

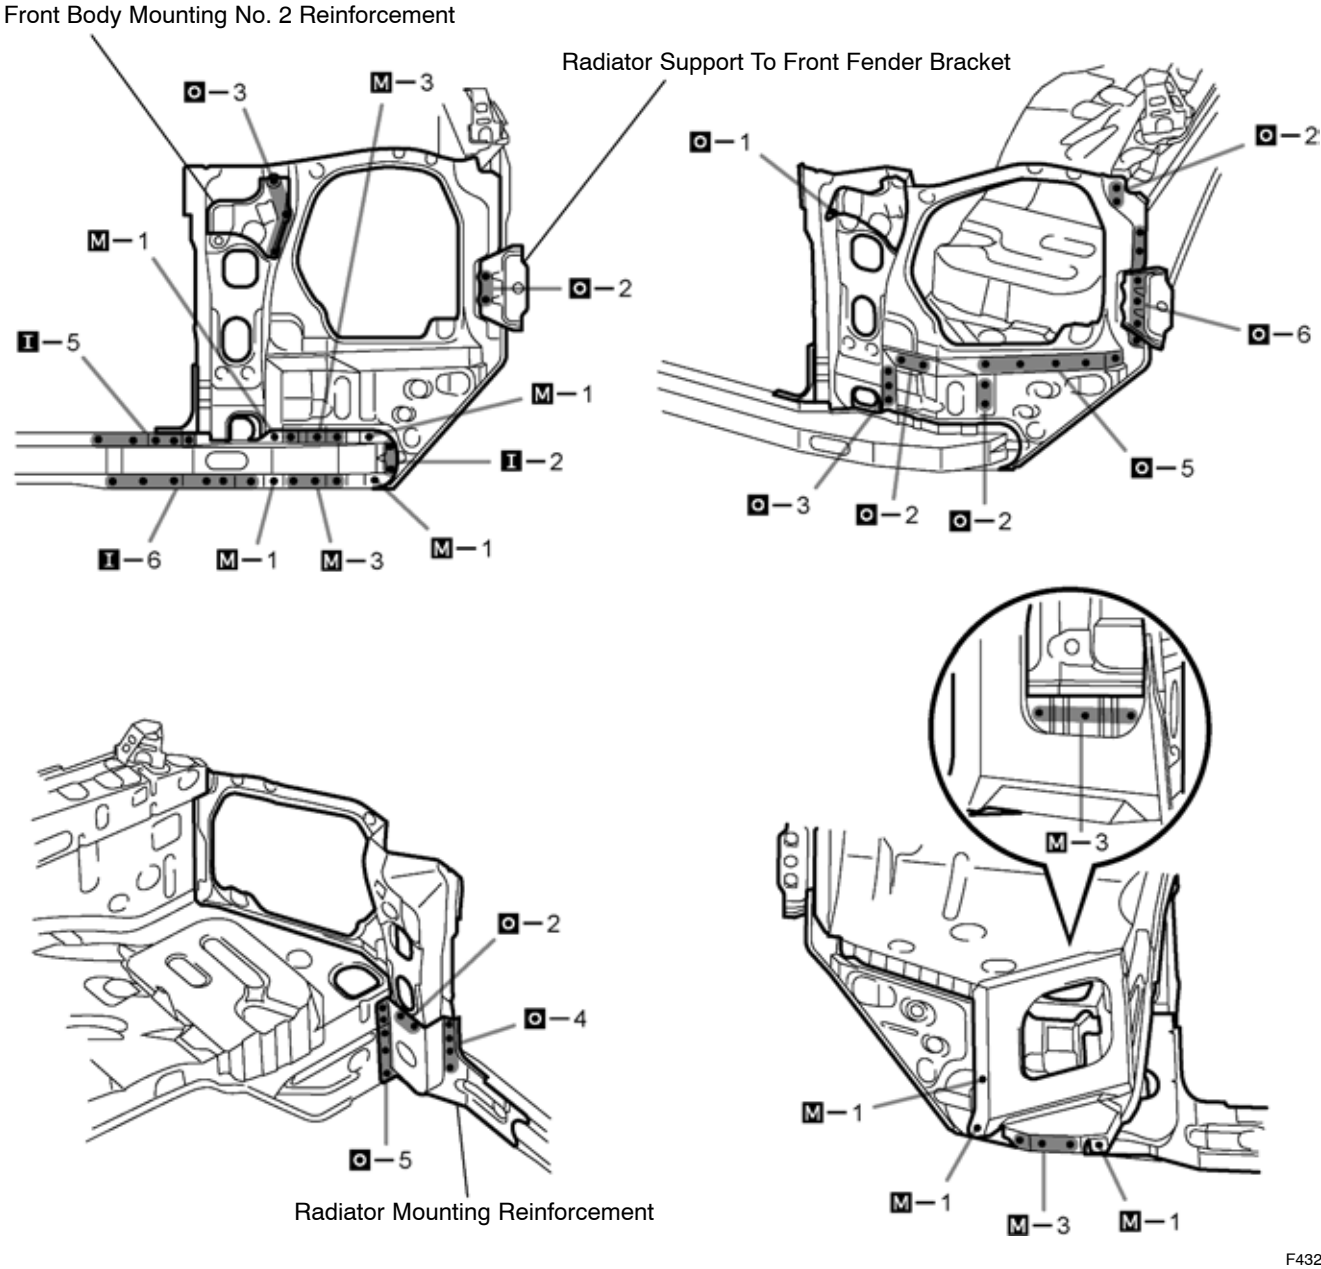

F43224

INSTALLATION POINT

1 Inspect the fitting of the related parts around the new parts before welding. This affects the appearance of the finish.
2 Temporarily install the new parts and measure each part of the new parts in accordance with the body dimension diagram. (See the body dimension diagram)
3 After welding, apply body sealer to the corresponding parts. (See the paint·coating)
4 After applying the top coat, apply anti-rust agent to the internal panel portion of the closed section structural weld points.