
REAR FLOOR PAN (ASSY):

5 Door

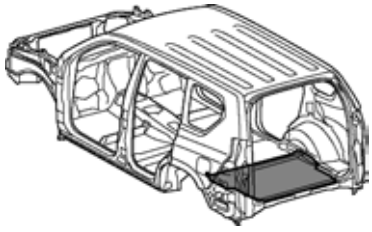

F43321A


With the body lower back panel and rear floor side panel removed.

Symbol meaning


: Remove Weld Points

F43321B


REMOVAL

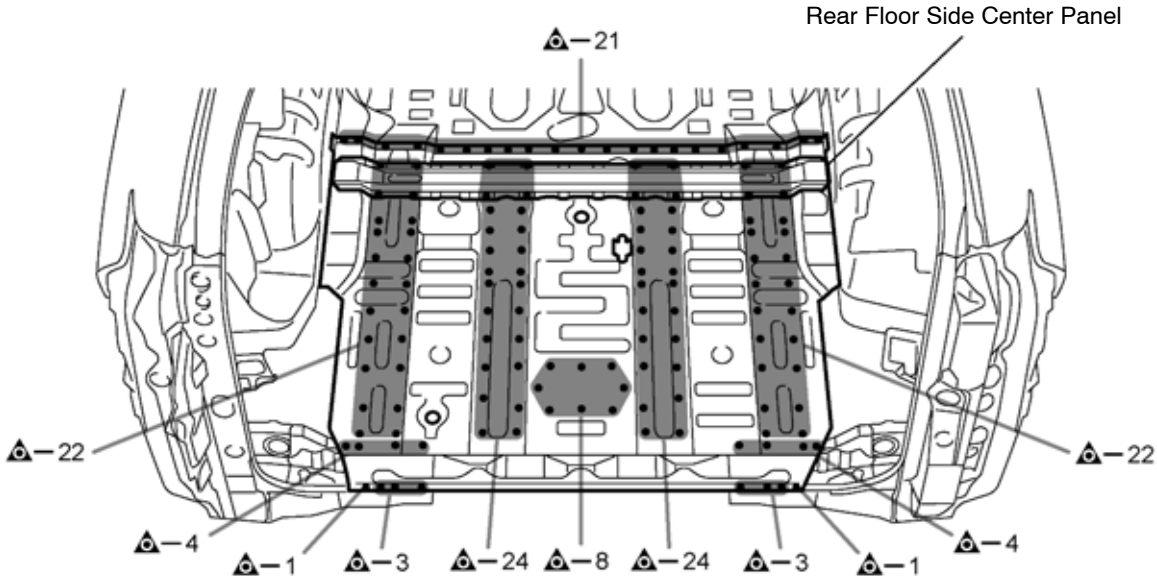

[LH Side]

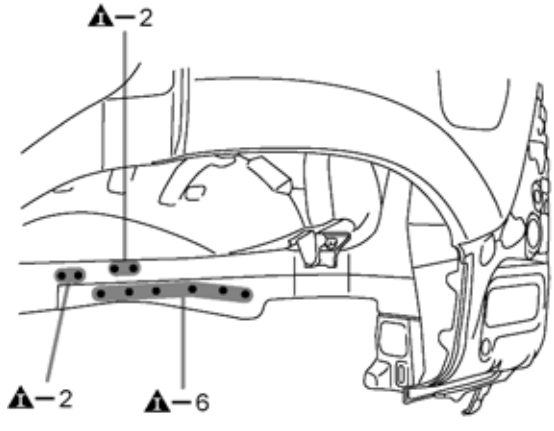

[RH Side]

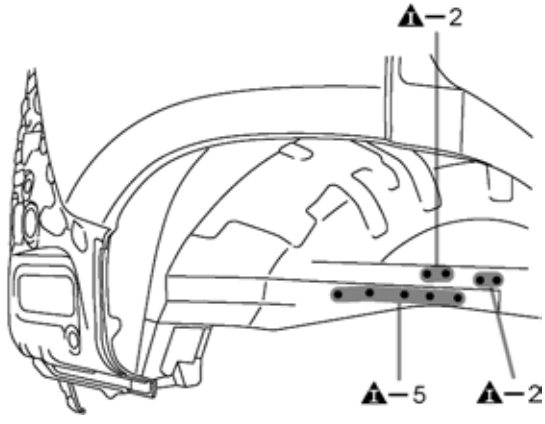

F43321

REMOVAL POINT

1 Remove the rear floor side center panel at the same time.


Symbol meaning

: Spot Weld : Plug Weld : Fillet Weld


F43322B

INSTALLATION

[Upper Face]

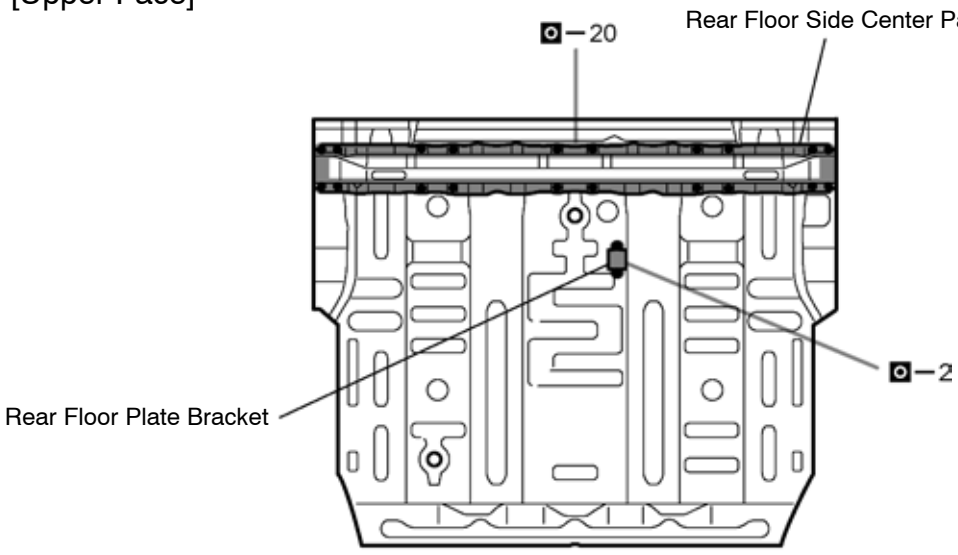


[Lower Face]

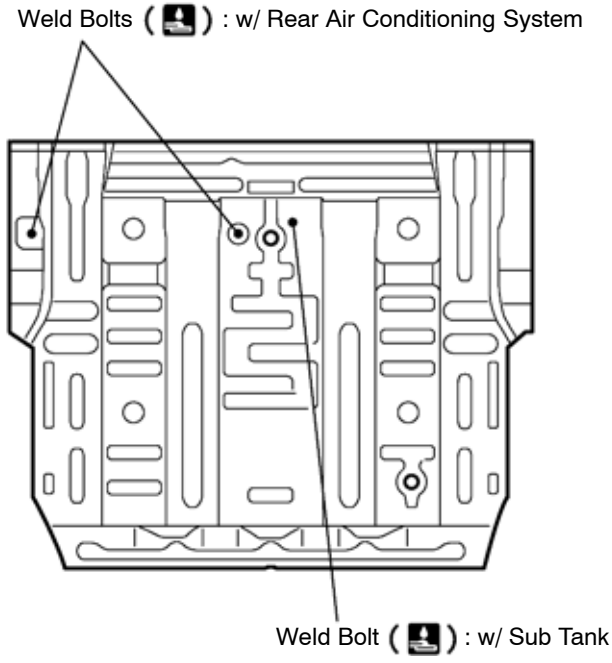


F43322

INSTALLATION POINT


1 Before temporarily installing the new parts, weld the rear floor side center panel, rear floor plate bracket and weld bolts with the standard number of welding points.

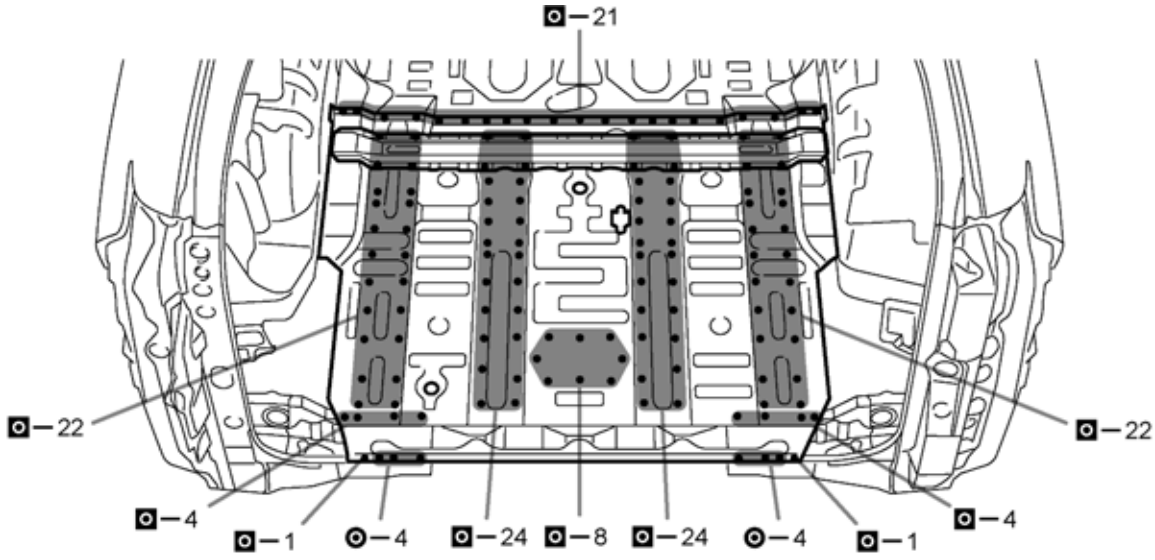

[LH Side]

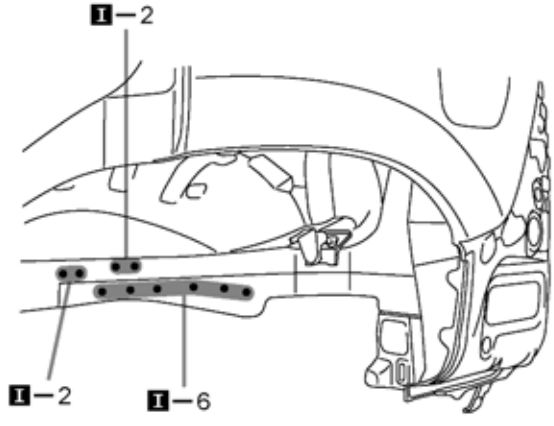

[RH Side]

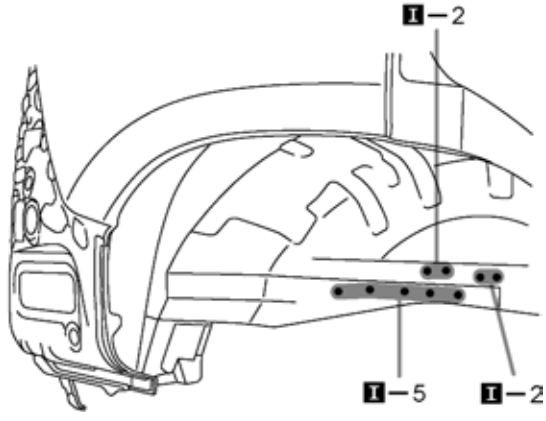

F43323

INSTALLATION POINT

1 Temporarily install the new parts and measure each part of the new parts in accordance with the body dimension diagram. (See the body dimension diagram)
2 After welding, apply body sealer and undercoating to the corresponding parts. (See the paint·coating)
3 After applying the top coat, apply anti-rust agent to the internal panel portion of the closed section structural weld points.