

(Cont. next page)

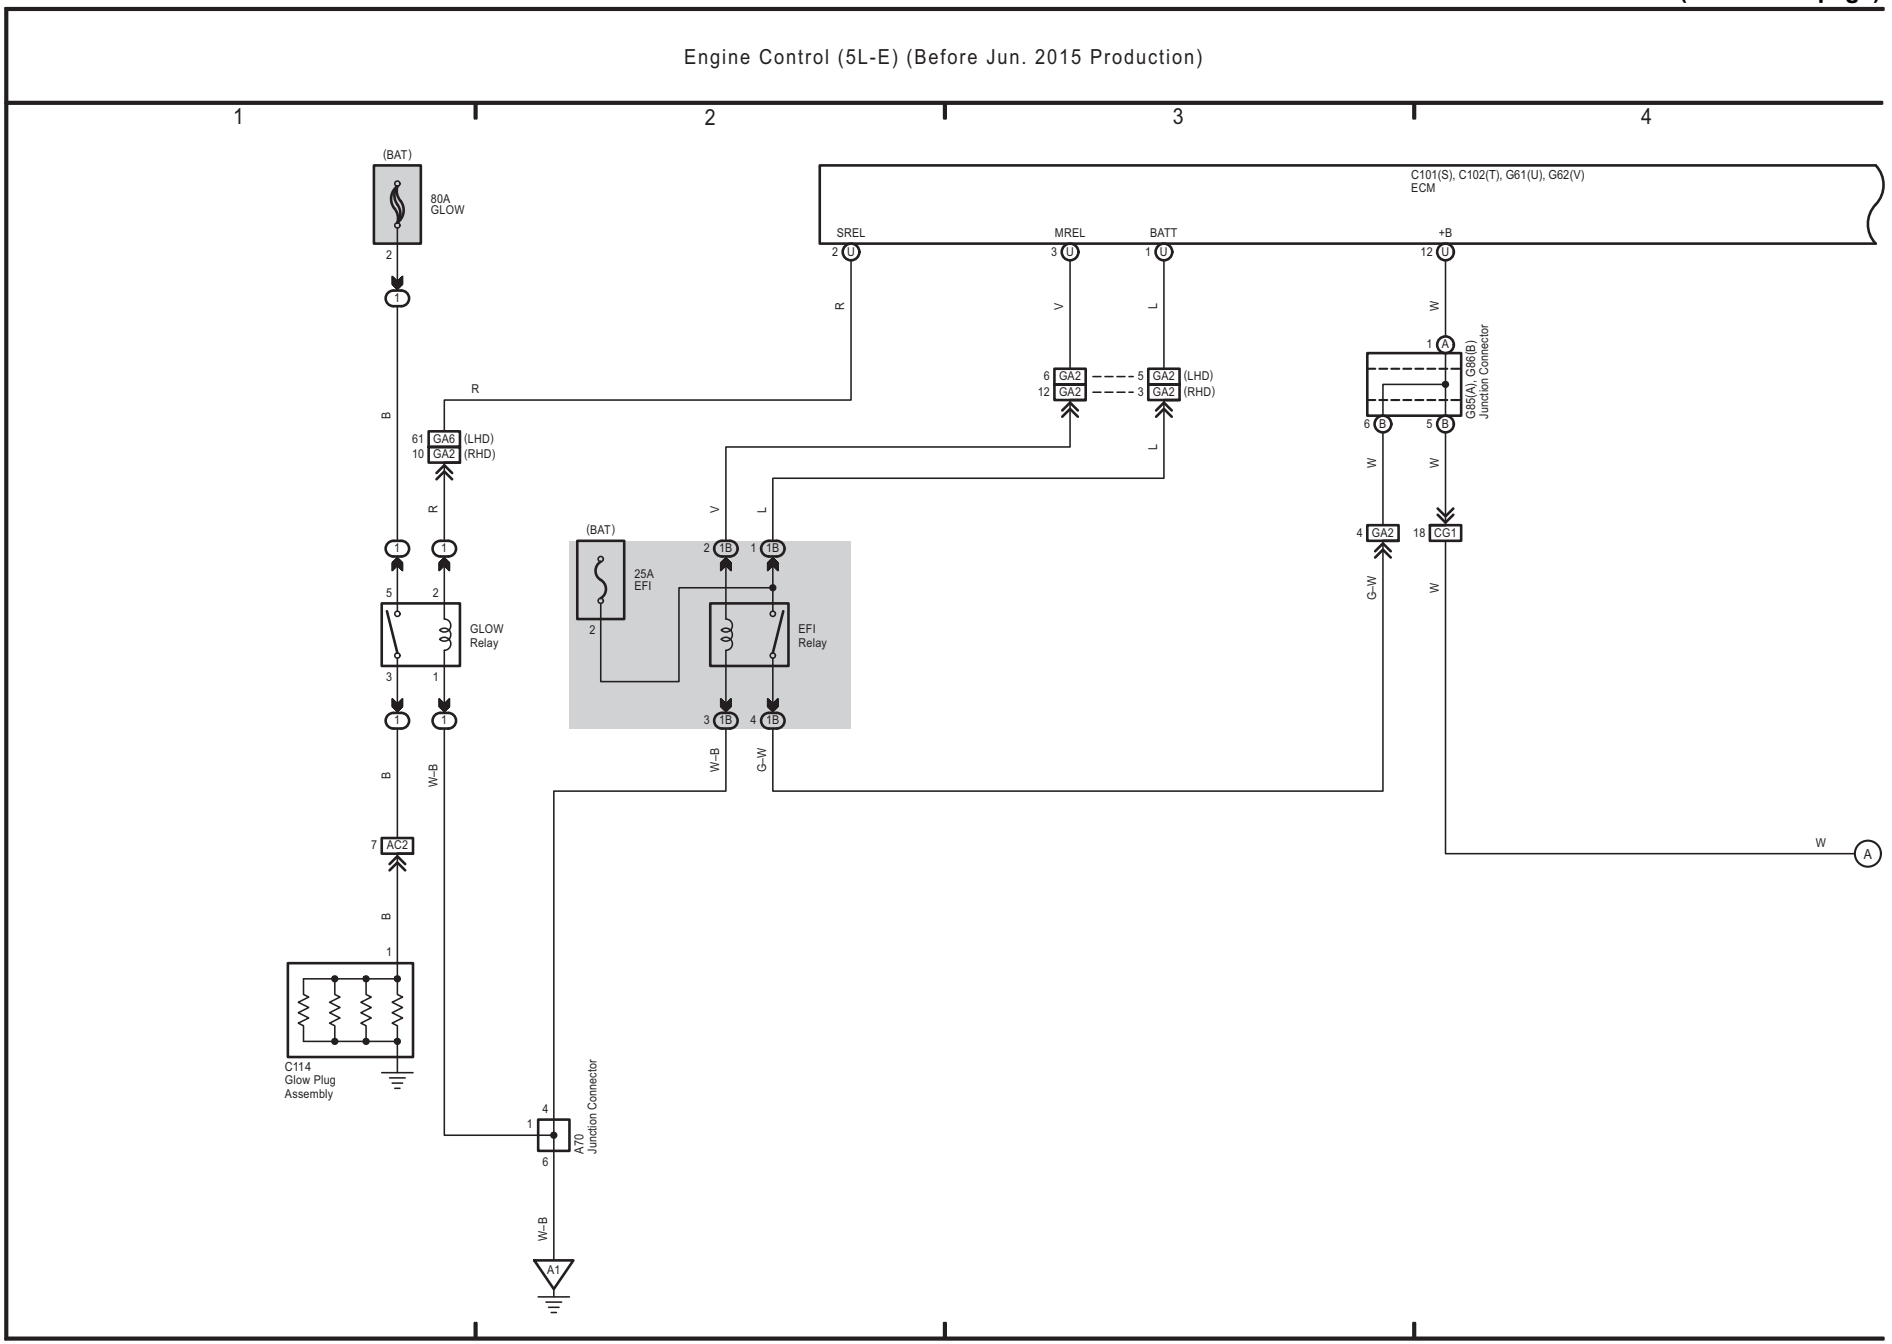

(Cont. next page)


Engine Control (5L-E) (Before Jun. 2015 Production)

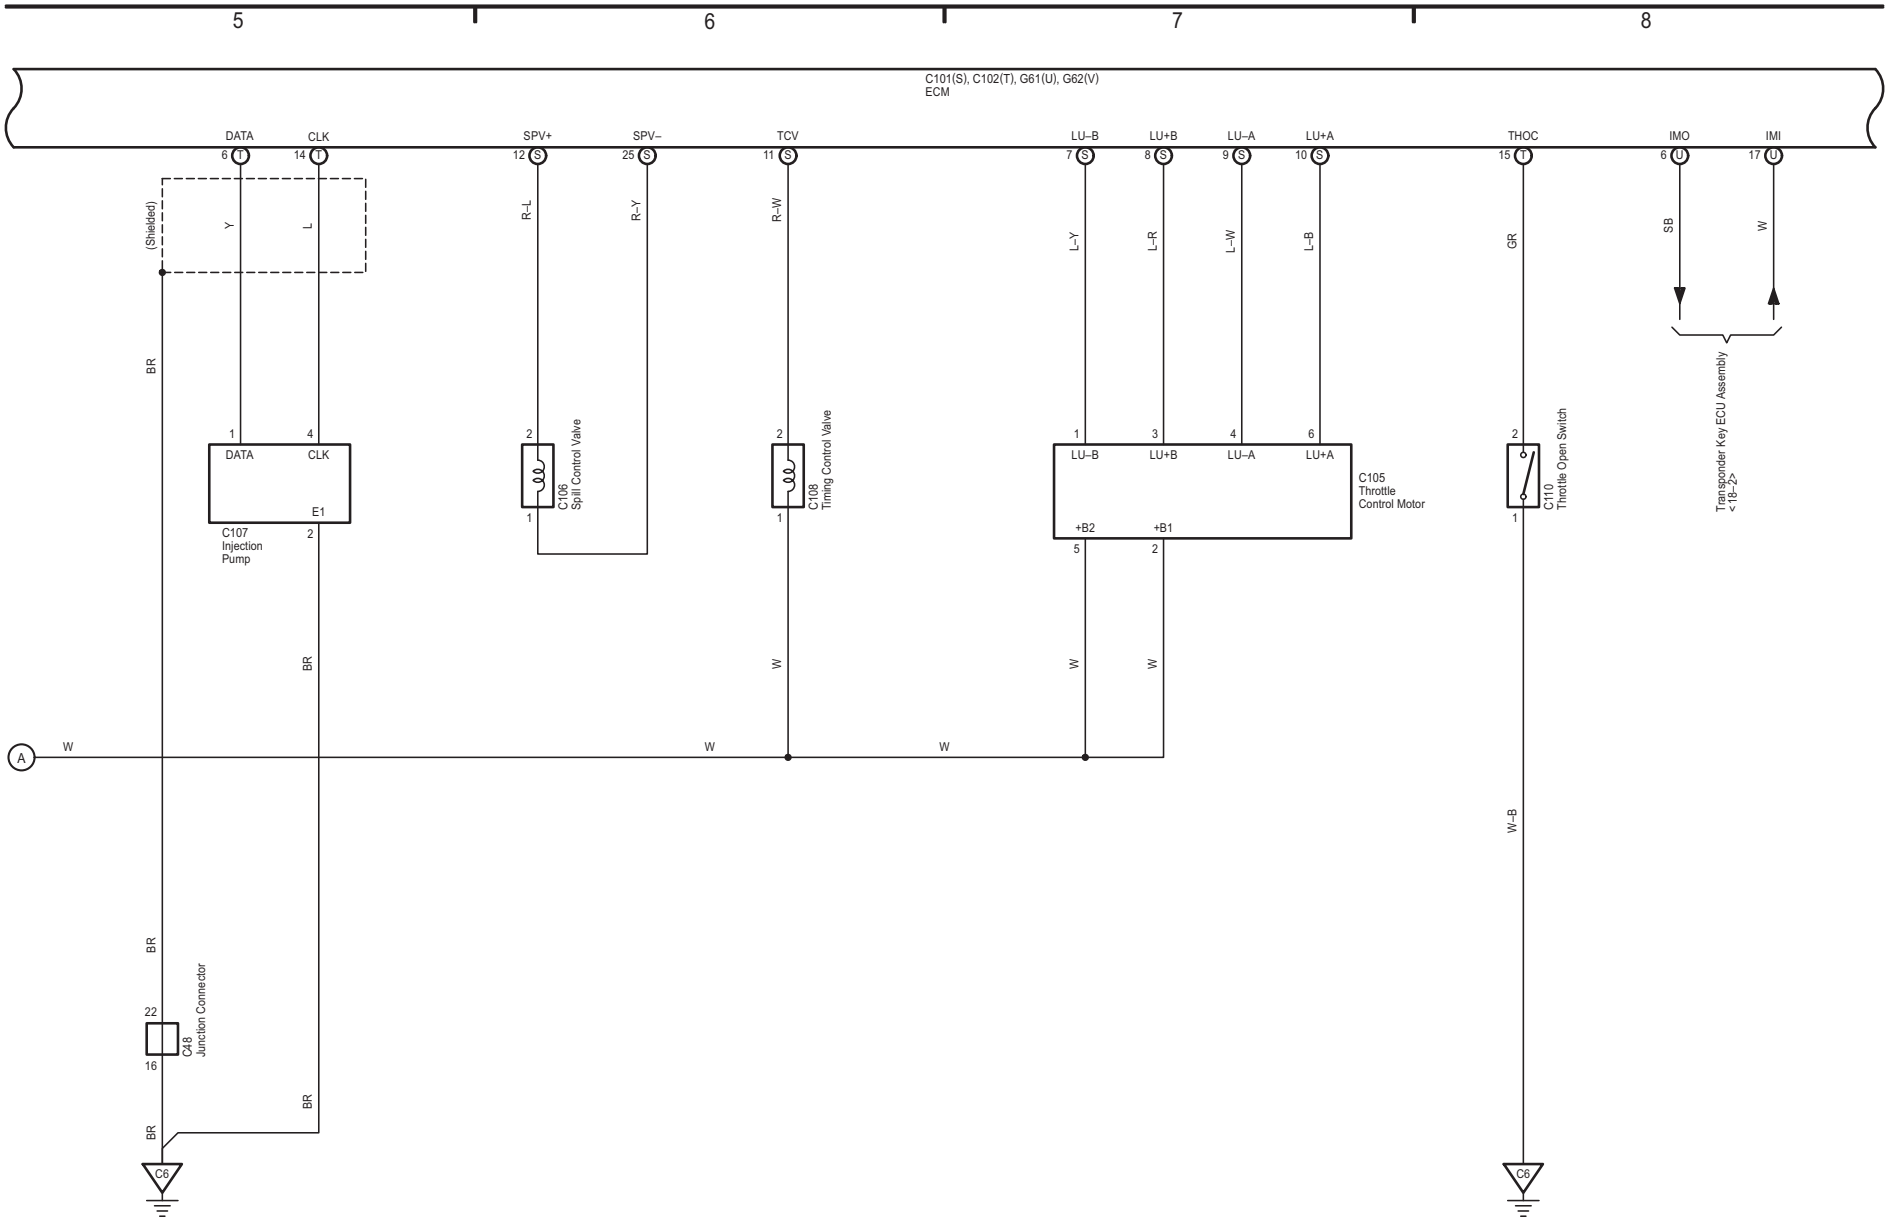

(Cont. next page)


Engine Control (5L-E) (Before Jun. 2015 Production)


* 3 : Before Aug. 2013 Production
* 4 : From Aug. 2013 Production

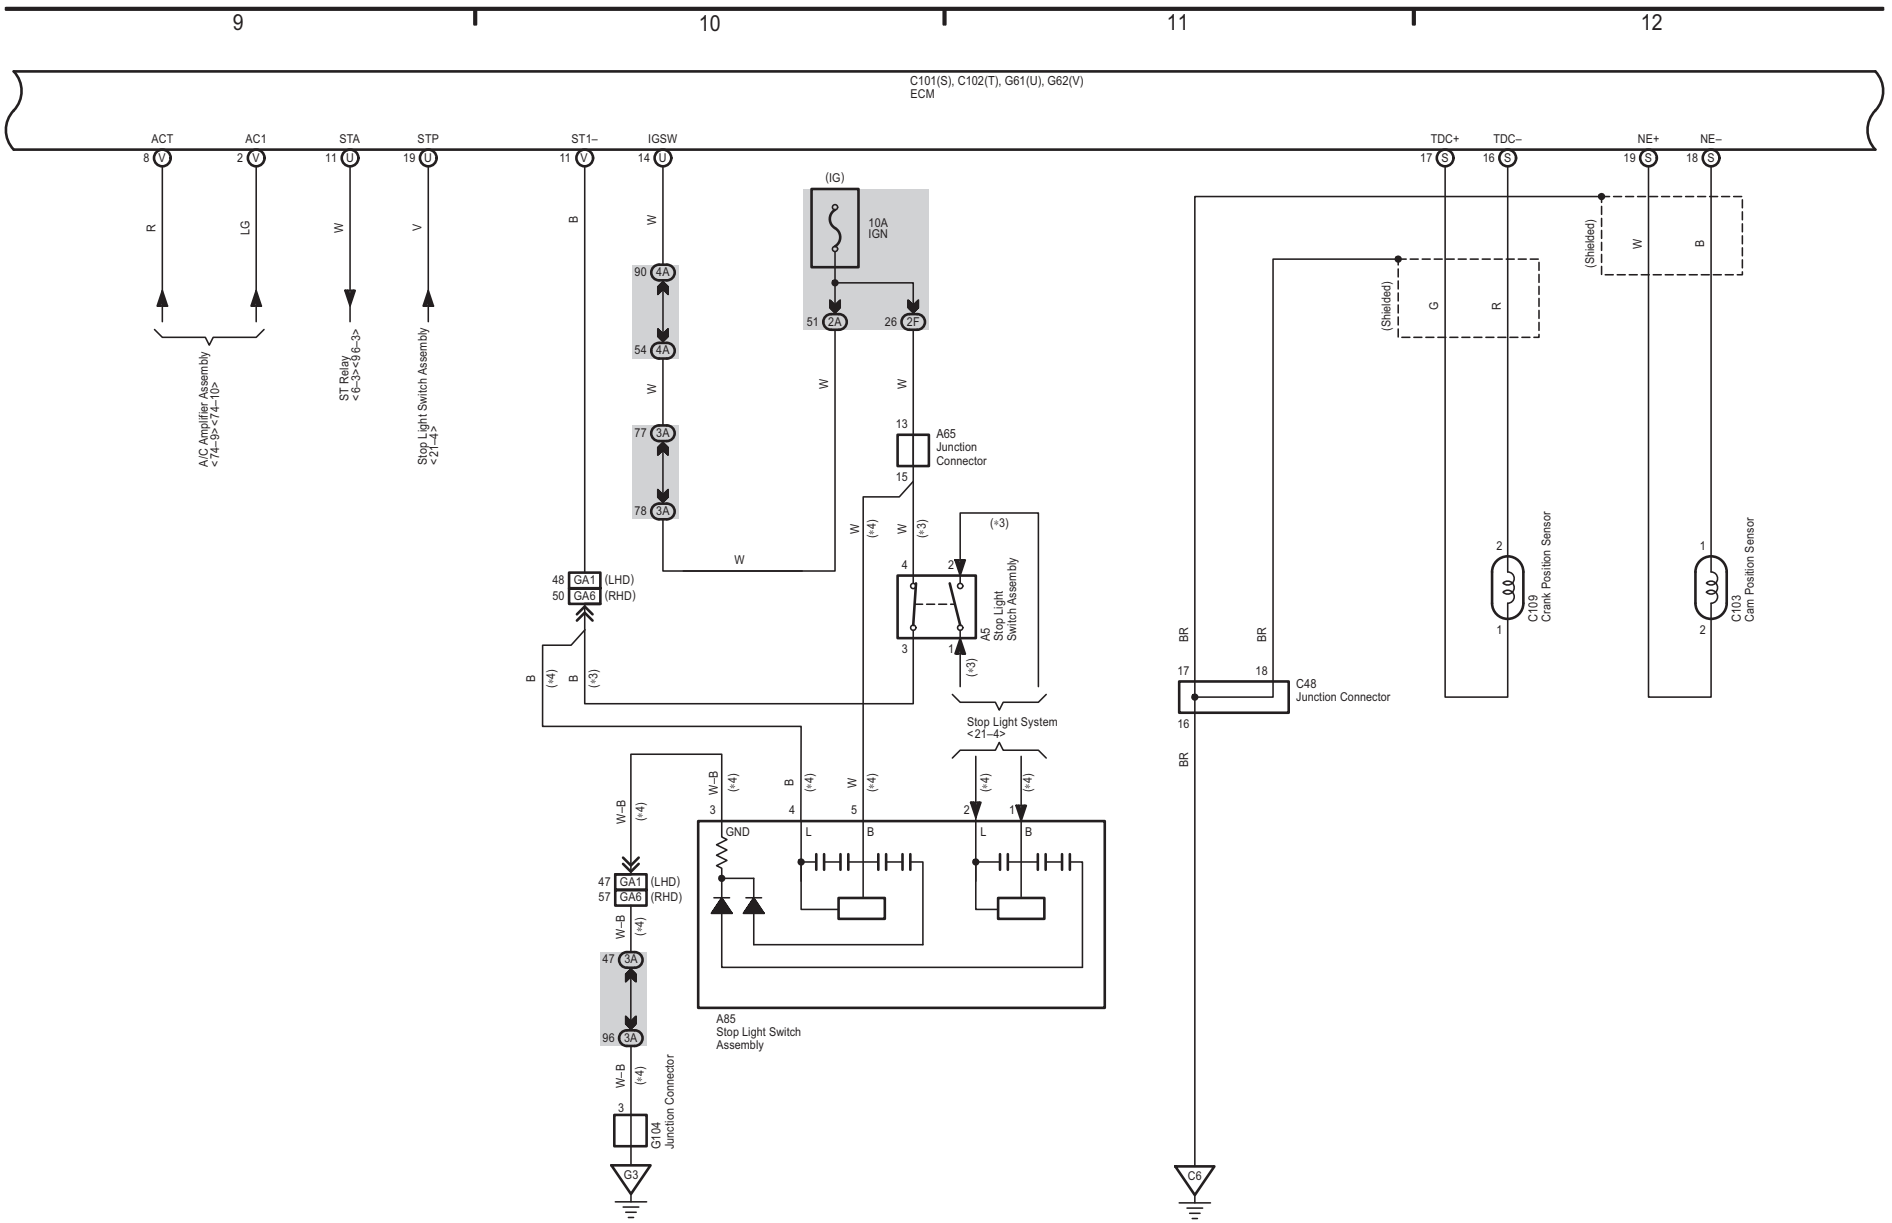

(Cont. next page)

Engine Control (5L-E) (Before Jun. 2015 Production)

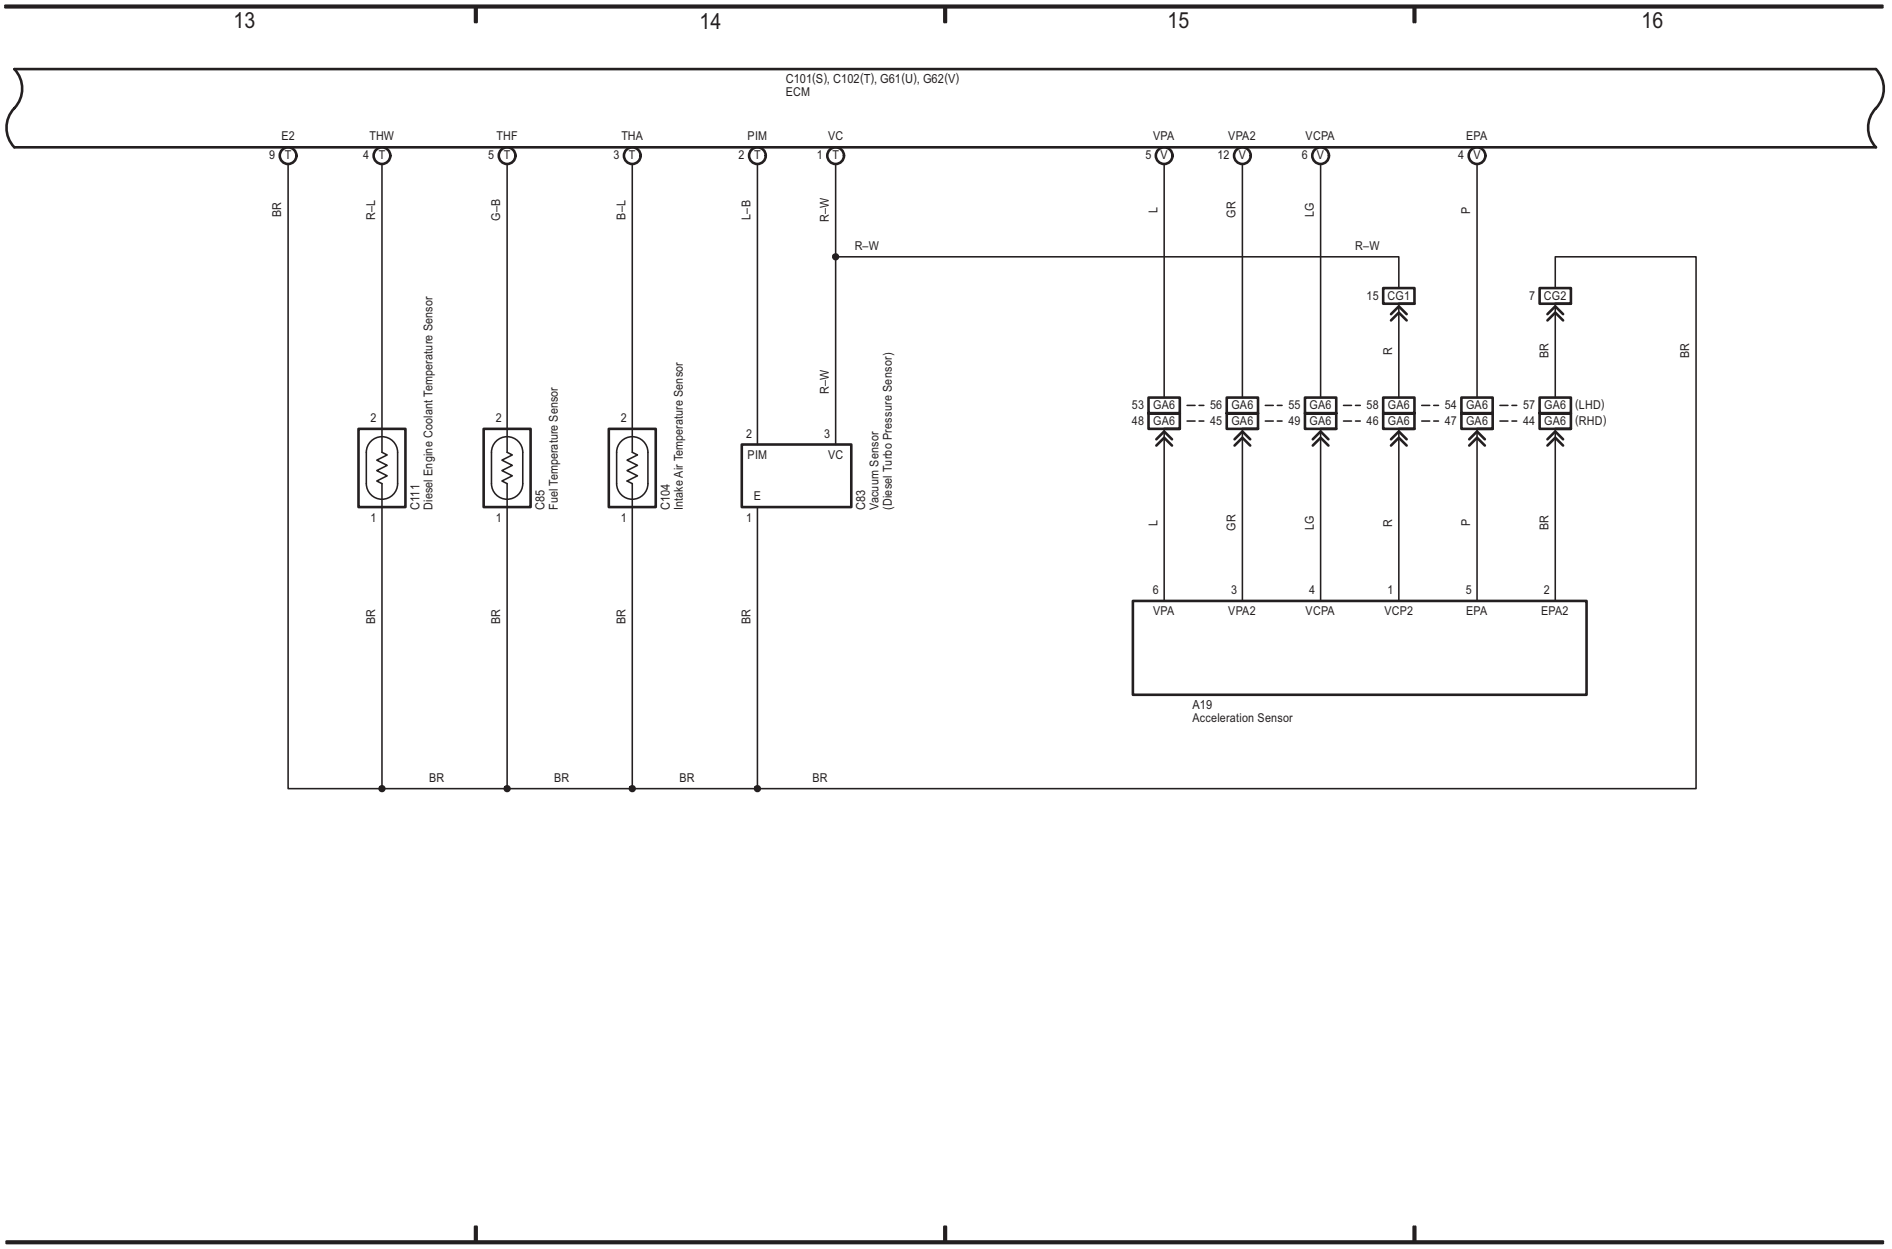

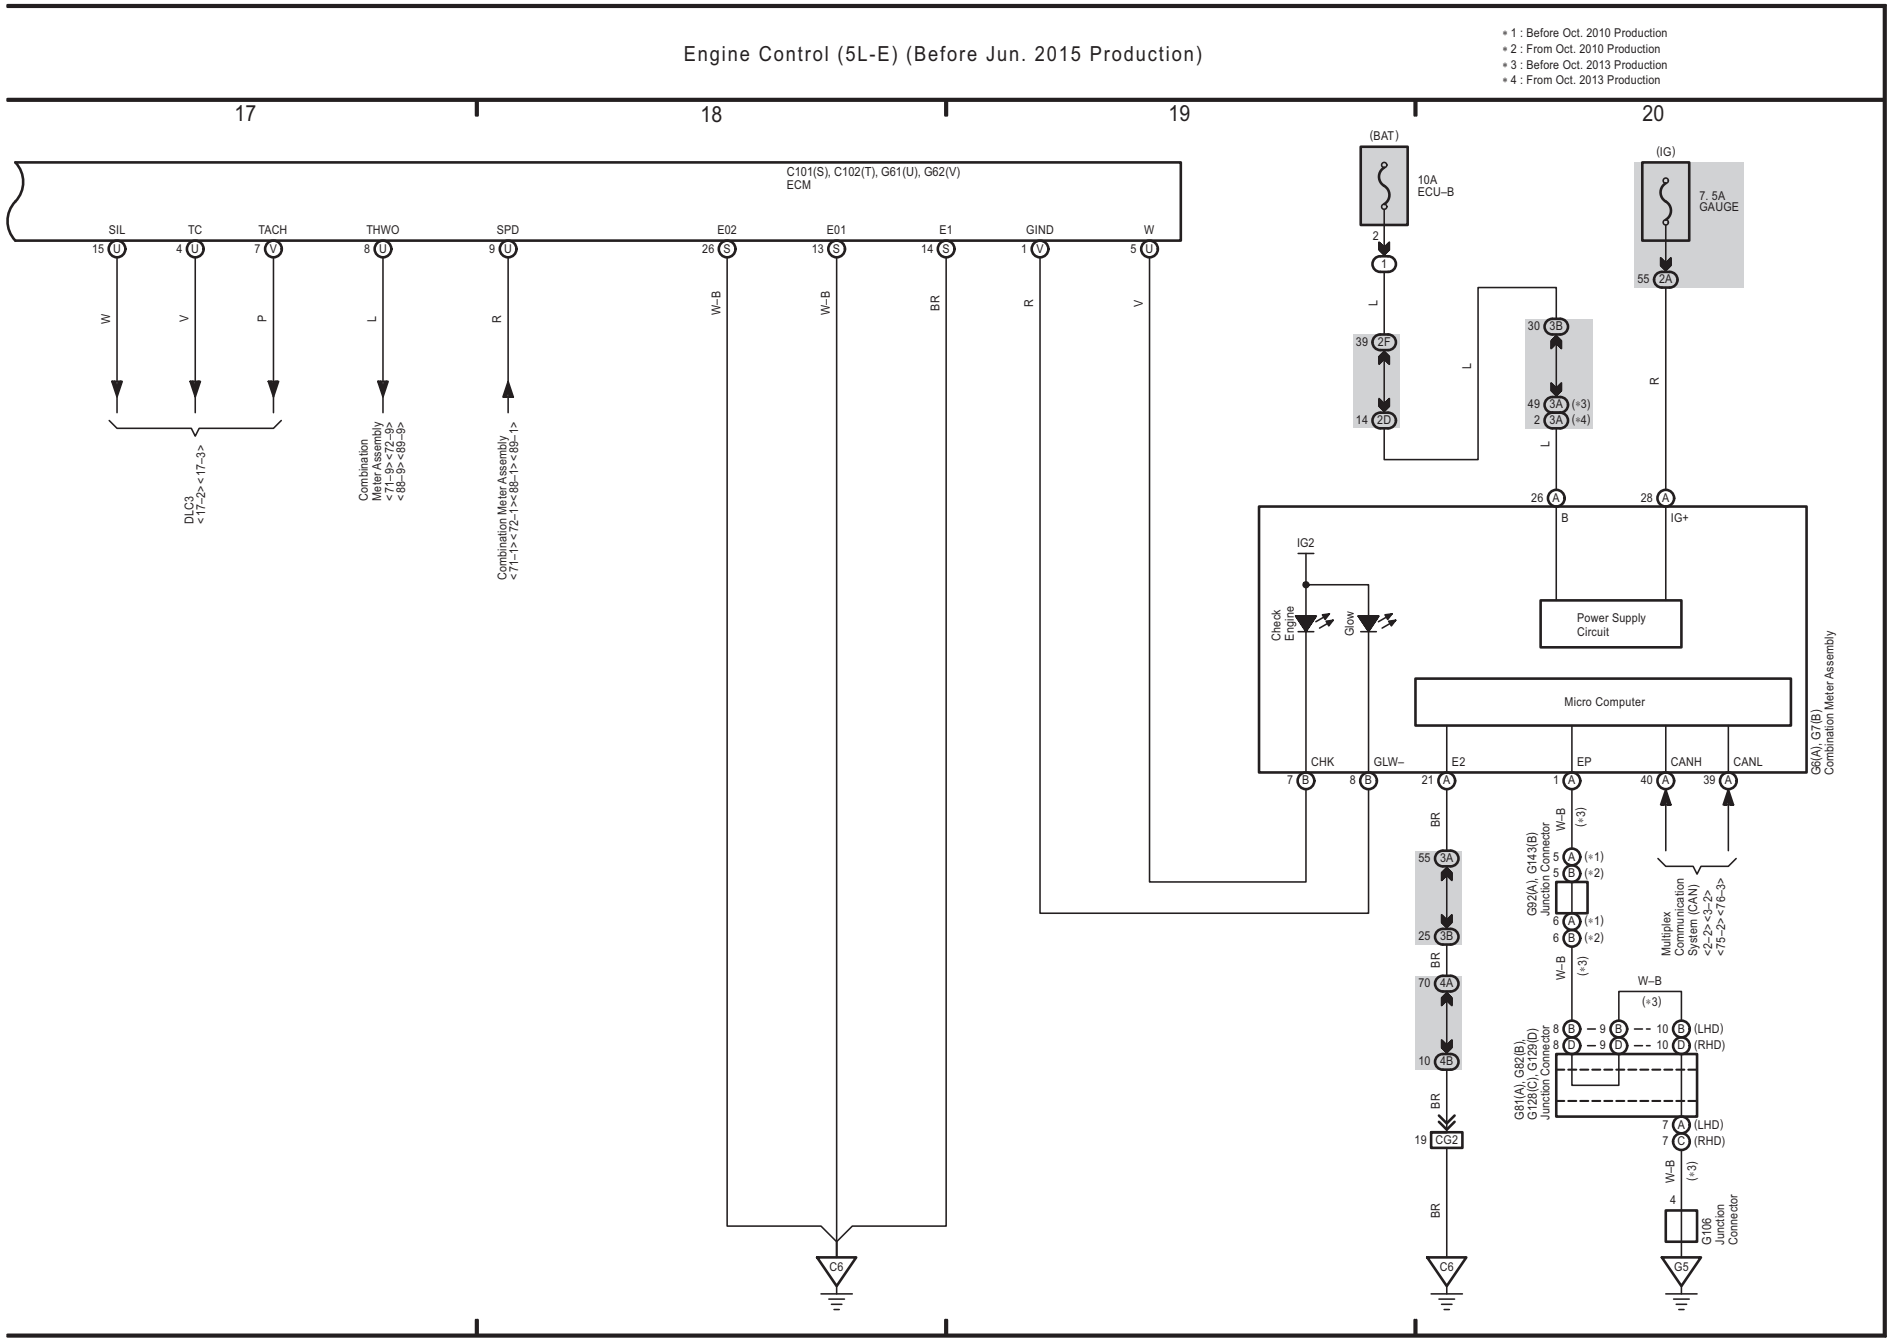
Engine Control (5L-E) (Before Jun. 2015 Production)
• 1 : Before Oct. 2010 Production
• 2 : From Oct. 2010 Production
• 3 : Before Oct. 2013 Production
• 4 : From Oct. 2013 Production
17
18
19
20
C101(S), C102(T), G61(U), G62(V)
ECM
SIL
TC
TACH
THWO
SPD
E02
E01
E1
GIND
W
DLC3
<17–2><17–3>
Combination Meter Assembly
<71–1><72–2>
<68–9><68–3>
Combination Meter Assembly
<71–1><72–1><68–1><69–1>
(BAT)
10A
ECU–B
(IG)
7.5A
GAUGE
IG2
Check Engine
Glow
Power Supply Circuit
Micro Computer
CHK
GLW–
E2
EP
CANH
CANL
B
IG+
G6(A), G7(B)
Combination Meter Assembly
G92(A), G143(B)
Junction Connector
Multiplex Communication System (CAN)
<2–2><3–2>
<75–2><76–3>
G81(A), G82(B),
G128(C), G129(D)
Junction Connector
(LHD)
(RHD)
G106
Junction Connector
C6
G5
CG2