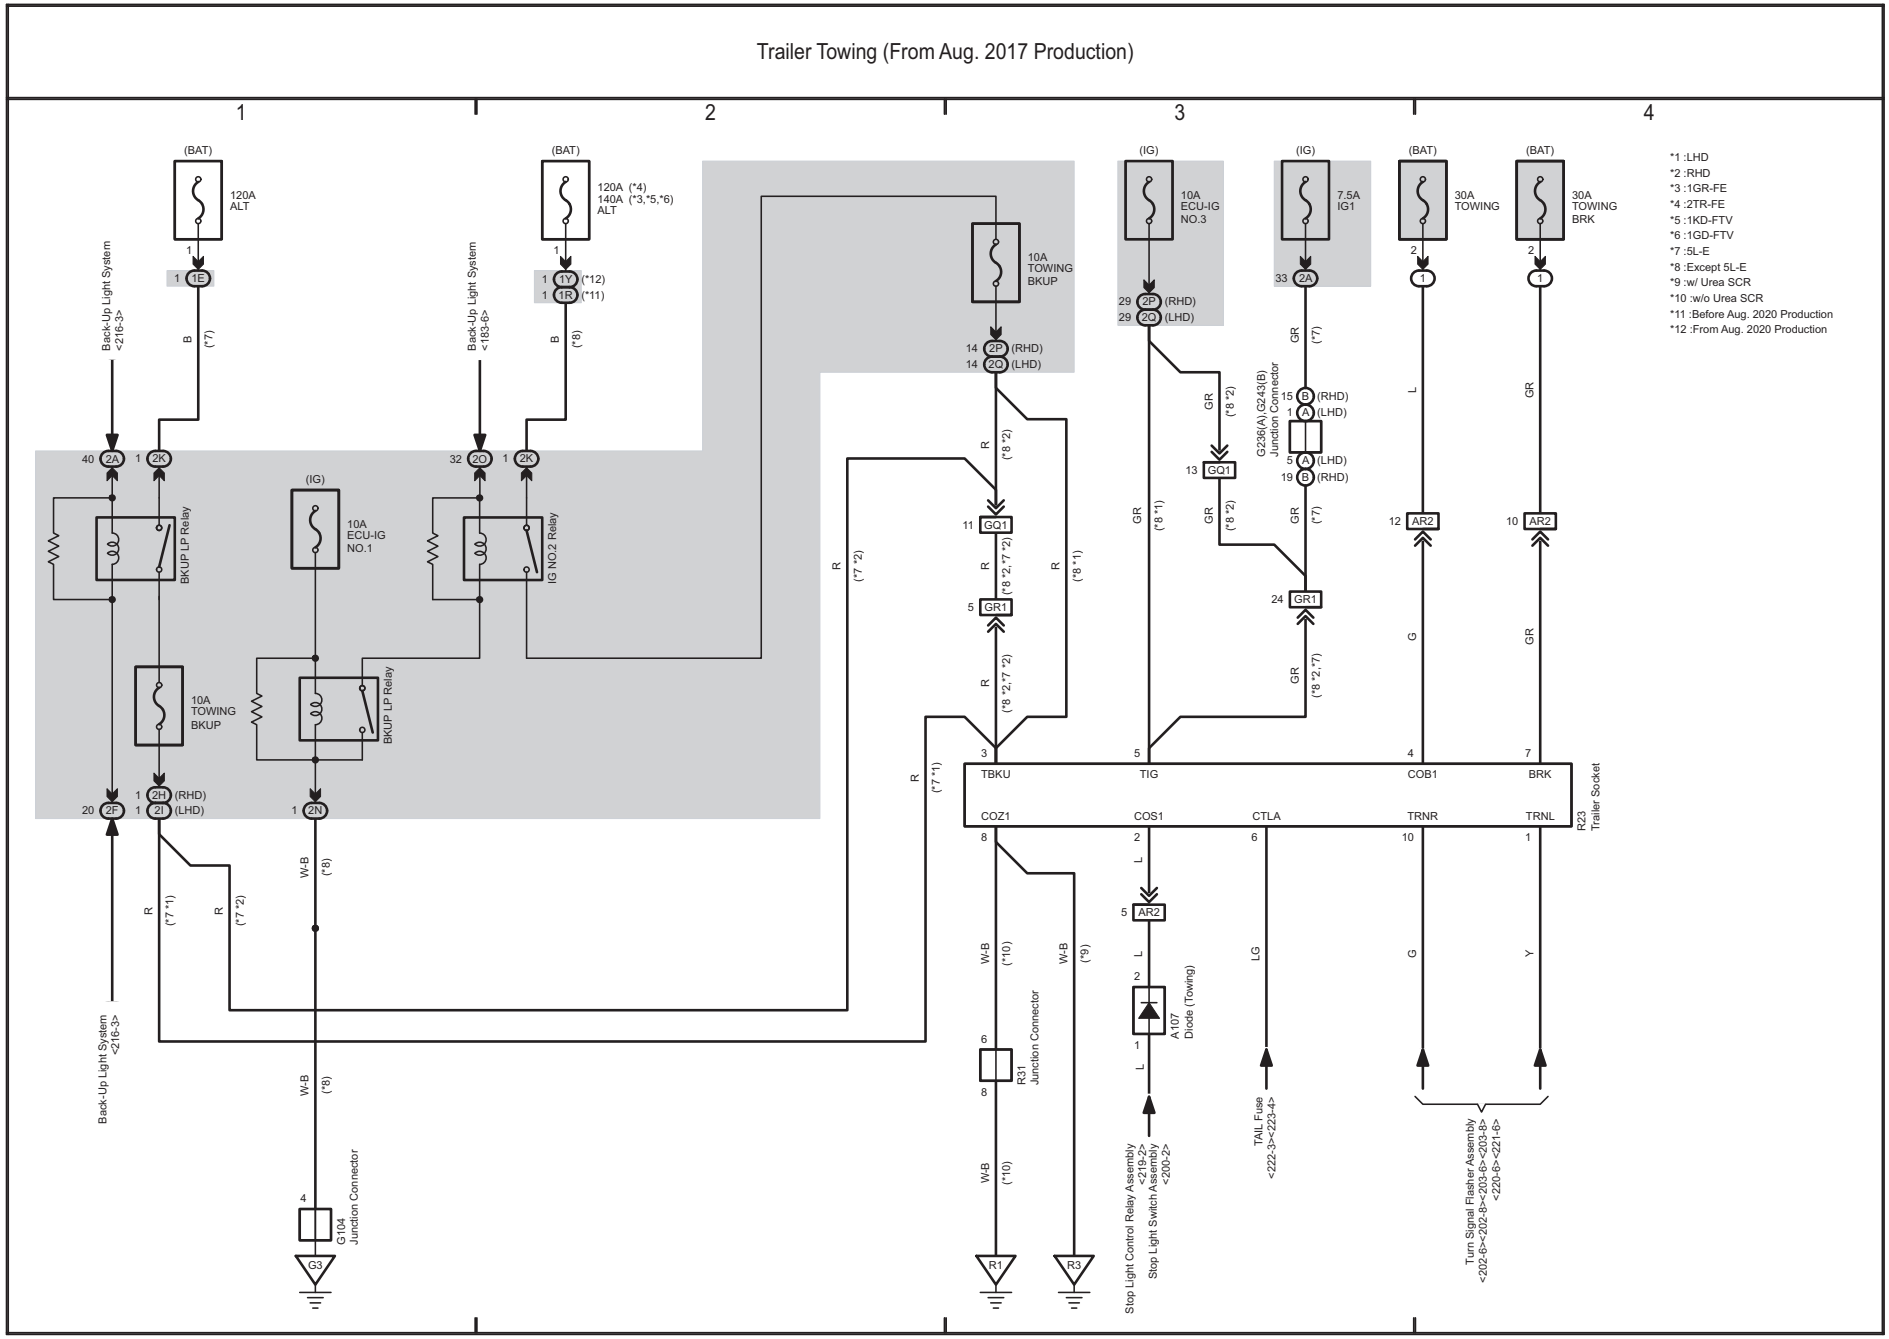

Trailer Towing (From Aug. 2017 Production)
1
2
3
4
(BAT)
120A ALT
(BAT)
120A (*4) 140A (*3,*5,*6) ALT
(IG)
10A ECU-IG NO.3
(IG)
7.5A IG1
(BAT)
30A TOWING
(BAT)
30A TOWING BRK
10A TOWING BKUP
Back-Up Light System <216-3>
Back-Up Light System <183-6>
BKUP LP Relay
IG NO.2 Relay
10A ECU-IG NO.1
BKUP LP Relay
10A TOWING BKUP
G236(A),G243(B) Junction Connector
AR2
AR2
AR2
GQ1
GR1
TBKU
TIG
COB1
BRK
COZ1
COS1
CTLA
TRNR
TRNL
R23 Trailer Socket
R31 Junction Connector
A107 Diode (Towing)
G104 Junction Connector
G3
R1
R3
Stop Light Control Relay Assembly <219-2>
Stop Light Switch Assembly <200-2>
TAIL Fuse <222-3><223-4>
Turn Signal Flasher Assembly <202-6><202-8><203-8><203-8><220-6><221-6>
*1 :LHD
*2 :RHD
*3 :1GR-FE
*4 :2TR-FE
*5 :1KD-FTV
*6 :1GD-FTV
*7 :5L-E
*8 :Except 5L-E
*9 :w/ Urea SCR
*10 :w/o Urea SCR
*11 :Before Aug. 2020 Production
*12 :From Aug. 2020 Production