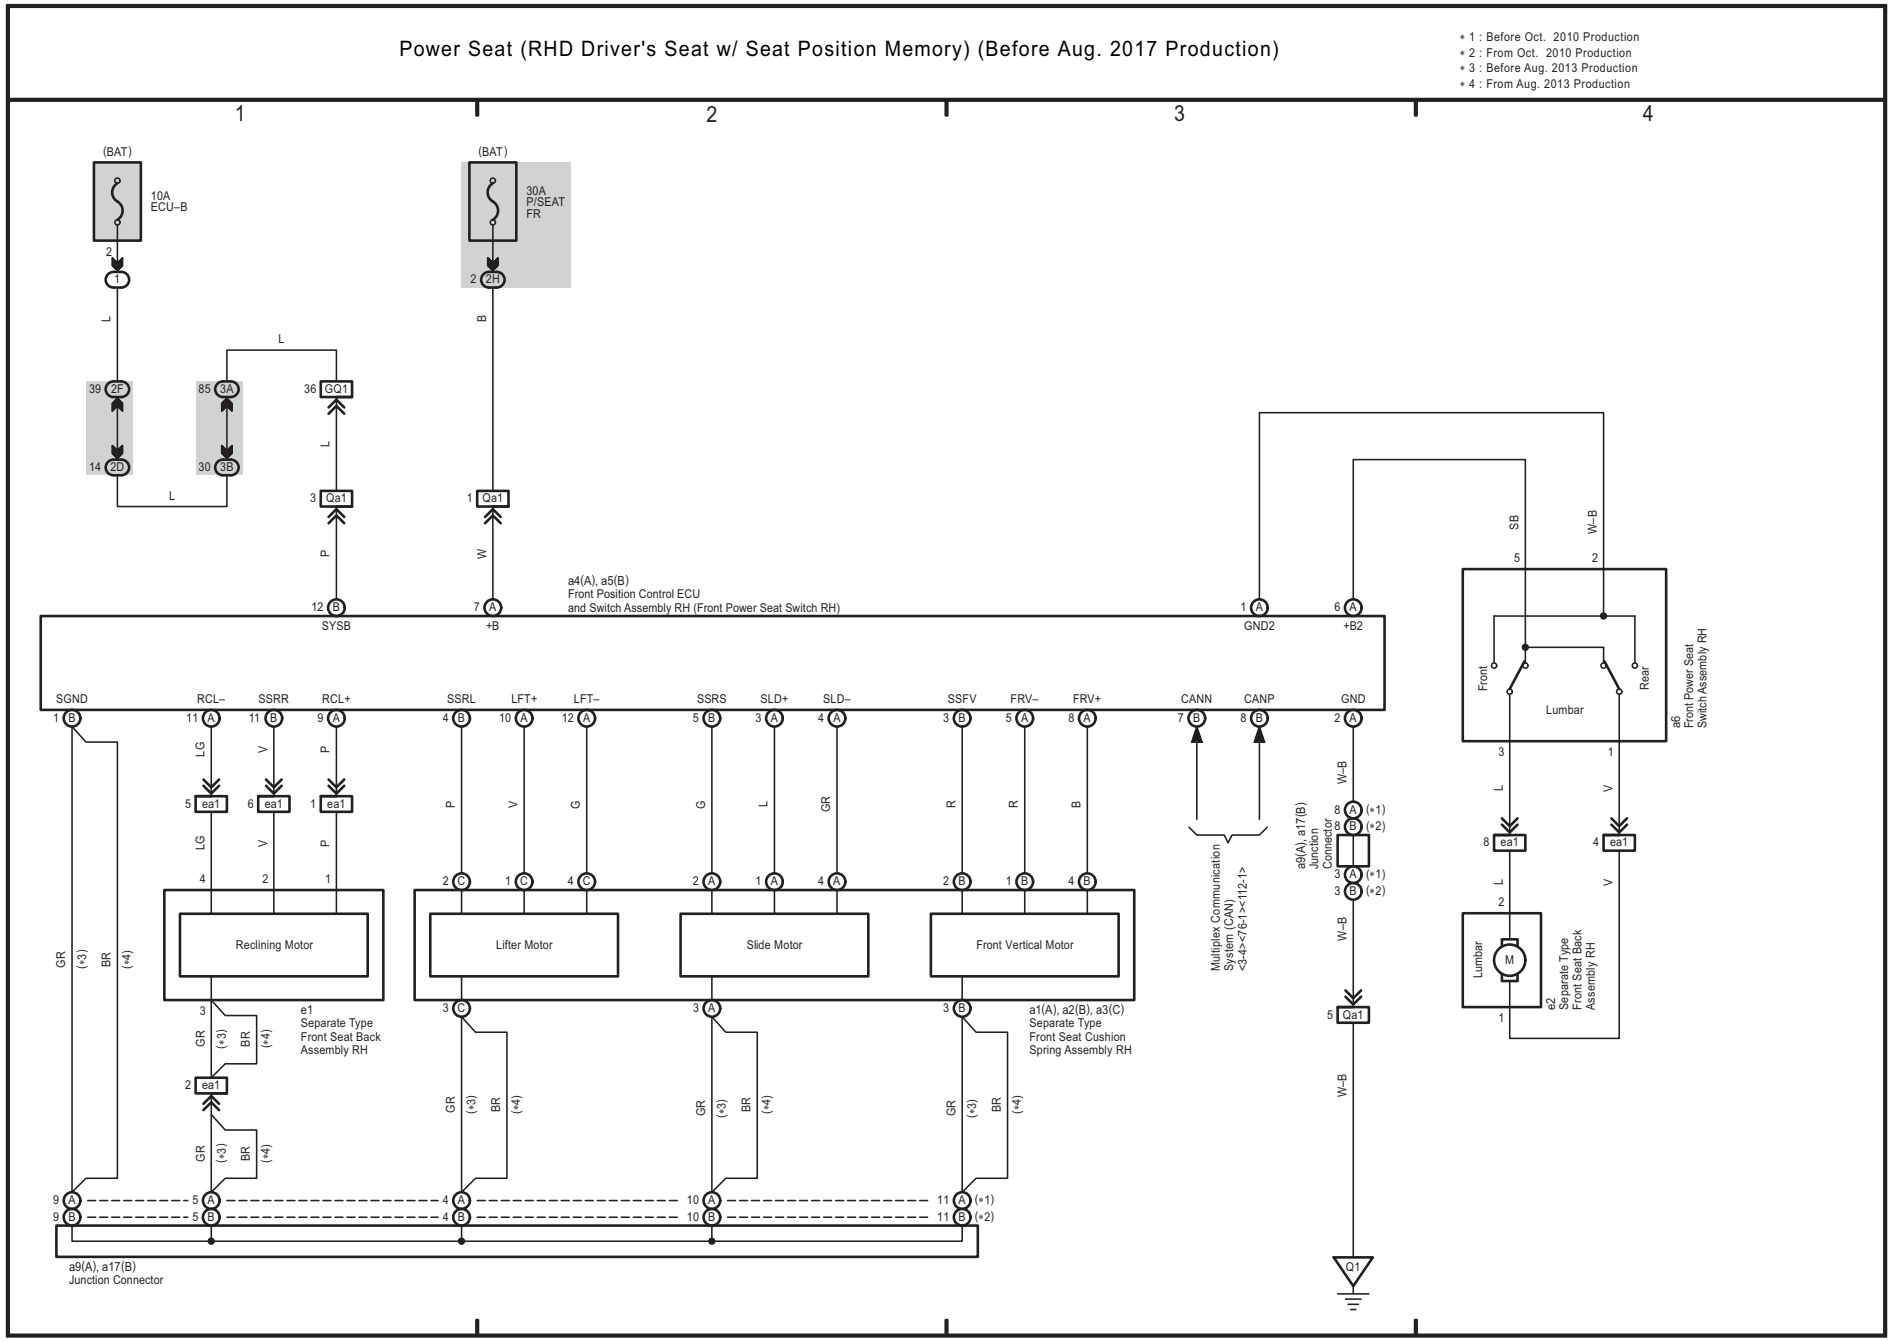

Power Seat (RHD Driver's Seat w/ Seat Position Memory) (Before Aug. 2017 Production)
* 1 : Before Oct. 2010 Production
* 2 : From Oct. 2010 Production
* 3 : Before Aug. 2013 Production
* 4 : From Aug. 2013 Production
1
2
3
4
(BAT)
10A
ECU–B
(BAT)
30A
P/SEAT
FR
a4(A), a5(B)
Front Position Control ECU
and Switch Assembly RH (Front Power Seat Switch RH)
SYSB
+B
GND2
+B2
SGND
RCL–
SSRR
RCL+
SSRL
LFT+
LFT–
SSRS
SLD+
SLD–
SSFV
FRV–
FRV+
CANN
CANP
GND
Reclining Motor
Lifter Motor
Slide Motor
Front Vertical Motor
e1
Separate Type
Front Seat Back
Assembly RH
a1(A), a2(B), a3(C)
Separate Type
Front Seat Cushion
Spring Assembly RH
Multiplex Communication
System (CAN)
<3-4><7-6><1-12>
a9(A), a17(B)
Junction
Connector
a9(A), a17(B)
Junction Connector
Front
Lumbar
Rear
a6
Front Power Seat
Switch Assembly RH
Lumbar
e2
Separate Type
Front Seat Back
Assembly RH
Q1