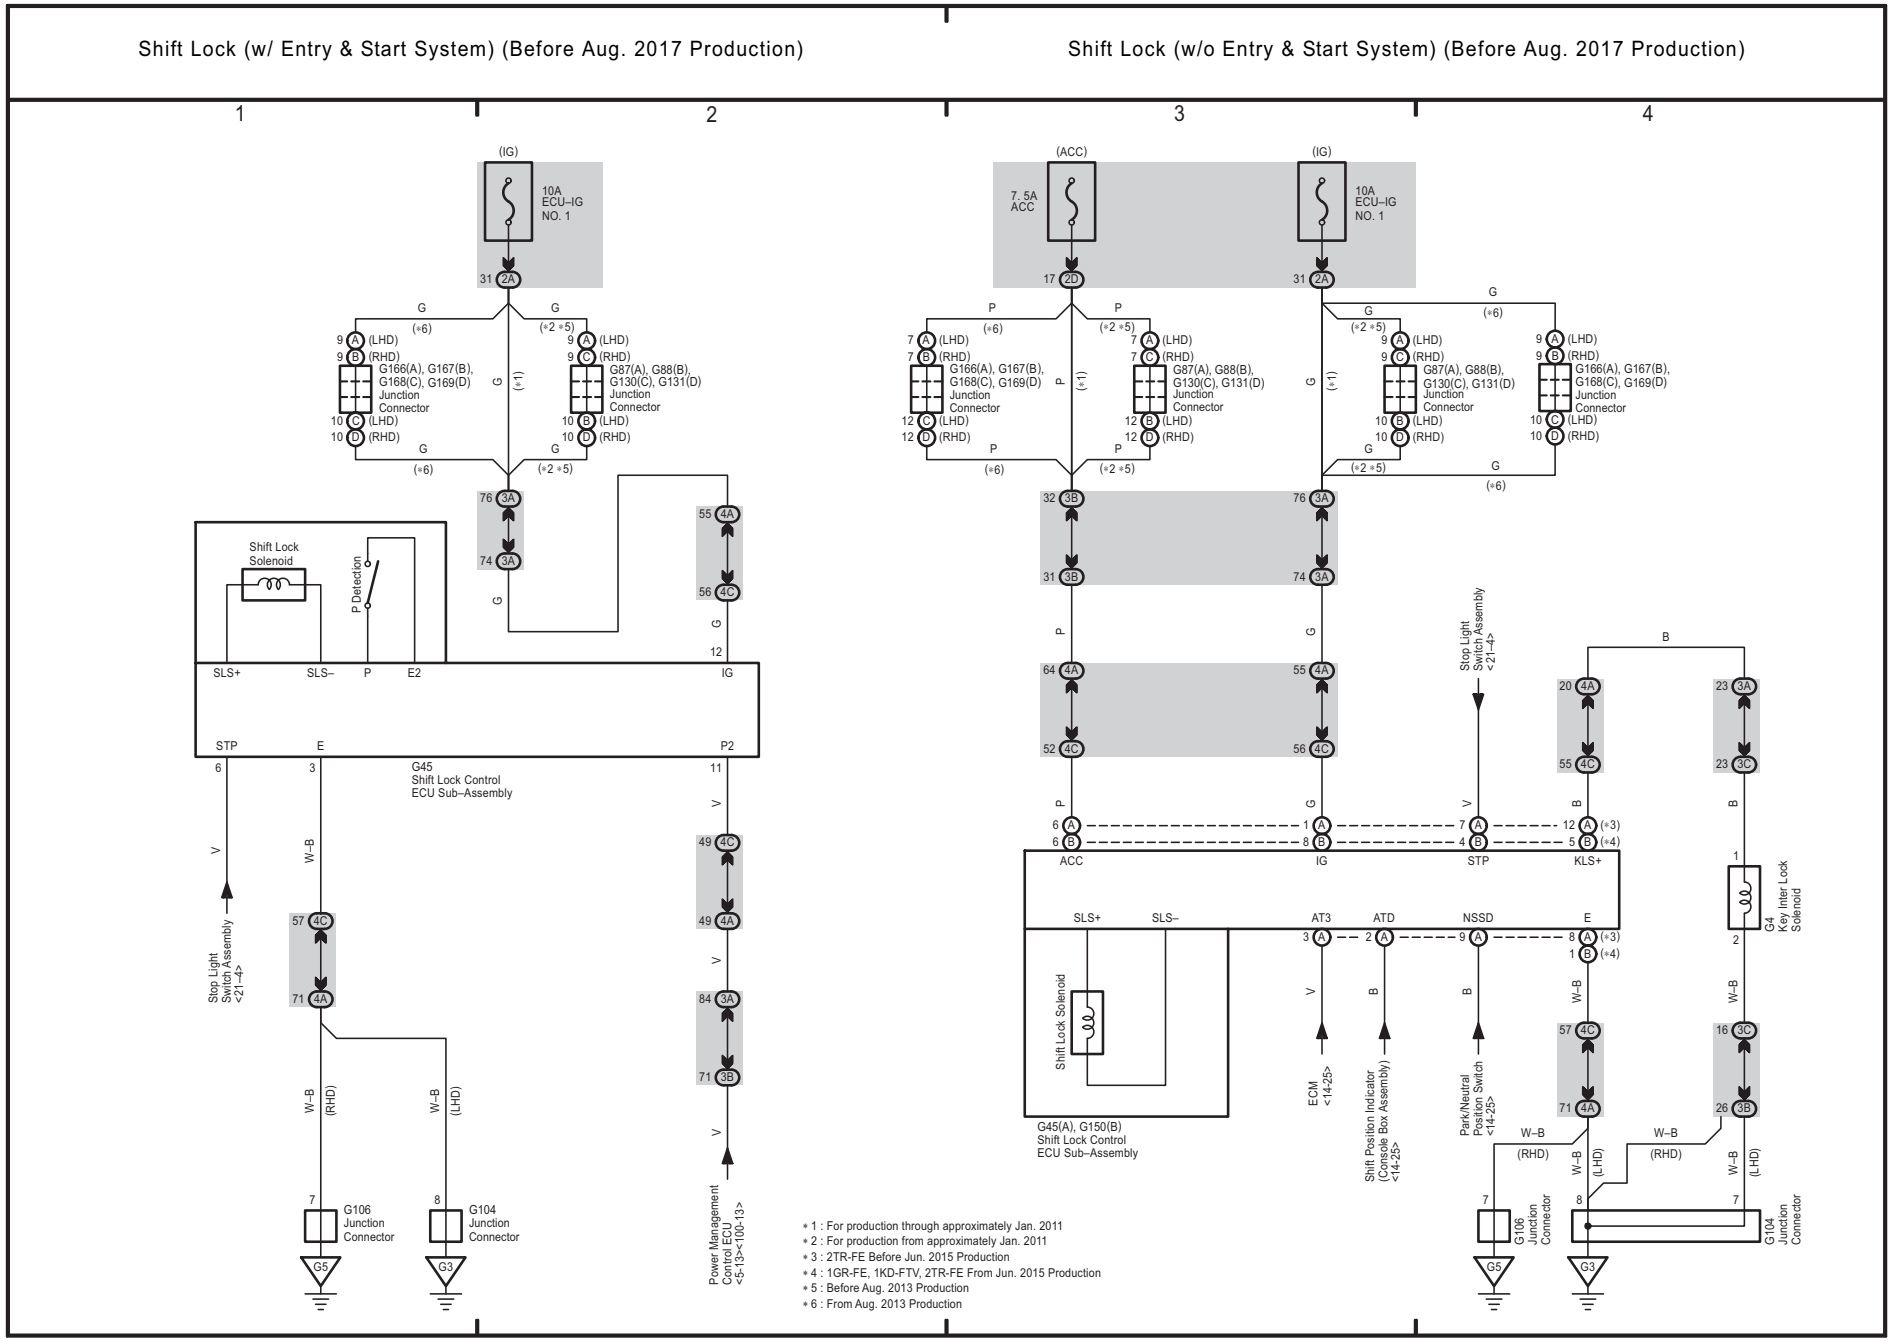

Shift Lock (w/ Entry & Start System) (Before Aug. 2017 Production)
Shift Lock (w/o Entry & Start System) (Before Aug. 2017 Production)
1
2
3
4
(IG)
10A ECU–IG NO. 1
(ACC)
7.5A ACC
G166(A), G167(B), G168(C), G169(D) Junction Connector
G87(A), G88(B), G130(C), G131(D) Junction Connector
Shift Lock Solenoid
P Detection
SLS+
SLS–
P
E2
IG
STP
E
P2
G45 Shift Lock Control ECU Sub–Assembly
Stop Light Switch Assembly <21–4>
G106 Junction Connector
G104 Junction Connector
G5
G3
Power Management Control ECU <5-13><100-13>
ACC
IG
STP
KLS+
AT3
ATD
NSSD
E
G45(A), G150(B) Shift Lock Control ECU Sub–Assembly
ECM <14-25>
Shift Position Indicator (Console Box Assembly) <14-25>
Park/Neutral Position Switch <14-25>
G4 Key Inter Lock Solenoid
∗1 : For production through approximately Jan. 2011
∗2 : For production from approximately Jan. 2011
∗3 : 2TR-FE Before Jun. 2015 Production
∗4 : 1GR-FE, 1KD-FTV, 2TR-FE From Jun. 2015 Production
∗5 : Before Aug. 2013 Production
∗6 : From Aug. 2013 Production