




(BAT)
10A
INJ NO.2
(IG)
10A
INJ
* 1 :China
* 2 :Except China
* 3 :From Aug. 2013 Production
* 4 :w/ Entry & Start System
* 5 :w/o Entry & Start System
* 6 :Before Jun. 2015 Production
* 7 :From Jun. 2015 Production
L
(*1, *3 *4)
B-R
(*2,*5)
G
(*1,*3 *4)
CA1
B-R
B-R
B-R
C68
Noise Filter
(Ignition)
W-B
W-B
W-B
INJ NO.2
Relay
(*7)
(*6)
W-B
(*1, *3 *4)
G
(*1, *3 *4)
A70
Junction
Connector
W-B
(*1, *3 *4)
B-R
W-B
B-R
W-B
+B
GND
IGT1
IGF
C7
Ignition Coil Assembly No. 1
+B
GND
IGT2
IGF
C8
Ignition Coil Assembly No. 2
R-Y
G-R
R-L
G-R
G-R
G-R
(*6)
(*7)
IGT1
IGF1
IGT2
C64(J),C153(a)
ECM
A1


B-R
B-R
W-B
W-B
B-R
W-B
B-R
W-B
1
4
+B
GND
IGT3
IGF
C9
Ignition Coil Assembly No. 3
1
4
+B
GND
IGT4
IGF
C10
Ignition Coil Assembly No. 4
W-B
3
2
3
2
G-B
G-R
G-W
G-R
G-R
G-R
3 J
14 a
4 J (*6)
13 a (*7)
IGT3
IGT4
C64(J),C153(a)
ECM
C3


A70
White

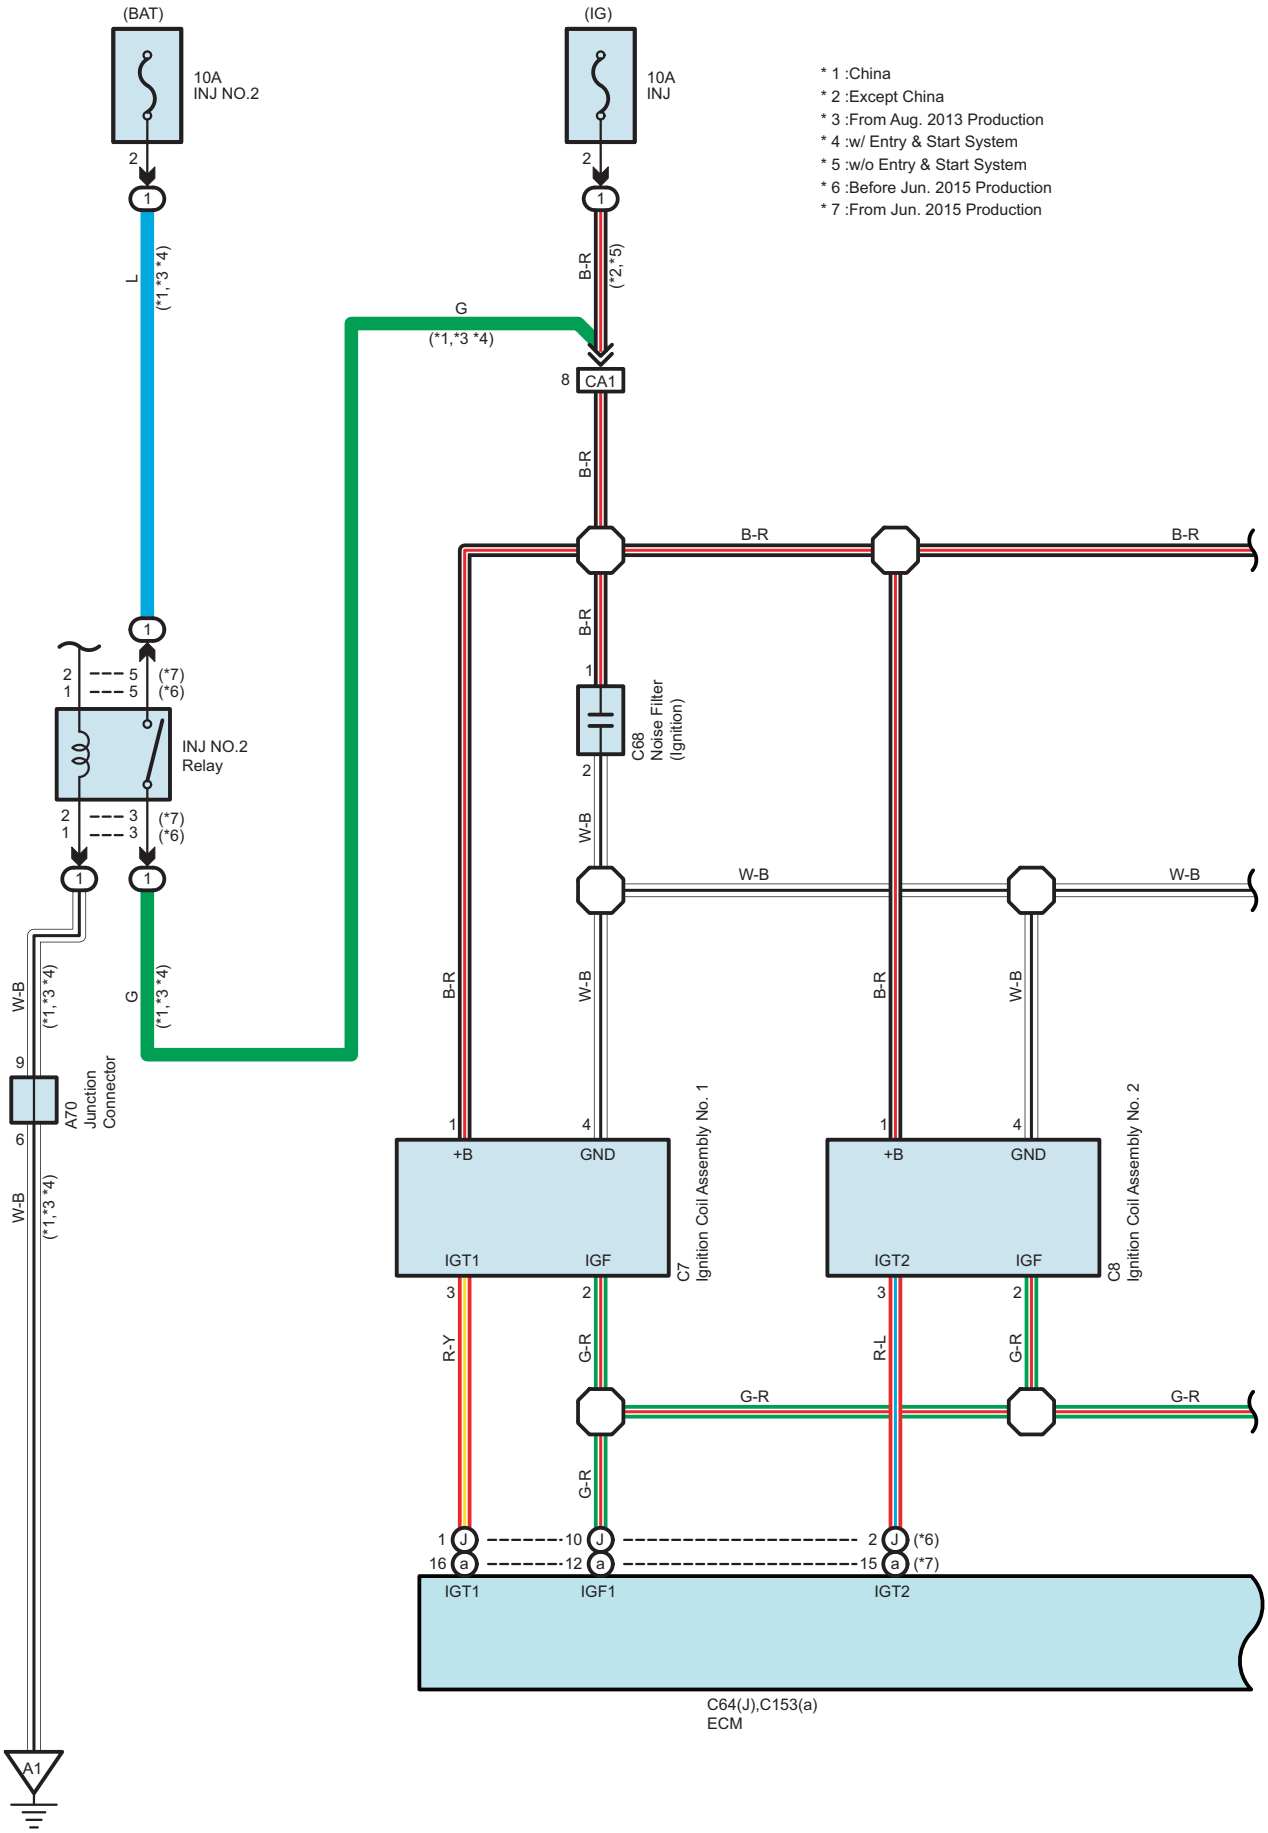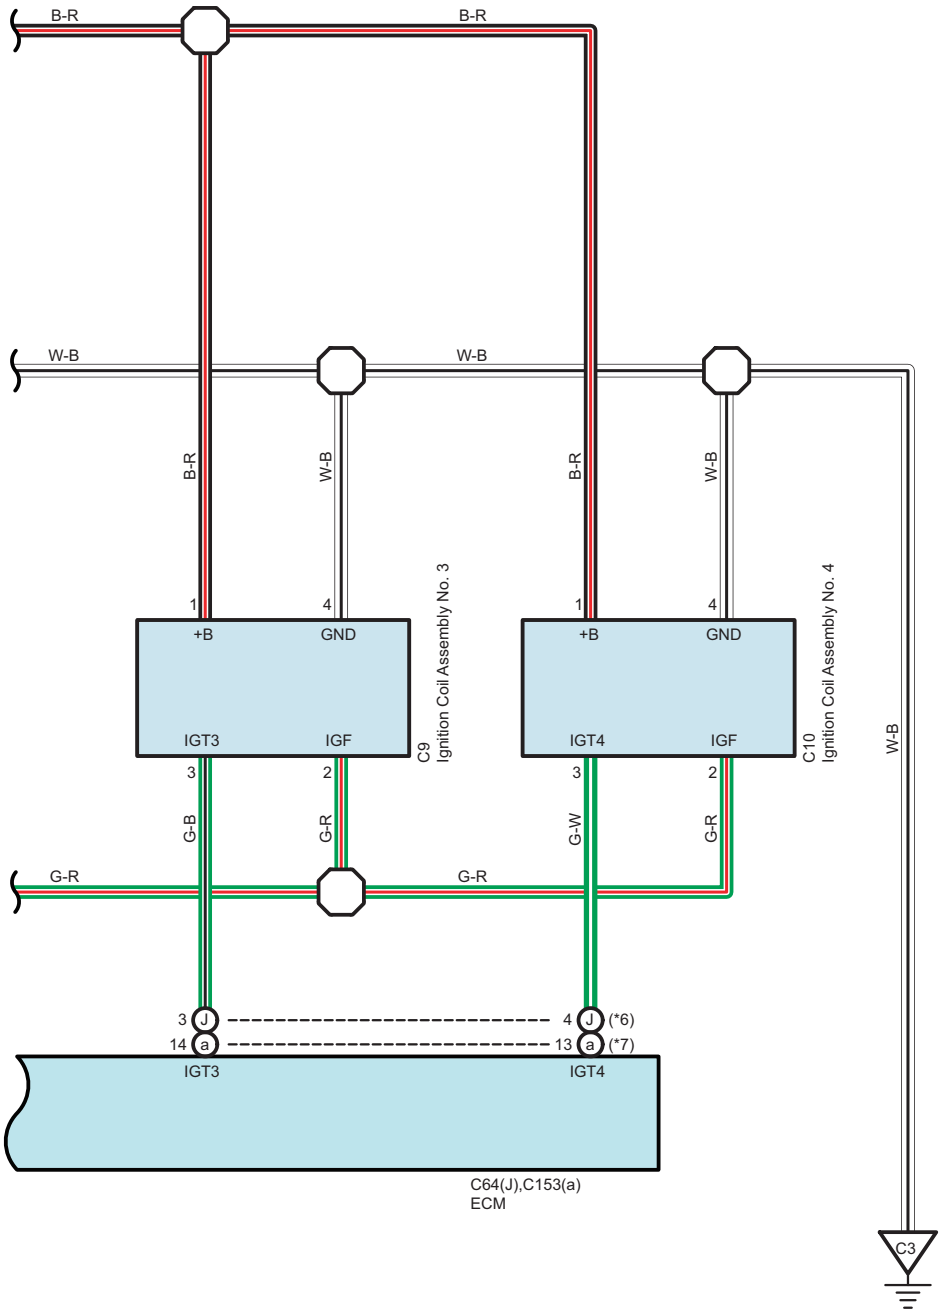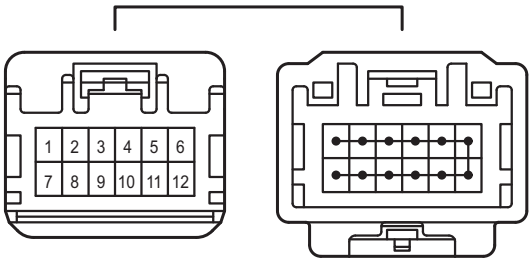


C7
Black




C8
Black




C9
Black



C10
Black




C64
White

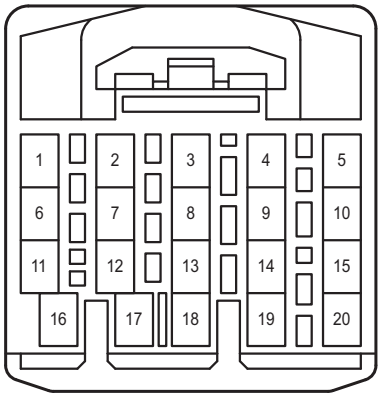

C68
Gray



C153
White

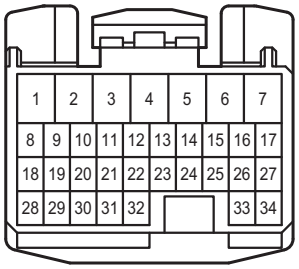

CA1
Black

