





(BAT)
10A
ECU-B
2
1
L
(BAT)
25A
D/L
NO.2
(ACC)
7.5A
ACC
(IG)
10A
ECU-IG
NO.2
G63(A),G64(B),G65(C)
Main Body ECU
IG
ACC
ALTB
BECU
32
29
31
30
39
2F



G63(A),G64(B),G65(C)
Main Body ECU
GND2
GND1
3 A
11
4 2D
*14 :Before Oct. 2010 Production
*15 :From Oct. 2010 Production
*16 :Before Aug. 2013 Production
*17 :From Aug. 2013 Production
W-B (RHD)
W-B (LHD)
8 B
7 B
G127(B) Junction Connector
11 B (*14)
11 D (*15)
G79(A),G80(B),
G140(C),G141(D)
Junction
Connector
7 A (*14)
7 C (*15)
12 D
7 C
G128(C),G129(D)
Junction Connector
12 B (*16)
12 F (*17)
G81(A),G82(B)
G164(E),G165(F)
Junction Connector
7 A (*16)
7 E (*17)
4
G106
Junction Connector
G5
G104
Junction Connector
G3


G63(A),G64(B),G65(C)
Main Body ECU
TAIL
HEAD
KSW
30 B
29 B
17 B
W
SB
G
(*13)
8 3B
1 3B
3 3B
11 3C
1 3C
17 3C
W
SB
G
(*13)
18 A
13 B
20 A (*8)
11 B (*9)
1
T
H
G3
Un-Lock Warning Switch Assembly
2
Light Control Switch
EL
A
T
H
DRL OFF (*8 *10)
OFF (*9)
Off (*8 *11)
Tail
Head
AUTO
W-B
(*13)
19 3C
EL
12 A (*8)
19 B (*9)
G44(A),(B)
Headlight Dimmer Switch Assembly
5 3C (*16)
57 3C (*17)
71 3A (*16)
96 3A (*17)
W-B
W-B
(*13)
3
G104
Junction Connector
G3

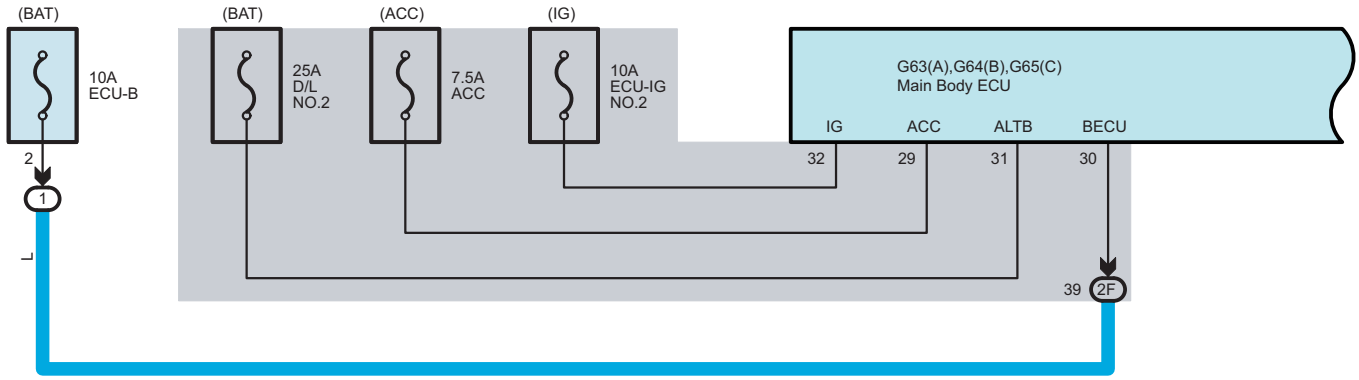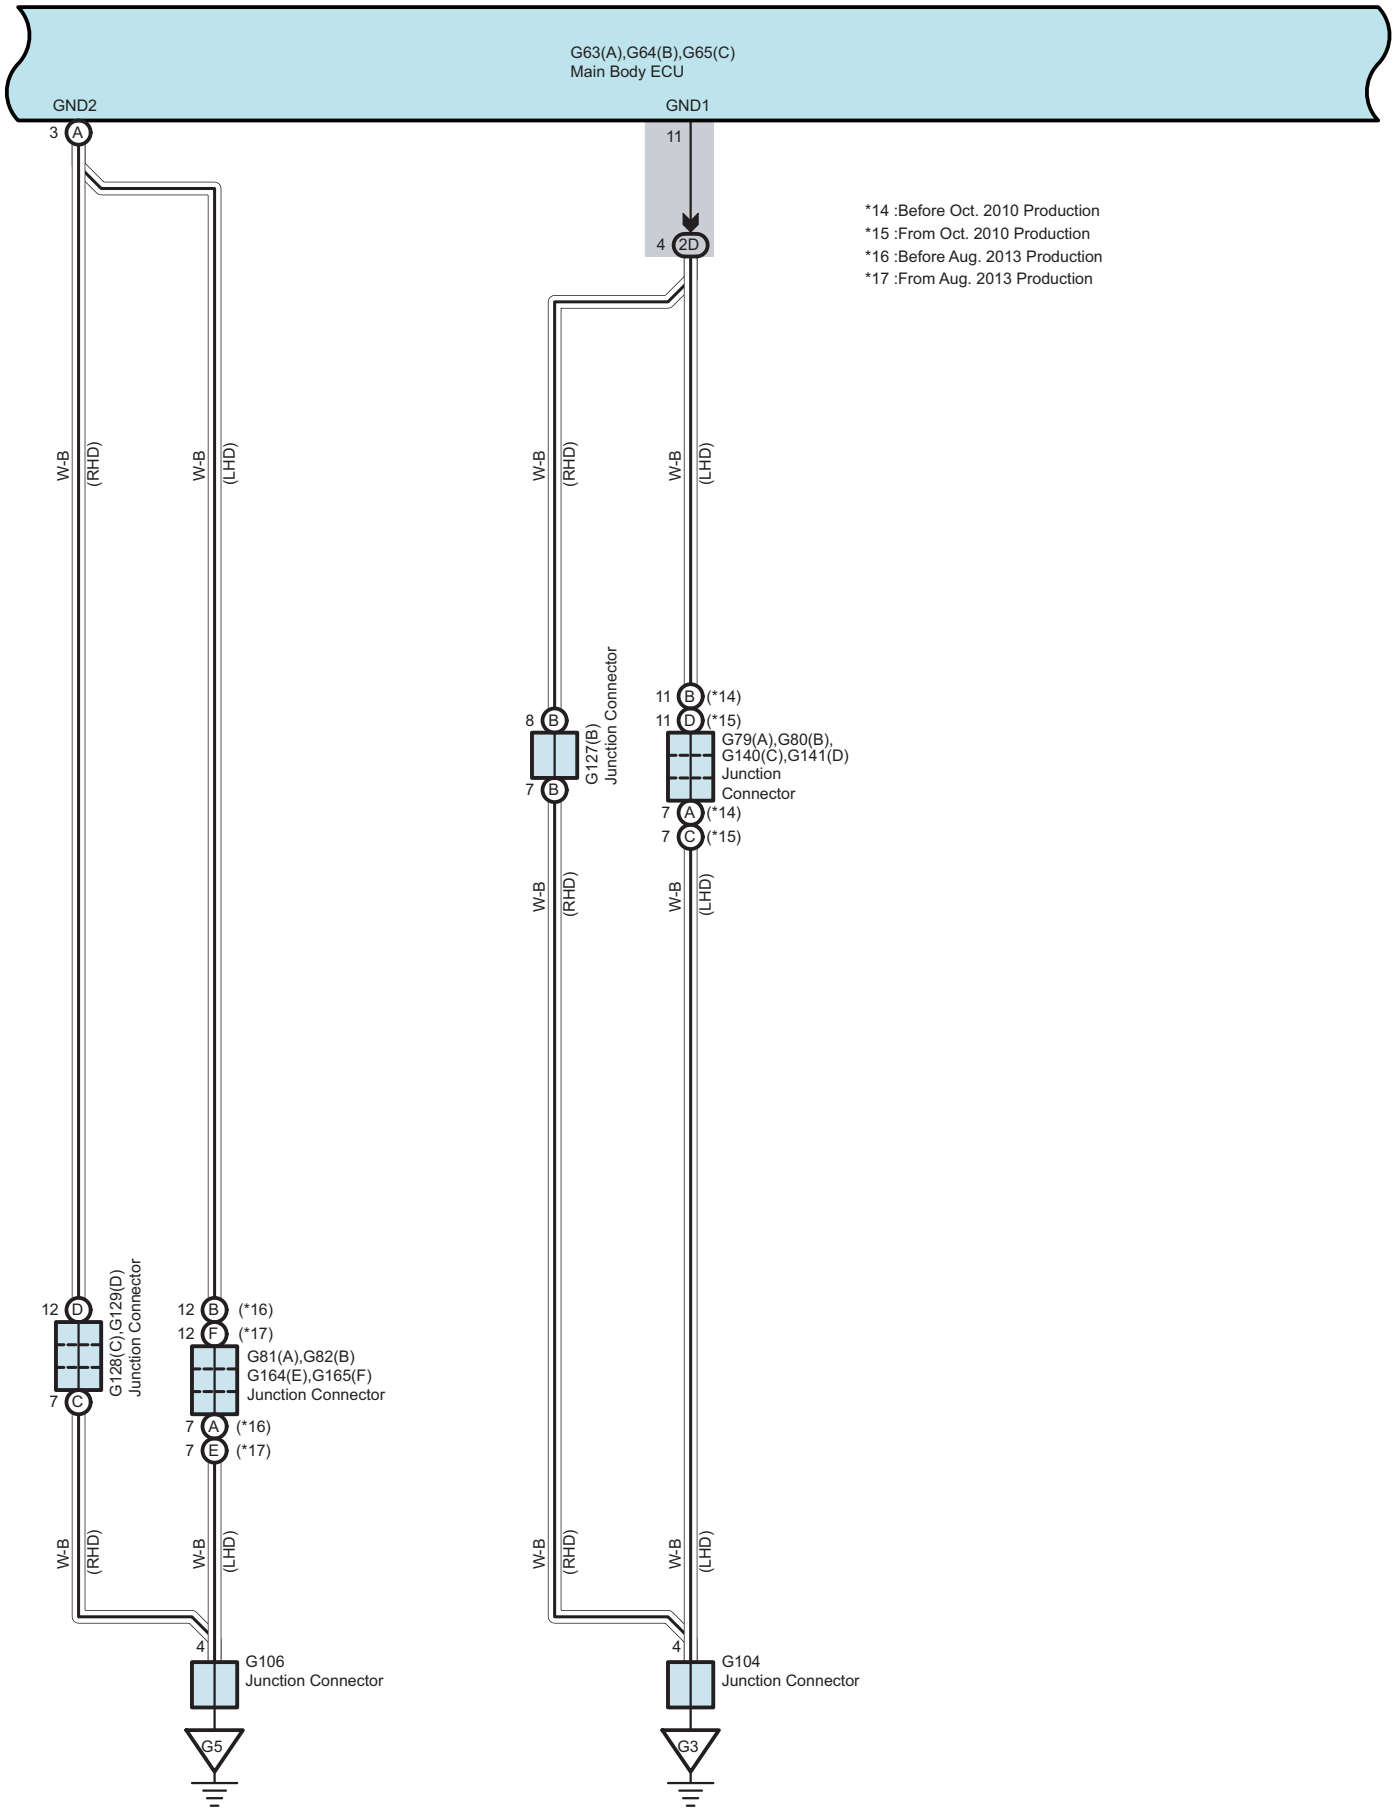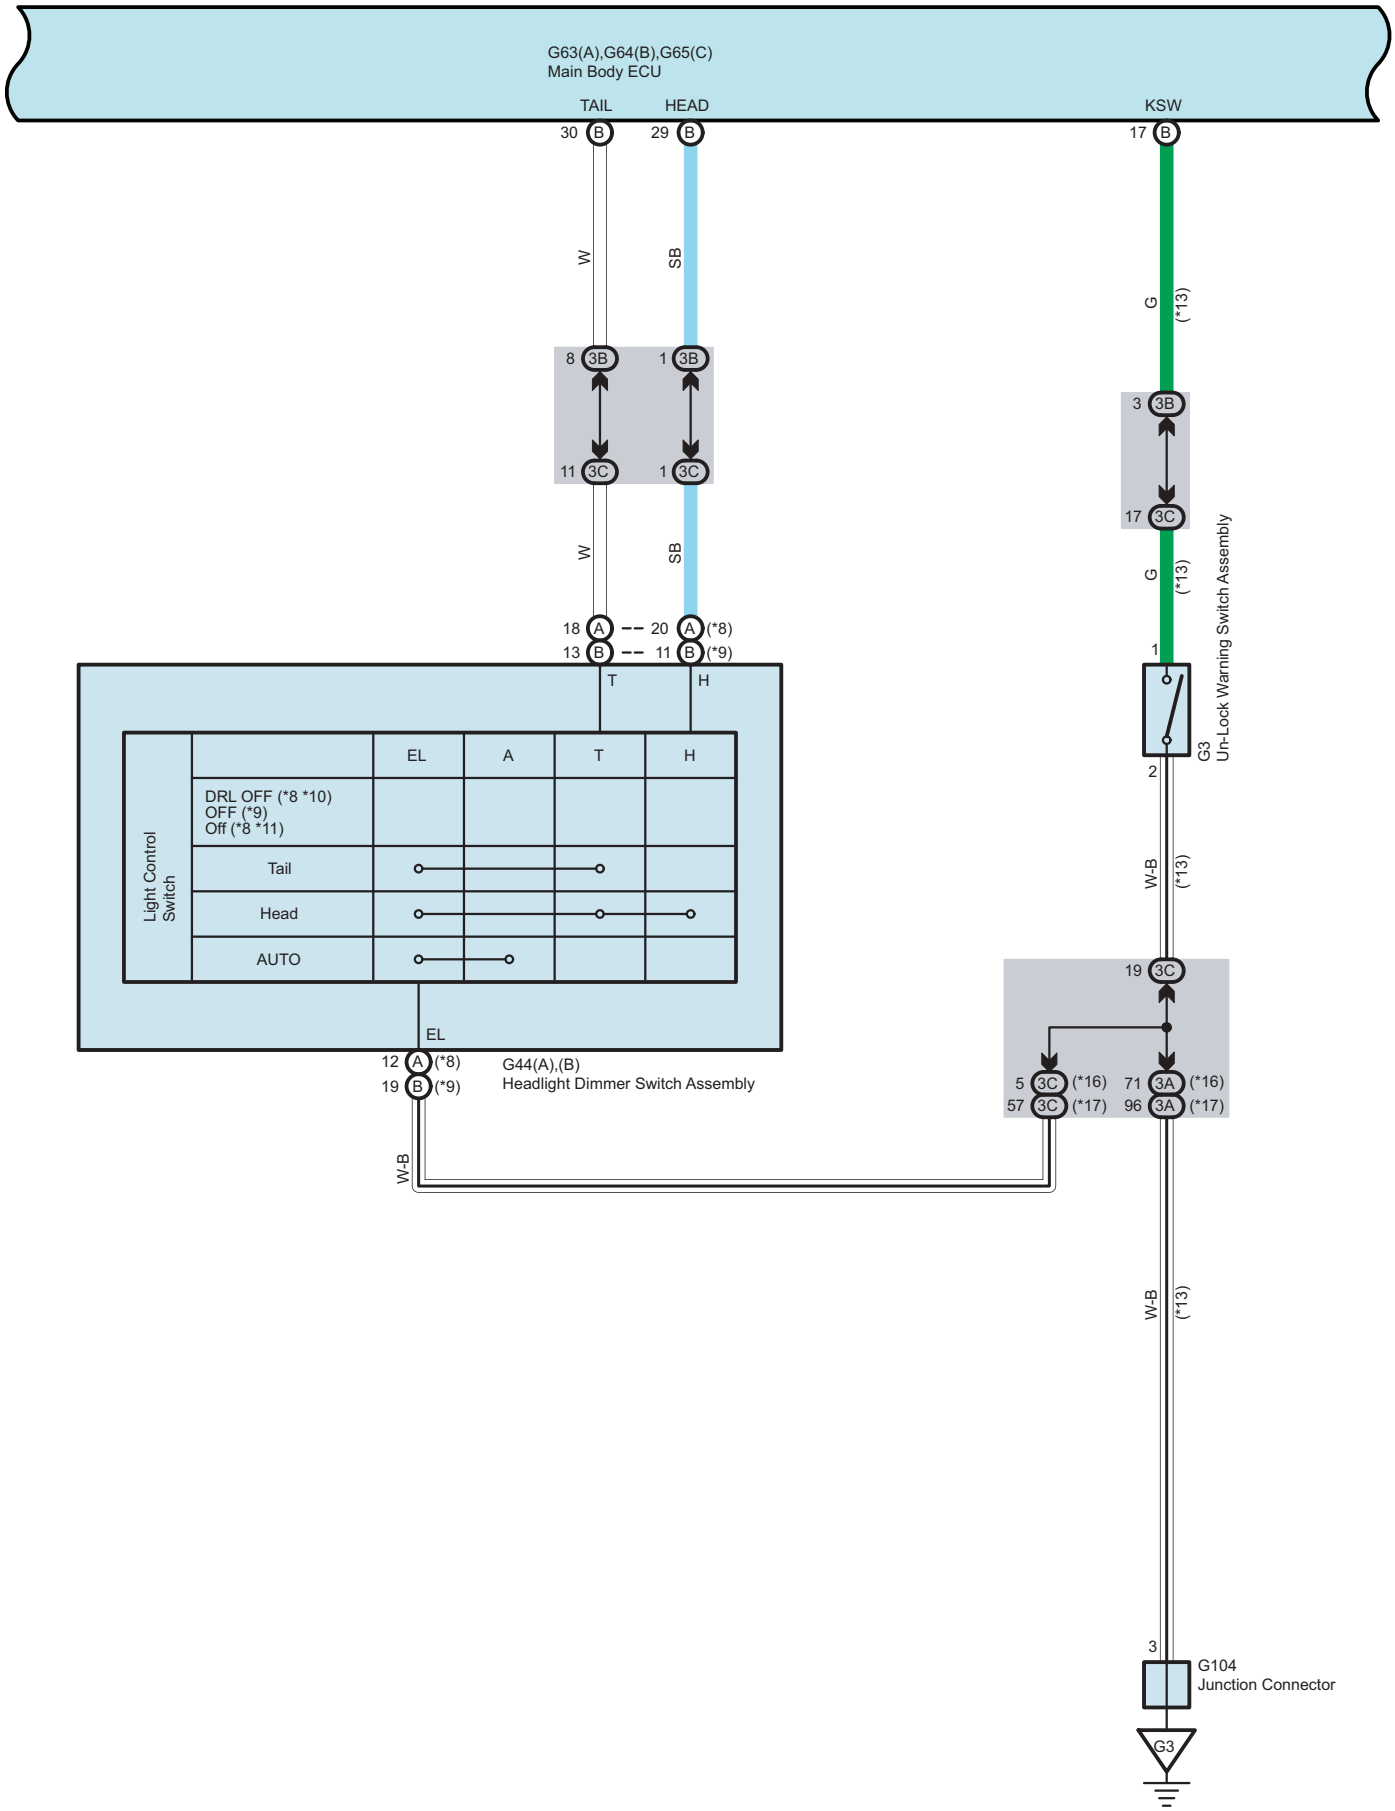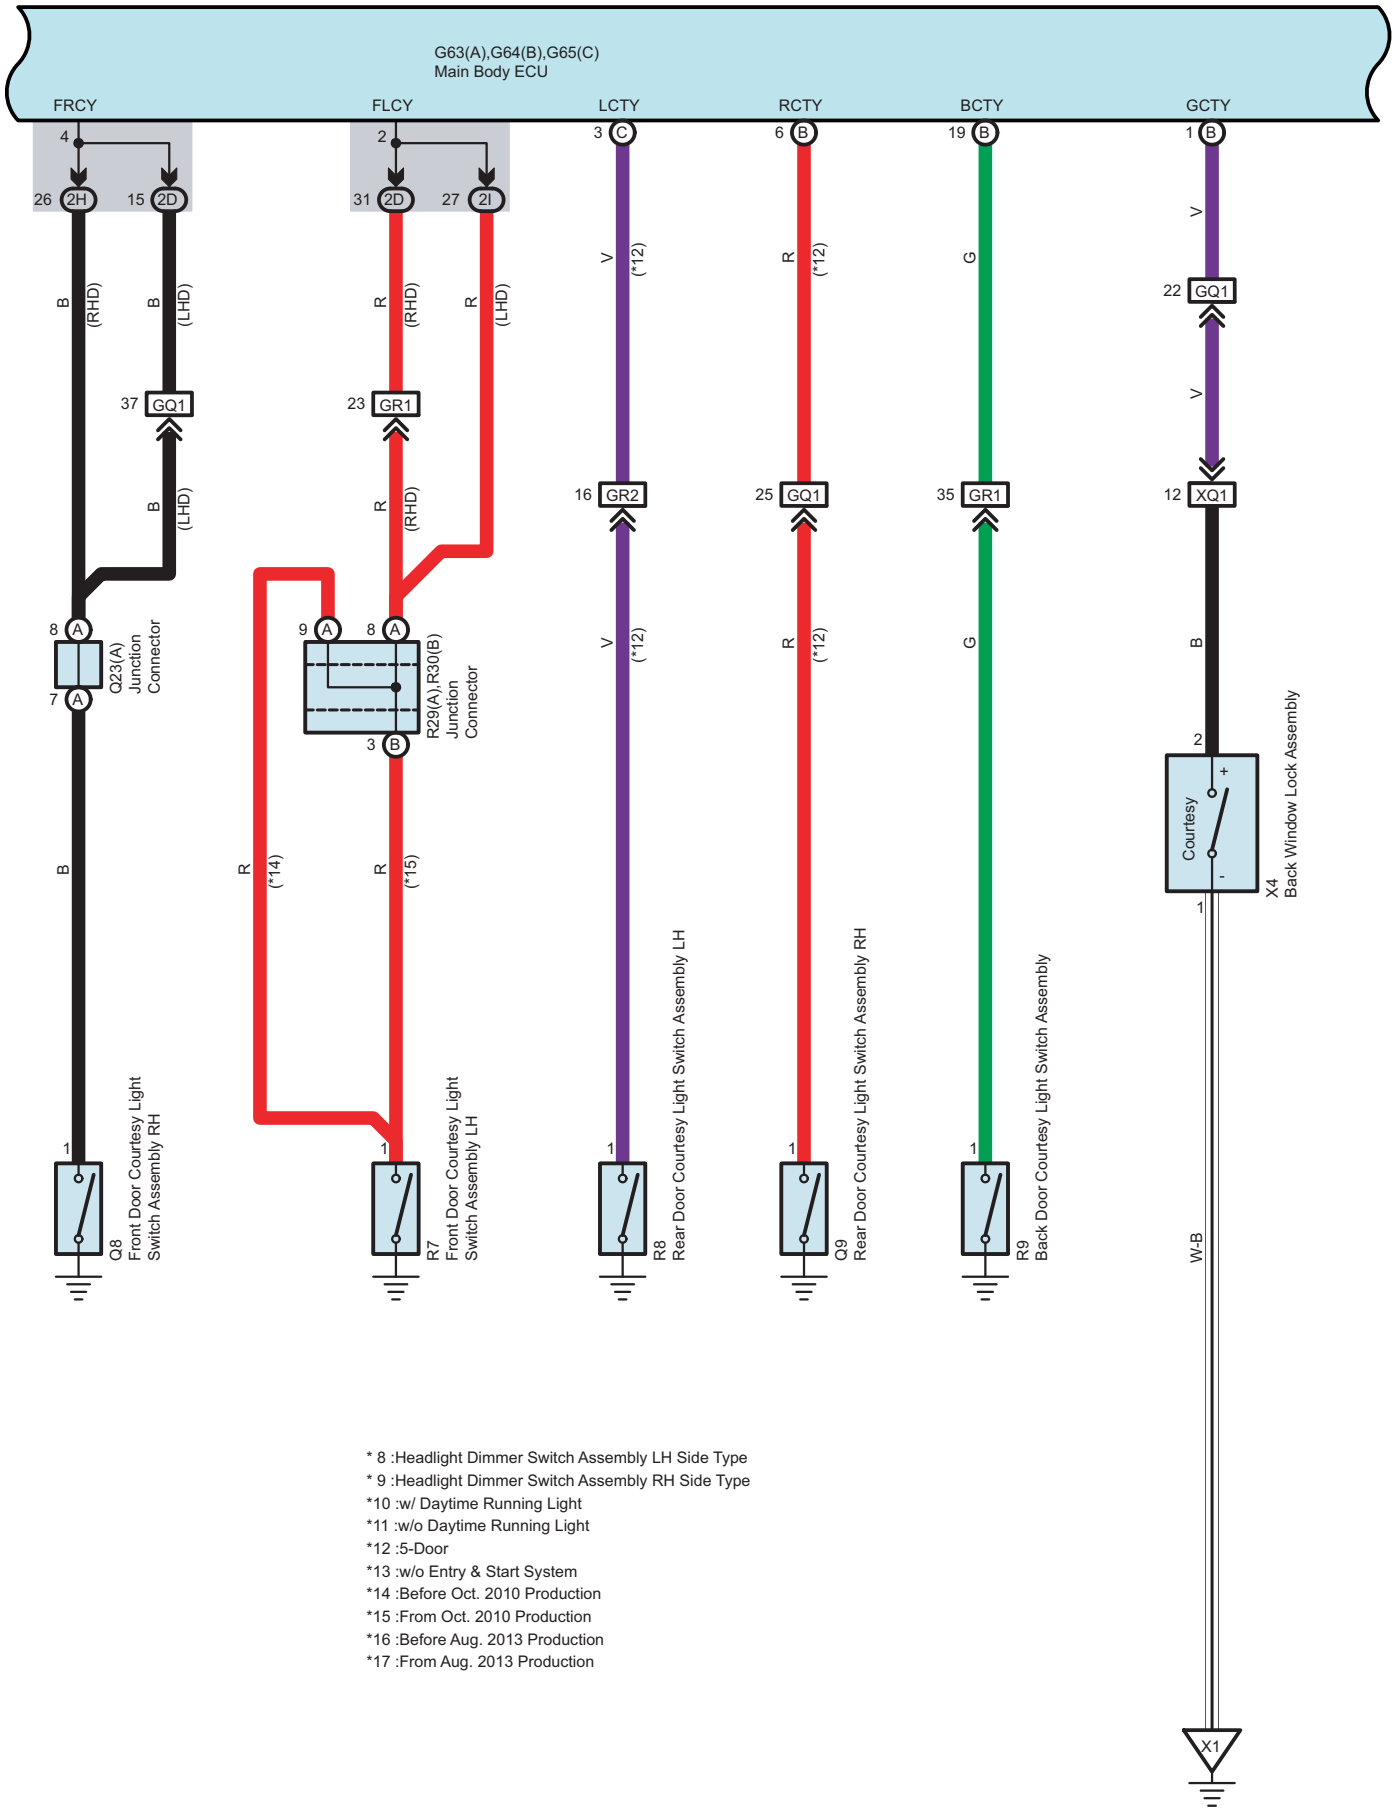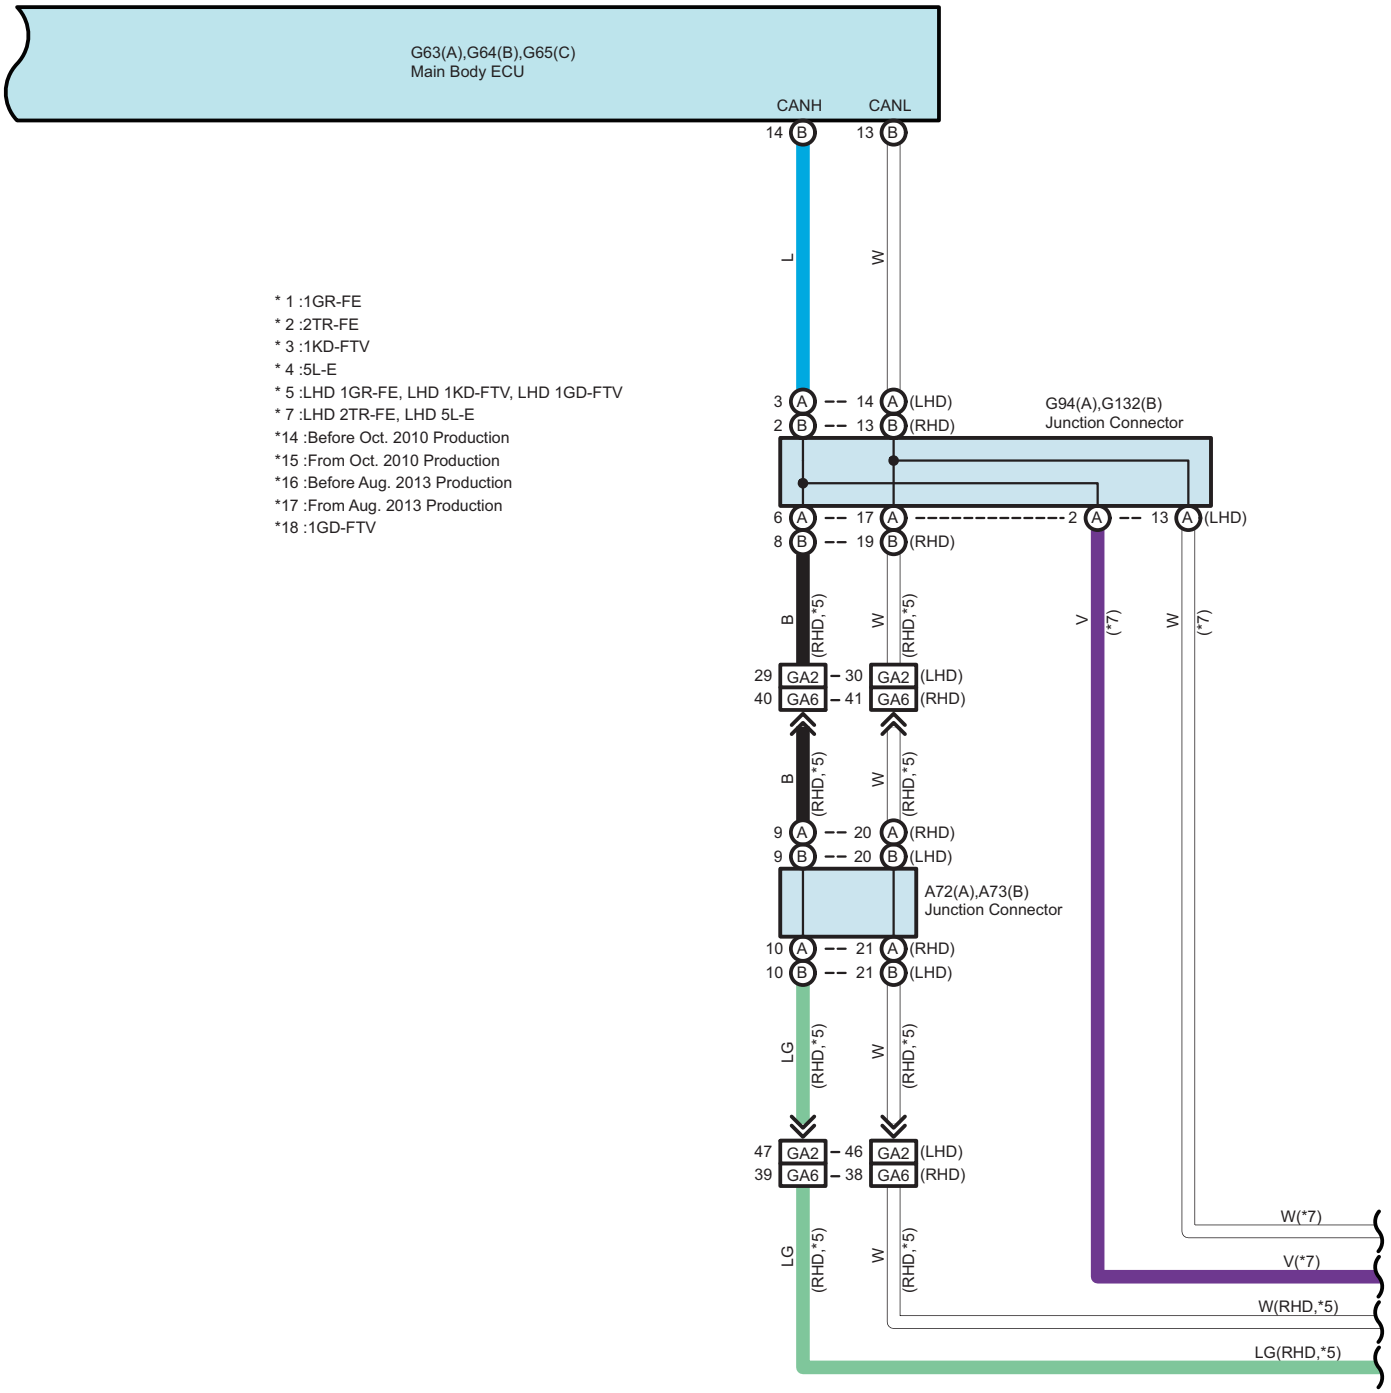


* 8 :Headlight Dimmer Switch Assembly LH Side Type
* 9 :Headlight Dimmer Switch Assembly RH Side Type
*10 :w/ Daytime Running Light
*11 :w/o Daytime Running Light
*12 :5-Door
*13 :w/o Entry & Start System
*14 :Before Oct. 2010 Production
*15 :From Oct. 2010 Production
*16 :Before Aug. 2013 Production
*17 :From Aug. 2013 Production



G63(A),G64(B),G65(C)
Main Body ECU
CANH
CANL
14 B
13 B
L
W
* 1 :1GR-FE
* 2 :2TR-FE
* 3 :1KD-FTV
* 4 :5L-E
* 5 :LHD 1GR-FE, LHD 1KD-FTV, LHD 1GD-FTV
* 7 :LHD 2TR-FE, LHD 5L-E
*14 :Before Oct. 2010 Production
*15 :From Oct. 2010 Production
*16 :Before Aug. 2013 Production
*17 :From Aug. 2013 Production
*18 :1GD-FTV
3 A -- 14 A (LHD)
2 B -- 13 B (RHD)
G94(A),G132(B)
Junction Connector
6 A -- 17 A
8 B -- 19 B (RHD)
2 A -- 13 A (LHD)
B (RHD,*5)
W (RHD,*5)
V (*7)
W (*7)
29 GA2 -- 30 GA2 (LHD)
40 GA6 -- 41 GA6 (RHD)
9 A -- 20 A (RHD)
9 B -- 20 B (LHD)
A72(A),A73(B)
Junction Connector
10 A -- 21 A (RHD)
10 B -- 21 B (LHD)
LG (RHD,*5)
47 GA2 -- 46 GA2 (LHD)
39 GA6 -- 38 GA6 (RHD)
W(*7)
V(*7)
W(RHD,*5)
LG(RHD,*5)

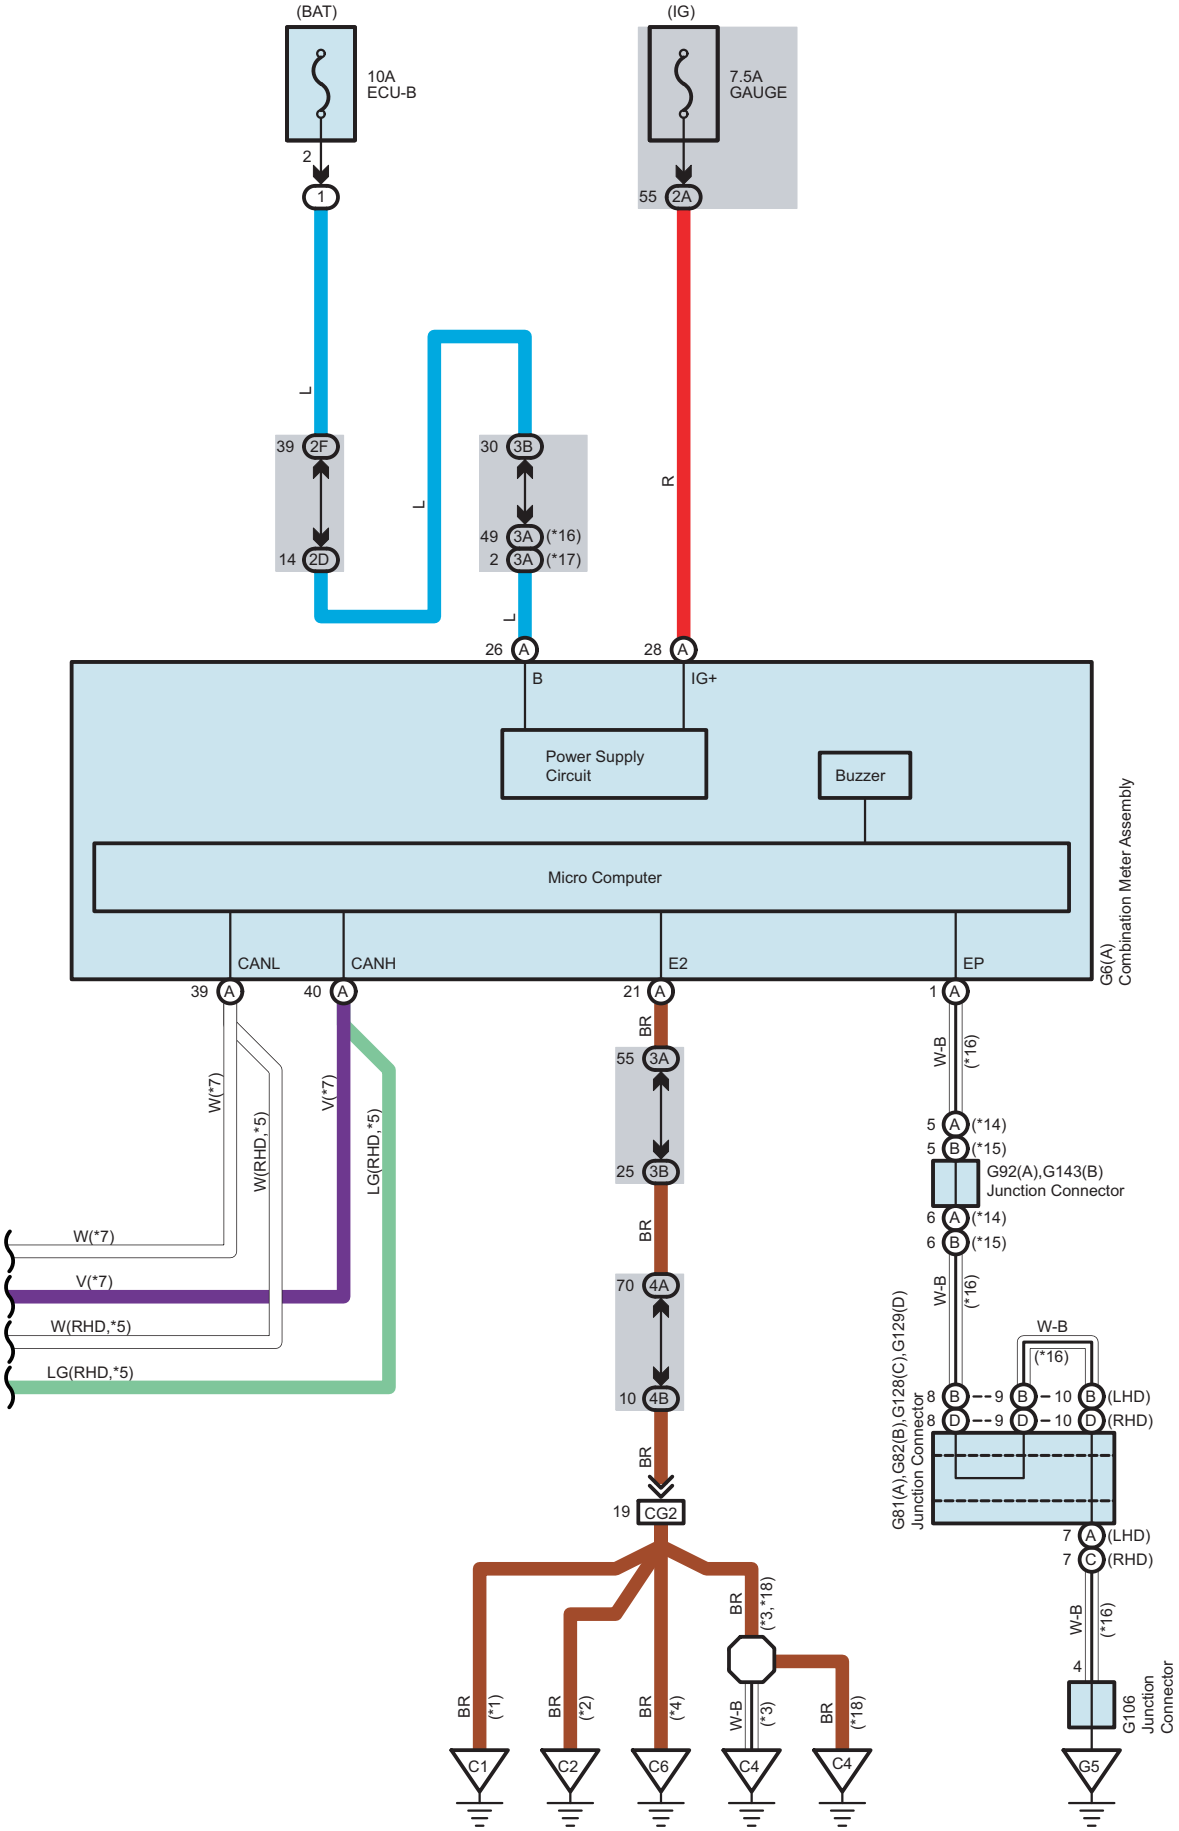
(BAT)
10A
ECU-B
2
1
(IG)
7.5A
GAUGE
55 2A
L
39 2F
14 2D
L
30 3B
49 3A (*16)
2 3A (*17)
L
R
26 A
28 A
B
IG+
Power Supply
Circuit
Buzzer
Micro Computer
CANL
CANH
E2
EP
G6(A)
Combination Meter Assembly
39 A
40 A
21 A
1 A
W(*7)
W(RHD,*5)
V(*7)
LG(RHD,*5)
BR
55 3A
25 3B
BR
70 4A
10 4B
BR
19 CG2
W-B
(*16)
5 A (*14)
5 B (*15)
G92(A),G143(B)
Junction Connector
6 A (*14)
6 B (*15)
W-B
(*16)
W-B
(*16)
8 B 9 B 10 B (LHD)
8 D 9 D 10 D (RHD)
G81(A),G82(B),G128(C),G129(D)
Junction Connector
7 A (LHD)
7 C (RHD)
W-B
(*16)
4
G106
Junction
Connector
G5
BR (*1)
C1
BR (*2)
C2
BR (*4)
C6
W-B (*3)
BR (*3,*118)
C4
BR (*18)
C4

A72
White

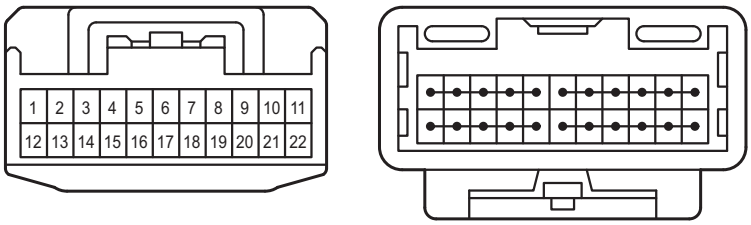


A73
White

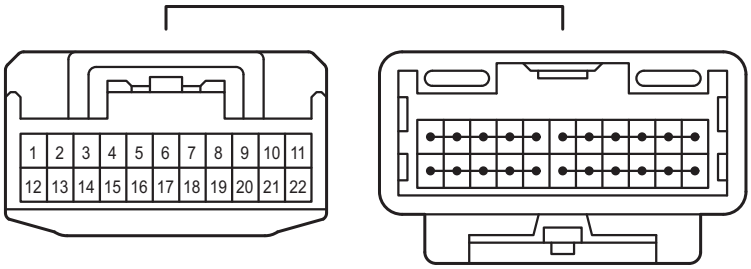


G3
White




G6
Black

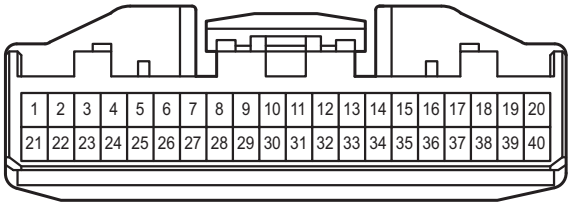


G44
White

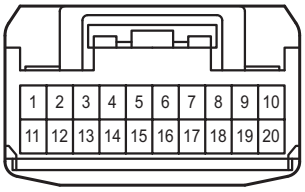


G63
White

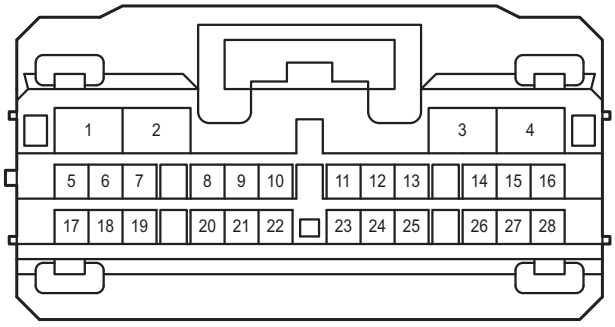


G64
White

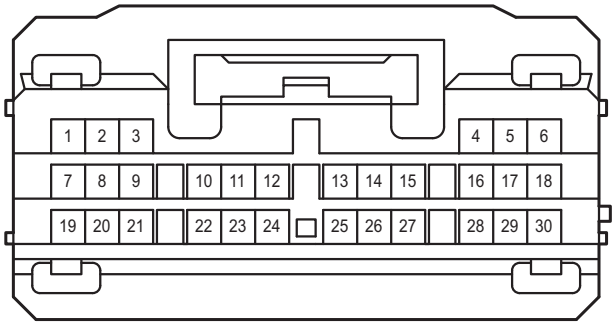


G65
White

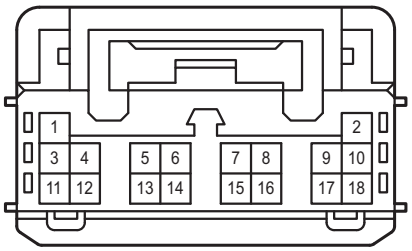


G79
White

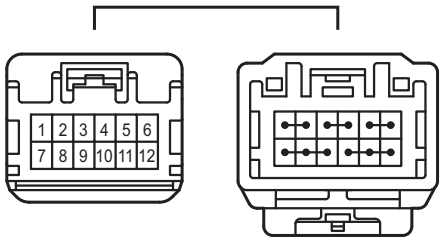


G80
White

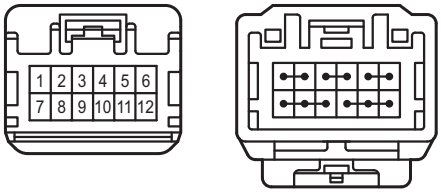


G81
White

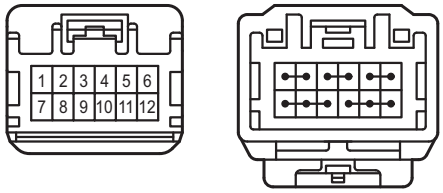


G82
White

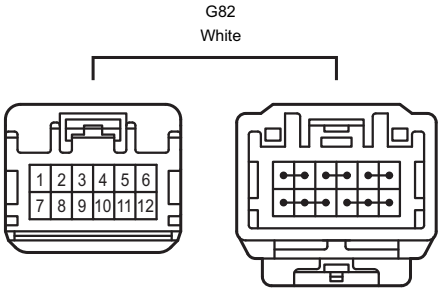


G92
White

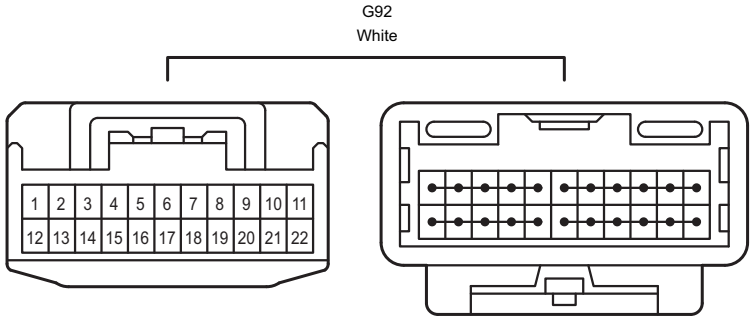


G94
White

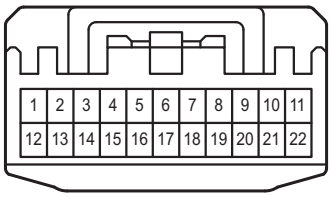


G104
White

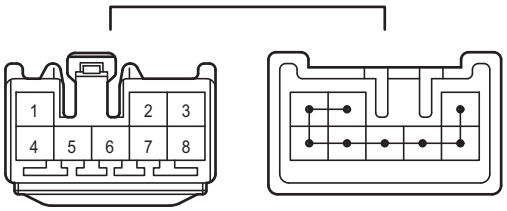


G106
White

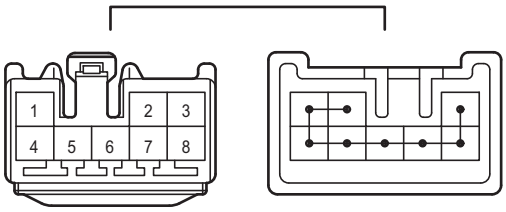


G127
Black

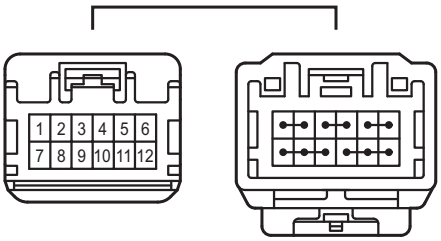


G128
Black

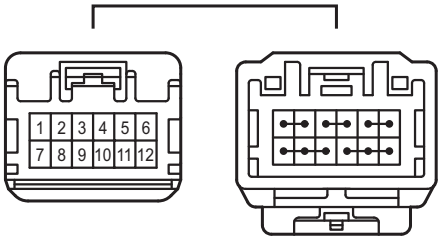


G129
Black

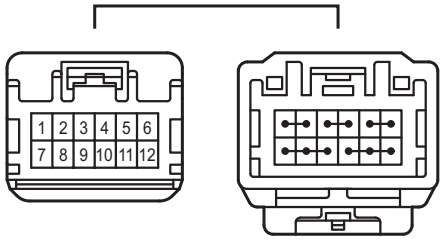


G132
Gray

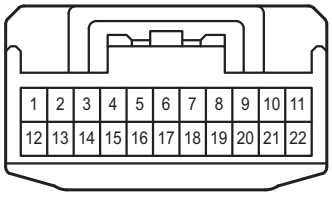


G140
Black

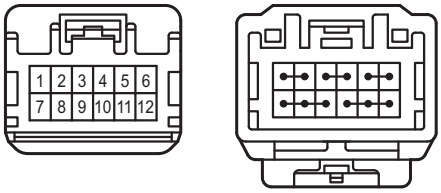


G141
Black

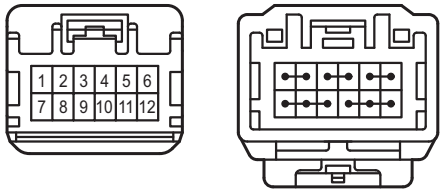


G143
Black

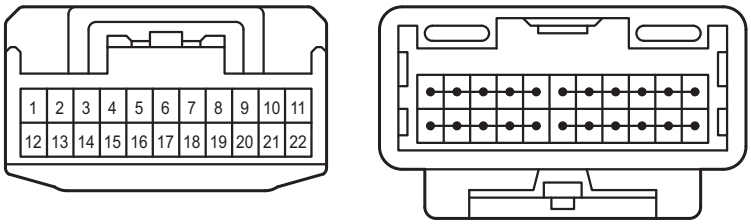

G164
Black

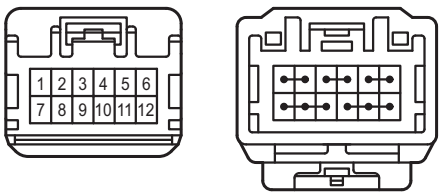

G165
Black

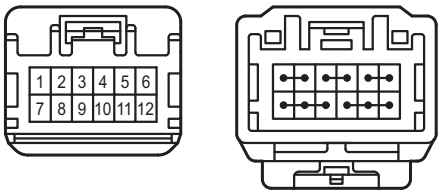


Q8
Black



Q9
White



Q23
White

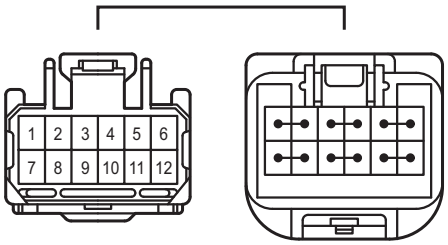

R7
Black




R8
White




R9
Black




R29
Blue

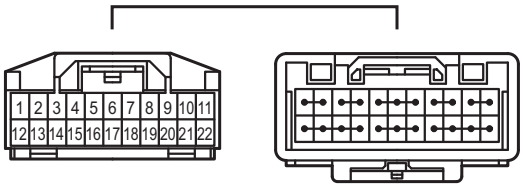


R30
Blue

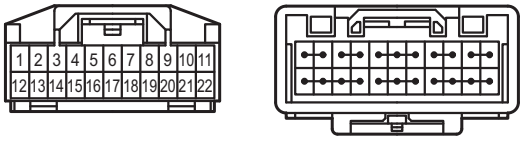


X4
White




2 A
White

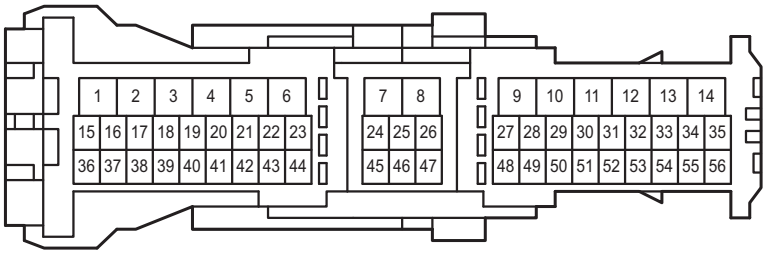


2 D
White

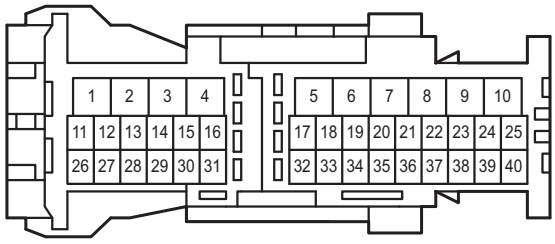


2 F
White

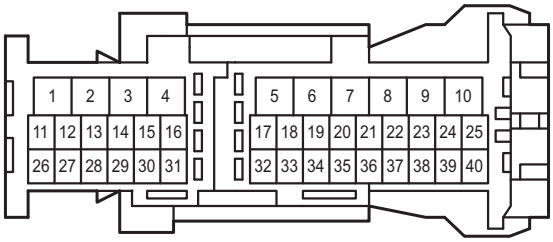


2 H
White

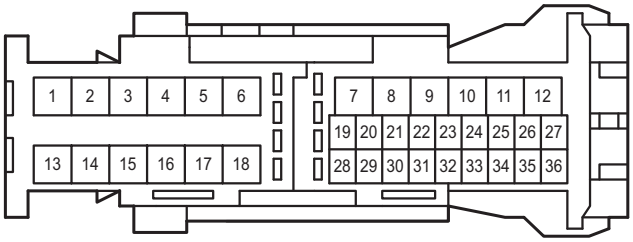


2 I
White

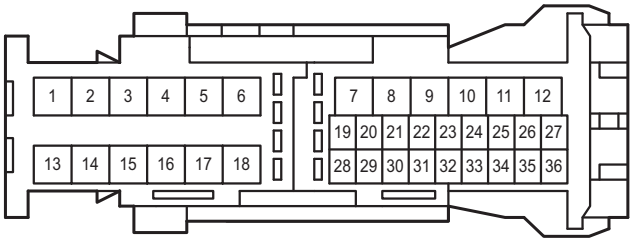


3 A
White

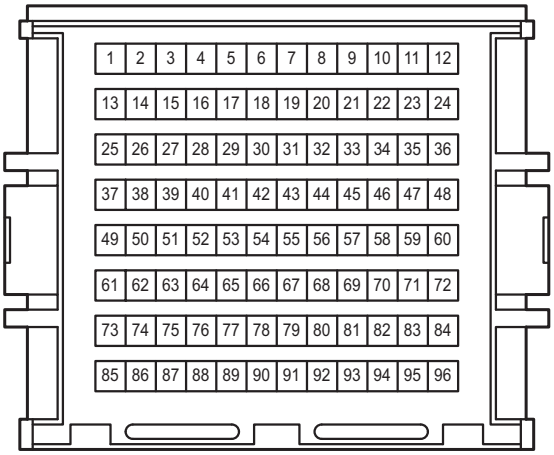


3 B
White

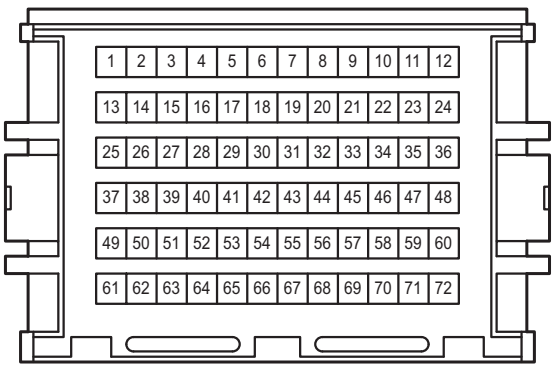


3 C
White

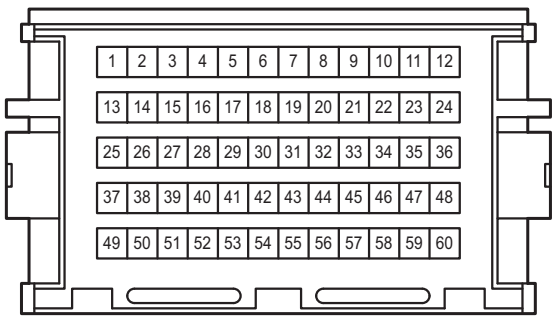

4 A
White

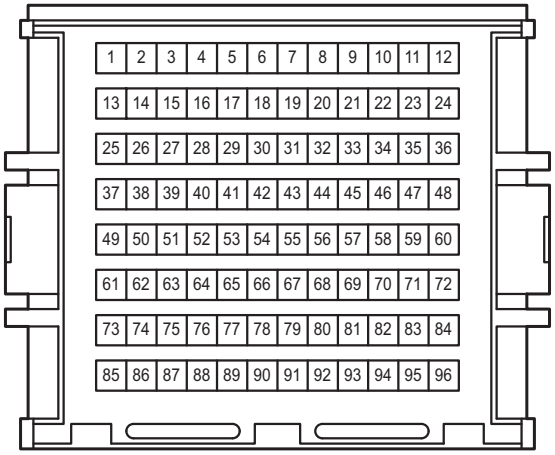


4 B
White

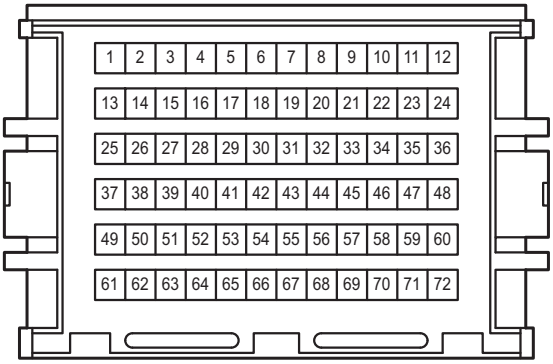


CG2

White

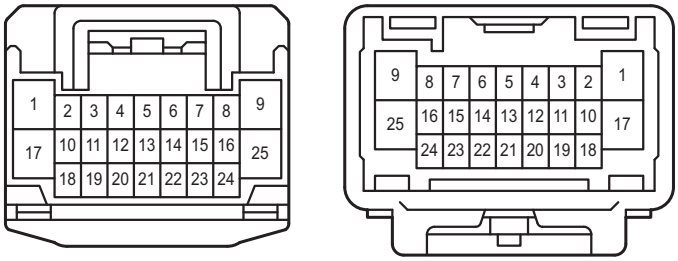


GA2

White

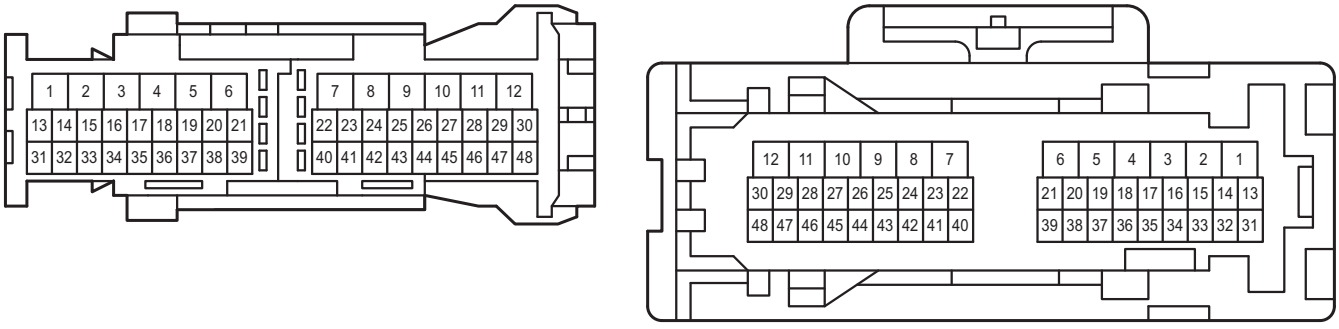


GA6

White

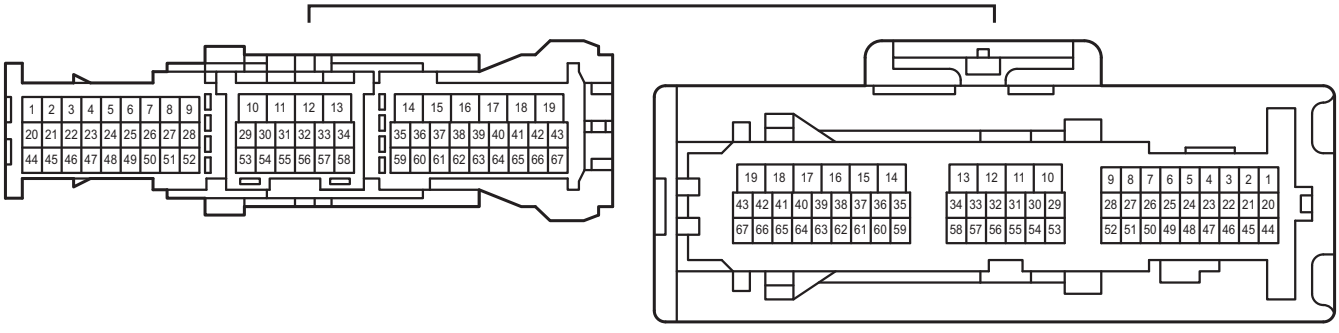


GQ1

White

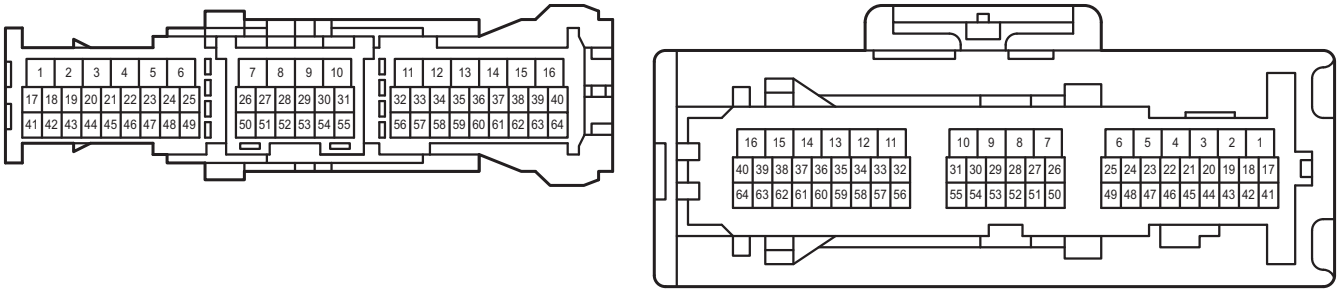


GR1

White

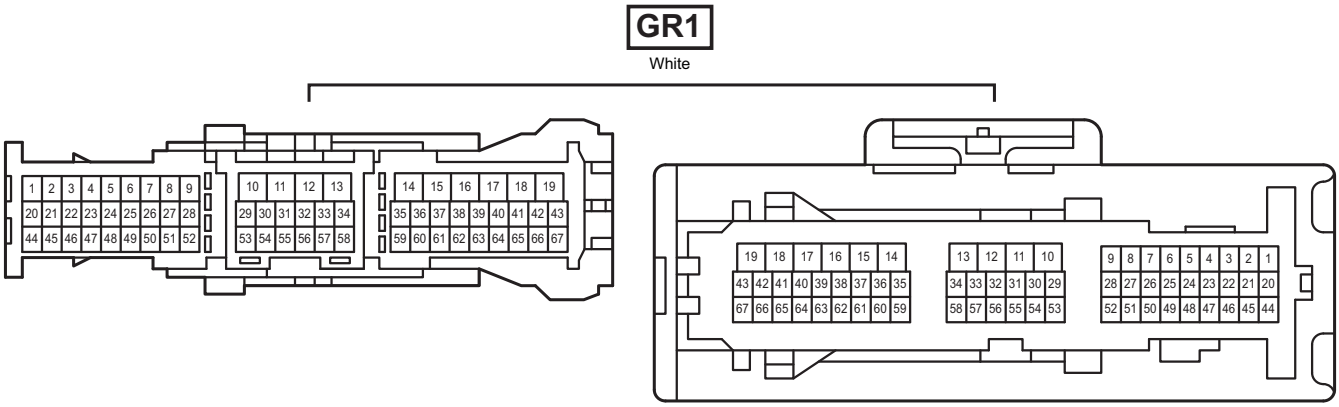

GR2

Gray

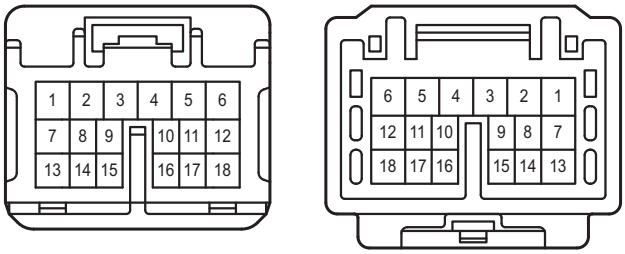

XQ1

White

