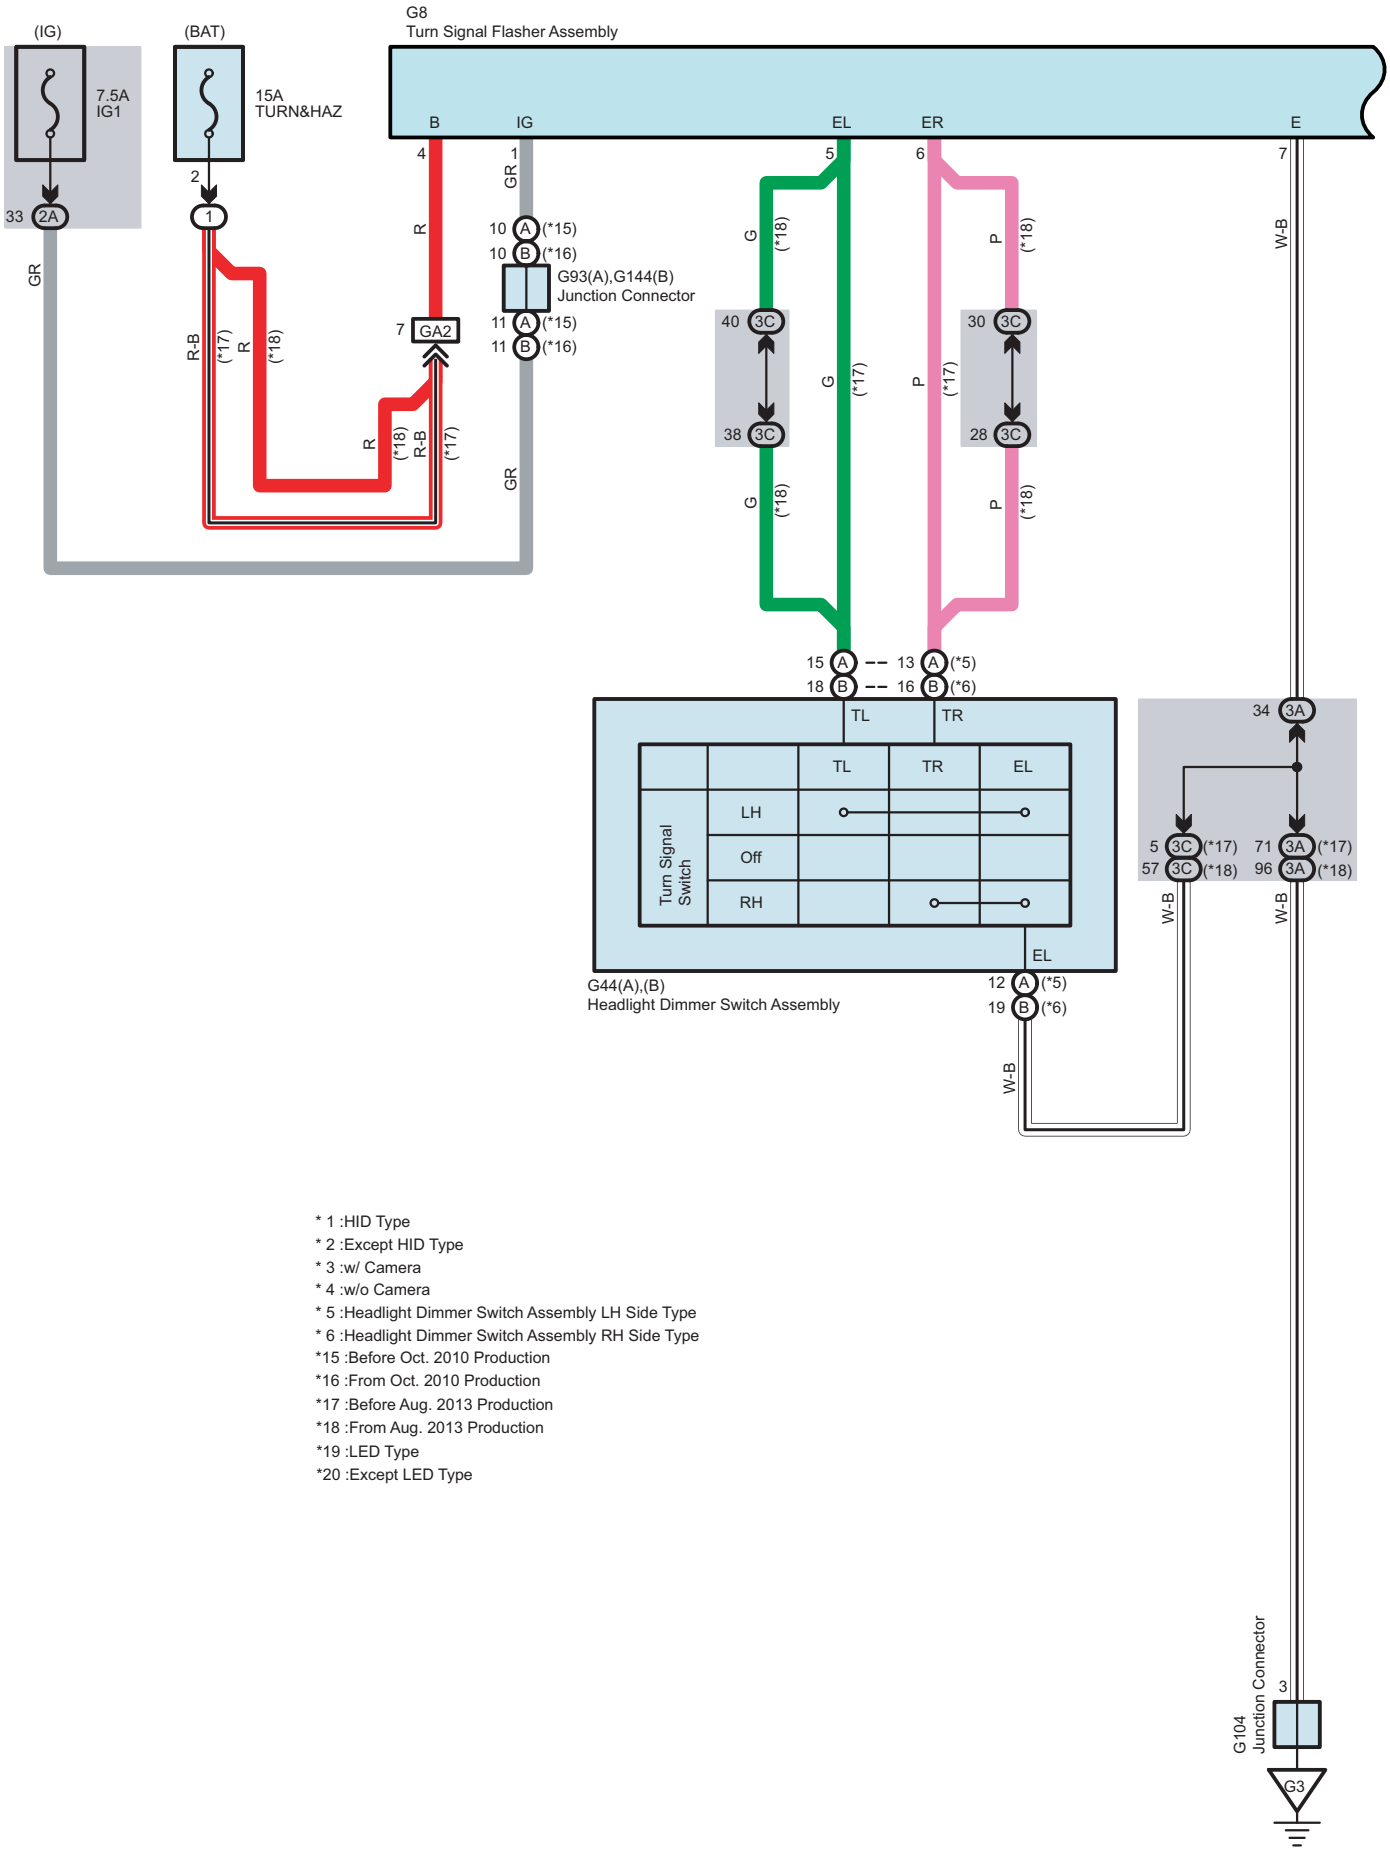
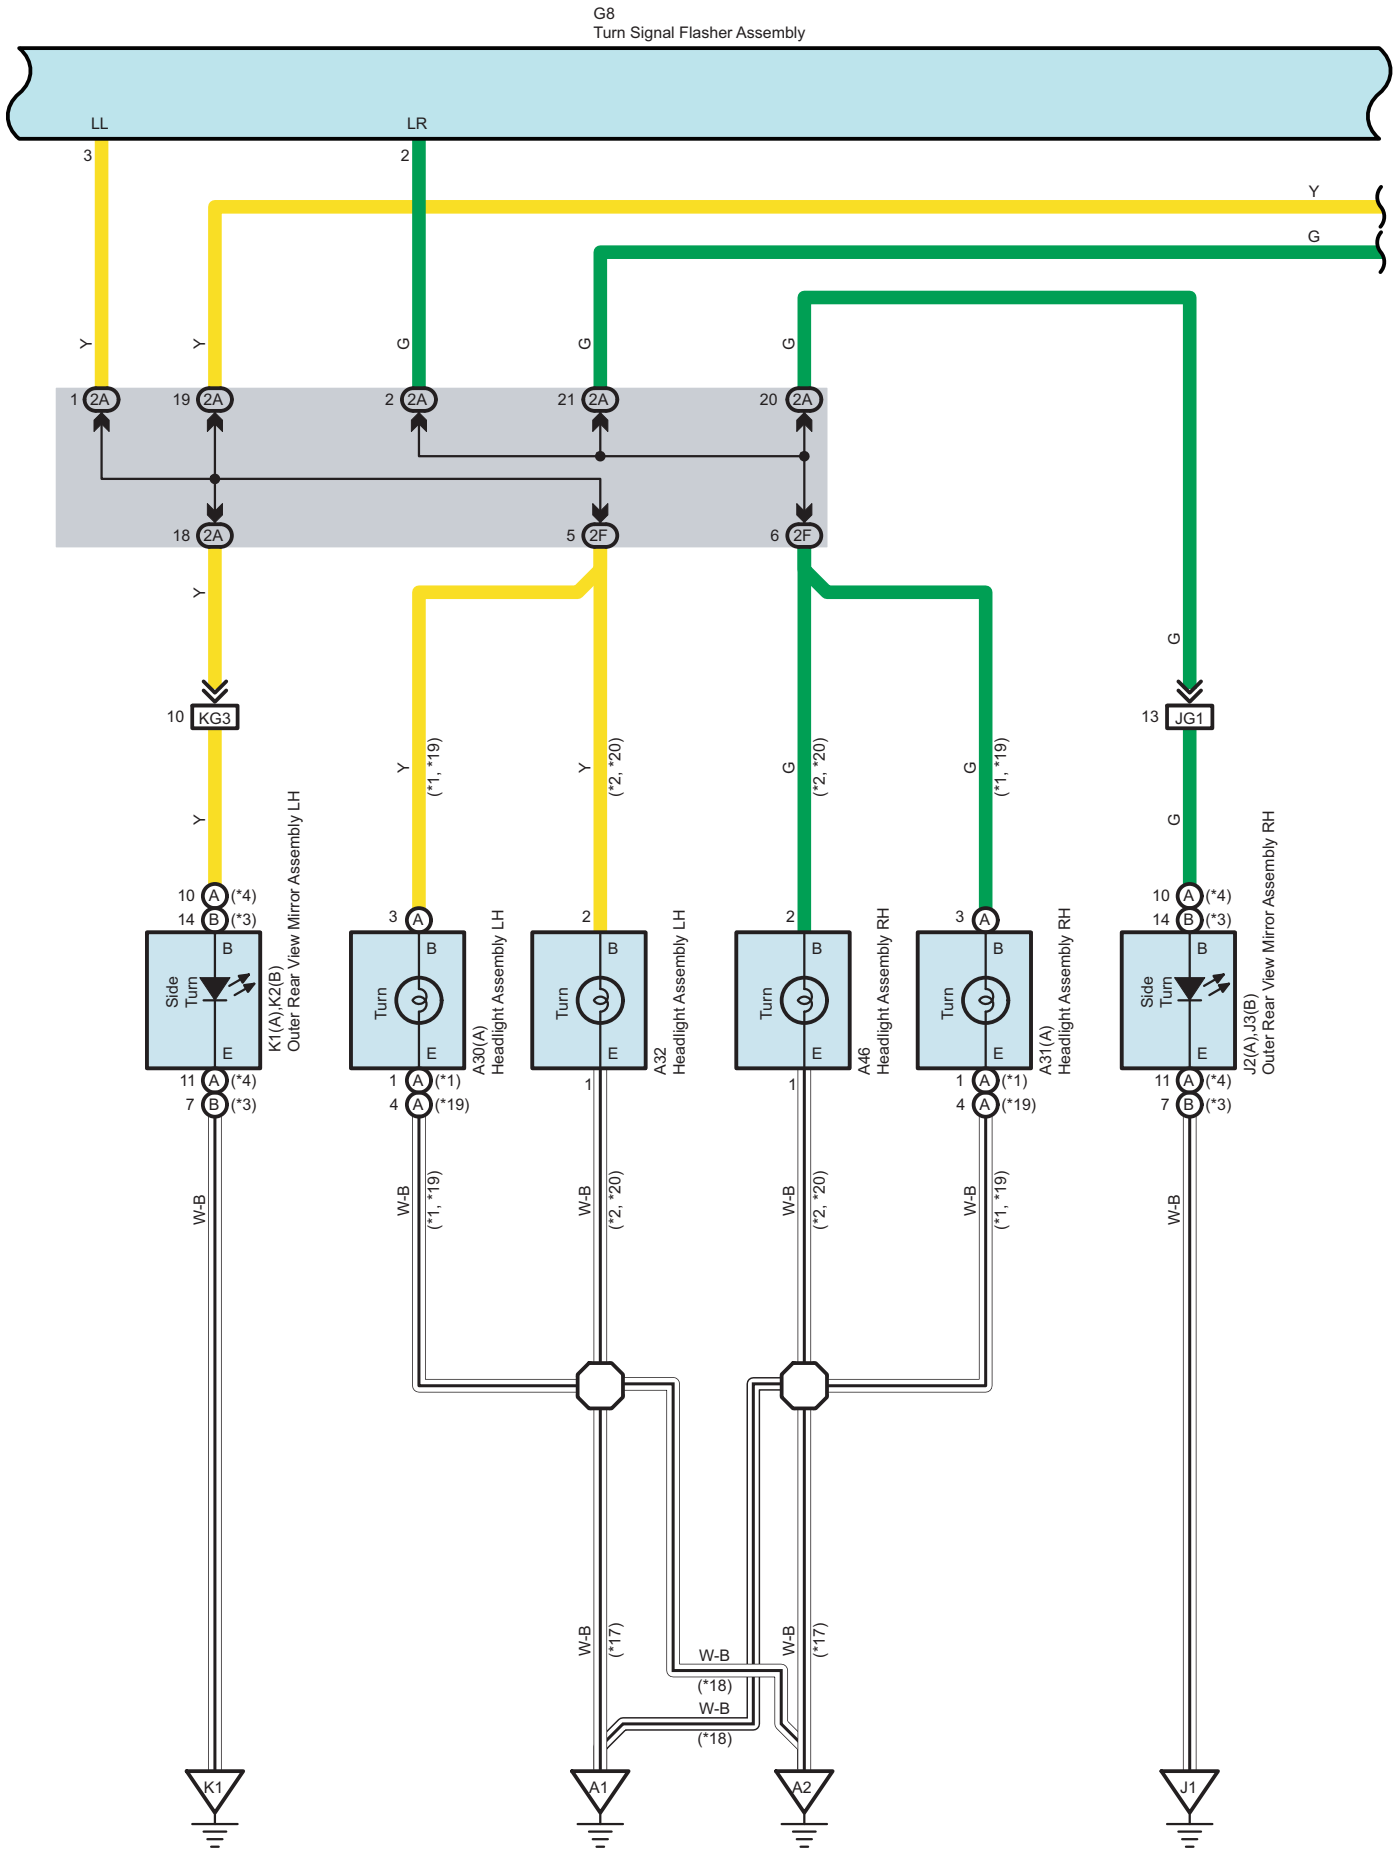
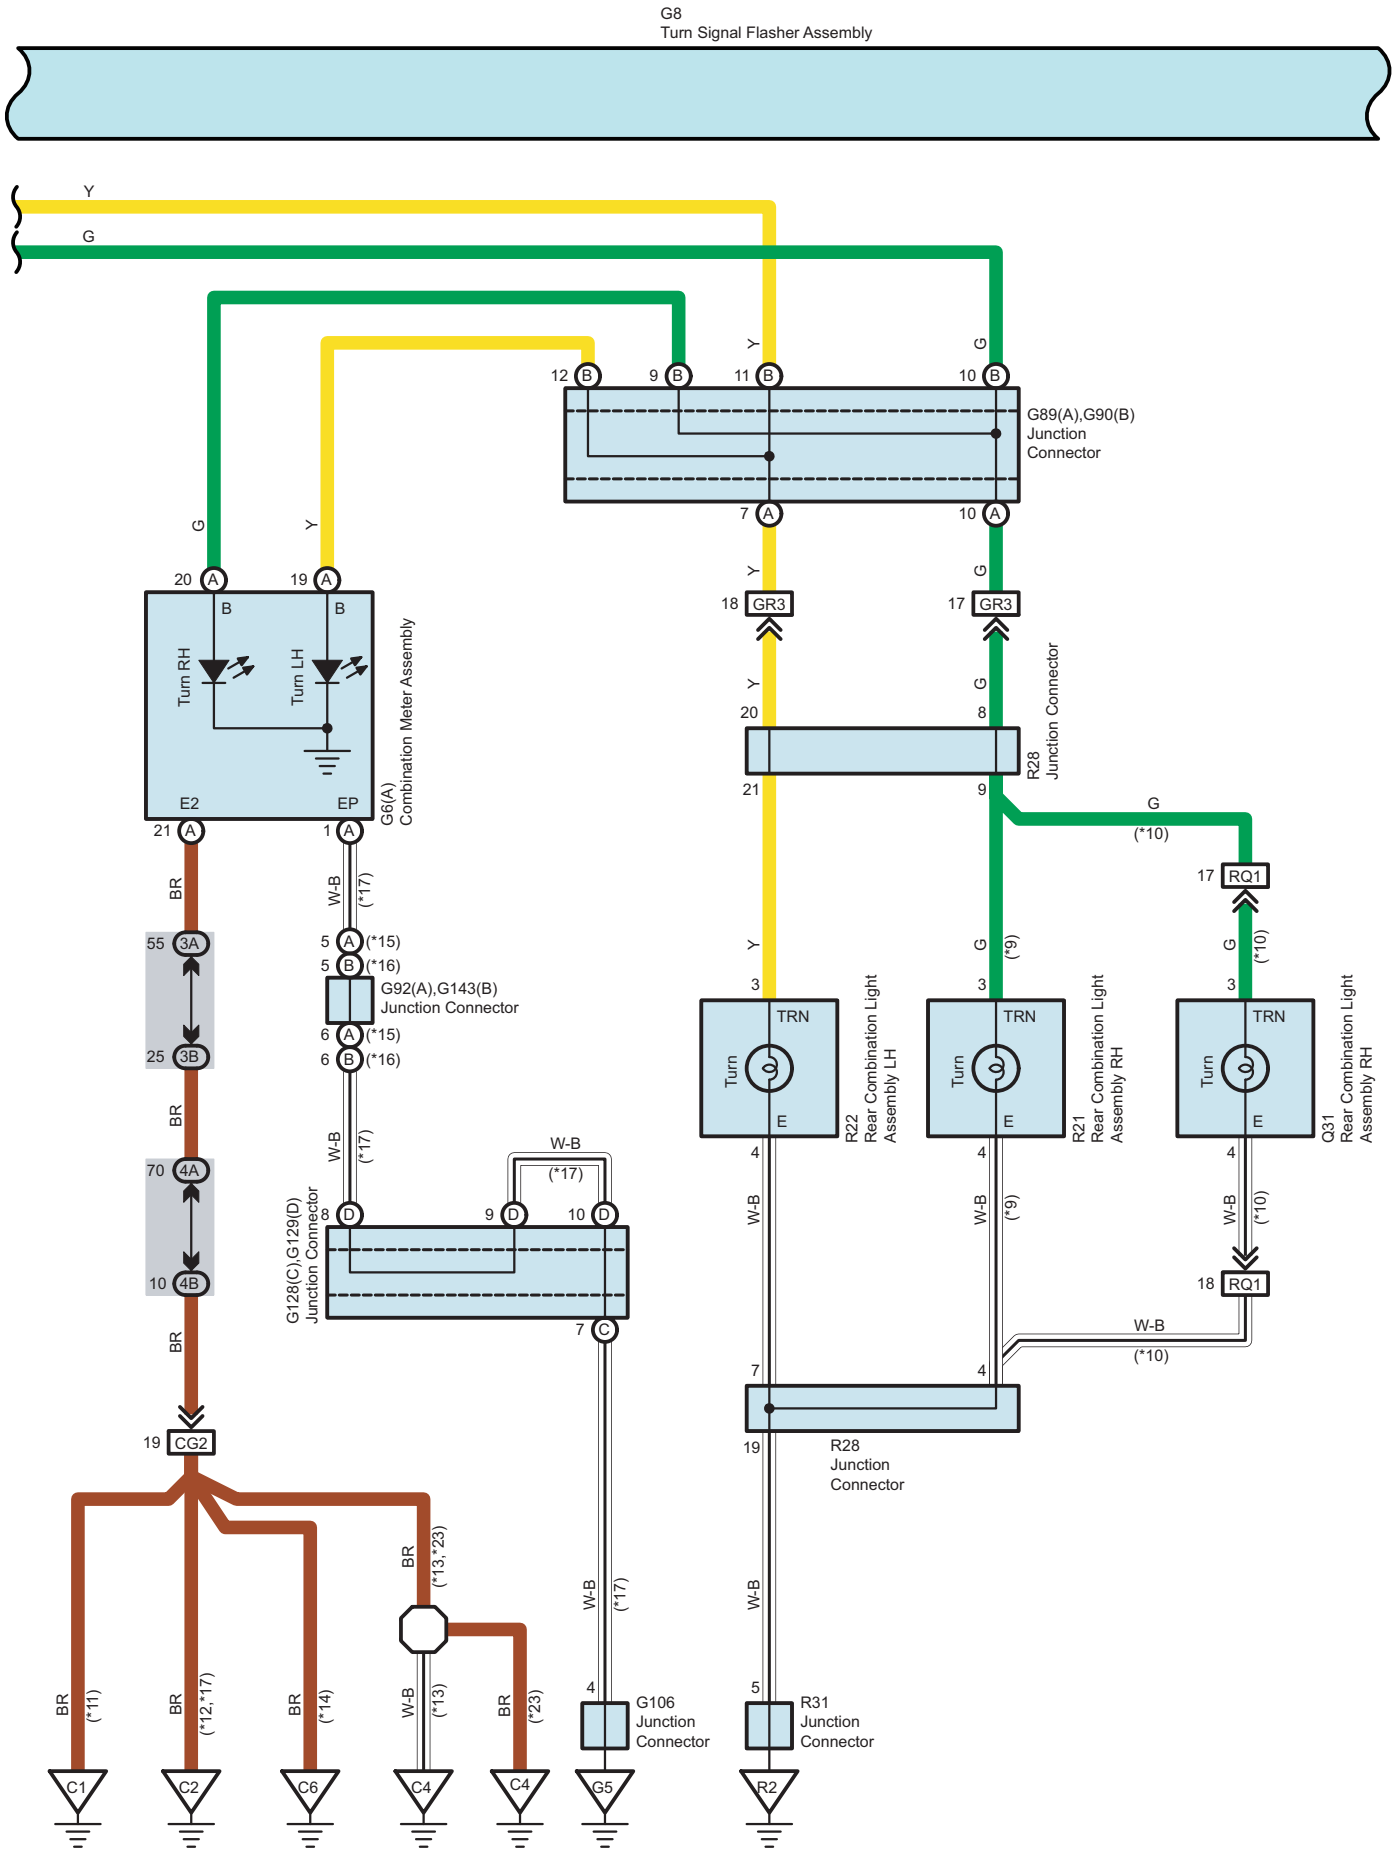
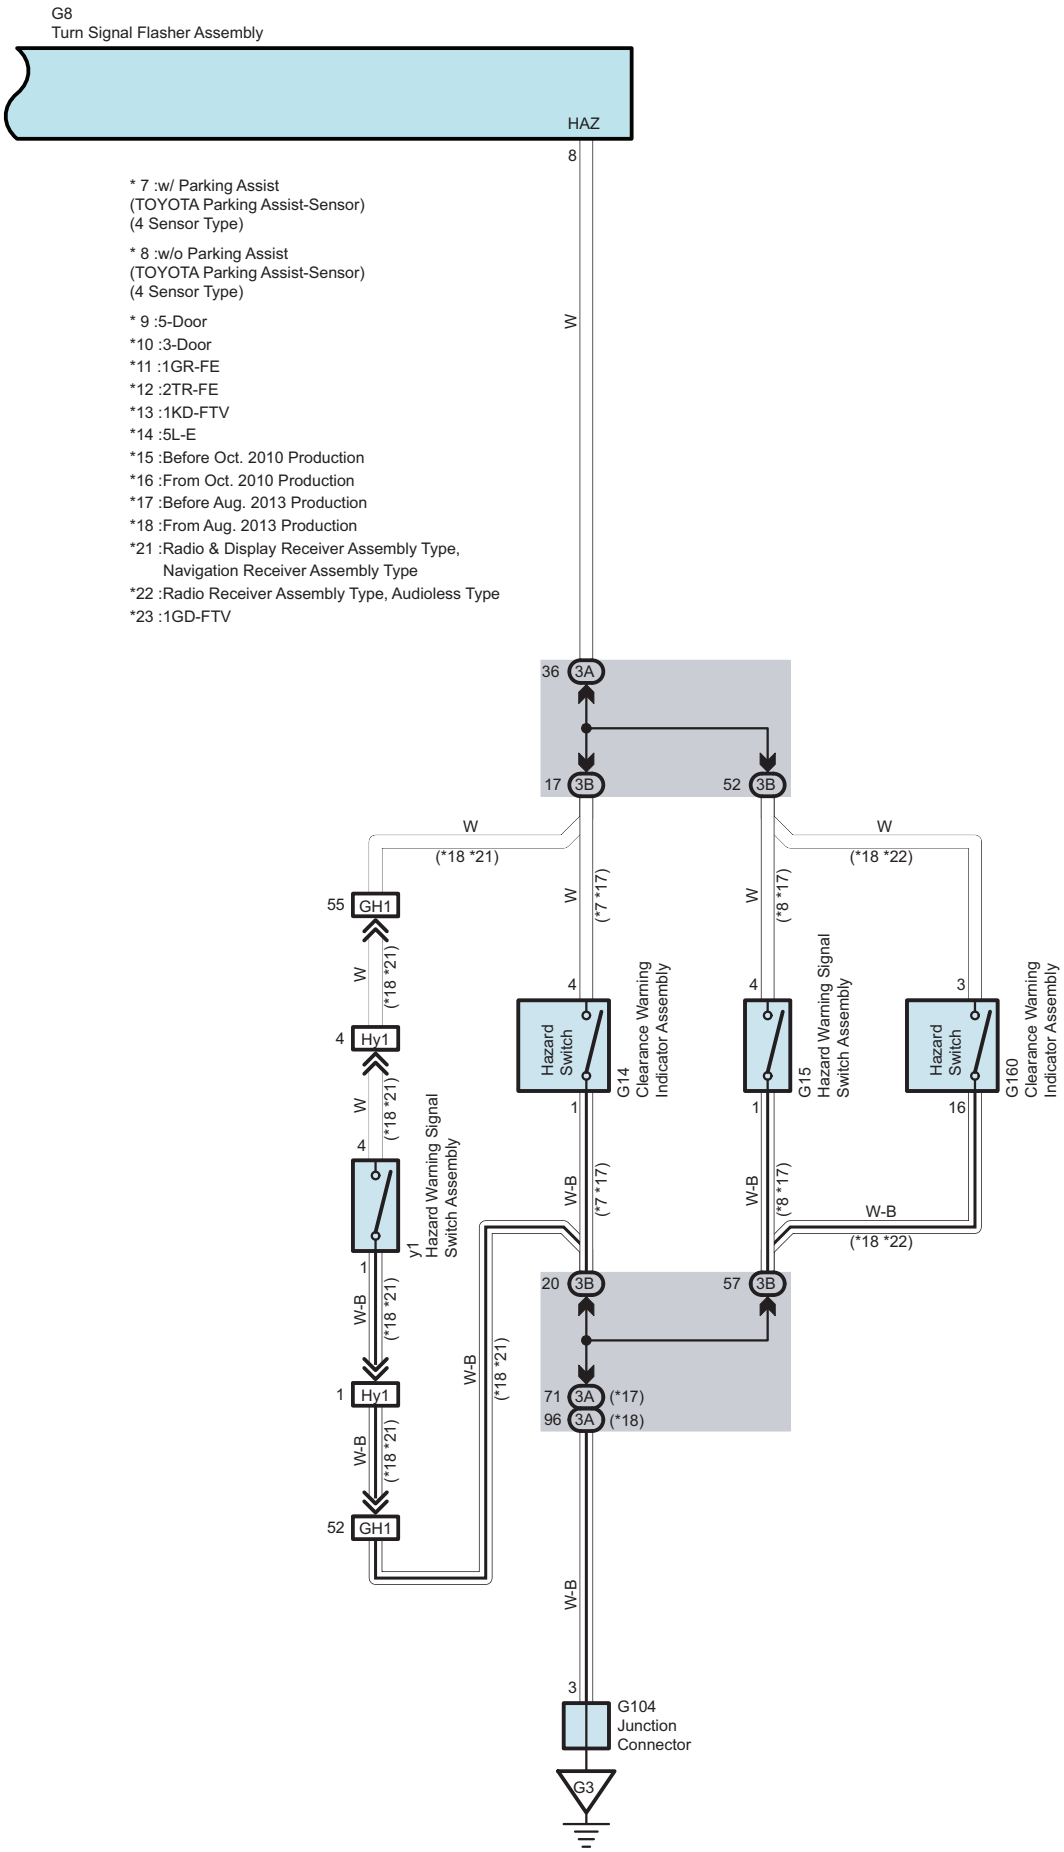



* 1 :HID Type
* 2 :Except HID Type
* 3 :w/ Camera
* 4 :w/o Camera
* 5 :Headlight Dimmer Switch Assembly LH Side Type
* 6 :Headlight Dimmer Switch Assembly RH Side Type
*15 :Before Oct. 2010 Production
*16 :From Oct. 2010 Production
*17 :Before Aug. 2013 Production
*18 :From Aug. 2013 Production
*19 :LED Type
*20 :Except LED Type


G8
Turn Signal Flasher Assembly
LL
LR
3
2
Y
G
1 2A
19 2A
2 2A
21 2A
20 2A
18 2A
5 2F
6 2F
10 KG3
13 JG1
10 (*4)
14 (*3)
11 (*4)
7 (*3)
Side Turn
Turn
B
E
K1(A),K2(B)
Outer Rear View Mirror Assembly LH
3
1 (*1)
4 (*19)
A30(A)
Headlight Assembly LH
2
1
A32
Headlight Assembly LH
A46
Headlight Assembly RH
A31(A)
Headlight Assembly RH
J2(A),J3(B)
Outer Rear View Mirror Assembly RH
(*1, *19)
(*2, *20)
W-B
(*17)
(*18)
K1
A1
A2
J1



G8
Turn Signal Flasher Assembly
Y
G
G89(A),G90(B)
Junction
Connector
G6(A)
Combination Meter Assembly
Turn RH
Turn LH
E2
EP
G92(A),G143(B)
Junction Connector
G128(C),G129(D)
Junction Connector
R28
Junction Connector
R22
Rear Combination Light
Assembly LH
R21
Rear Combination Light
Assembly RH
Q31
Rear Combination Light
Assembly RH
TRN
Turn
E
GR3
RQ1
CG2
G106
Junction
Connector
R31
Junction
Connector
C1
C2
C6
C4
C4
G5
R2
BR
W-B
(*9)
(*10)
(*11)
(*12,*17)
(*13,*23)
(*14)
(*15)
(*16)
(*17)
(*23)


G8
Turn Signal Flasher Assembly
HAZ
8
W
* 7 :w/ Parking Assist
(TOYOTA Parking Assist-Sensor)
(4 Sensor Type)
* 8 :w/o Parking Assist
(TOYOTA Parking Assist-Sensor)
(4 Sensor Type)
* 9 :5-Door
*10 :3-Door
*11 :1GR-FE
*12 :2TR-FE
*13 :1KD-FTV
*14 :5L-E
*15 :Before Oct. 2010 Production
*16 :From Oct. 2010 Production
*17 :Before Aug. 2013 Production
*18 :From Aug. 2013 Production
*21 :Radio & Display Receiver Assembly Type,
Navigation Receiver Assembly Type
*22 :Radio Receiver Assembly Type, Audioless Type
*23 :1GD-FTV
36 3A
17 3B
52 3B
W
(*18 *21)
W
(*18 *22)
55 GH1
W
(*18 *21)
4 Hy1
W
(*18 *21)
4
y1
Hazard Warning Signal
Switch Assembly
1
W-B
(*18 *21)
1 Hy1
W-B
(*18 *21)
52 GH1
W
(*7 *17)
4
Hazard
Switch
1
G14
Clearance Warning
Indicator Assembly
W-B
(*7 *17)
W
(*8 *17)
4
1
G15
Hazard Warning Signal
Switch Assembly
W-B
(*8 *17)
W-B
(*18 *22)
3
Hazard
Switch
16
G160
Clearance Warning
Indicator Assembly
20 3B
57 3B
71 3A (*17)
96 3A (*18)
W-B
(*18 *21)
W-B
3
G104
Junction
Connector
G3


A30
Gray

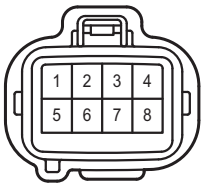


A31
Gray

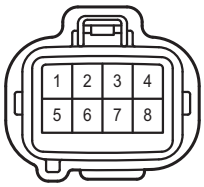


A32
Gray

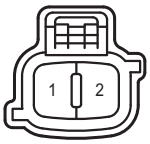

A46
Gray

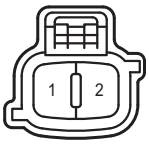


G6
Black

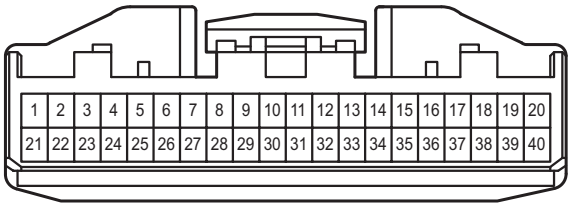

G8
Black




G14
Black

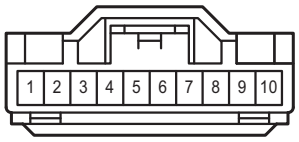


G15
Gray




G44
White

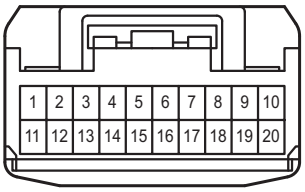


G89
White

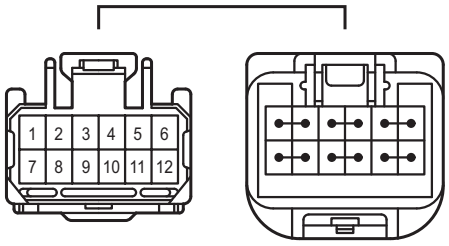


G90
White

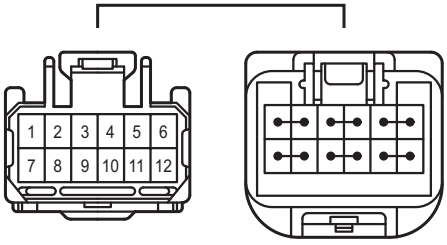


G92
White

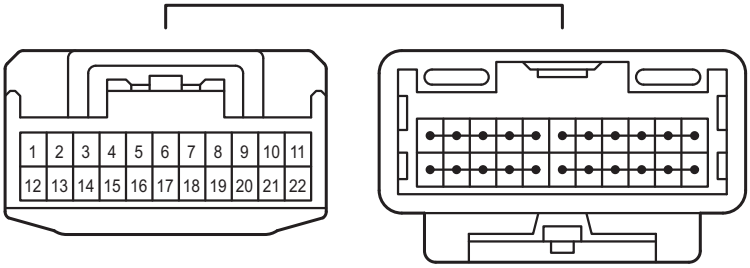


G93
Gray

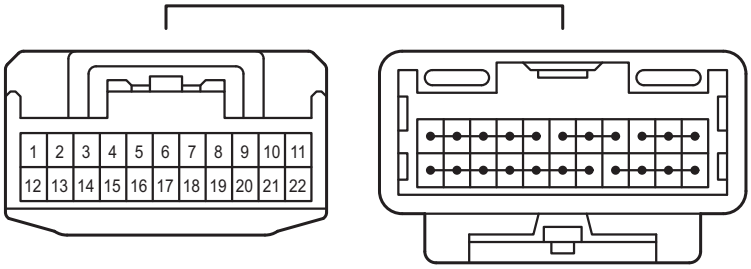


G104
White

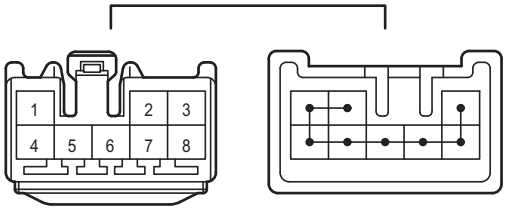


G106
White

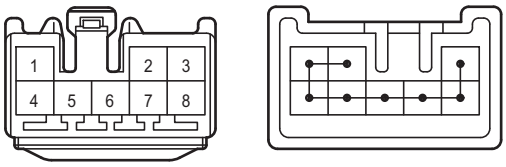


G128
Black

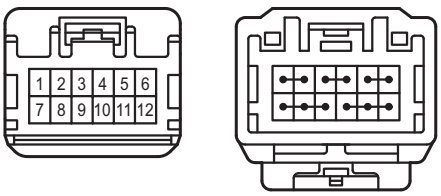


G129
Black

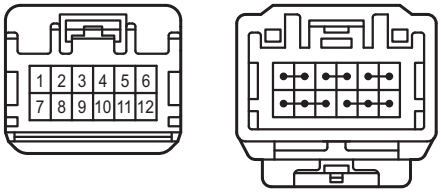


G143
Black

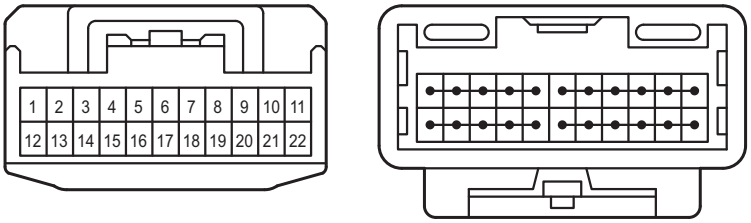


G144
White

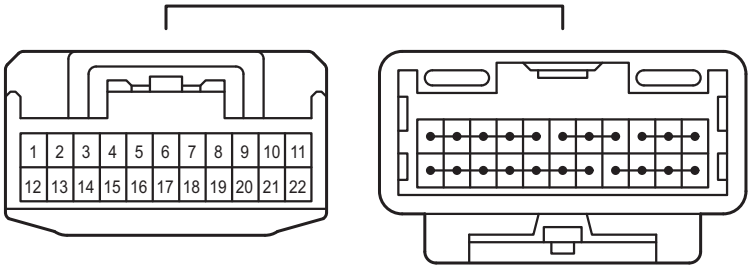


G160
Black

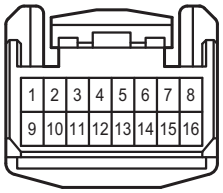


J2
White

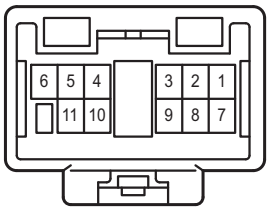


J3
White

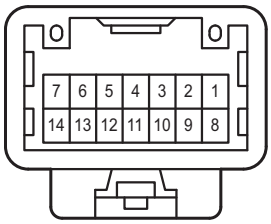

K1
White

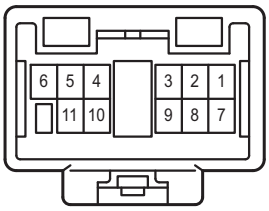

K2
White

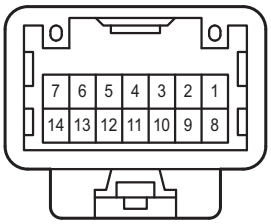

Q31
Blue




R21
Blue




R22
Blue



R28
White

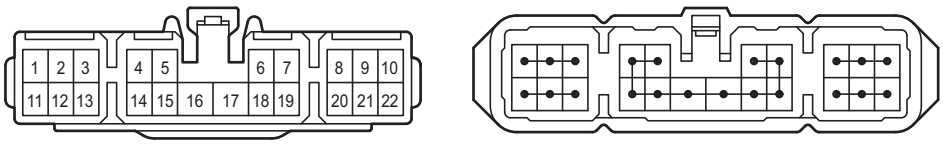


R31
White

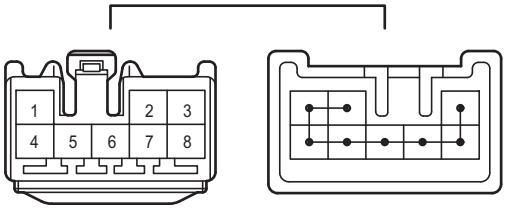


y1
Gray




2 A
White

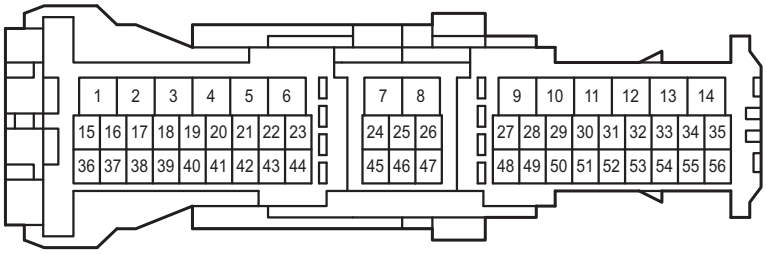


2 F
White

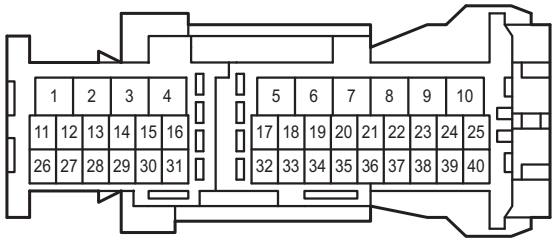


3 A
White

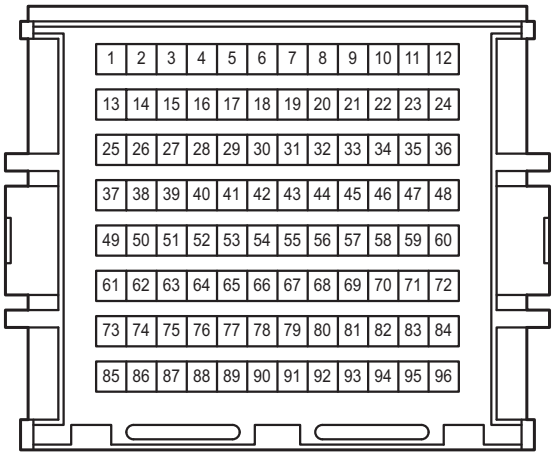


3 B
White

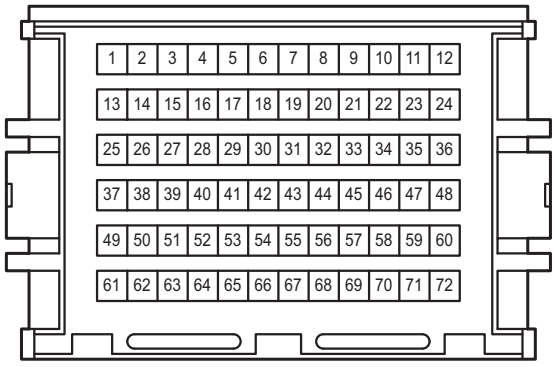


3 C
White

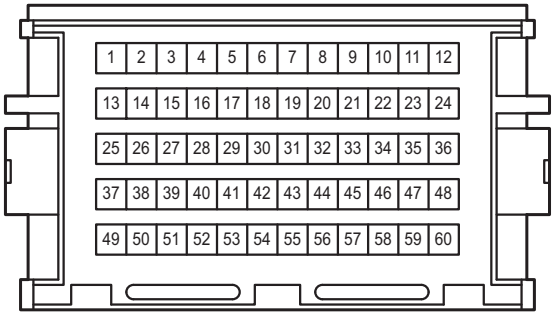


4 A
White

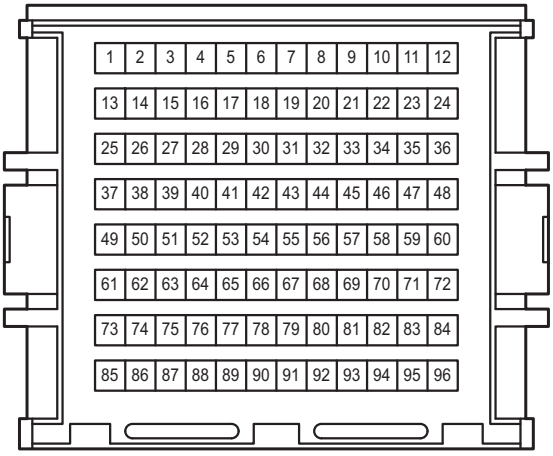

4 B
White

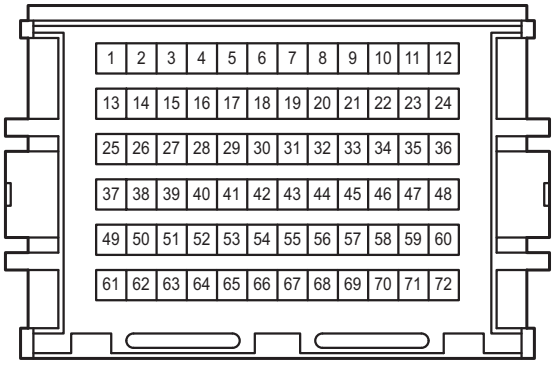


CG2
White

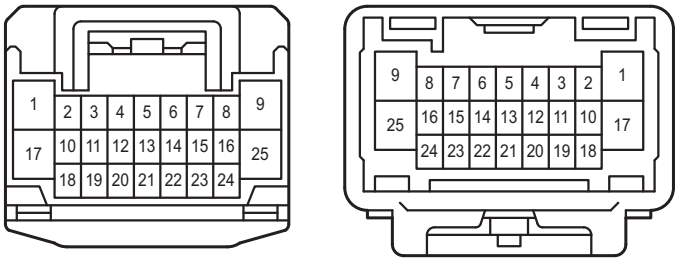


GA2

White

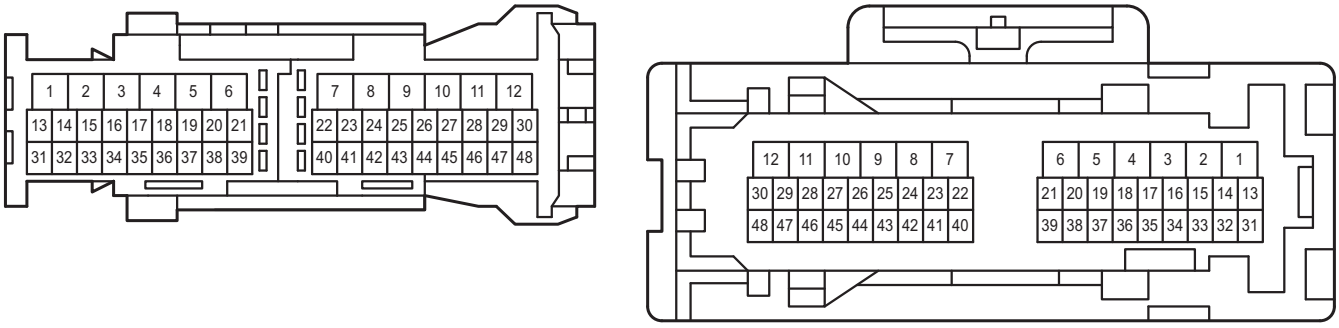


GH1

White

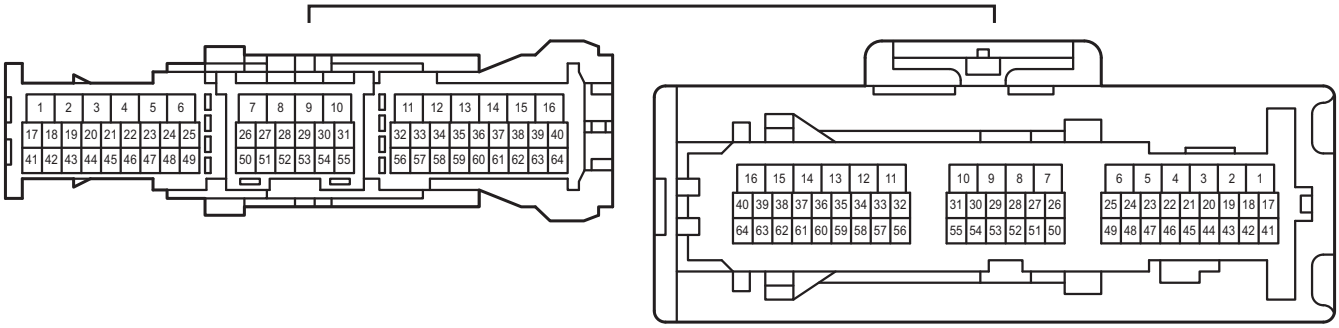


GR3

Blue

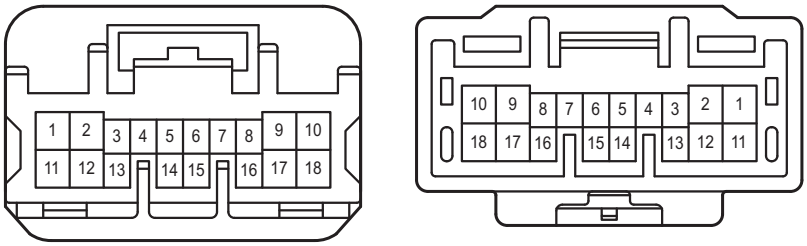


Hy1

White

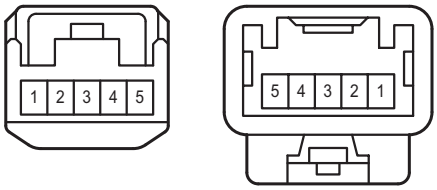


JG1


Gray

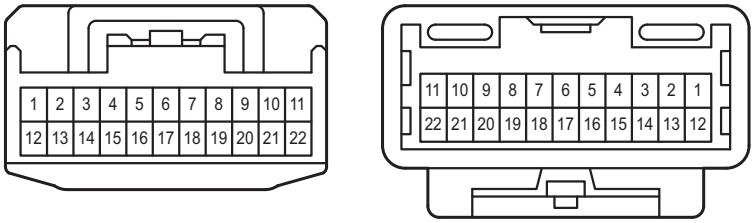

KG3

Black

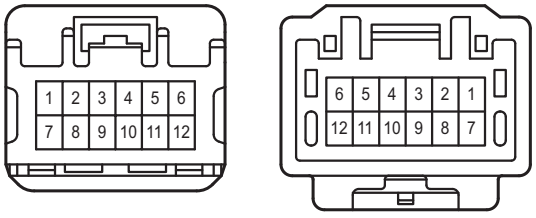

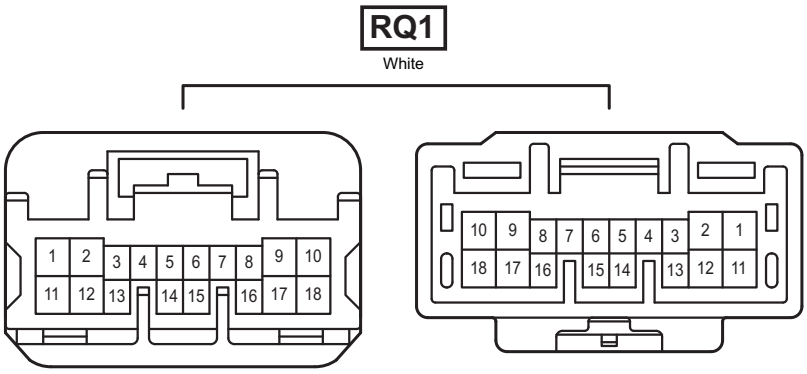
RQ1
White
1 2 3 4 5 6 7 8 9 10
11 12 13 14 15 16 17 18
10 9 8 7 6 5 4 3 2 1
18 17 16 15 14 13 12 11