





(BAT)
(BAT)
(ACC)
(IG)
10A
ECU-B
25A
D/L
NO.2
7.5A
ACC
10A
ECU-IG
NO.2
G63(A),G64(B),G65(C)
Main Body ECU
IG
ACC
ALTB
BECU
32
29
31
30
2
1
L
39
2F



G63(A),G64(B),G65(C)
Main Body ECU
GND2
GND1
HAZ
3 A
11
4 2D
3 B
W
5 3B
36 3A
W
8
HAZ
G8
Turn Signal Flasher Assembly
W-B (RHD)
W-B (LHD)
8 B
7 B
G127(B)
Junction Connector
11 B (*6)
11 D (*7)
G79(A),G80(B),
G140(C),G141(D)
Junction
Connector
7 A (*6)
7 C (*7)
12 B (*8)
12 F (*9)
G81(A),G82(B)
G164(E),G165(F)
Junction Connector
7 A (*8)
7 E (*9)
12 D
7 C
G128(C),G129(D)
Junction Connector
4
G106
Junction
Connector
G5
4
G104
Junction
Connector
G3
* 6 :Before Oct. 2010 Production
* 7 :From Oct. 2010 Production
* 8 :Before Aug. 2013 Production
* 9 :From Aug. 2013 Production

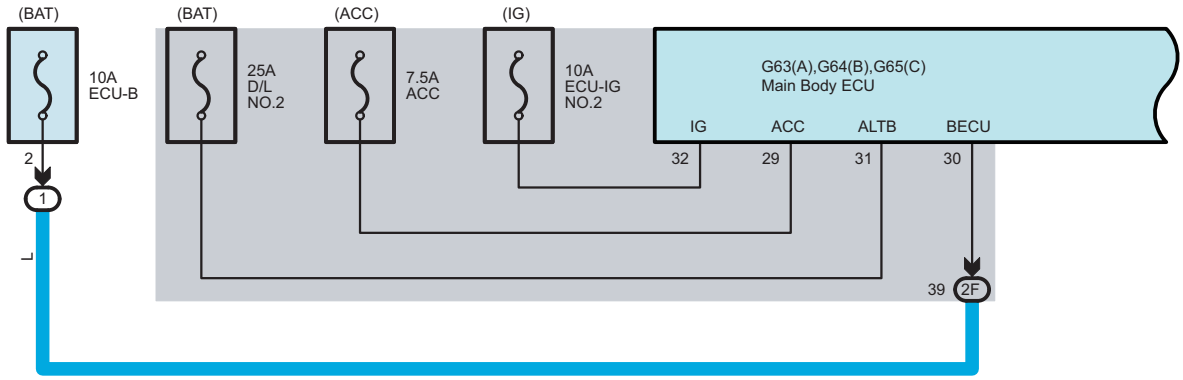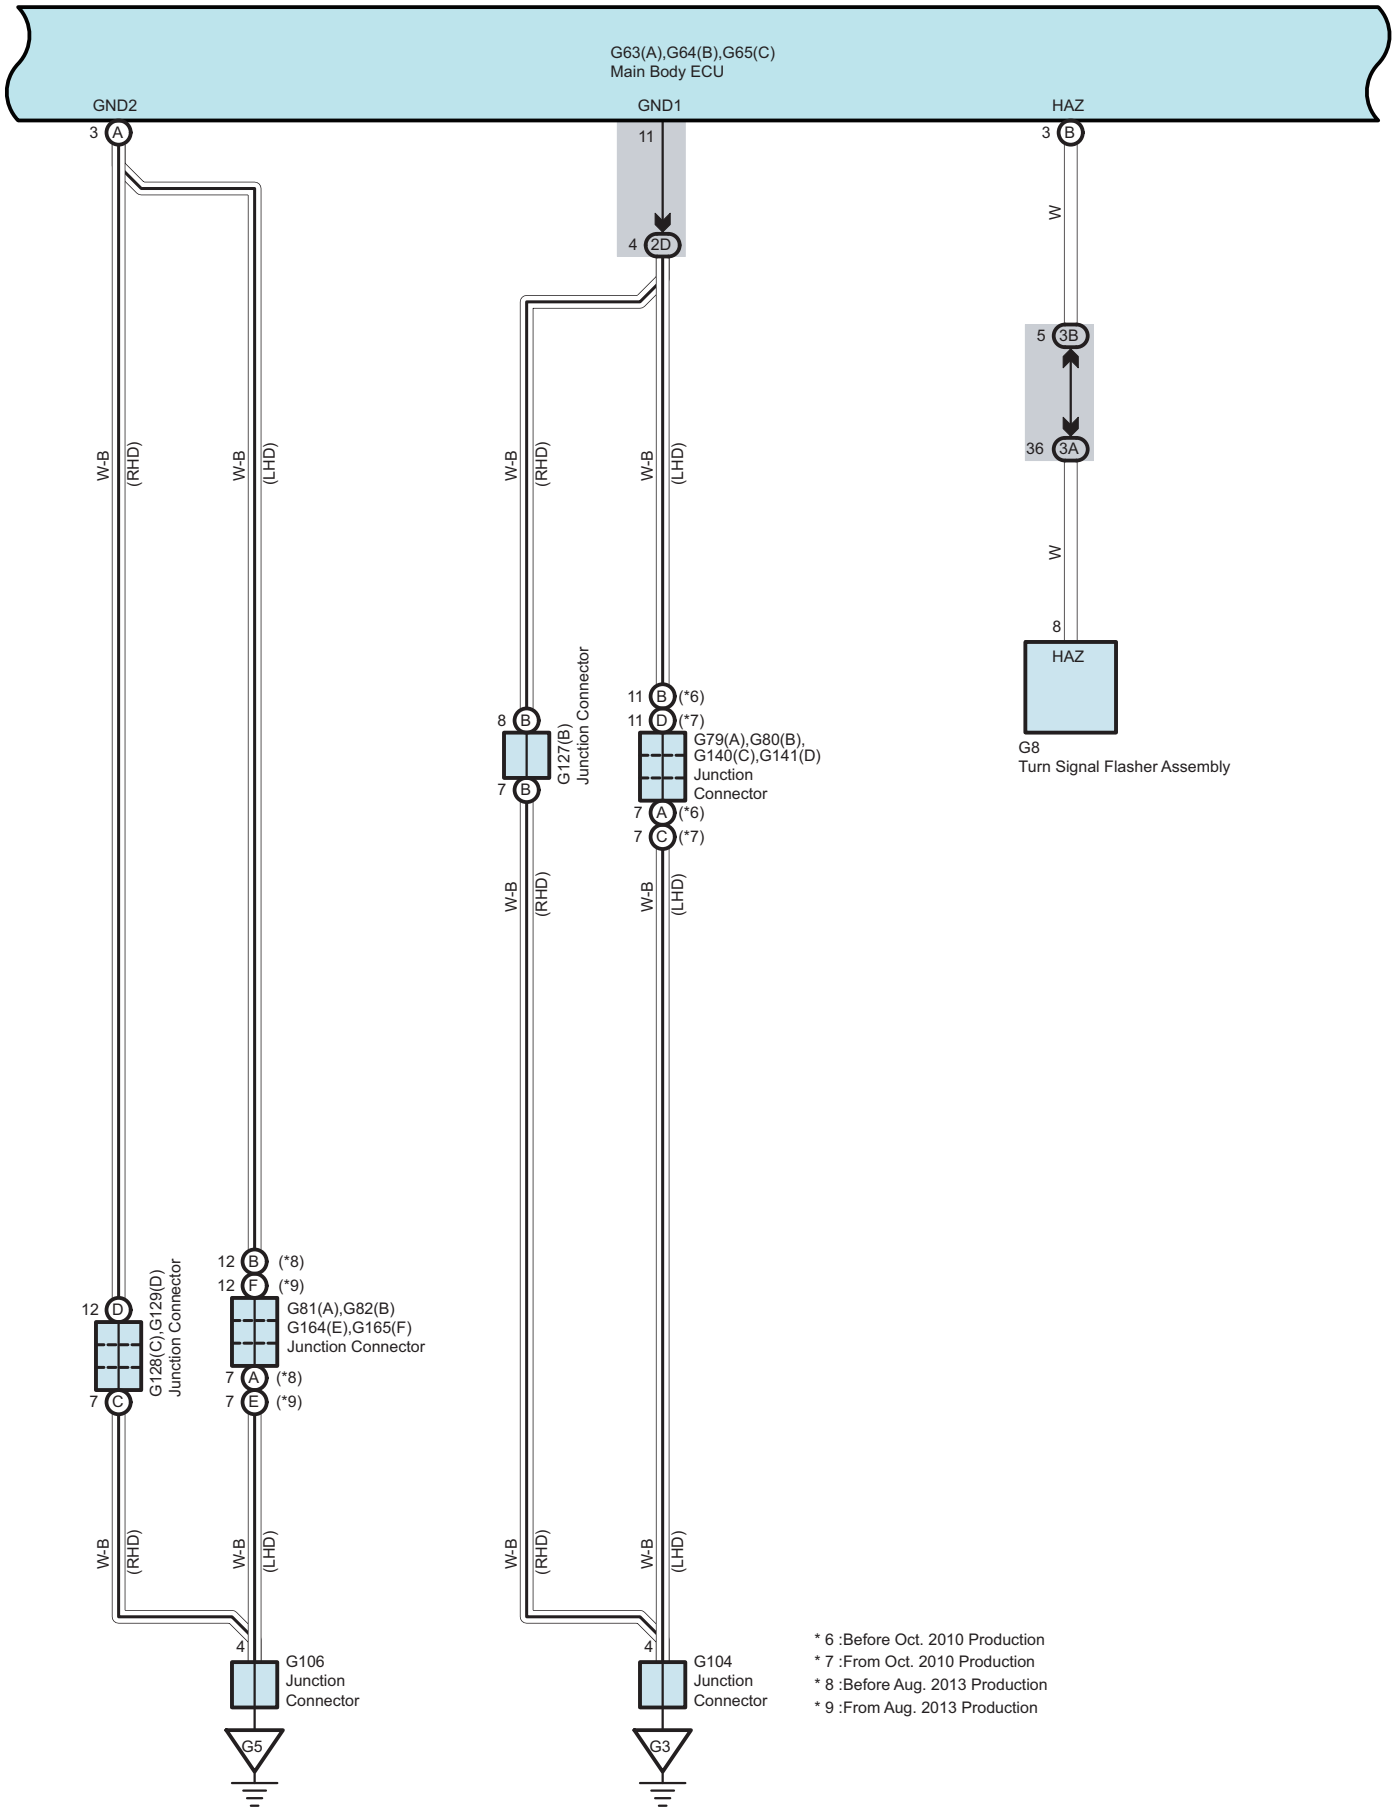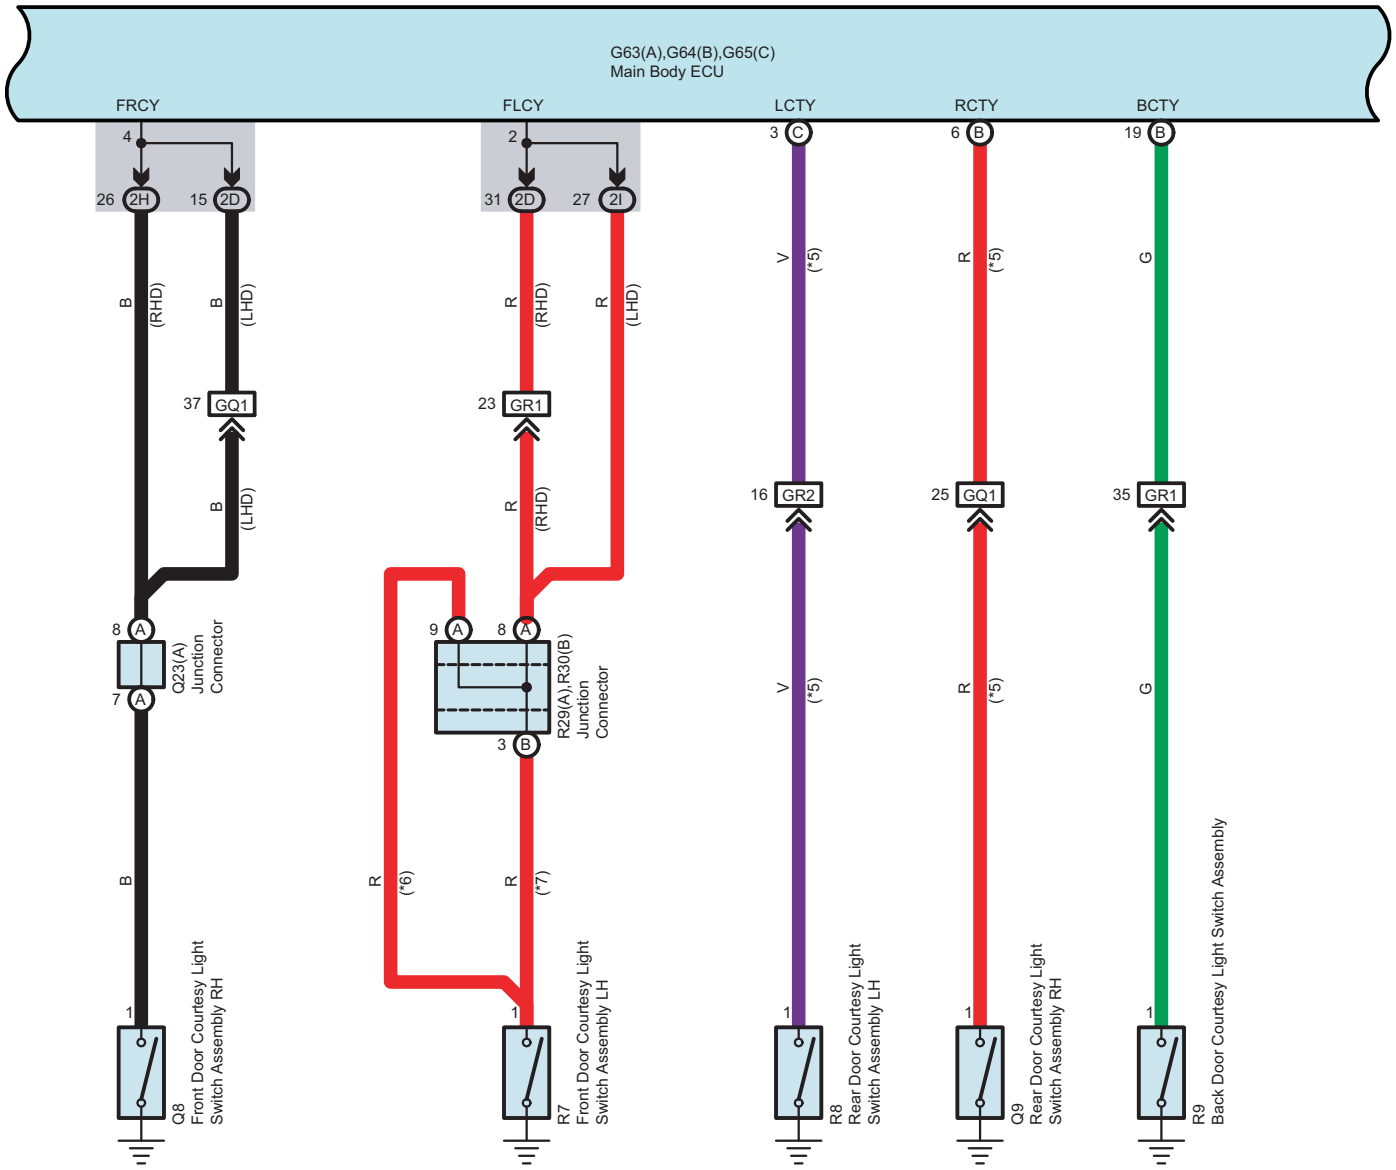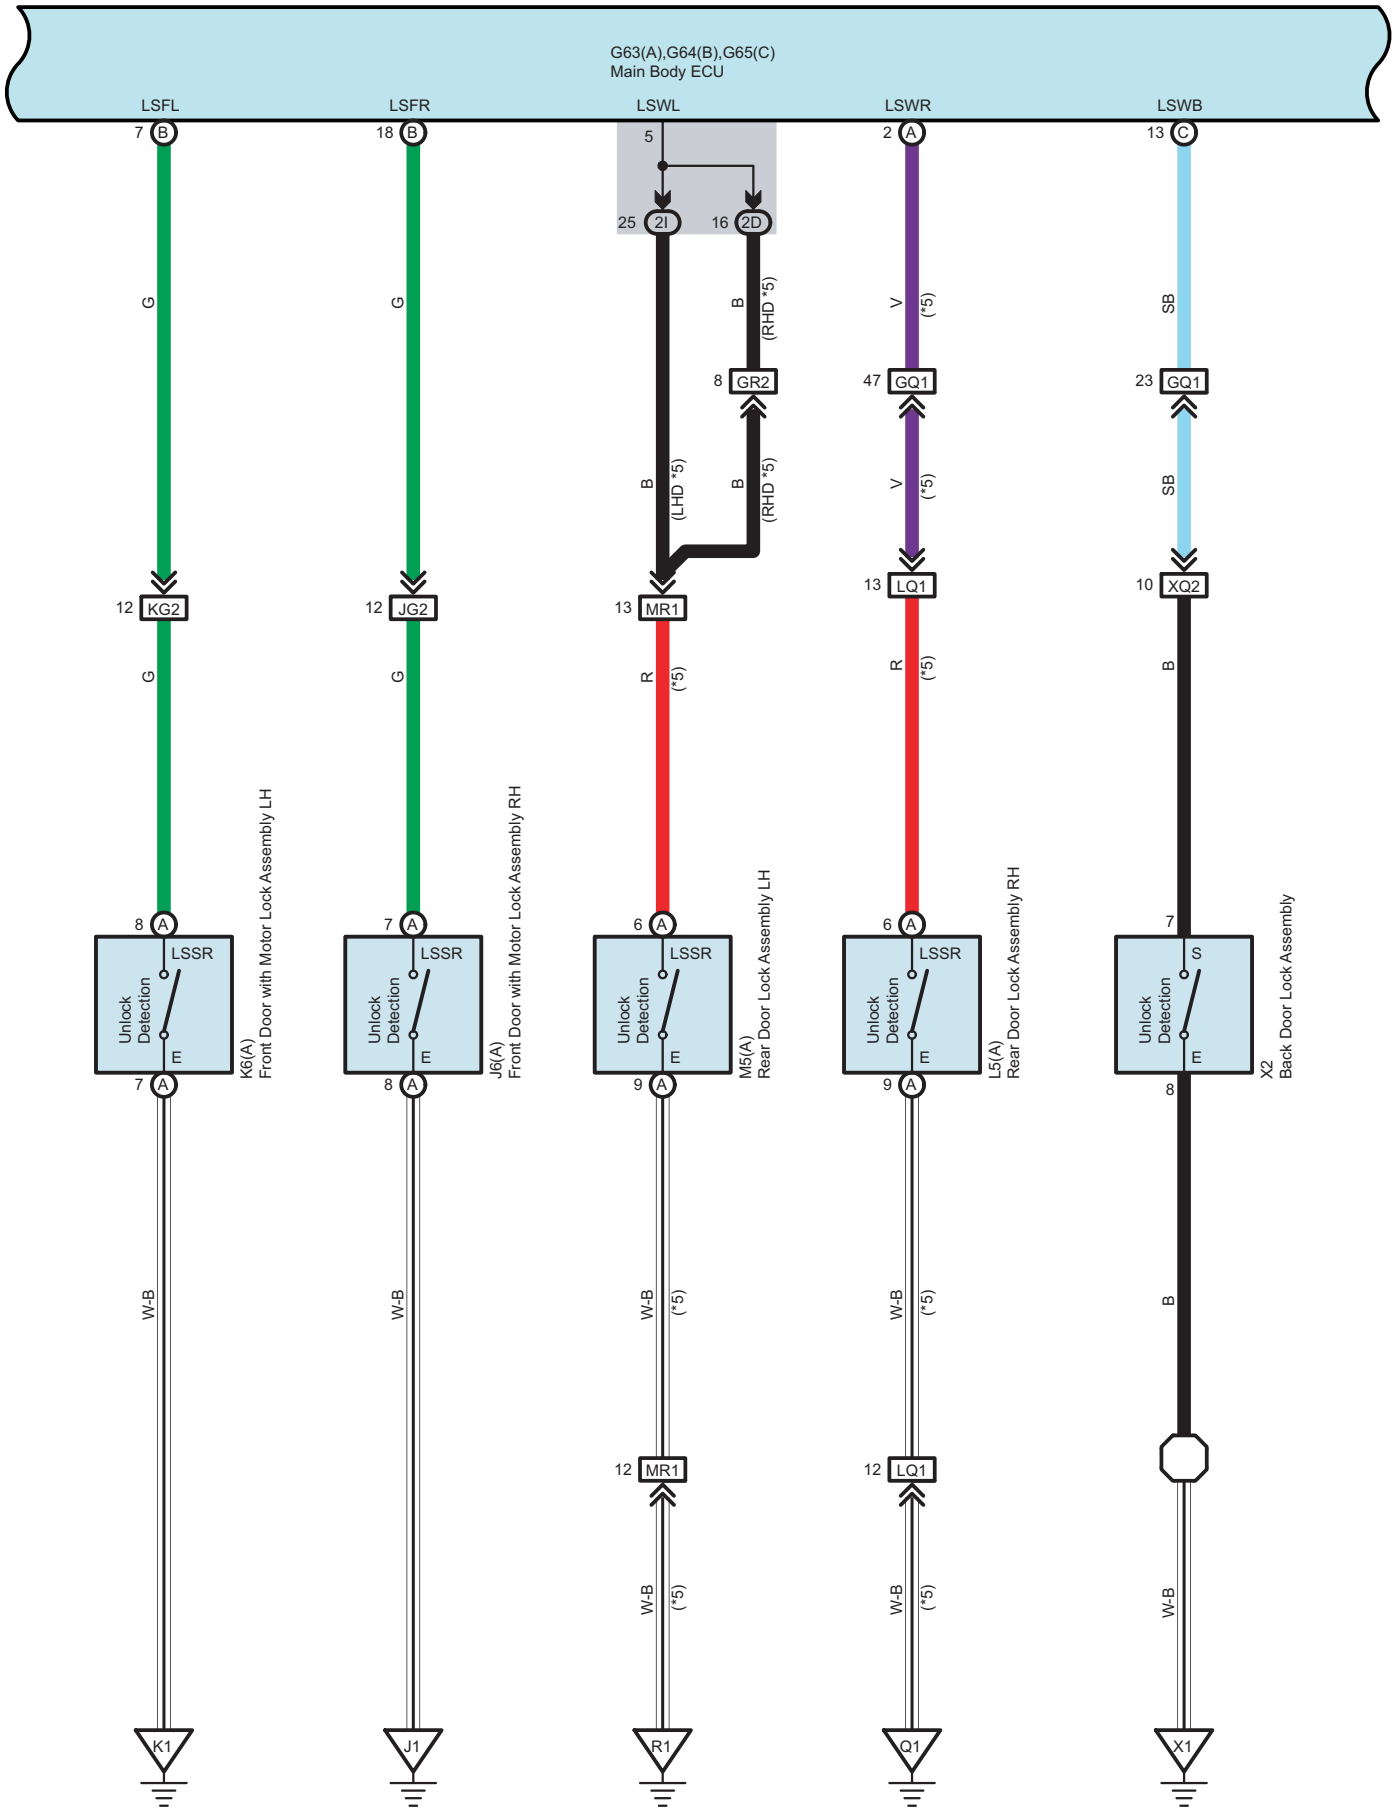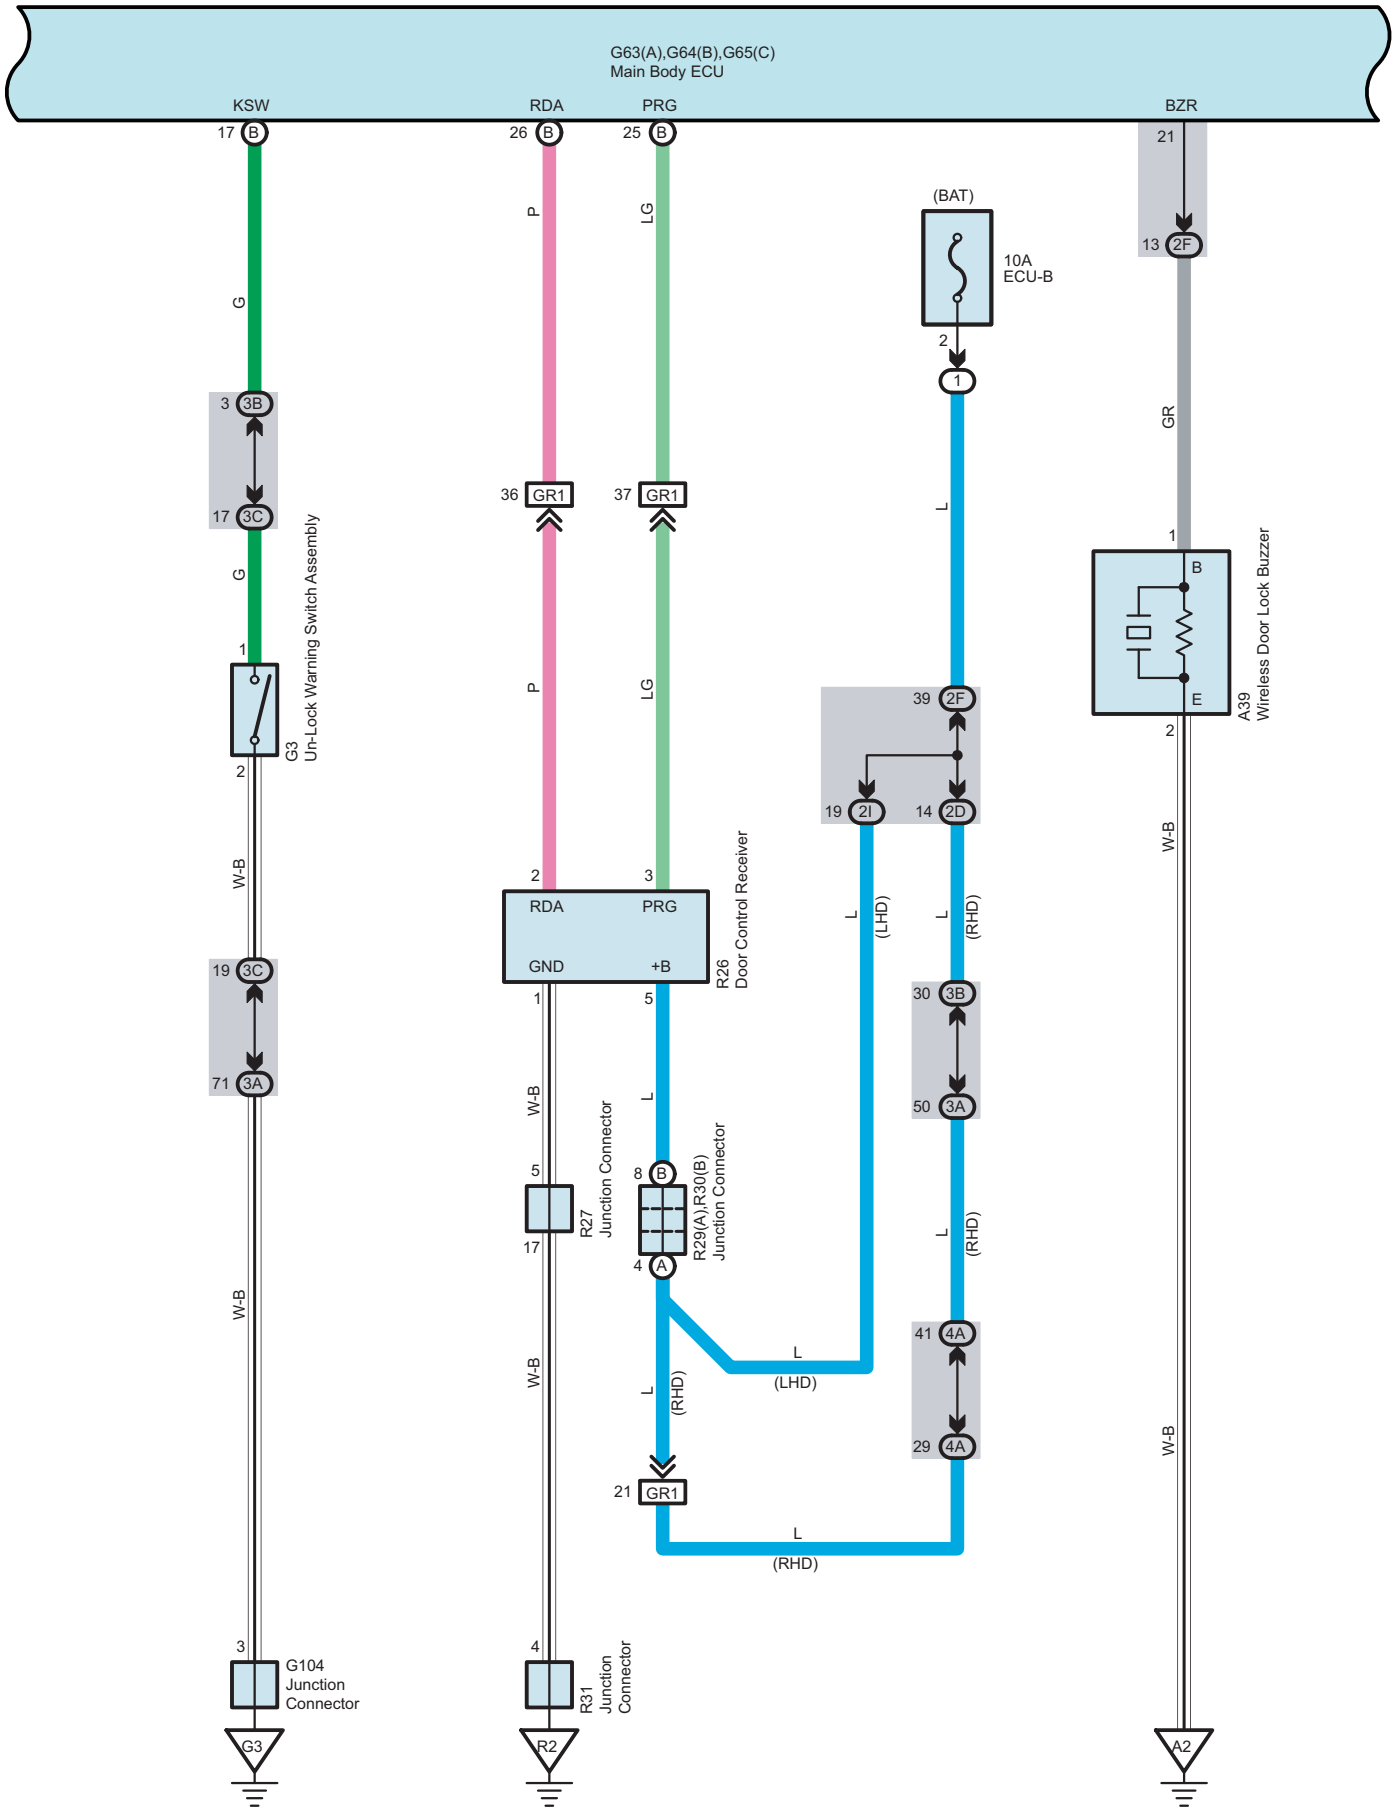



* 5 :5-Door
* 6 :Before Oct. 2010 Production
* 7 :From Oct. 2010 Production


G63(A),G64(B),G65(C)
Main Body ECU
LSFL
LSFR
LSWL
LSWR
LSWB
7 B
18 B
5
25 2I
16 2D
2 A
13 C
G
B (RHD *5)
V (*5)
SB
8 GR2
47 GQ1
23 GQ1
B (LHD *5)
B (RHD *5)
V (*5)
SB
12 KG2
12 JG2
13 MR1
13 LQ1
10 XQ2
G
G
R (*5)
R (*5)
B
8 A
7 A
6 A
6 A
7
LSSR
Unlock Detection
E
S
7 A
8 A
9 A
9 A
8
K6(A)
Front Door with Motor Lock Assembly LH
J6(A)
Front Door with Motor Lock Assembly RH
M5(A)
Rear Door Lock Assembly LH
L5(A)
Rear Door Lock Assembly RH
X2
Back Door Lock Assembly
W-B
W-B
W-B (*5)
W-B (*5)
B
12 MR1
12 LQ1
W-B (*5)
W-B (*5)
W-B
K1
J1
R1
Q1
X1



G63(A),G64(B),G65(C)
Main Body ECU
KSW
RDA
PRG
BZR
17 B
26 B
25 B
21
(BAT)
10A
ECU-B
13 2F
2
1
G
P
LG
GR
L
3 3B
17 3C
36 GR1
37 GR1
1
B
E
A39
Wireless Door Lock Buzzer
G3
Un-Lock Warning Switch Assembly
2
39 2F
19 2I
14 2D
W-B
2
3
RDA
PRG
GND
+B
R26
Door Control Receiver
(LHD)
(RHD)
1
5
30 3B
50 3A
19 3C
71 3A
W-B
5
8 B
17
4 A
R27
Junction Connector
R29(A),R30(B)
Junction Connector
41 4A
29 4A
21 GR1
3
4
G104
Junction
Connector
R31
Junction
Connector
G3
R2
A2

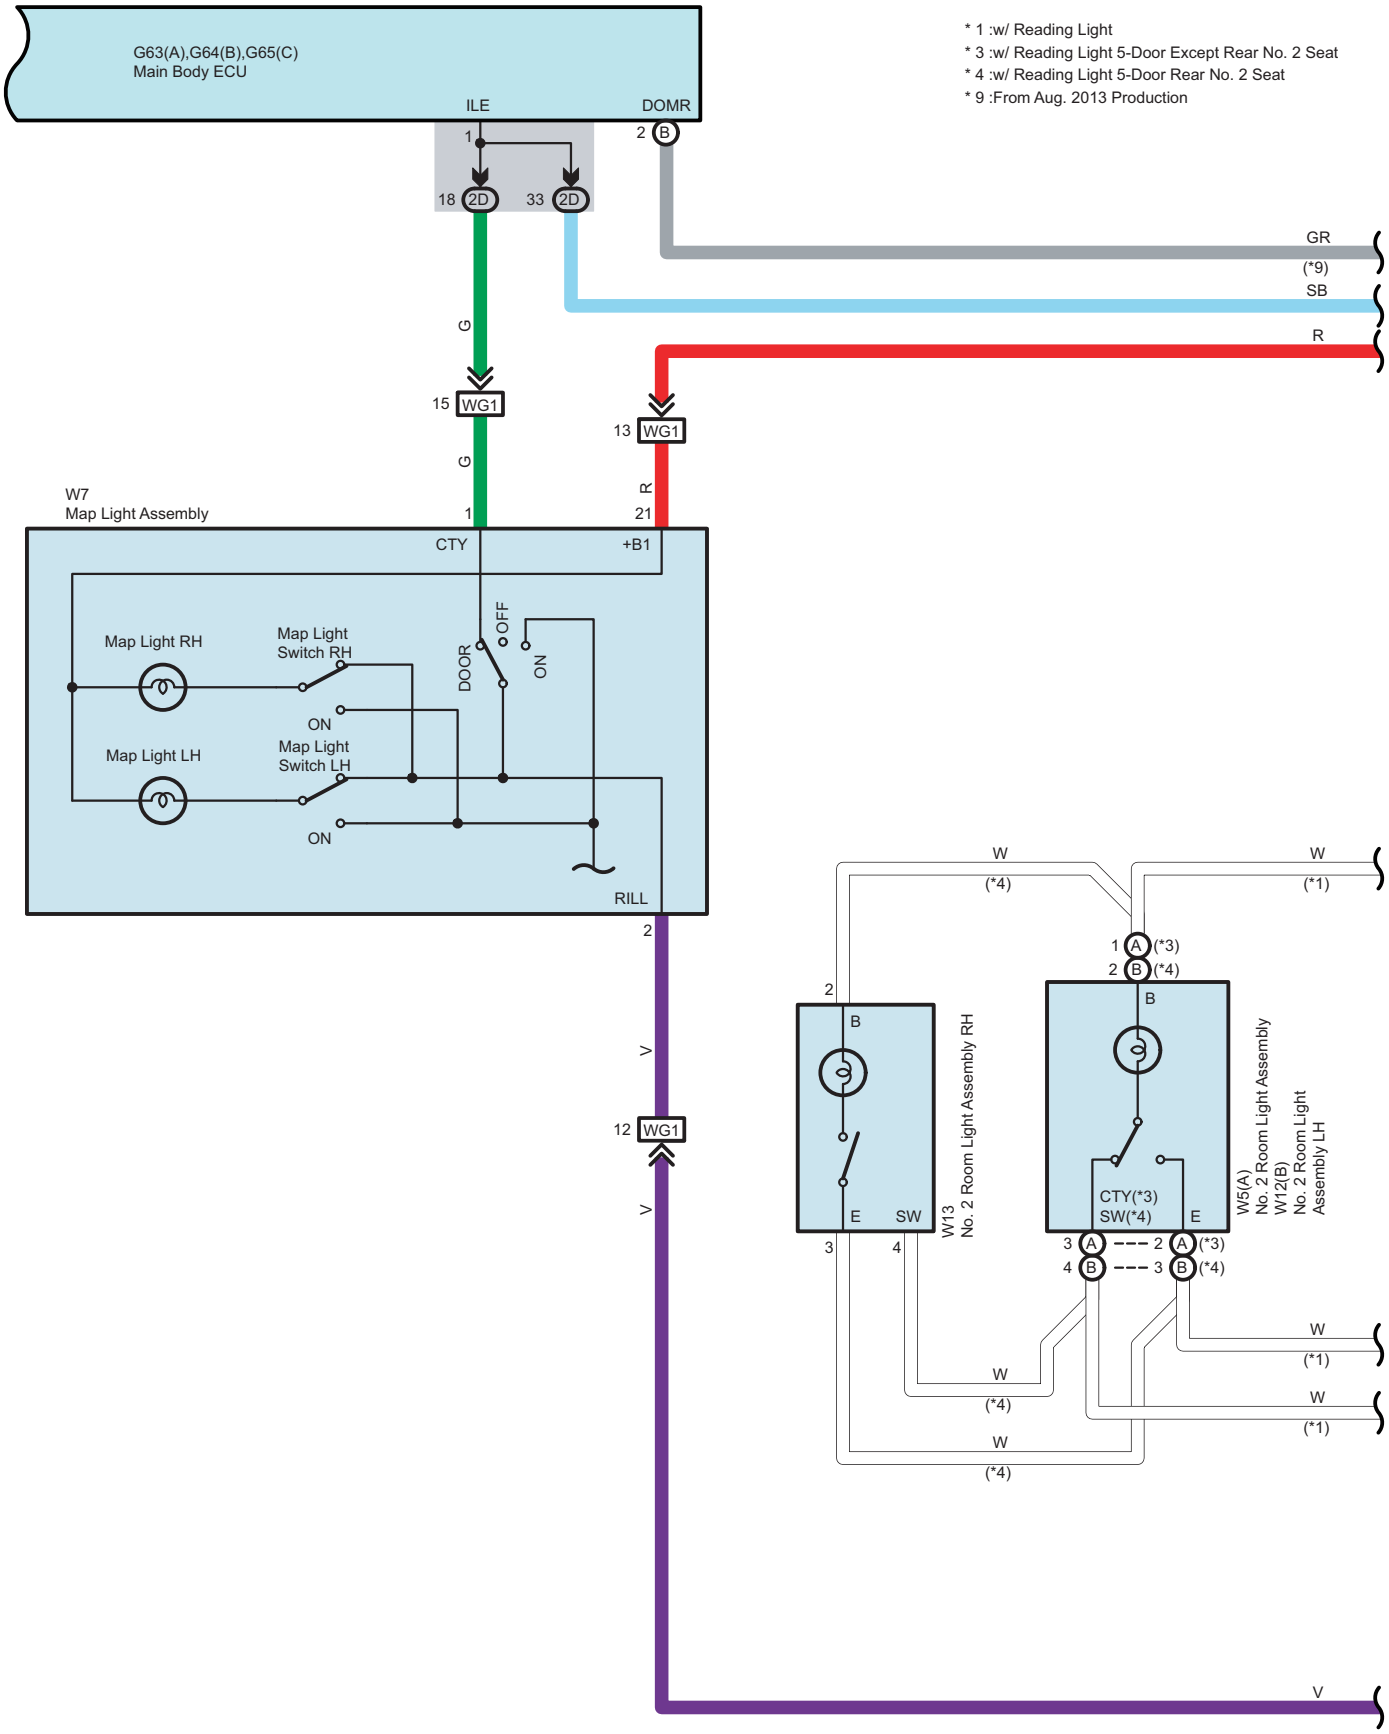
G63(A),G64(B),G65(C)
Main Body ECU
ILE
DOMR
1
2
B
18
2D
33
2D
* 1 :w/ Reading Light
* 3 :w/ Reading Light 5-Door Except Rear No. 2 Seat
* 4 :w/ Reading Light 5-Door Rear No. 2 Seat
* 9 :From Aug. 2013 Production
GR
(*9)
SB
R
G
15
WG1
13
WG1
G
R
W7
Map Light Assembly
1
21
CTY
+B1
Map Light RH
Map Light
Switch RH
DOOR
OFF
ON
ON
Map Light LH
Map Light
Switch LH
ON
RILL
2
V
12
WG1
V
W
(*4)
W
(*1)
1
A
(*3)
2
B
(*4)
2
B
B
E
SW
W13
No. 2 Room Light Assembly RH
3
4
CTY(*3)
SW(*4)
E
W5(A)
No. 2 Room Light Assembly
W12(B)
No. 2 Room Light
Assembly LH
3
A
2
A
(*3)
4
B
3
B
(*4)
W
(*1)
W
(*4)
W
(*1)
W
(*4)
V

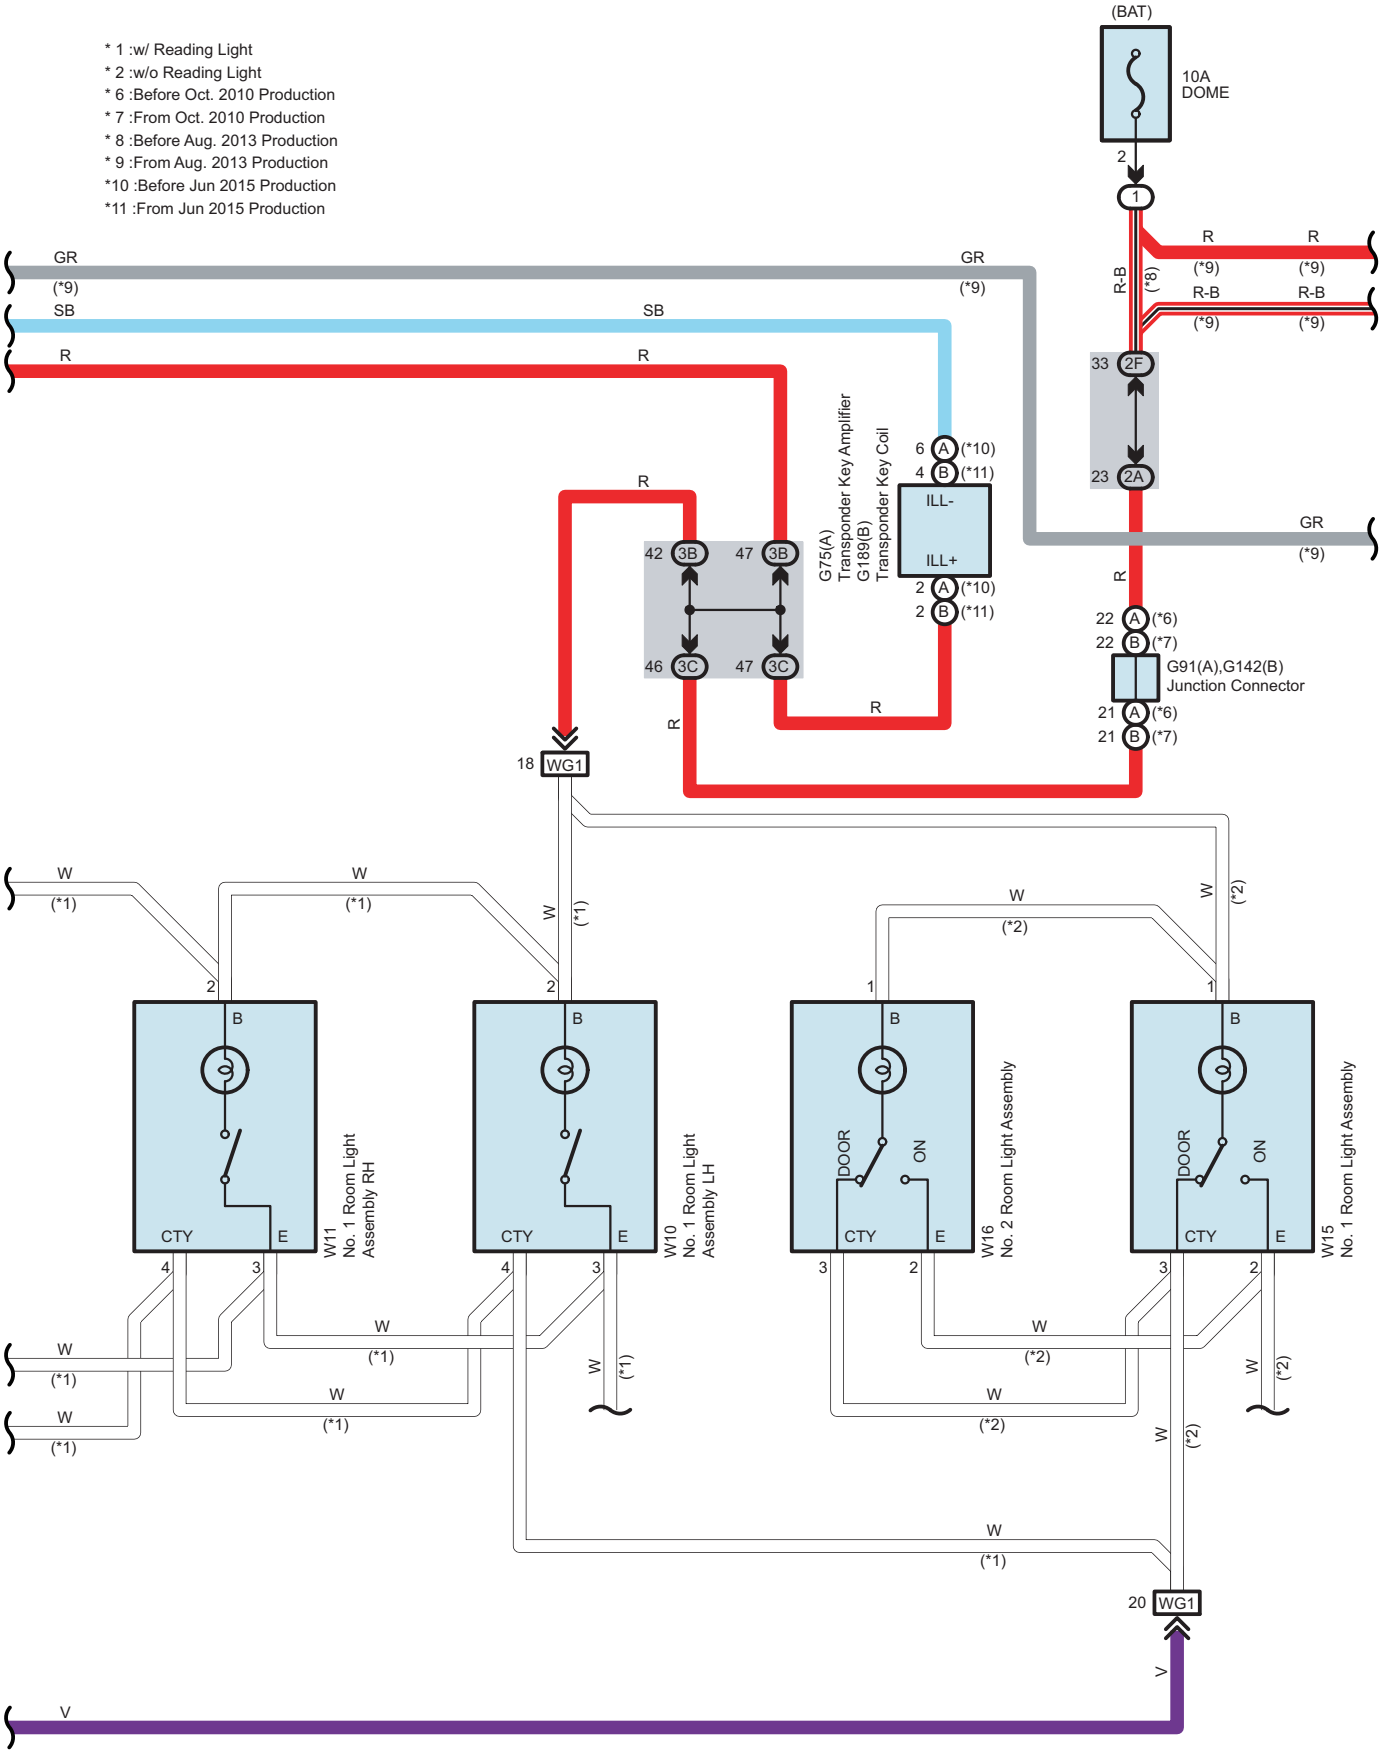

* 1 :w/ Reading Light
* 2 :w/o Reading Light
* 6 :Before Oct. 2010 Production
* 7 :From Oct. 2010 Production
* 8 :Before Aug. 2013 Production
* 9 :From Aug. 2013 Production
*10 :Before Jun 2015 Production
*11 :From Jun 2015 Production
(BAT)
10A
DOME
GR
SB
R
R-B
W
V
G75(A)
Transponder Key Amplifier
G189(B)
Transponder Key Coil
ILL-
ILL+
G91(A),G142(B)
Junction Connector
W11
No. 1 Room Light
Assembly RH
W10
No. 1 Room Light
Assembly LH
W16
No. 2 Room Light Assembly
W15
No. 1 Room Light Assembly
DOOR
ON
CTY
E
B
WG1

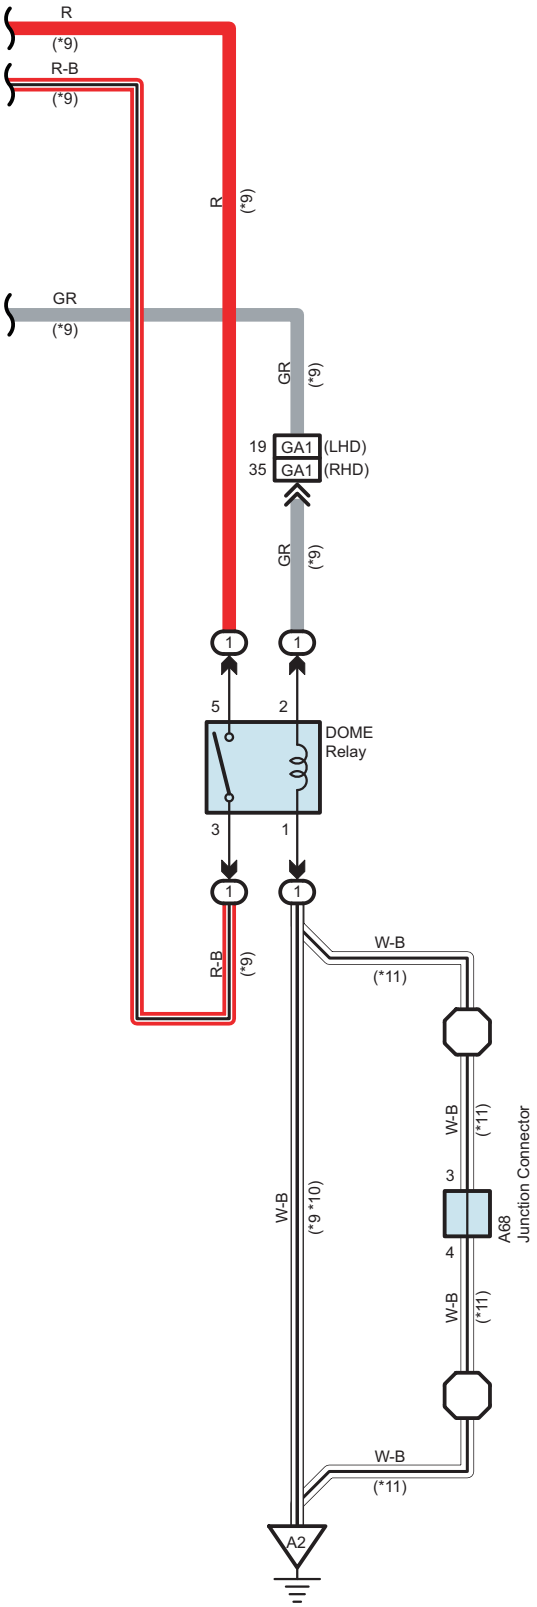
R
(*9)
R-B
(*9)
R
(*9)
GR
(*9)
GR
(*9)
19
GA1
(LHD)
35
GA1
(RHD)
GR
(*9)
1
1
5
2
DOME
Relay
3
1
1
1
R-B
(*9)
W-B
(*11)
W-B
(*11)
3
A68
Junction Connector
4
W-B
(*11)
W-B
(*9 *10)
W-B
(*11)
A2

A39
Gray

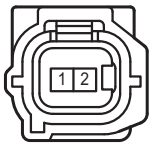

A68
Dark Gray

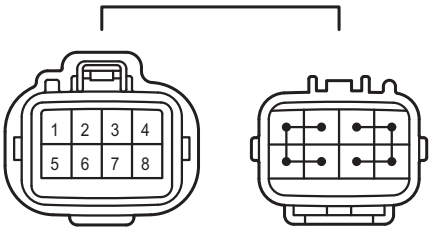


G3
White




G8
Black




G63
White

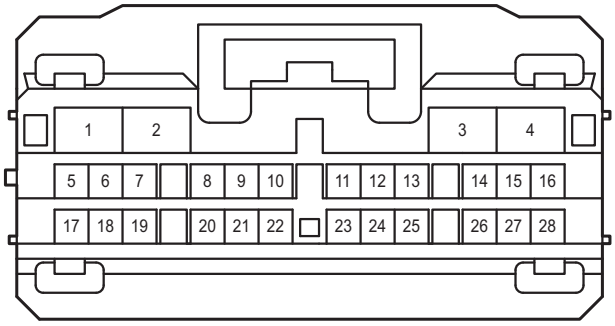


G64
White

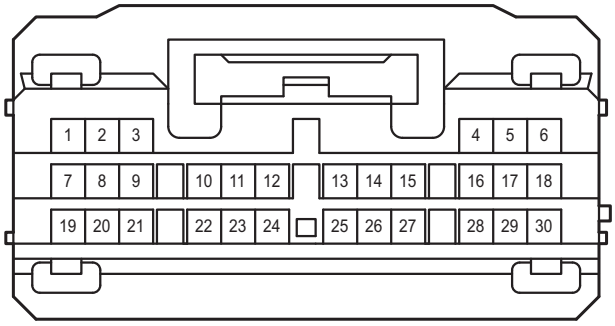


G65
White

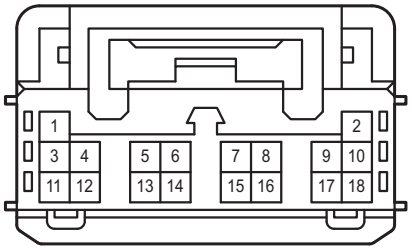


G75
Black

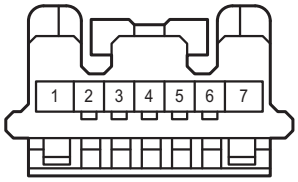


G79
White

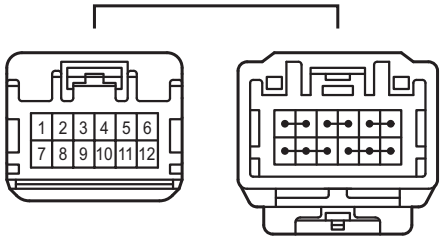


G80
White

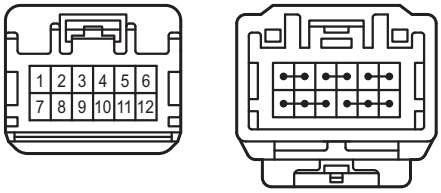


G81
White

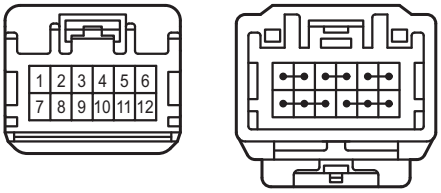


G82
White

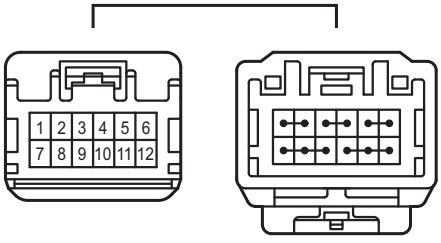


G91
Gray

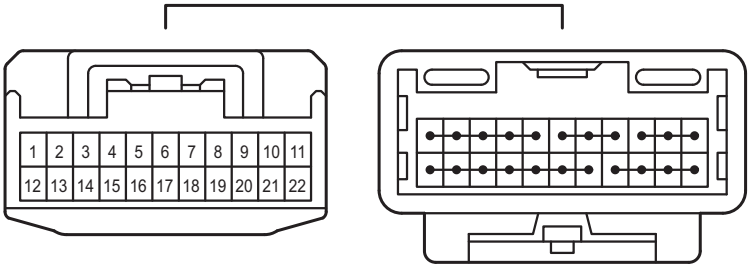


G104
White

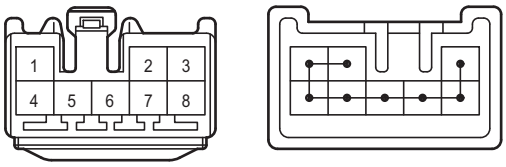


G106
White

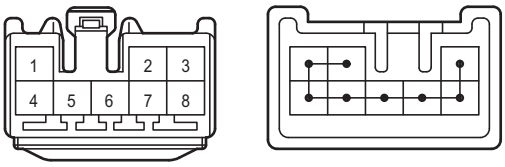


G127
Black

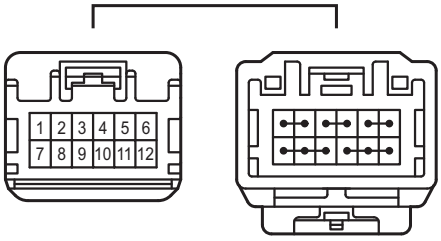


G128
Black

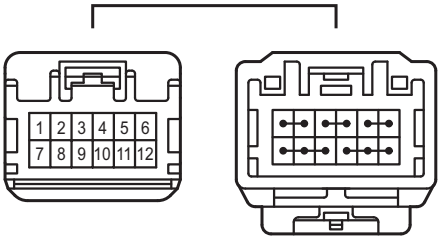


G129
Black

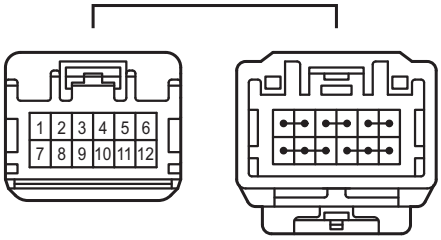


G140
Black

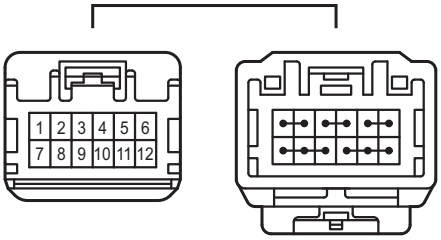


G141
Black

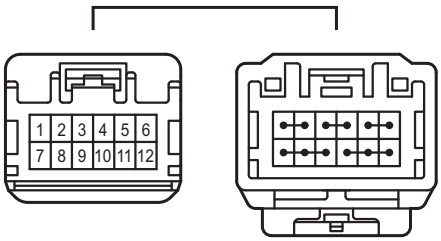


G142
White

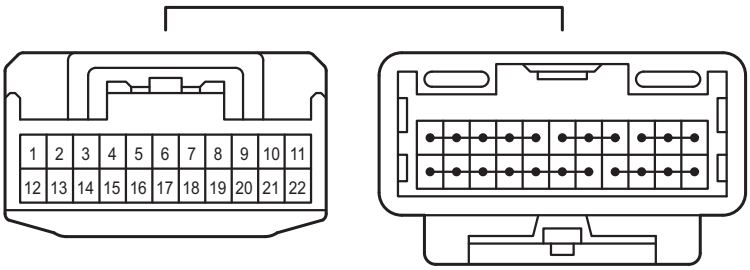


G164
Black

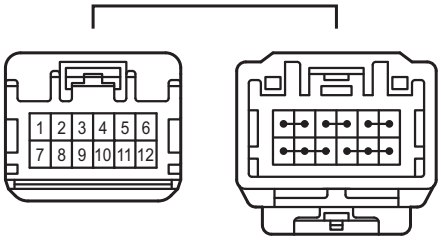


G165
Black

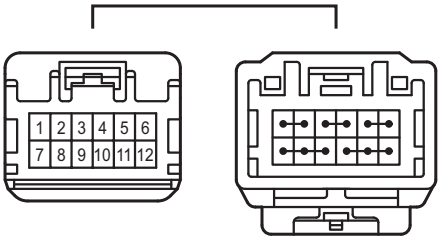


G189
Black

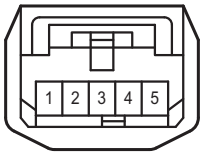


J6
White

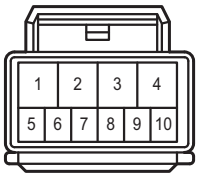


K6
White

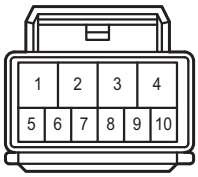

L5
White

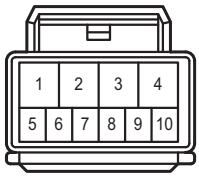

M5
White

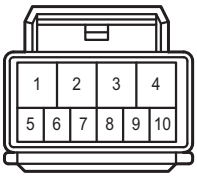


Q8
Black



Q9
White



Q23
White

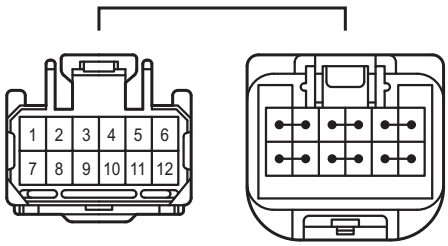

R7
Black




R8
White




R9
Black




R26
White

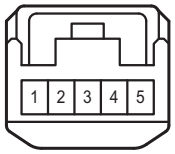


R27
Dark Gray

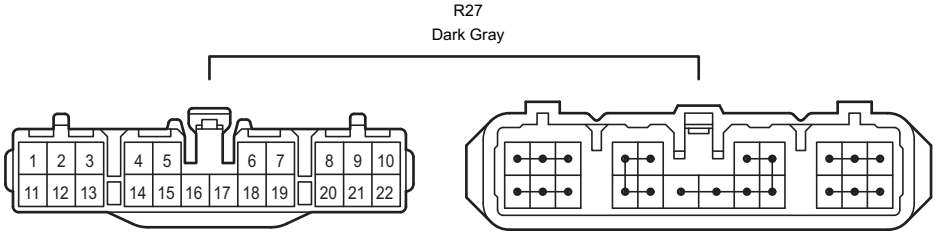


R29
Blue

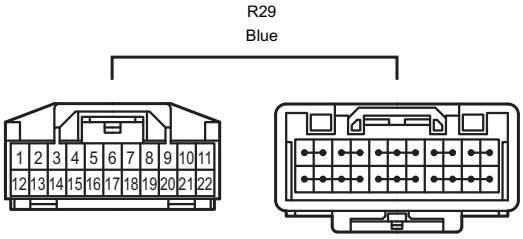


R30
Blue

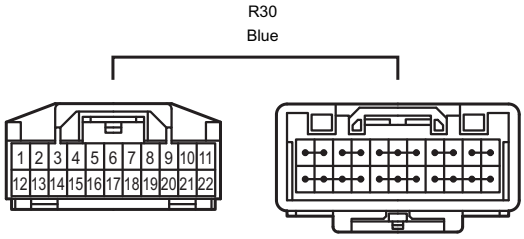


R31
White

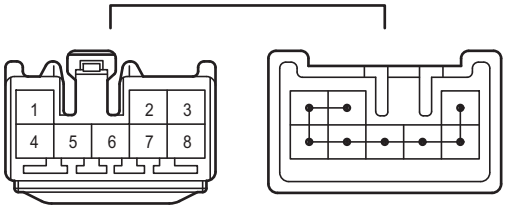


W5
Gray




W7
White

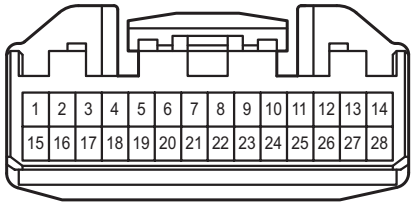


W10
Gray




W11
Gray




W12
Gray




W13
Gray




W15
Gray




W16
Gray




X2
White

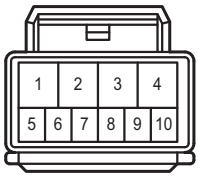


2 A
White

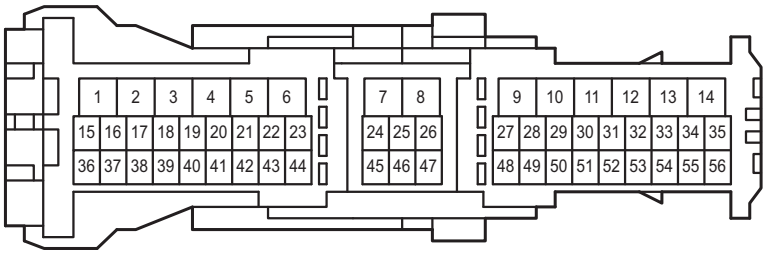


2 D
White

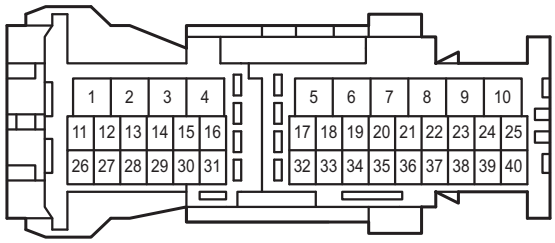


2 F
White

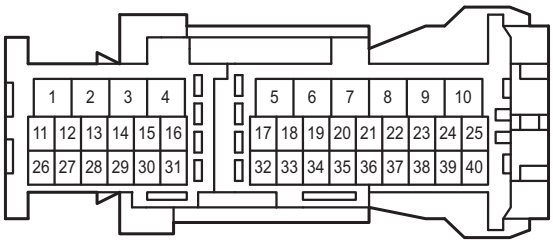


2 H
White

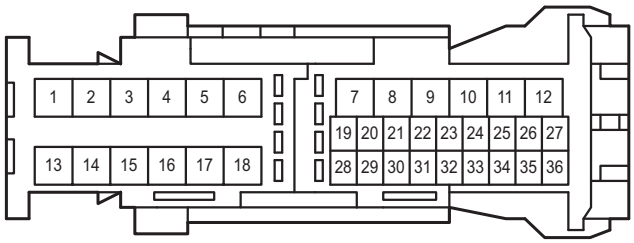


2 I
White

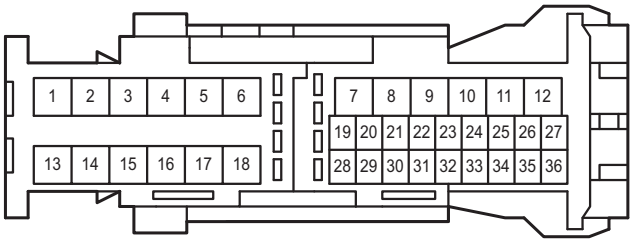


3 A
White

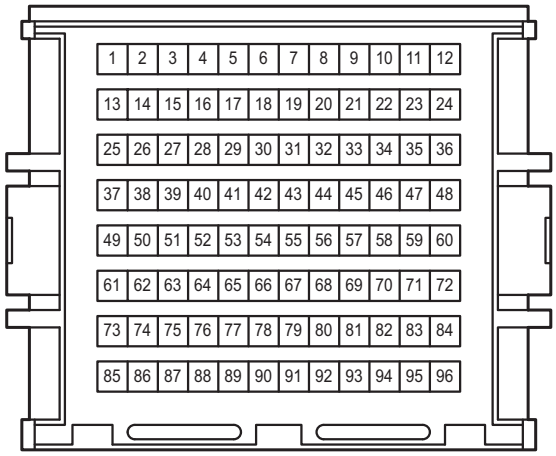


3 B
White

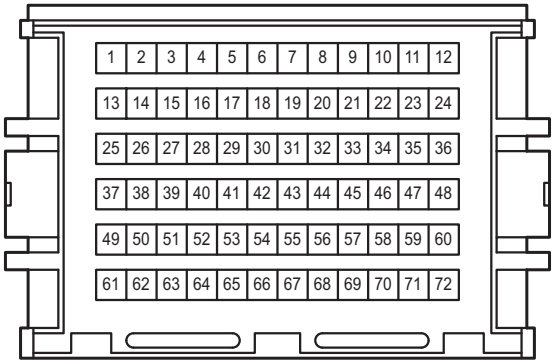


3 C
White

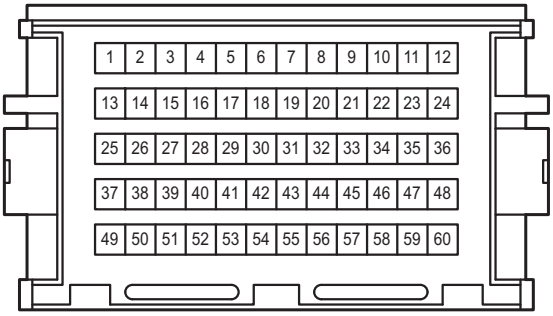


4 A
White

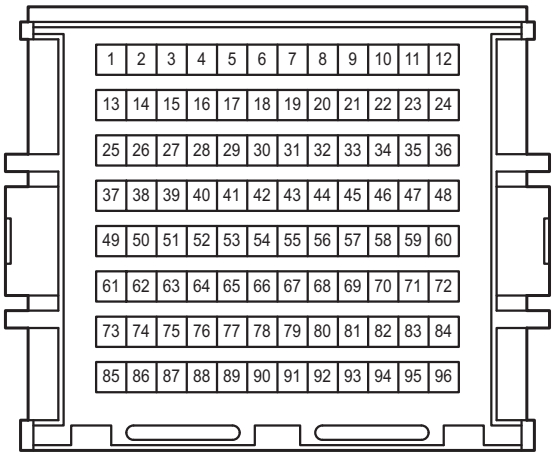

GA1
White

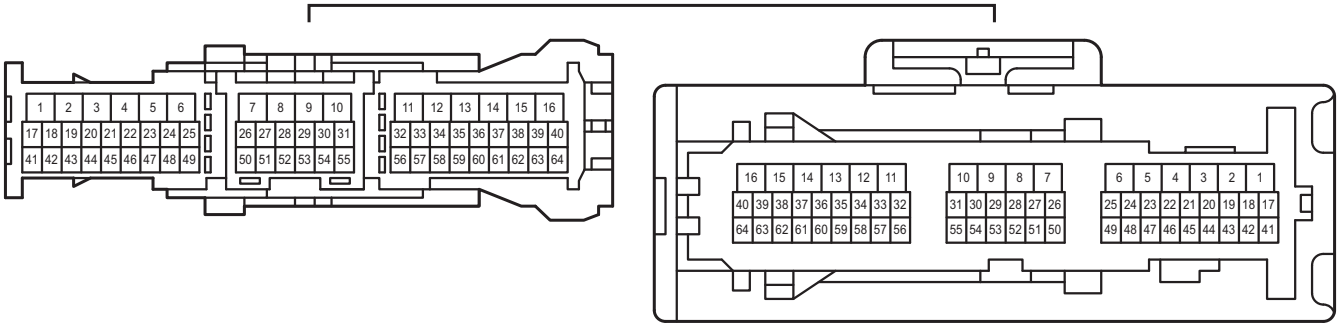


GQ1
White

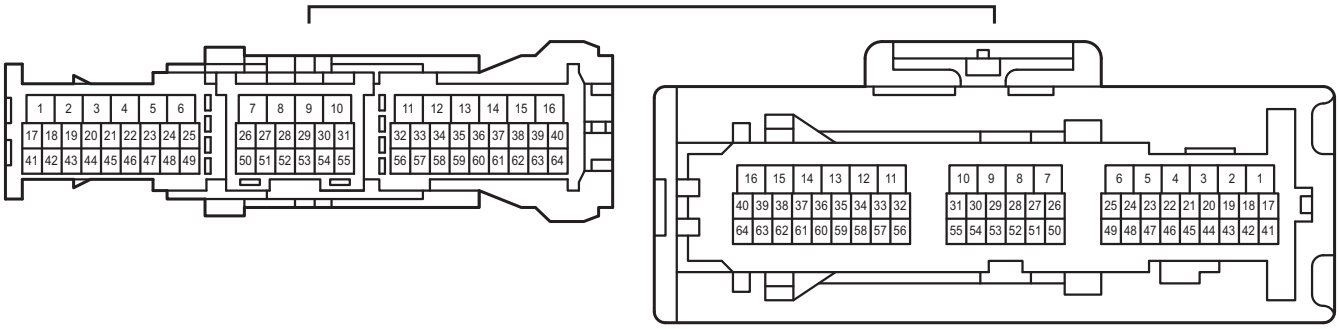


GR1

White

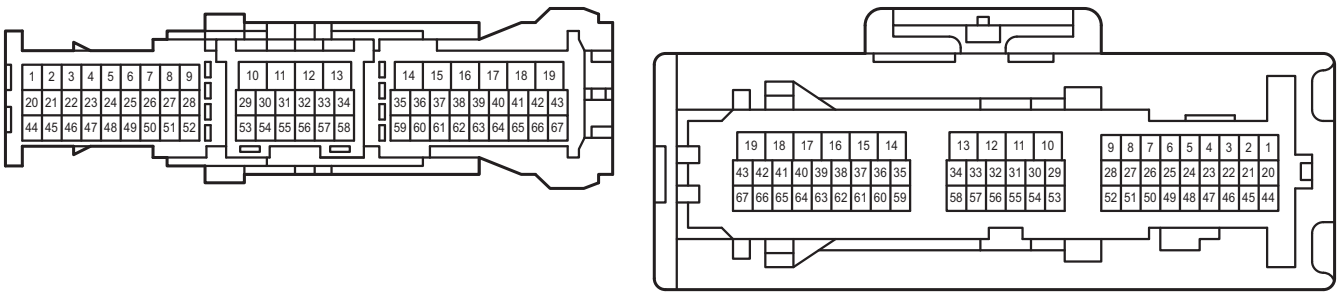


GR2

Gray

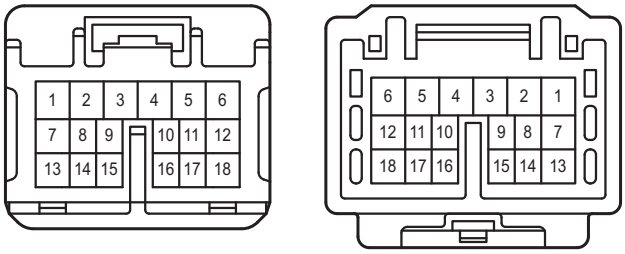


JG2

White

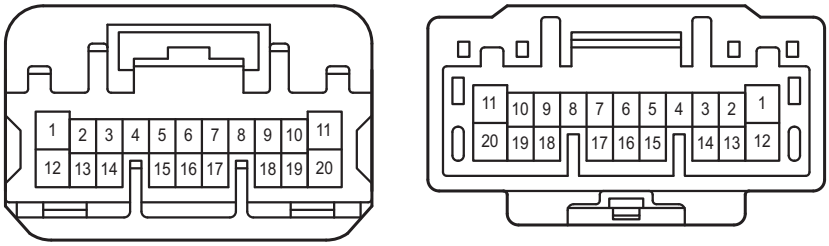


KG2


White

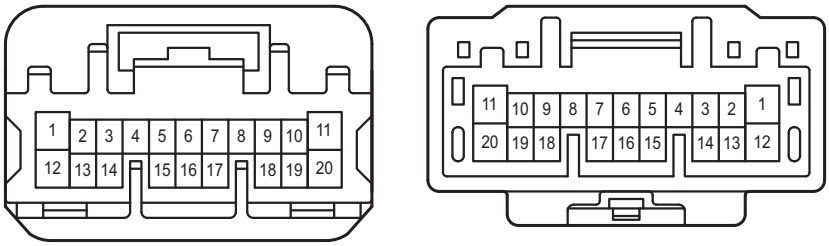


LQ1
White

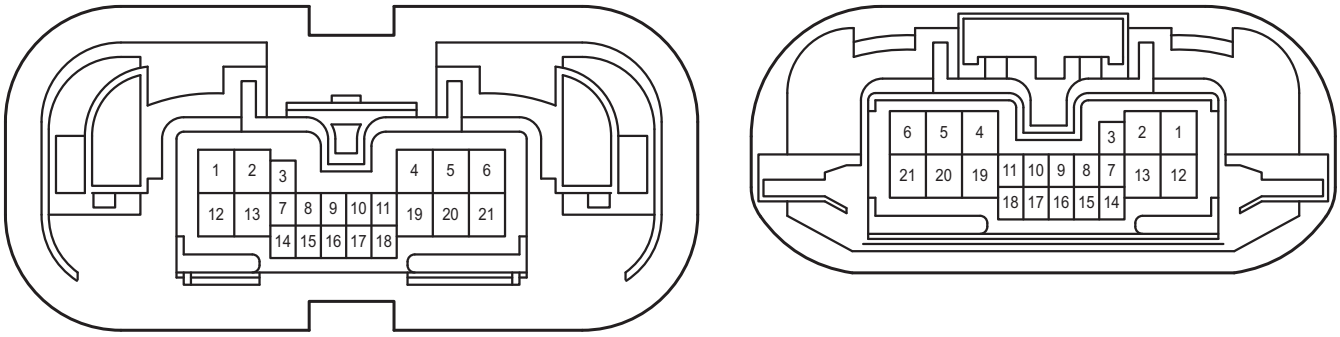

MR1
White

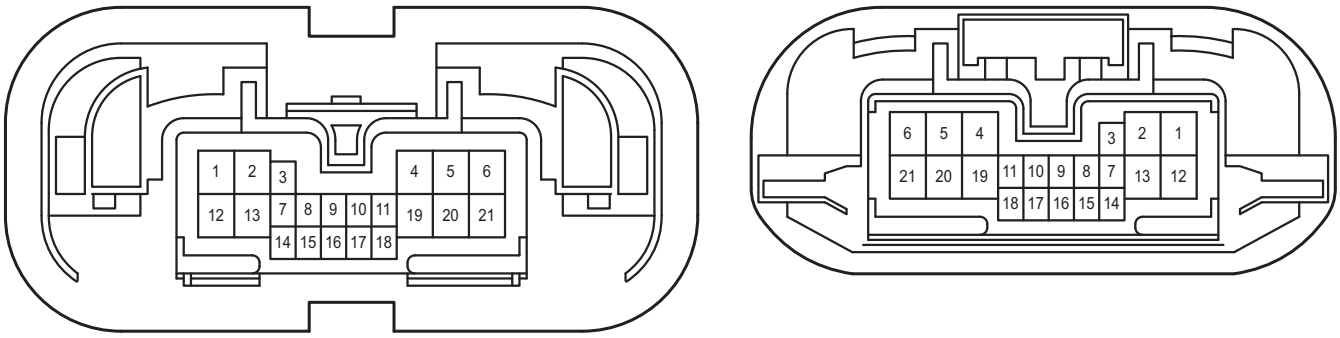

WG1
White

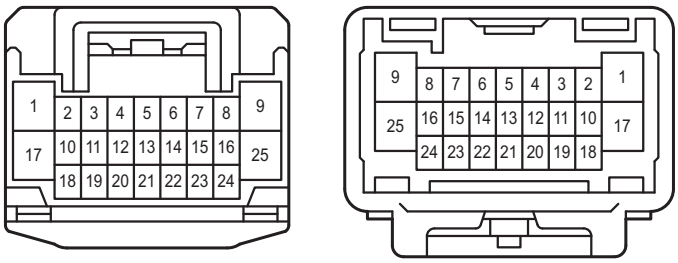

XQ2
White

