





* 1 :1GR-FE
* 2 :2TR-FE
* 3 :1KD-FTV
* 4 :5L-E
* 5 :w/ Parking Assist ECU
* 6 :w/ Clearance Warning ECU Assembly
GR
W
P
W
H4
Display & Navigation Module Display
G48
DLC3
G63(A),G64(B)
Main Body ECU
CANH
CANL
CANN
CANP
G132
Junction Connector
G95
Junction Connector
A72
Junction Connector
G1(A)
Airbag Sensor Assembly
G33
Steering Sensor
A6
Brake Actuator Assembly
A7
Brake Actuator Assembly
A47(A),
A48(B)
Short Connector
G6(A)
Combination Meter Assembly
GH1
GA6
(*1, *3)
(*2, *4)


GR
W
P
W
GR
W
P
W
I1
Clearance Warning
ECU Assembly
I3(B)
Parking Assist ECU
G123
Stabilizer Control ECU
G118(B)
Seat Belt Control ECU
R2
R1
CANL
CANH
CANH
CANL
CANH
CANL
29
28
1
2
5
3
21
22
V
W
L
W
W
B
W
B
(*6)
(*6)
(*5)
(*5)
29
IG1
30
IG1
W
B
5
16
6
17
15
4
G95
Junction Connector
12
1
W
P
36
GA6
37
GA6
LG
W
(*1, *3)
(*1, *3)
(*1, *3)
(*1, *3)
3
2
12
1
CANH
CANL
A72
Junction Connector
G102
Junction Terminal
14
3
E
1
W-B
(*1, *3)
95
3A
71
3A
W
V
13
12
CANL
CANH
A58
Headlight Swivel ECU Assembly
W-B
(*1, *3)
P
W
3
G104
Junction Connector
G3



GR
W
P
W
GR
W
G76
Driving Support
Switch Control ECU
CANP
CANN
9
10
W-B
(*4)
G116
Multiplex Tilt
& Telescopic ECU
CANP
CANN
5
14
W
P
GR
W
W
(*9)
R
(*9)
R
(*8)
W
(*8)
15
4
3
14
2
13
G133
Junction Connector
G135
Junction Connector
13
2
6
17
5
16
15
4
3
14
W
L
LG
(*9)
W
(*9)
V(*8)
W
(*8)
V
(*8)
LG
(*8)
W
(*8)
W(*8)
W
(*9)
LG
(*9)
27
GQ1
26
GQ1
W
L
3
2
CANP
CANN
17
Qa1
16
Qa1
W
L
E
1
G103
Junction Terminal
7
B
8
B
CANN
CANP
W-B
W-B
(*4)
94
3A
70
3A
71
3A
W-B
a5(B)
Front Position Control
ECU and Switch Assembly RH
(Front Power Seat Switch RH)
P
W
P
W
3
G104
Junction
Connector
G3


* 1 :1GR-FE
* 2 :2TR-FE
* 3 :1KD-FTV
* 4 :5L-E
* 7 :Except 5L-E
* 8 :For production through approximately Jan. 2011
* 9 :For production from approximately Jan. 2011
GR
W
W-B
(*4)
C92(O),G56(F),G57(Q),G58(R),G60(L)
ECM
CANL
CANH
CANP
CANN
CAN+
CAN-
G101
Junction
Terminal
G70(B)
Transmission Control ECU Assembly
G98
Junction Connector
G134
Junction Connector
G52
Yaw Rate Sensor
Assembly
G46
Power Steering
ECU Assembly
G38(A)
Certification
ECU Assembly
G53(A)
Four Wheel Drive
Control ECU


* 1 :1GR-FE
* 2 :2TR-FE
* 3 :1KD-FTV
* 4 :5L-E

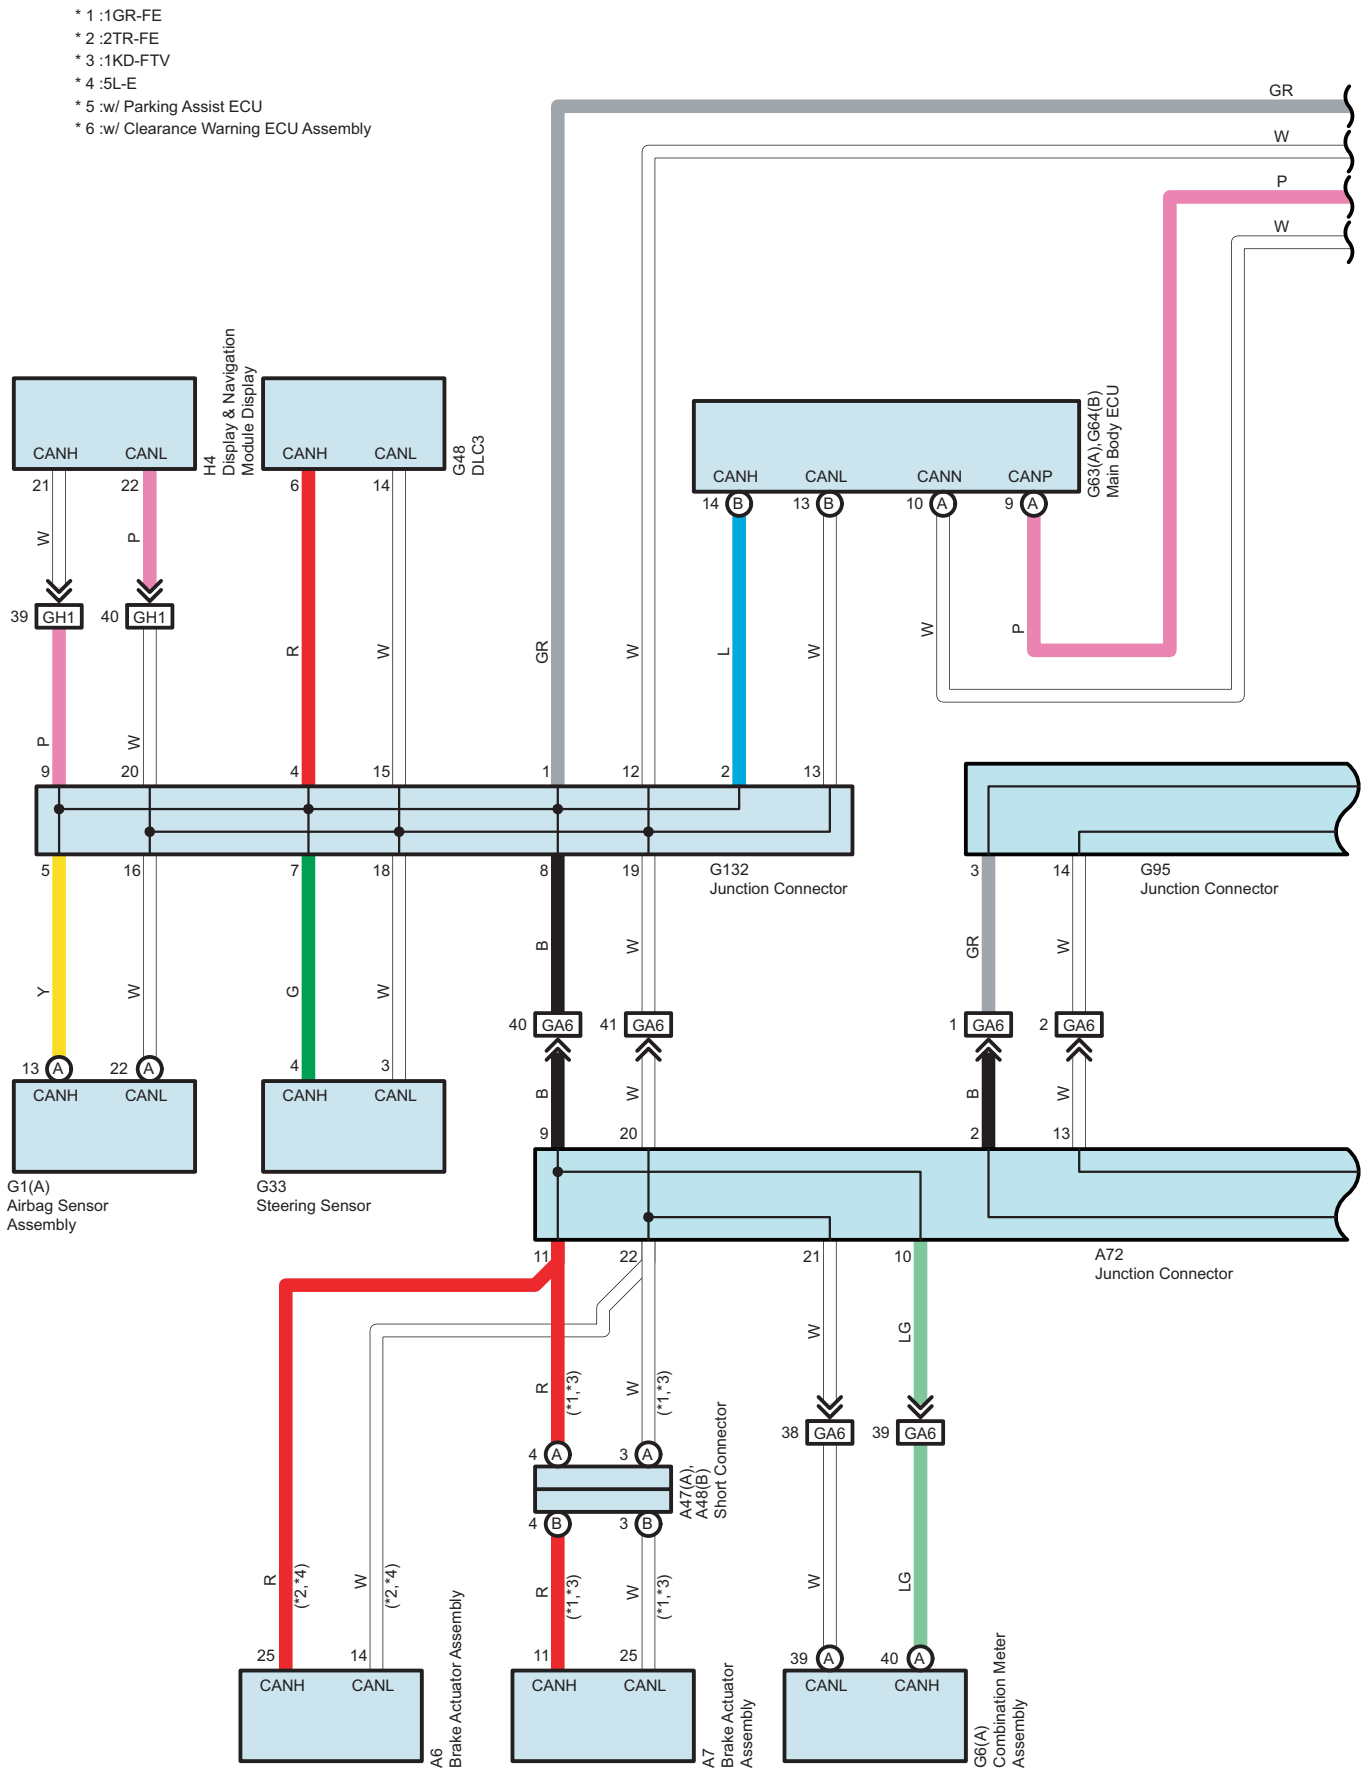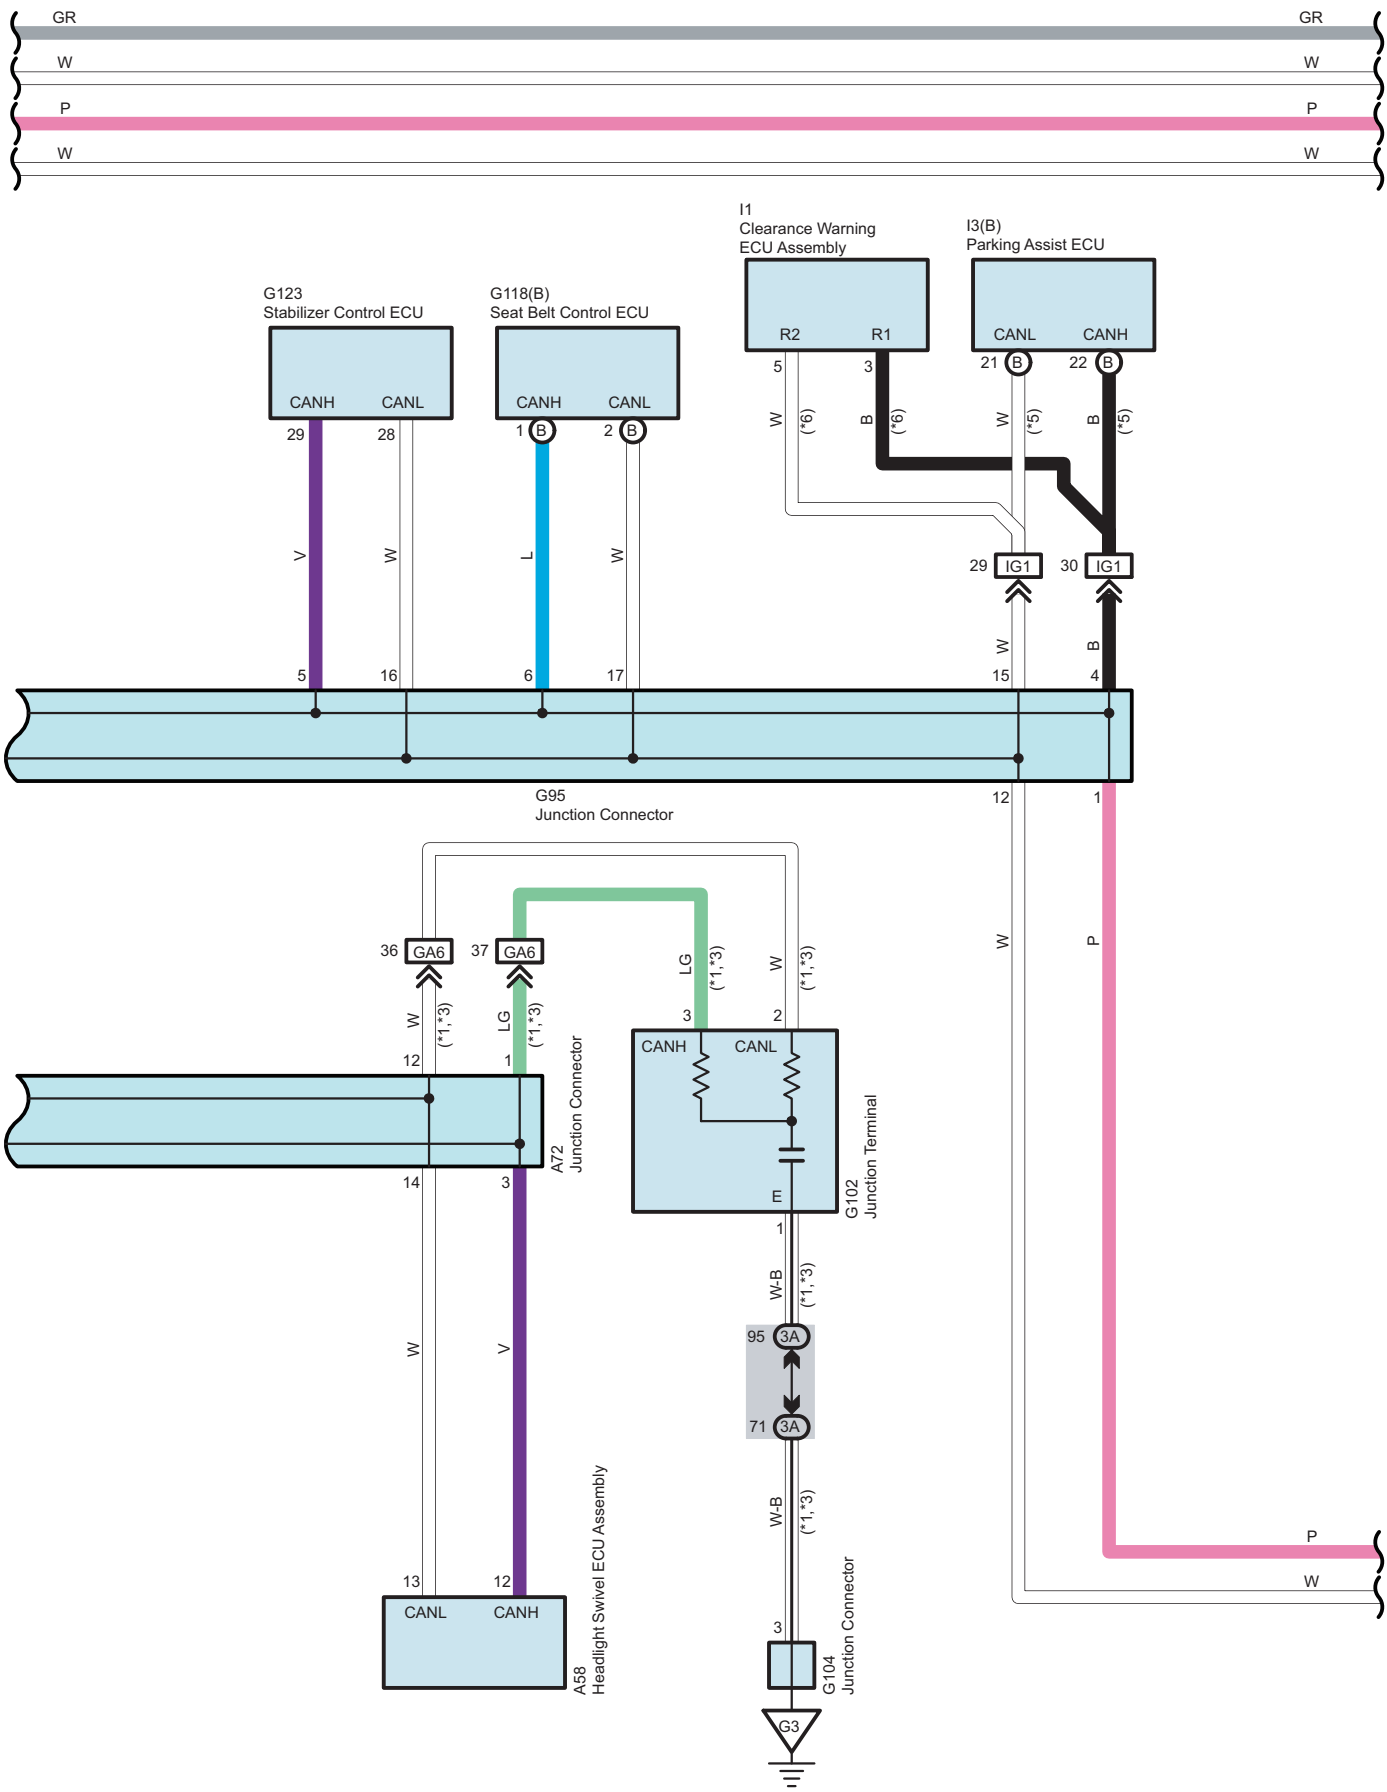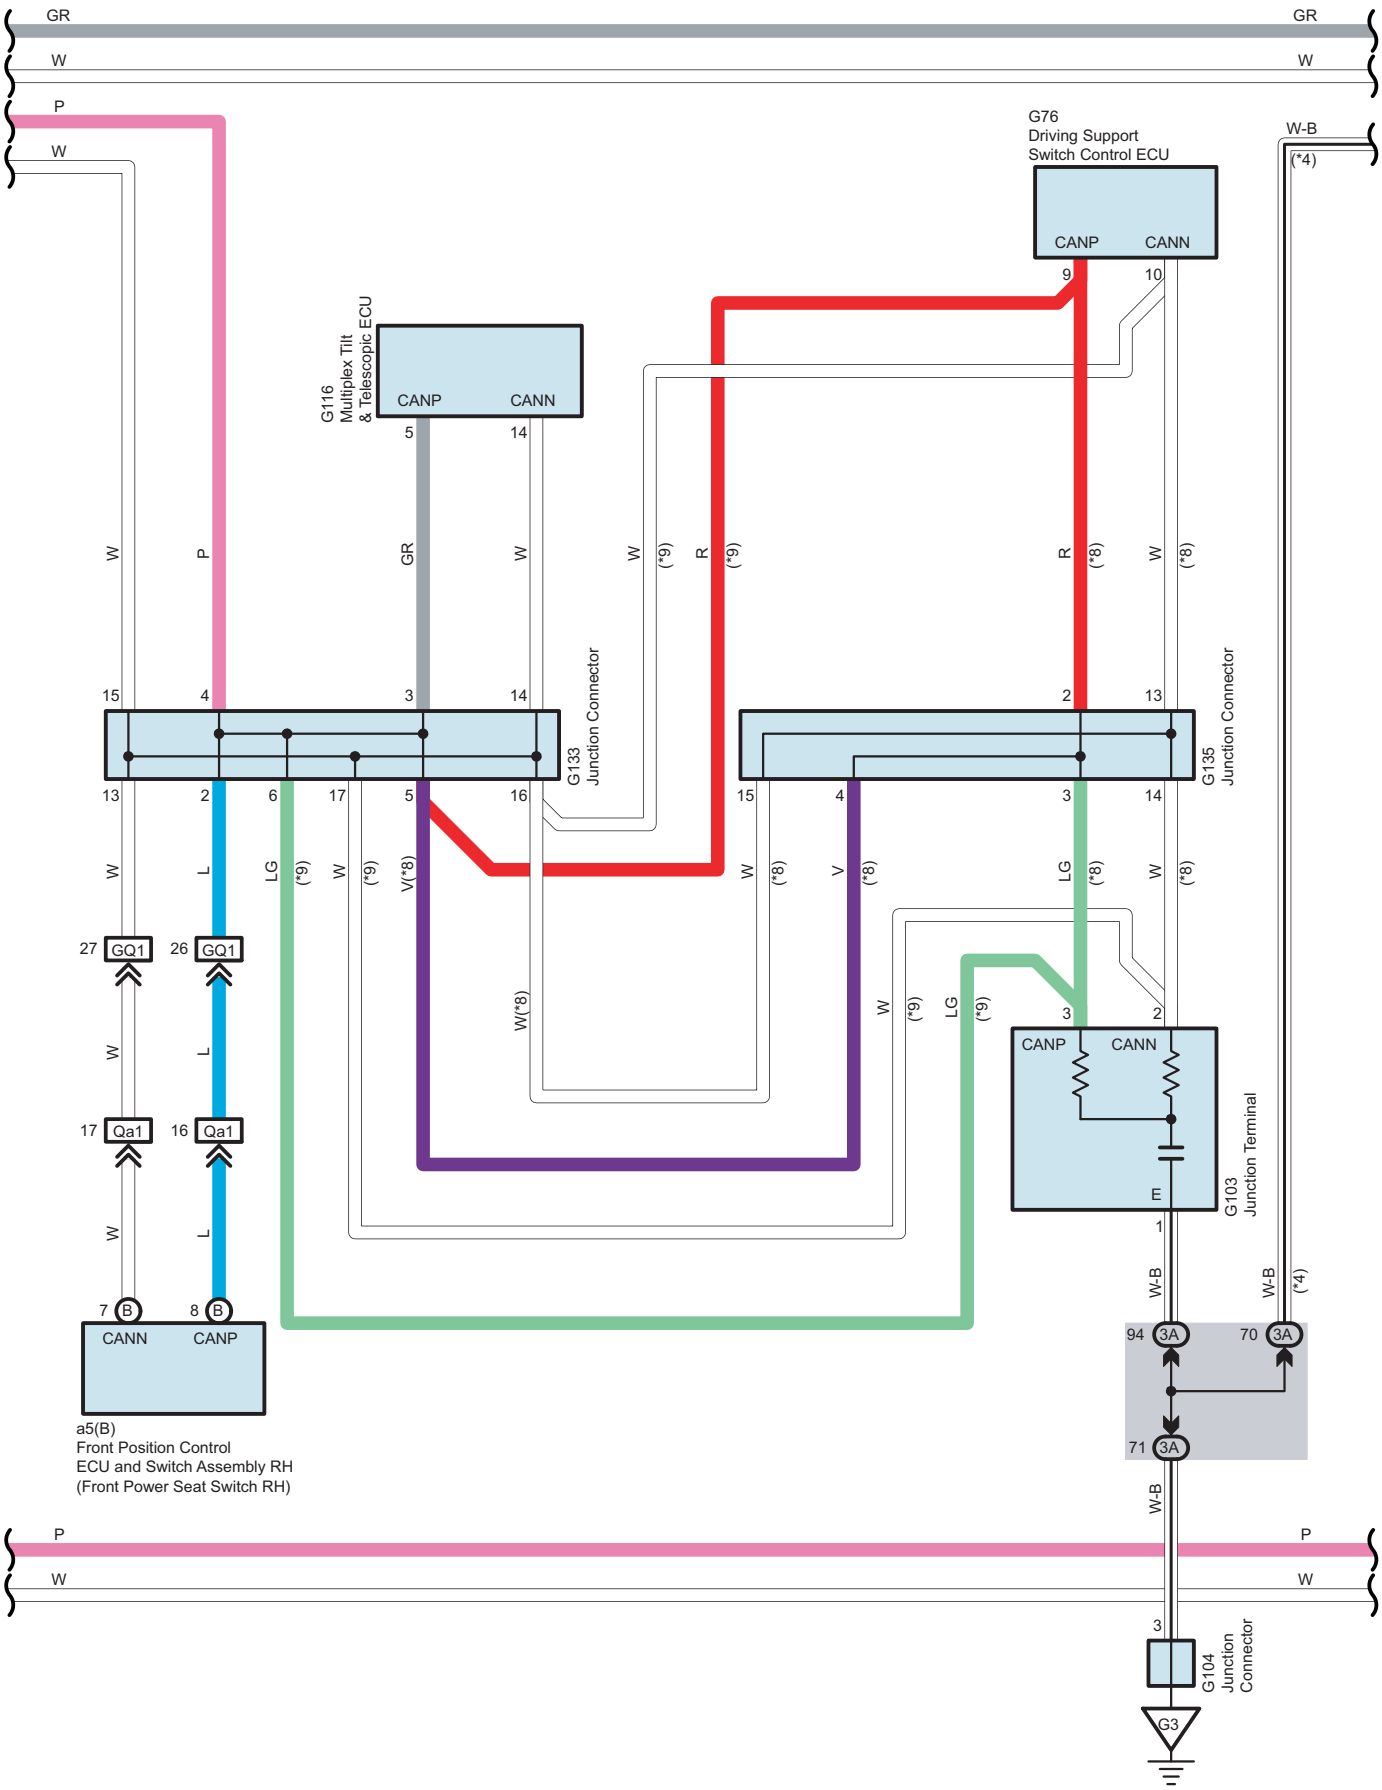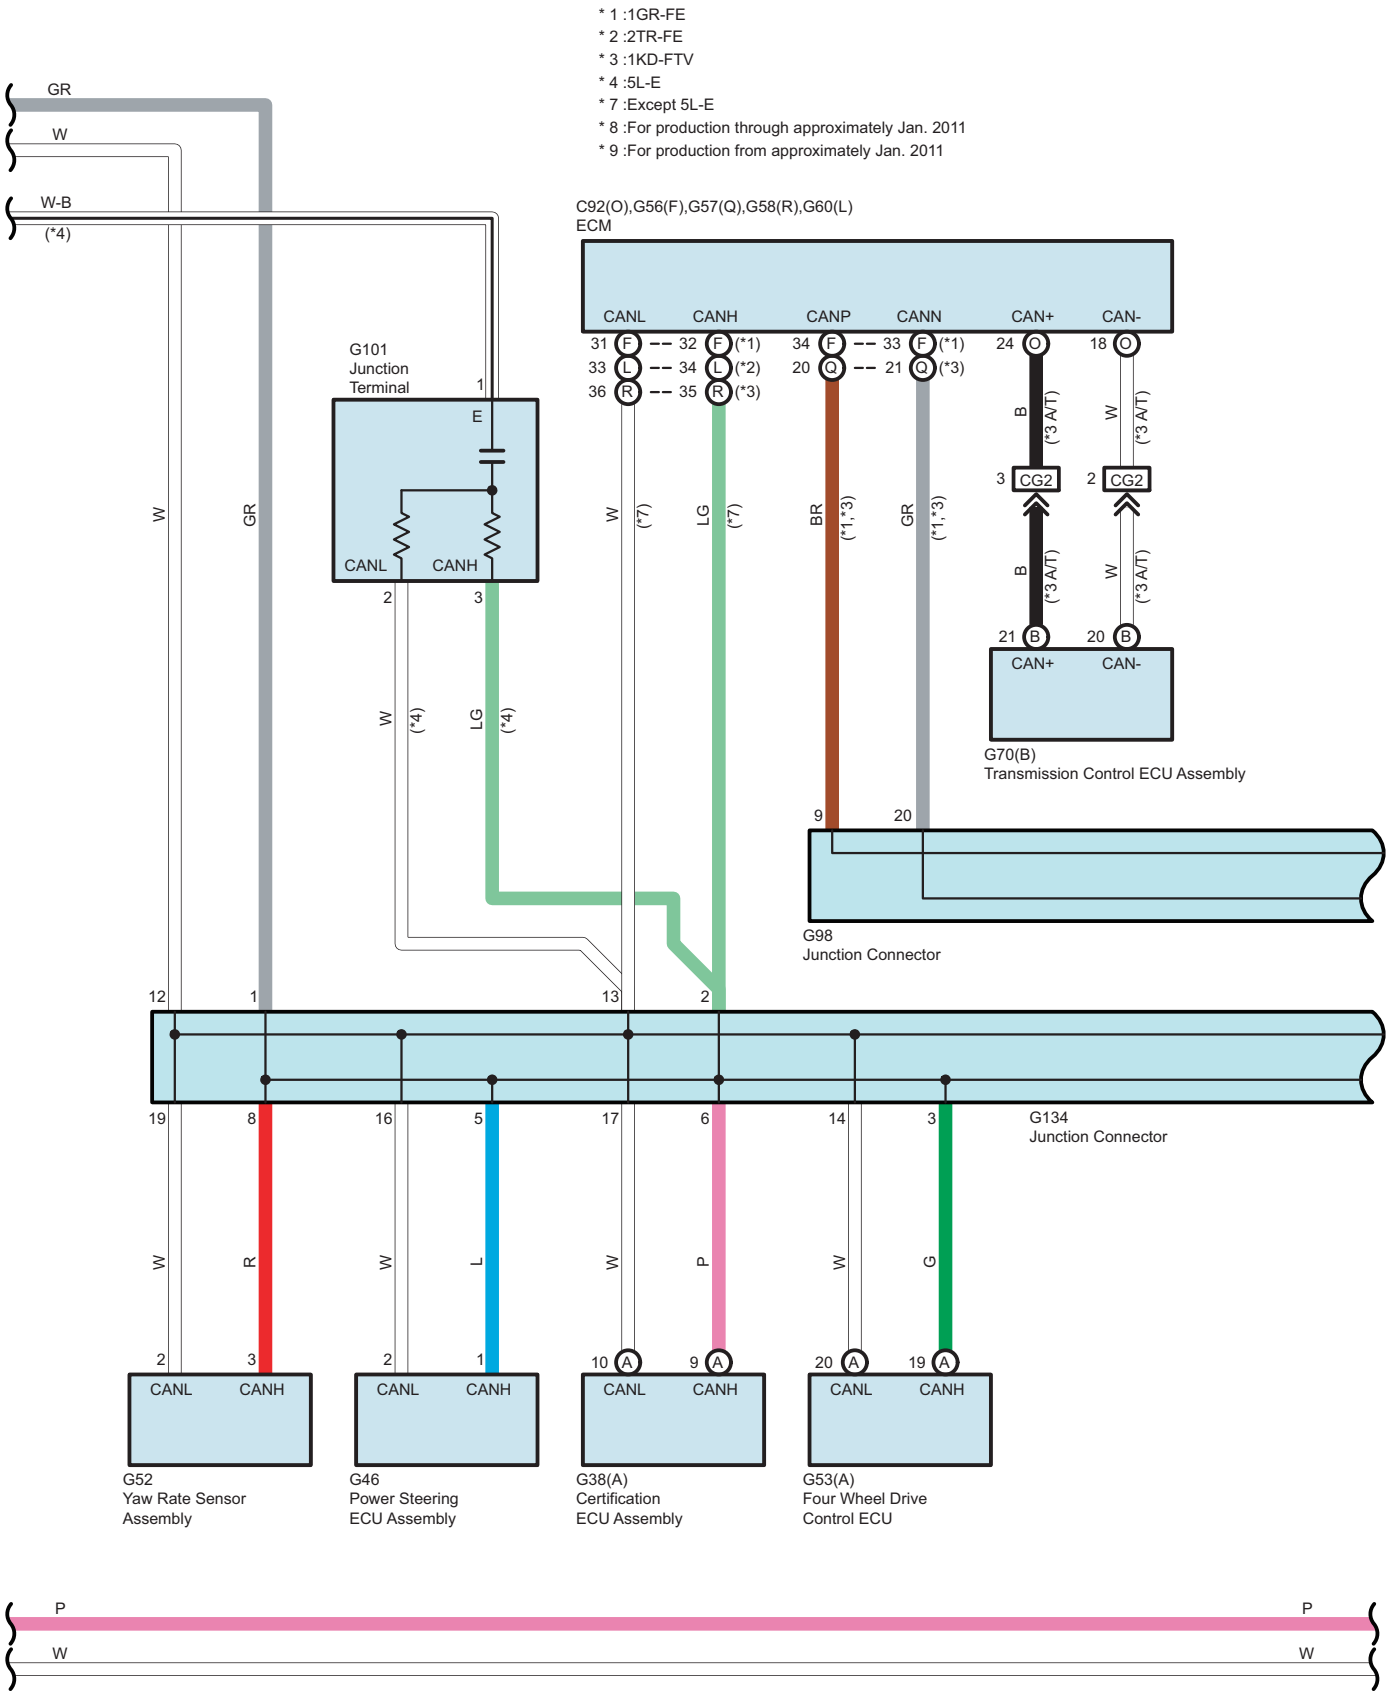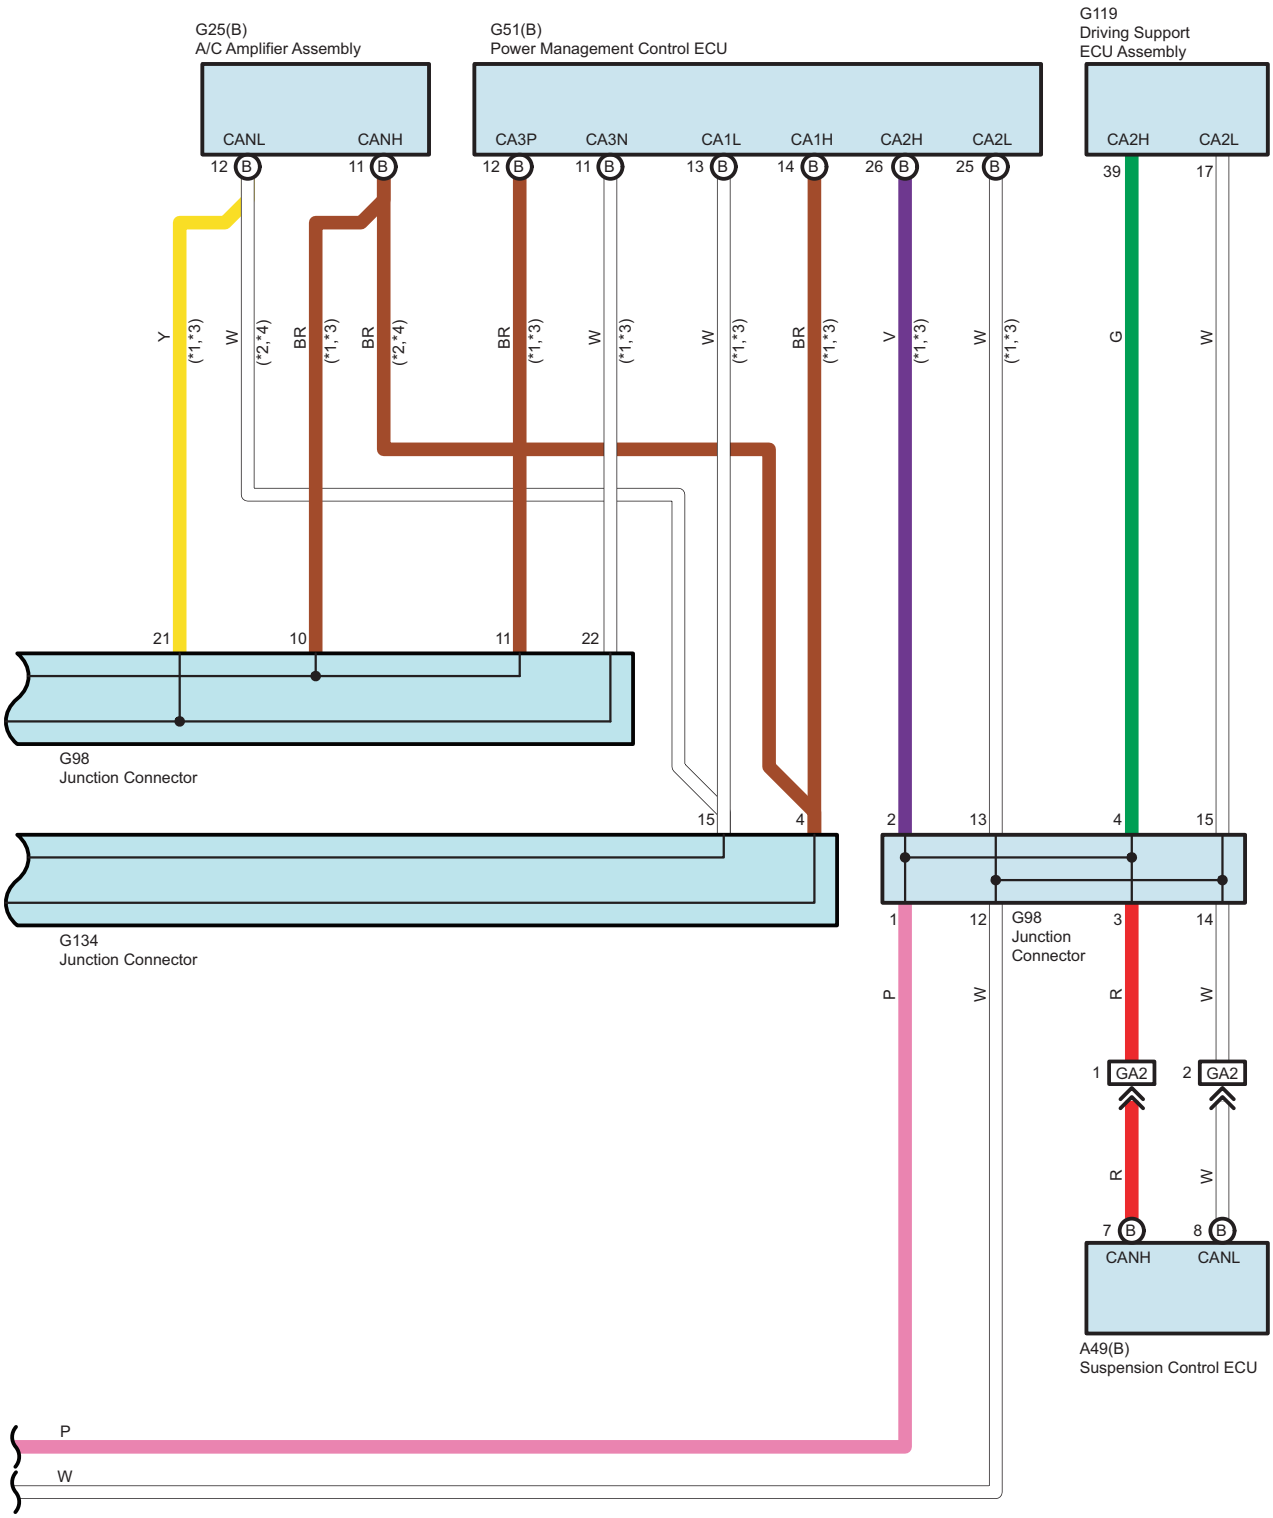

A6
Black

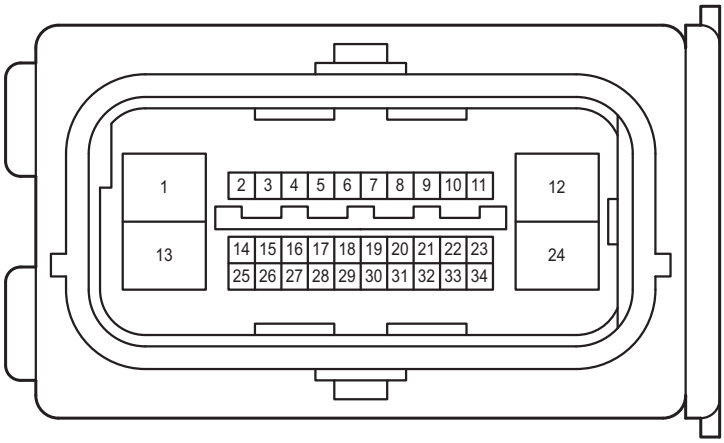

A7
Black

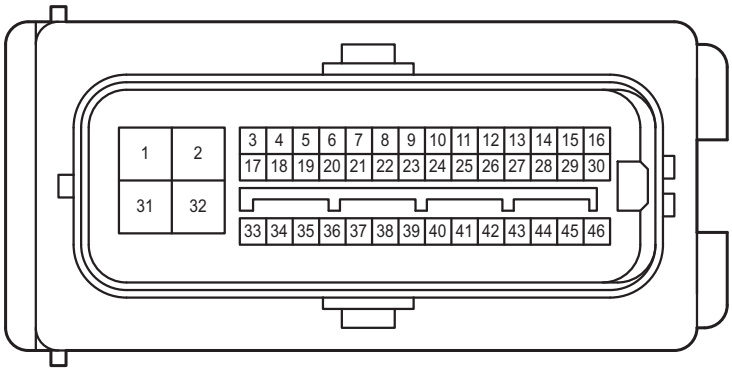


A47
Gray




A48
Gray




A49
Black

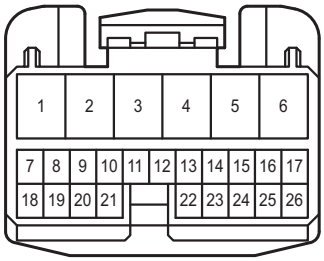


A58
White

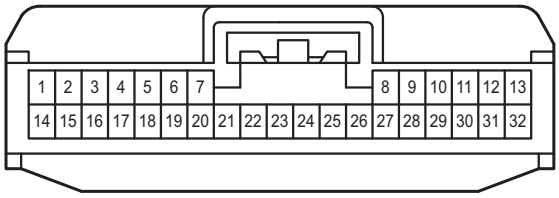


A72
White

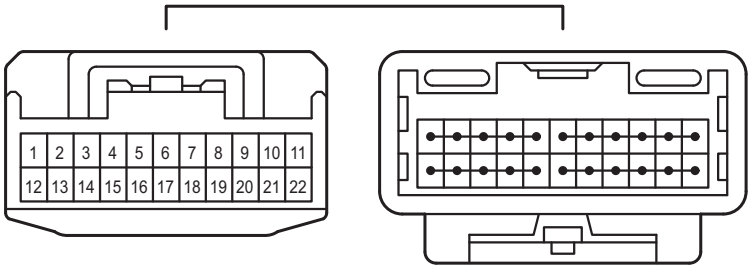


C92
White

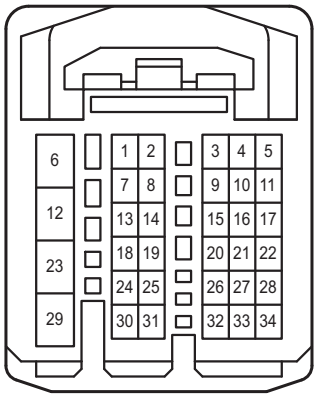


G1
Yellow

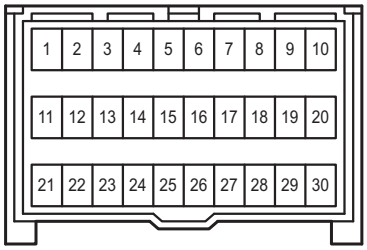


G6
Black

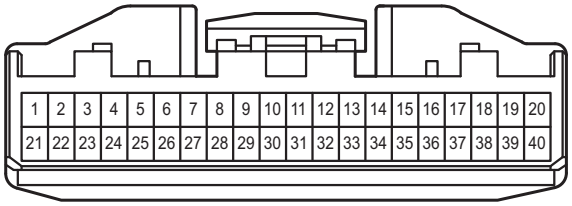


G25
White

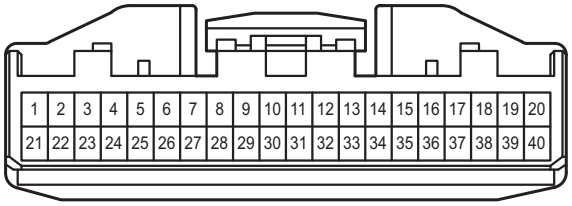


G33
White

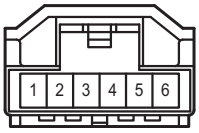


G38
White

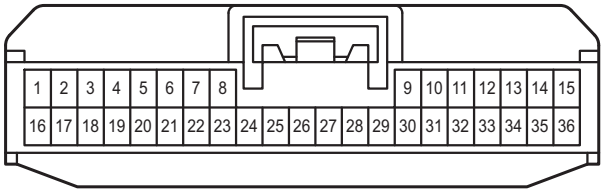


G46
White

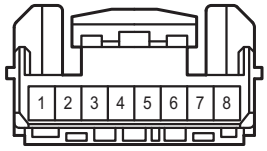


G48
White

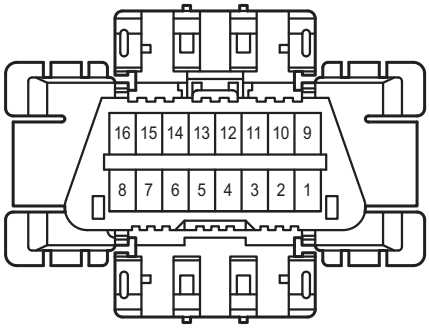


G51
Black

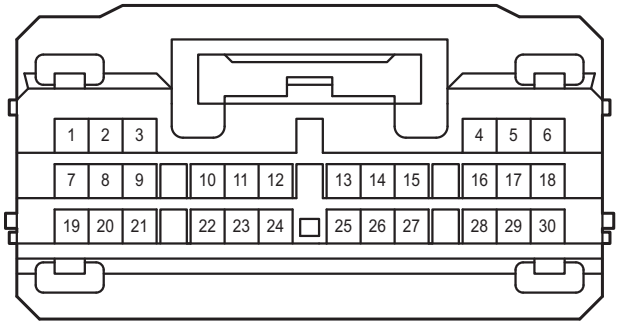


G52
Black

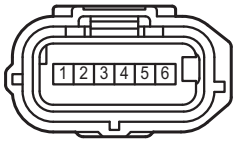


G53
Black

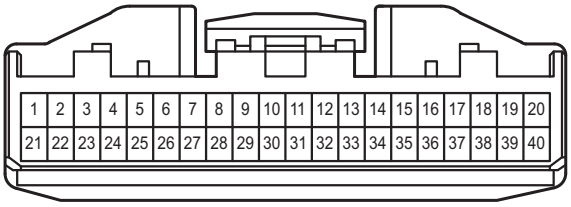


G56
White

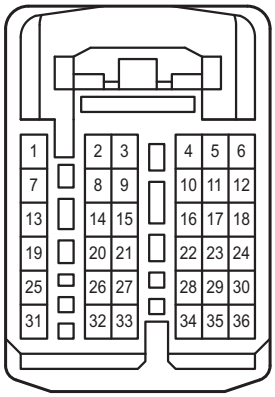


G57
White

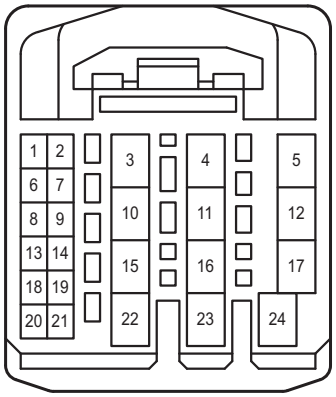


G58
White

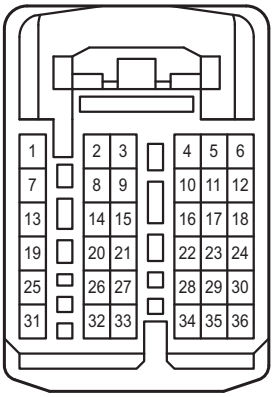


G60
White

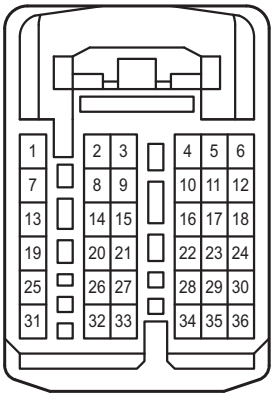


G63
White

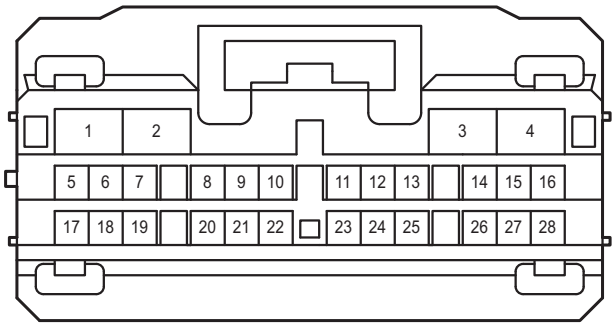


G64
White

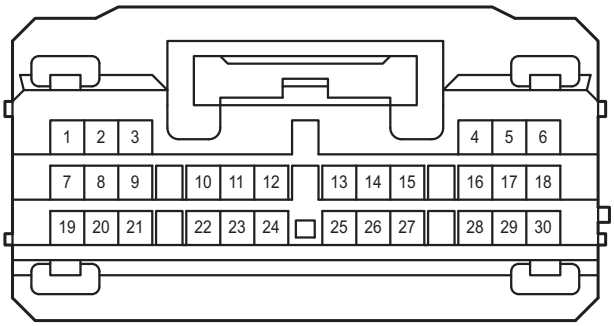


G70
White

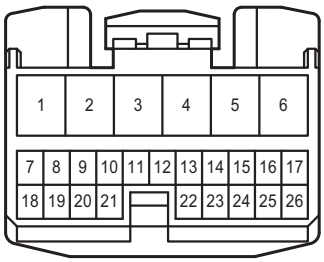


G76
Black

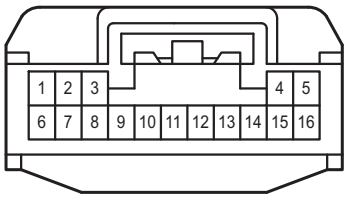


G95
White

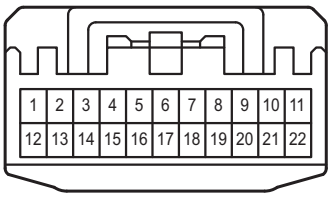


G98
White

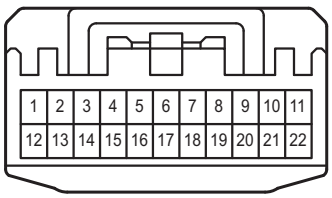


G101
White

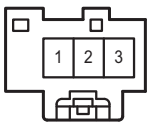


G102
White

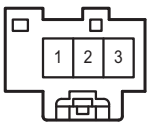


G103
White

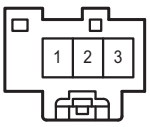


G104
White

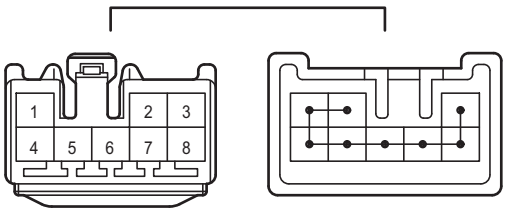


G116
White

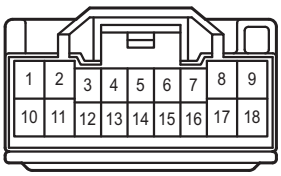


G118
White

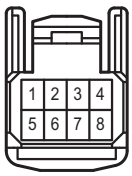


G119
White

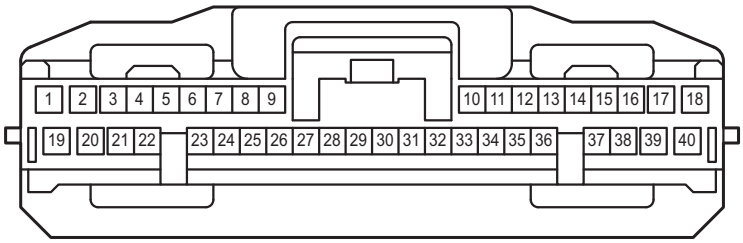


G123
White

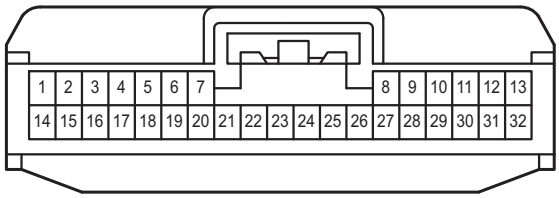


G132
Gray

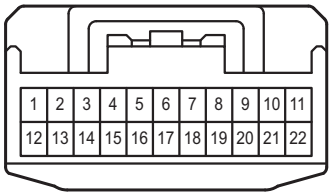


G133
White

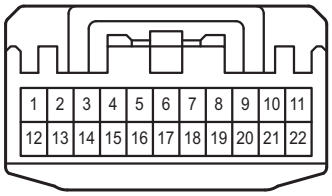


G134
Gray

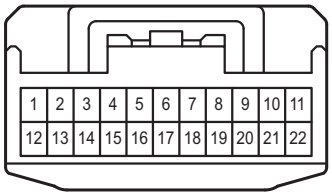


G135
White

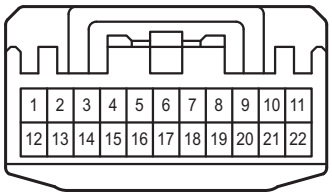


H4
White

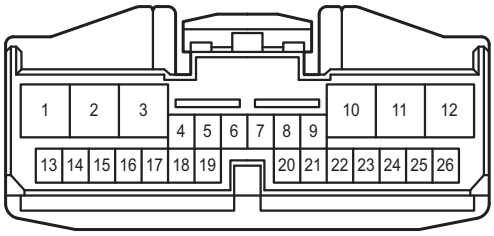

I1
White

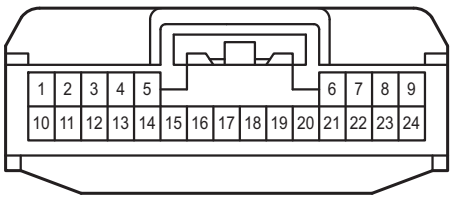


I3
White

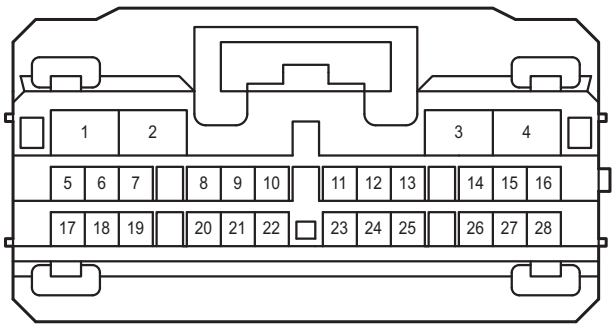


a5
White




3 A
White

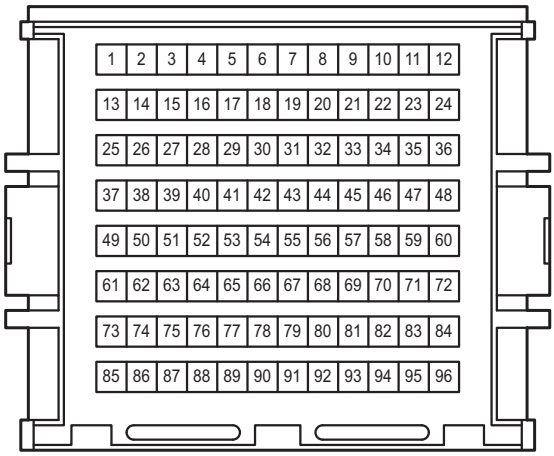


CG2
White

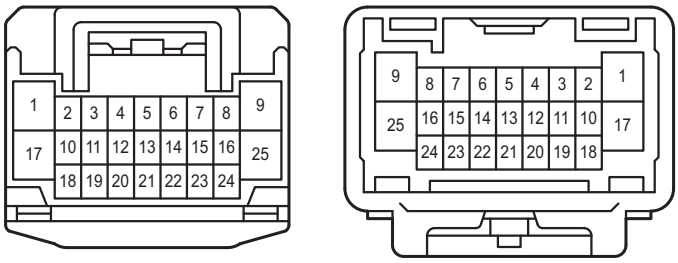

GA2
White

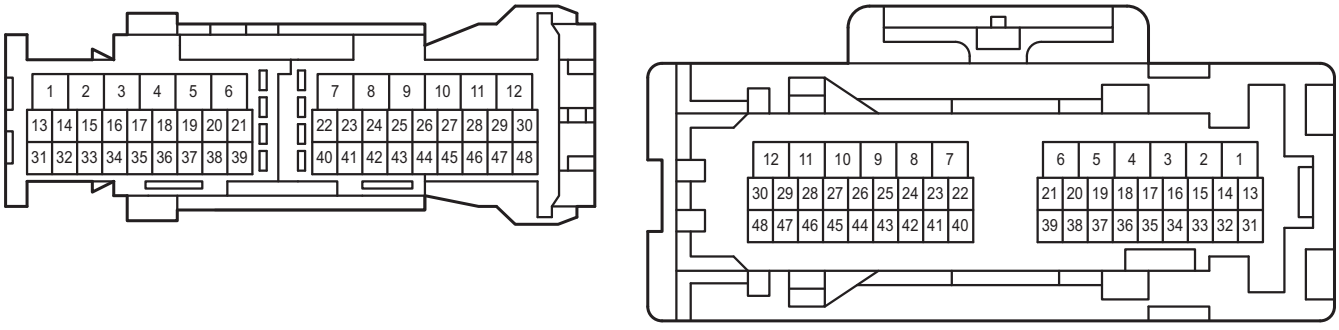


GA6
White

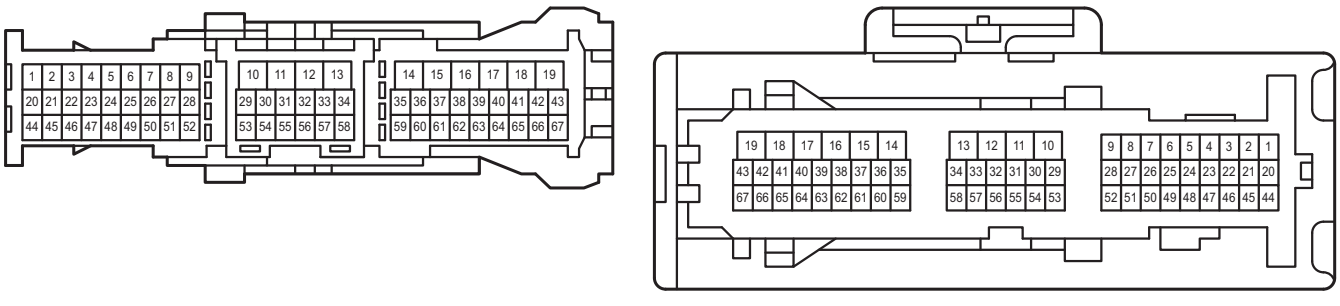


GH1

White

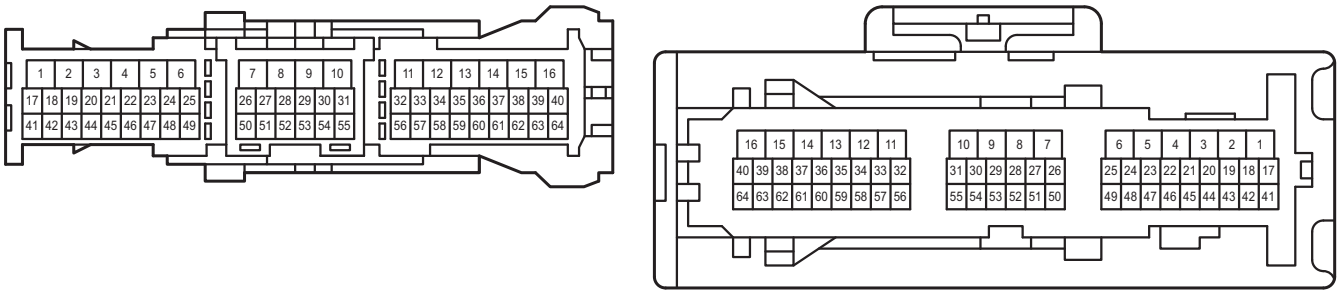


GQ1

White

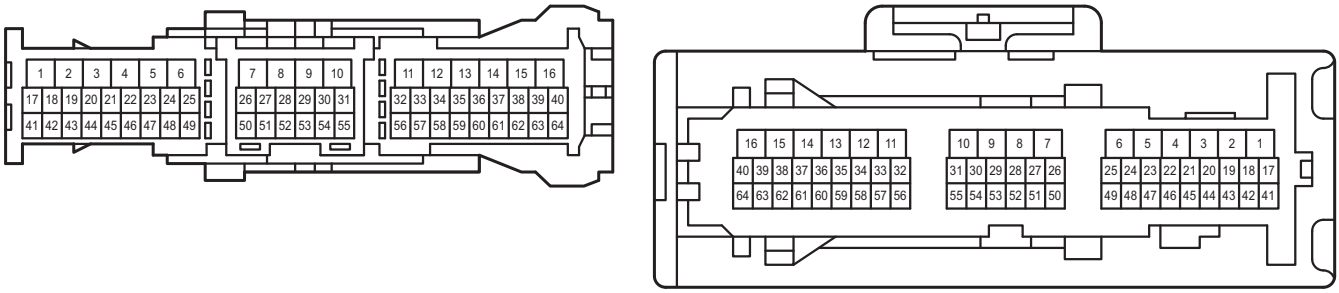

IG1

White

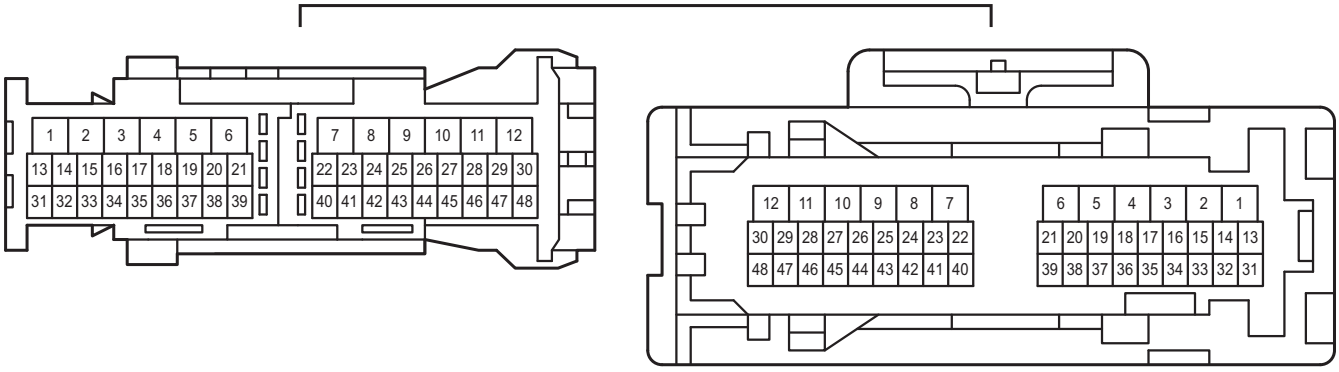

Qa1

White

