



(IG)
10A
ECU-IG
NO.2
39 2D
36 3B
18 3A
14 4B
13 4A
(BAT)
50A
AIR
SUS
2
1
12 AR1
5
1
AIR SUS
Relay
3
2
7 AR2
12 SR2
A70
Junction
Connector
3
6
A1
7.5A
AIR SUS
NO.2
(IG)
20A
AVS
8 2F
22 C
RC
3 B
B
1 B
IG
A14(A),A49(B),R19(C)
Suspension Control ECU
RM+
RM-
SLEX
19 A
17 A
9 C
5 AR1
4 AR1
14 SR1
10 SR2
11 SR2
7 SR2
RM+
RM-
B
E
S11
Height Control Compressor Motor
(Height Control Compressor Assembly)
S10
Height Control Exhaust Valve
(Height Control Compressor)
R31
Junction Connector
R2
L
G
GR
B
P
LG
W-B



S3
Rear Height Control Sensor Sub-Assembly RH
SHG
SHRR
SHB
S6
Rear Height Control Sensor Sub-Assembly LH
SHB
SHG
SHRL
A14(A),A49(B),R19(C)
Suspension Control ECU
SBL2
SGL2
SHRL
SGR2
SHRR
SBR2
SLRR
SLRL
TSW1
TSW2
TD
DNSW
UPSW
GND
ECU1
ECU2
S7
Height Control
Valve
RH+
LH+
G111
Suspension Control Switch
SPORT
COMF
IG
GND
G112
No. 2 Absorber Control Switch
G113
Absorber Control Switch
LO
HI
Low
High
G106
Junction
Connector
G5
R1
W-B

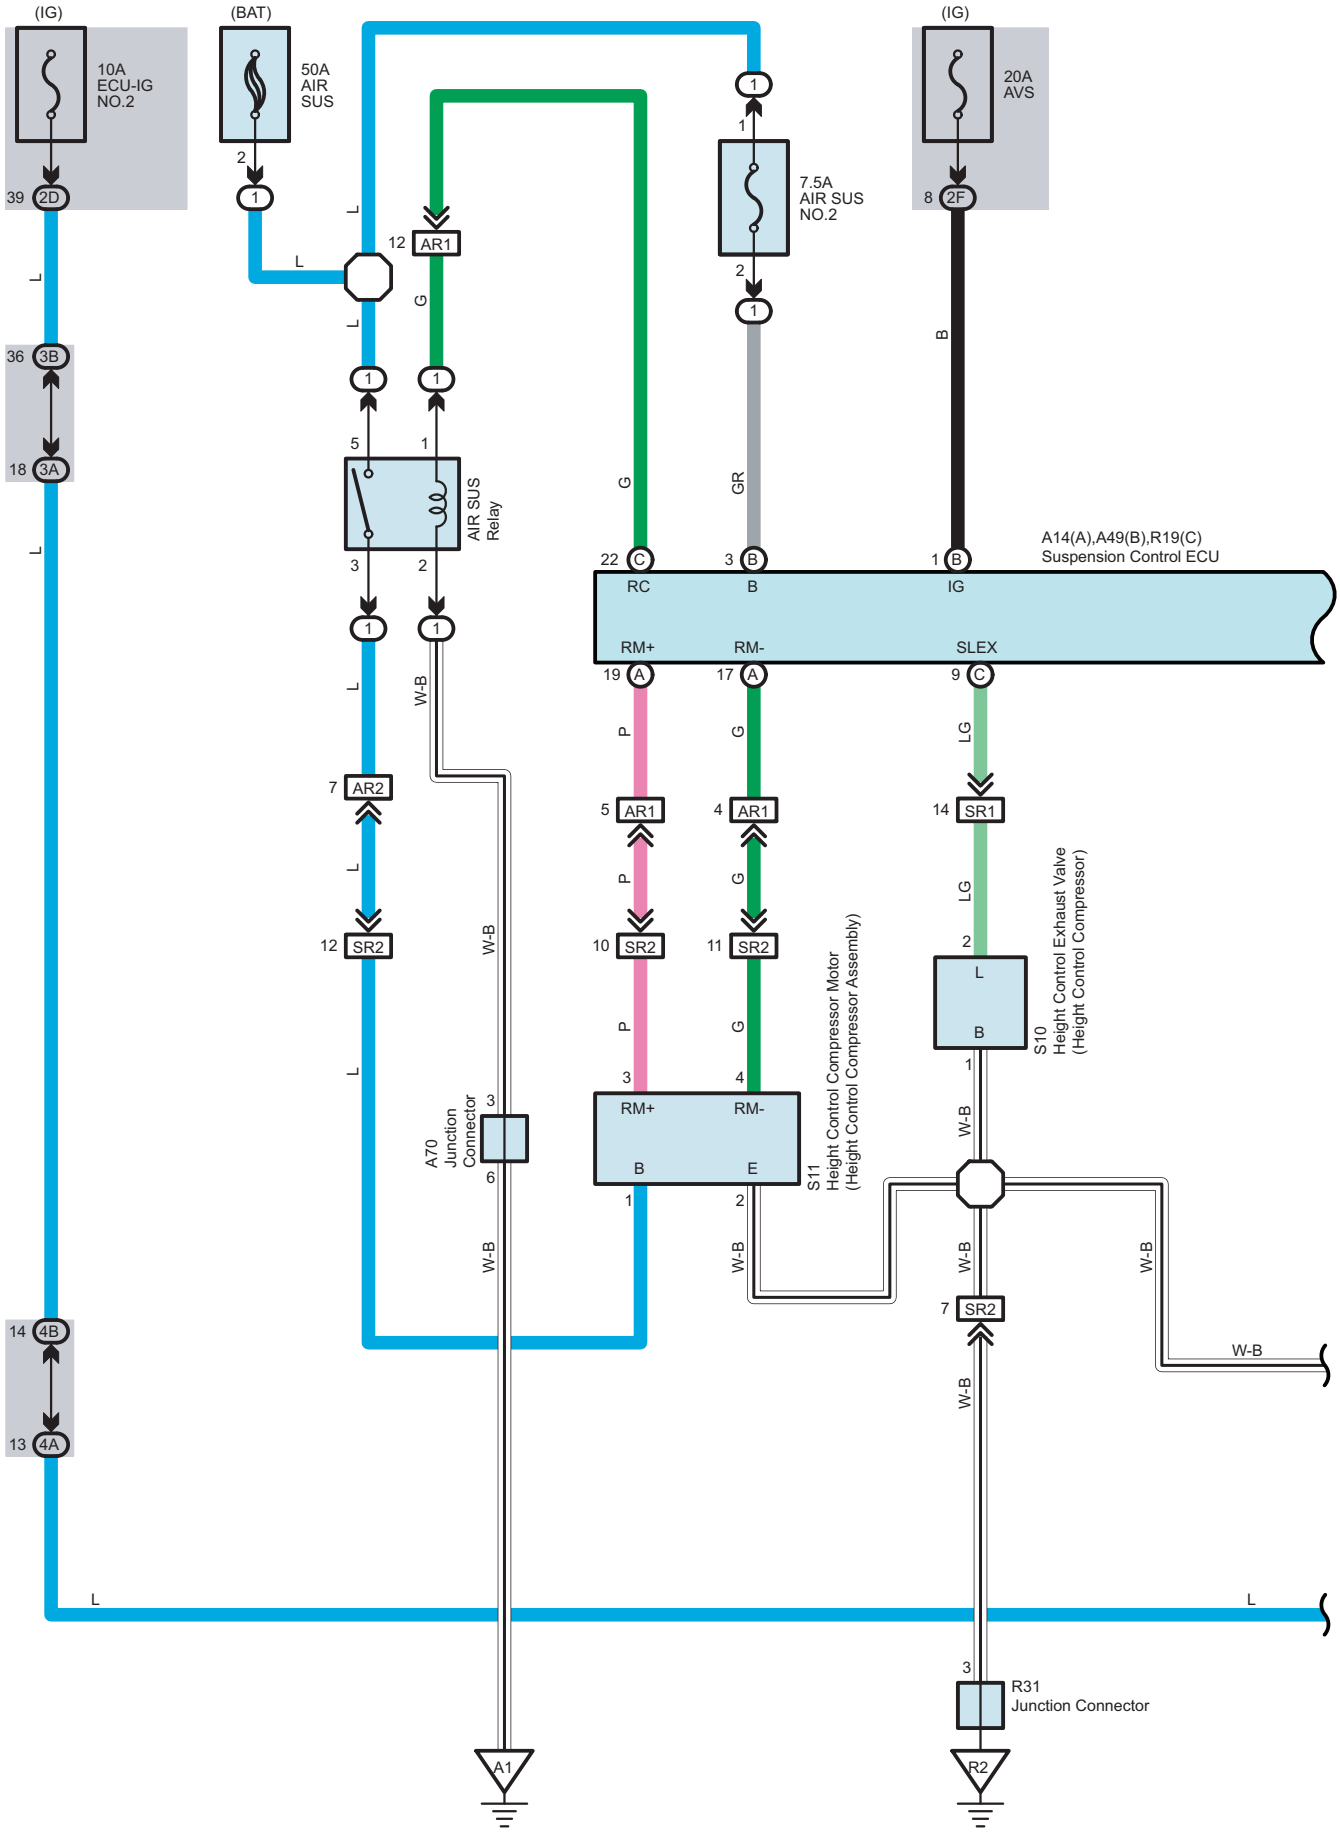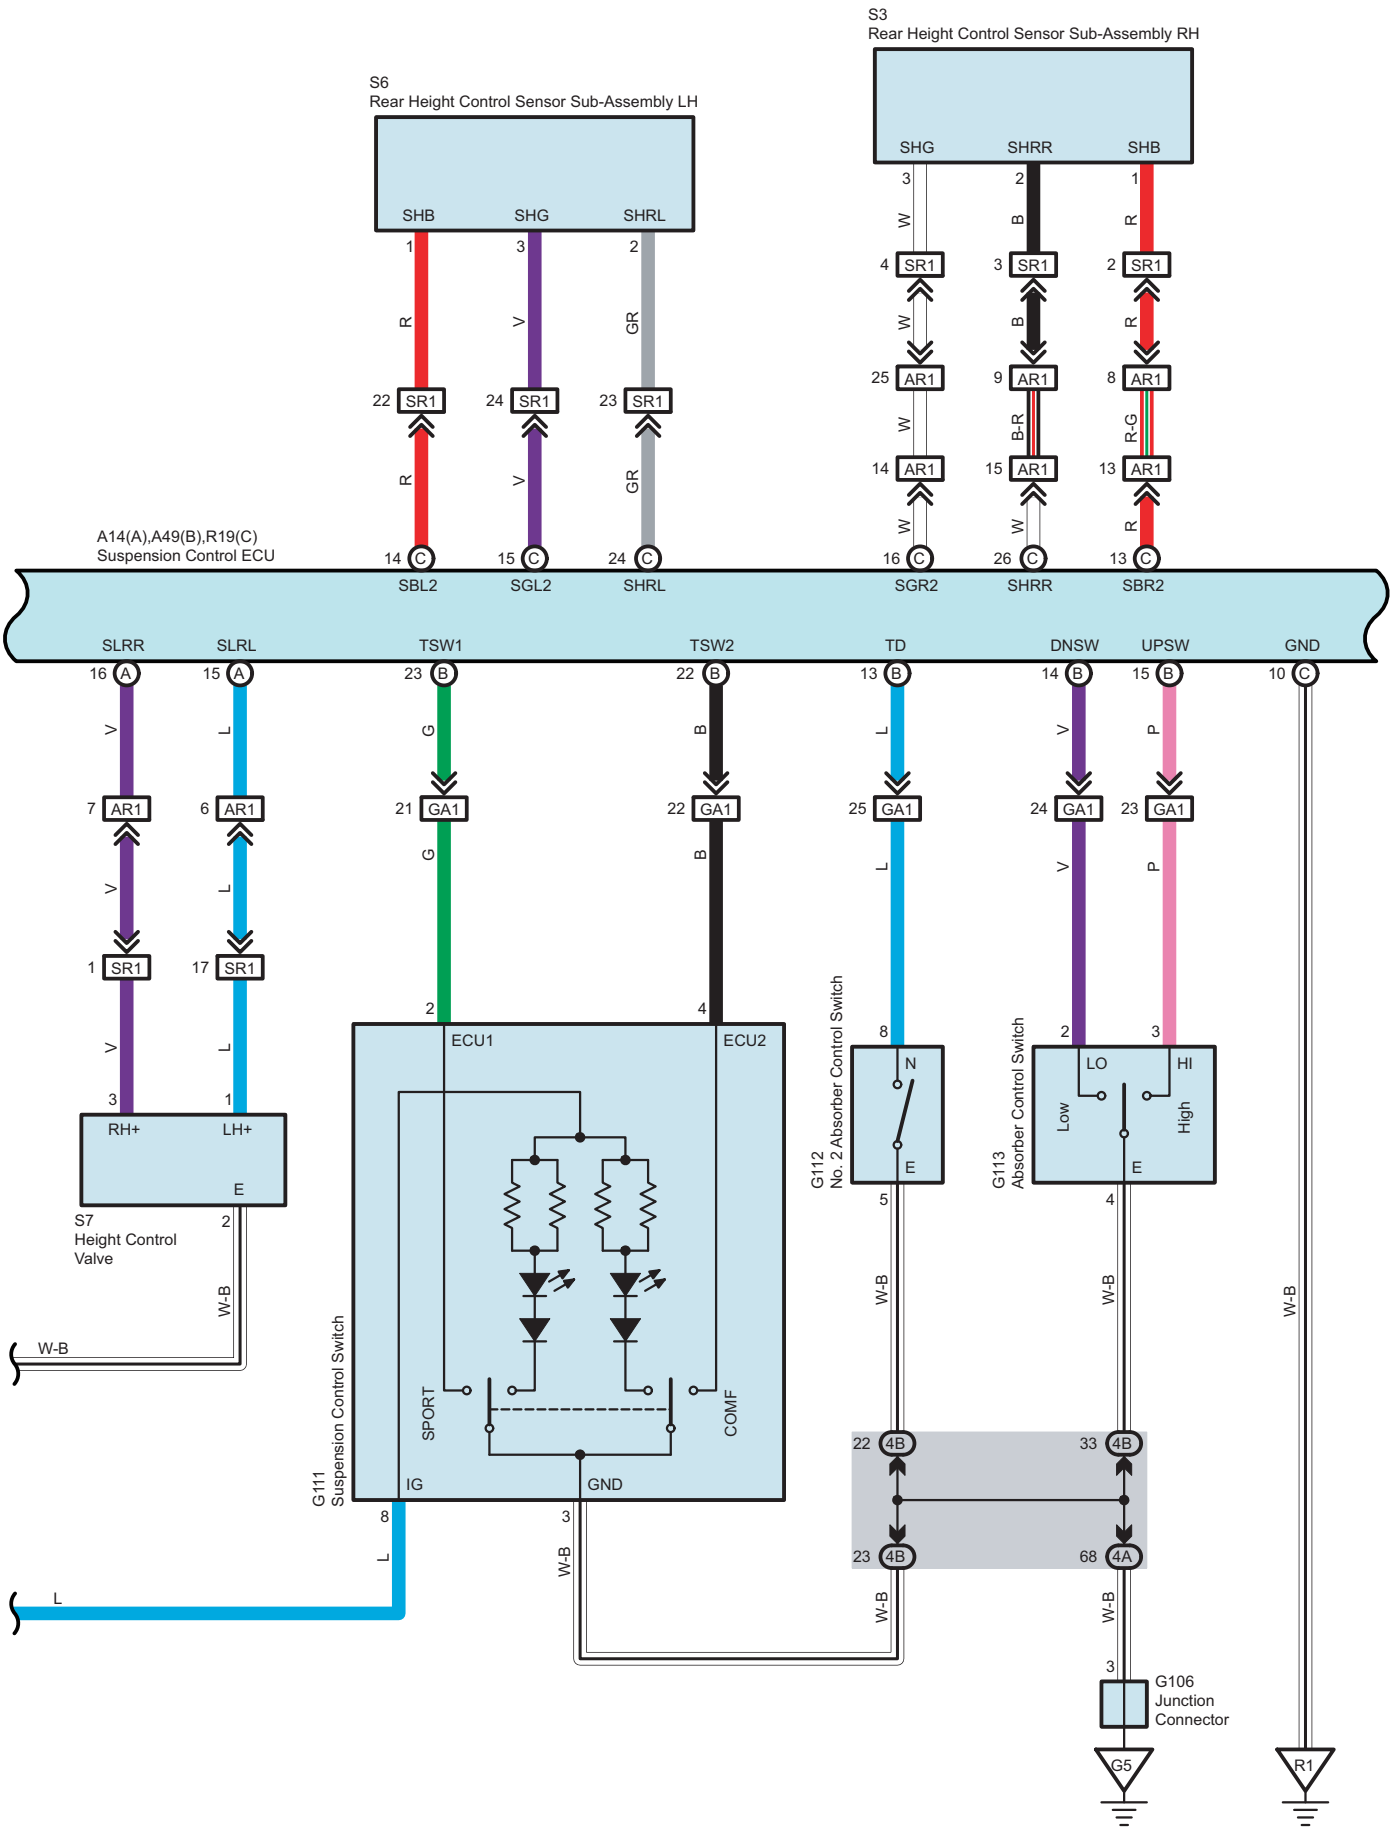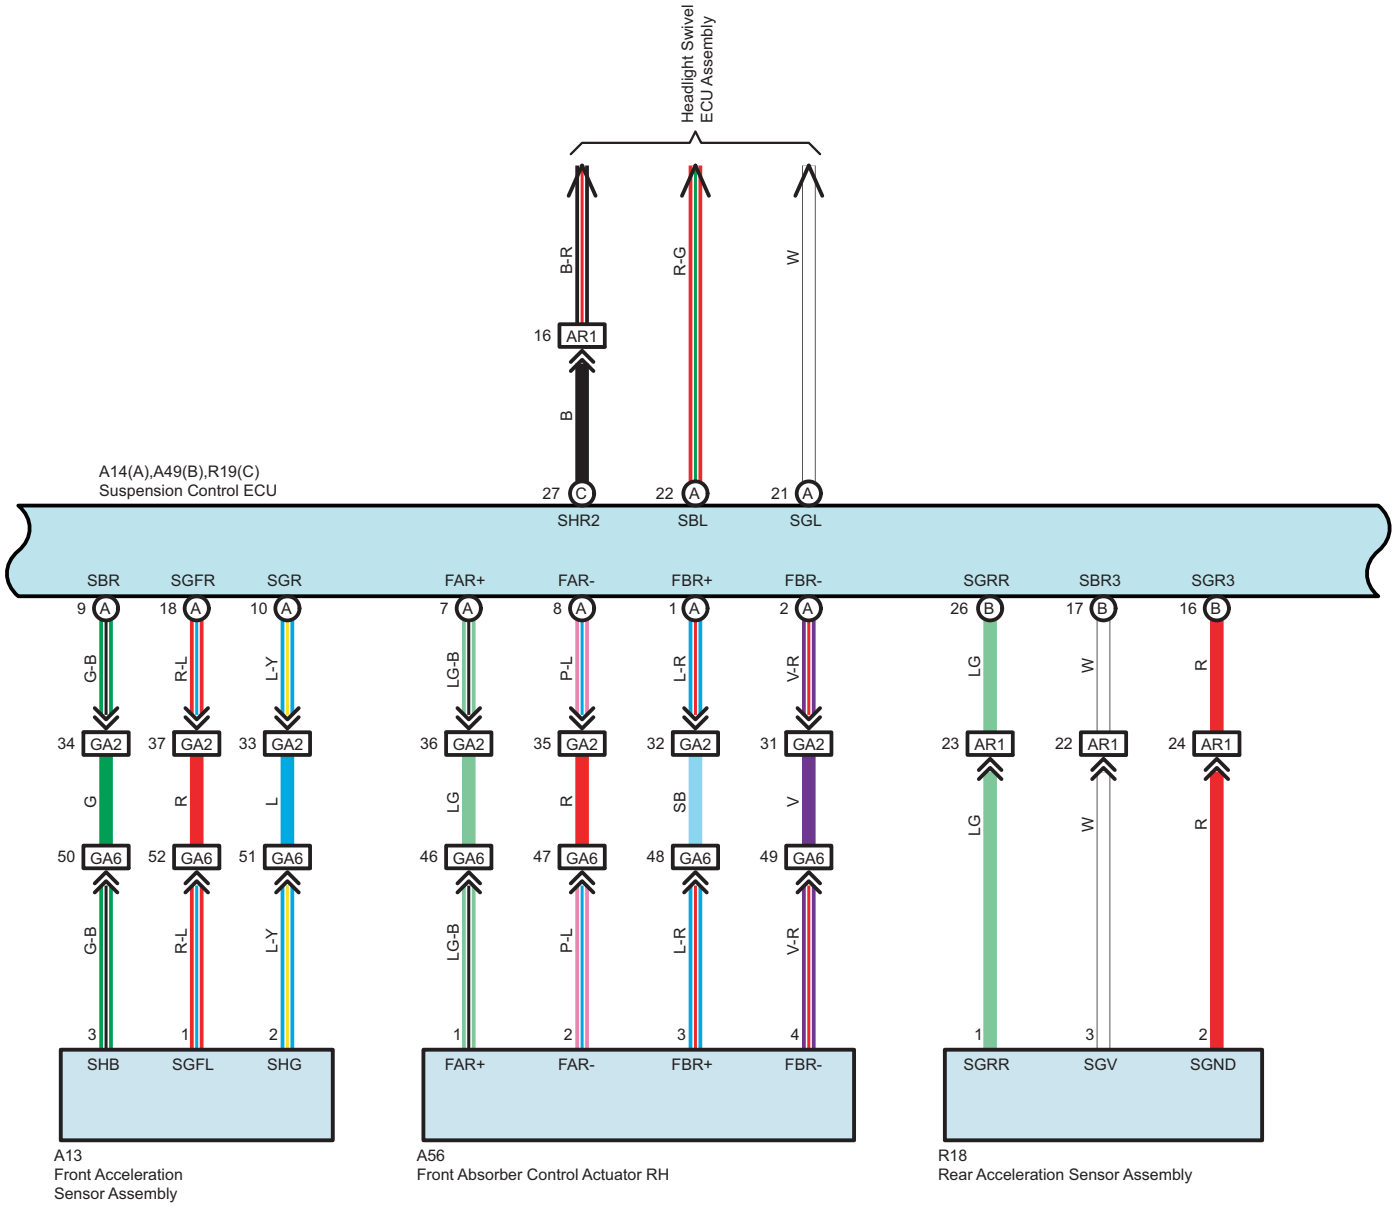



A13
Front Acceleration Sensor Assembly


A56
Front Absorber Control Actuator RH


R18
Rear Acceleration Sensor Assembly

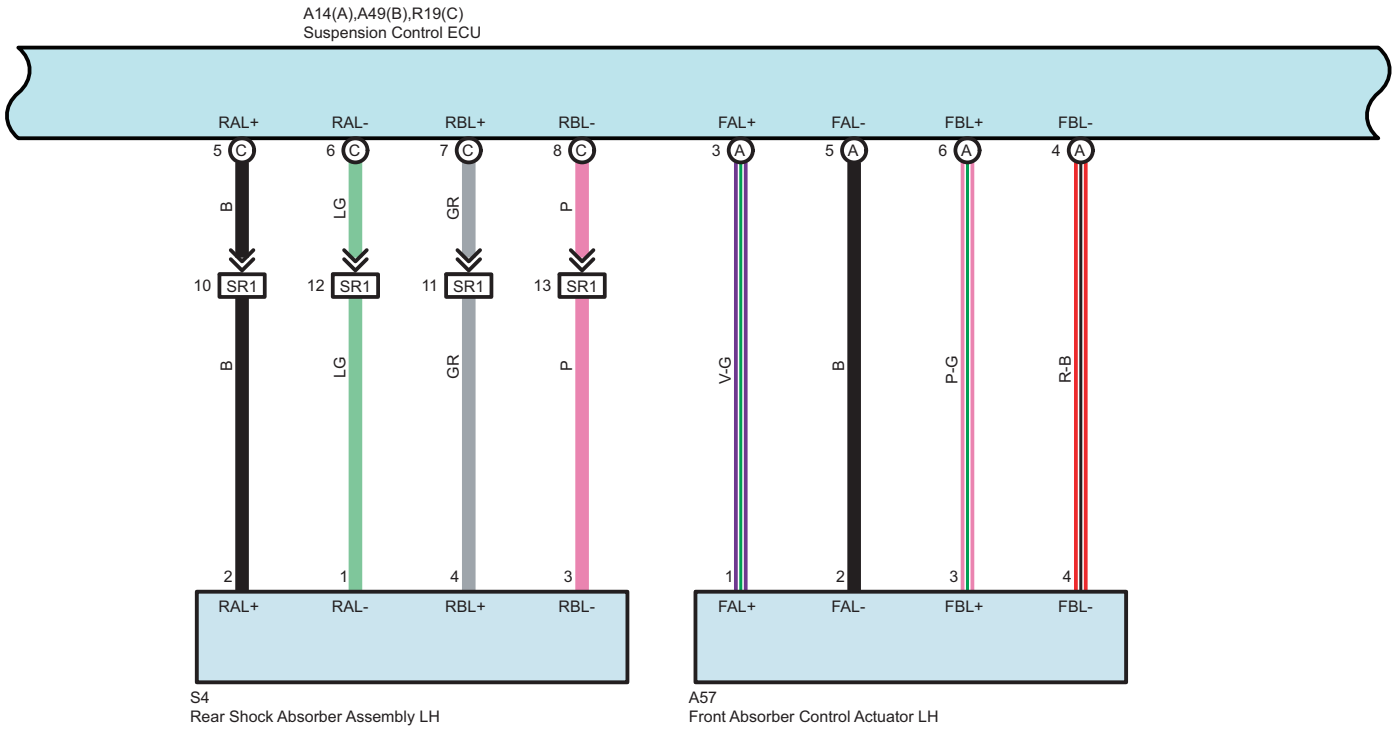
A14(A),A49(B),R19(C)
Suspension Control ECU
RAL+
RAL-
RBL+
RBL-
FAL+
FAL-
FBL+
FBL-
5 C
6 C
7 C
8 C
3 A
5 A
6 A
4 A
B
LG
GR
P
10 SR1
12 SR1
11 SR1
13 SR1
B
LG
GR
P
V-G
B
P-G
R-B
2
1
4
3
1
2
3
4
RAL+
RAL-
RBL+
RBL-
FAL+
FAL-
FBL+
FBL-
S4
Rear Shock Absorber Assembly LH
A57
Front Absorber Control Actuator LH

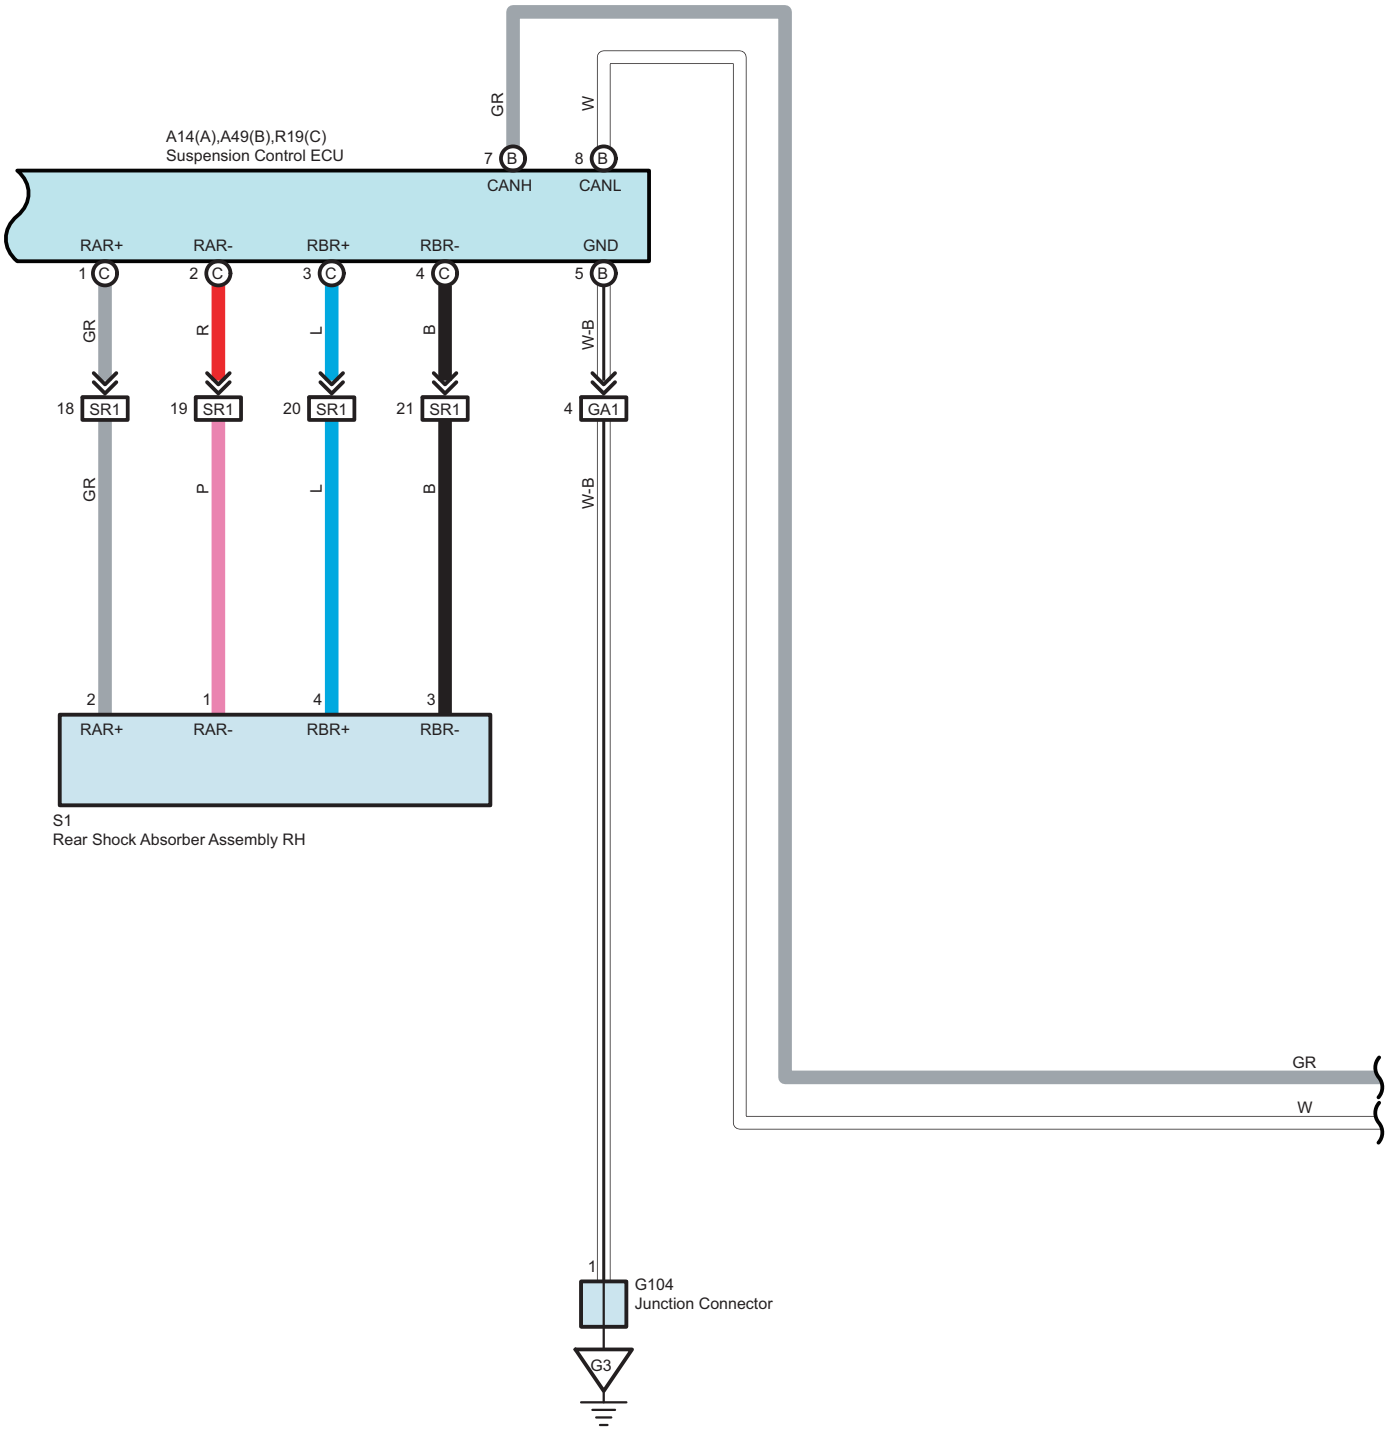

A14(A),A49(B),R19(C)
Suspension Control ECU
7 B CANH
8 B CANL
GR
W
RAR+
RAR-
RBR+
RBR-
GND
1 C
2 C
3 C
4 C
5 B
GR
R
L
B
W-B
18 SR1
19 SR1
20 SR1
21 SR1
4 GA1
GR
P
L
B
W-B
2
1
4
3
RAR+
RAR-
RBR+
RBR-
S1
Rear Shock Absorber Assembly RH
GR
W
1
G104
Junction Connector
G3

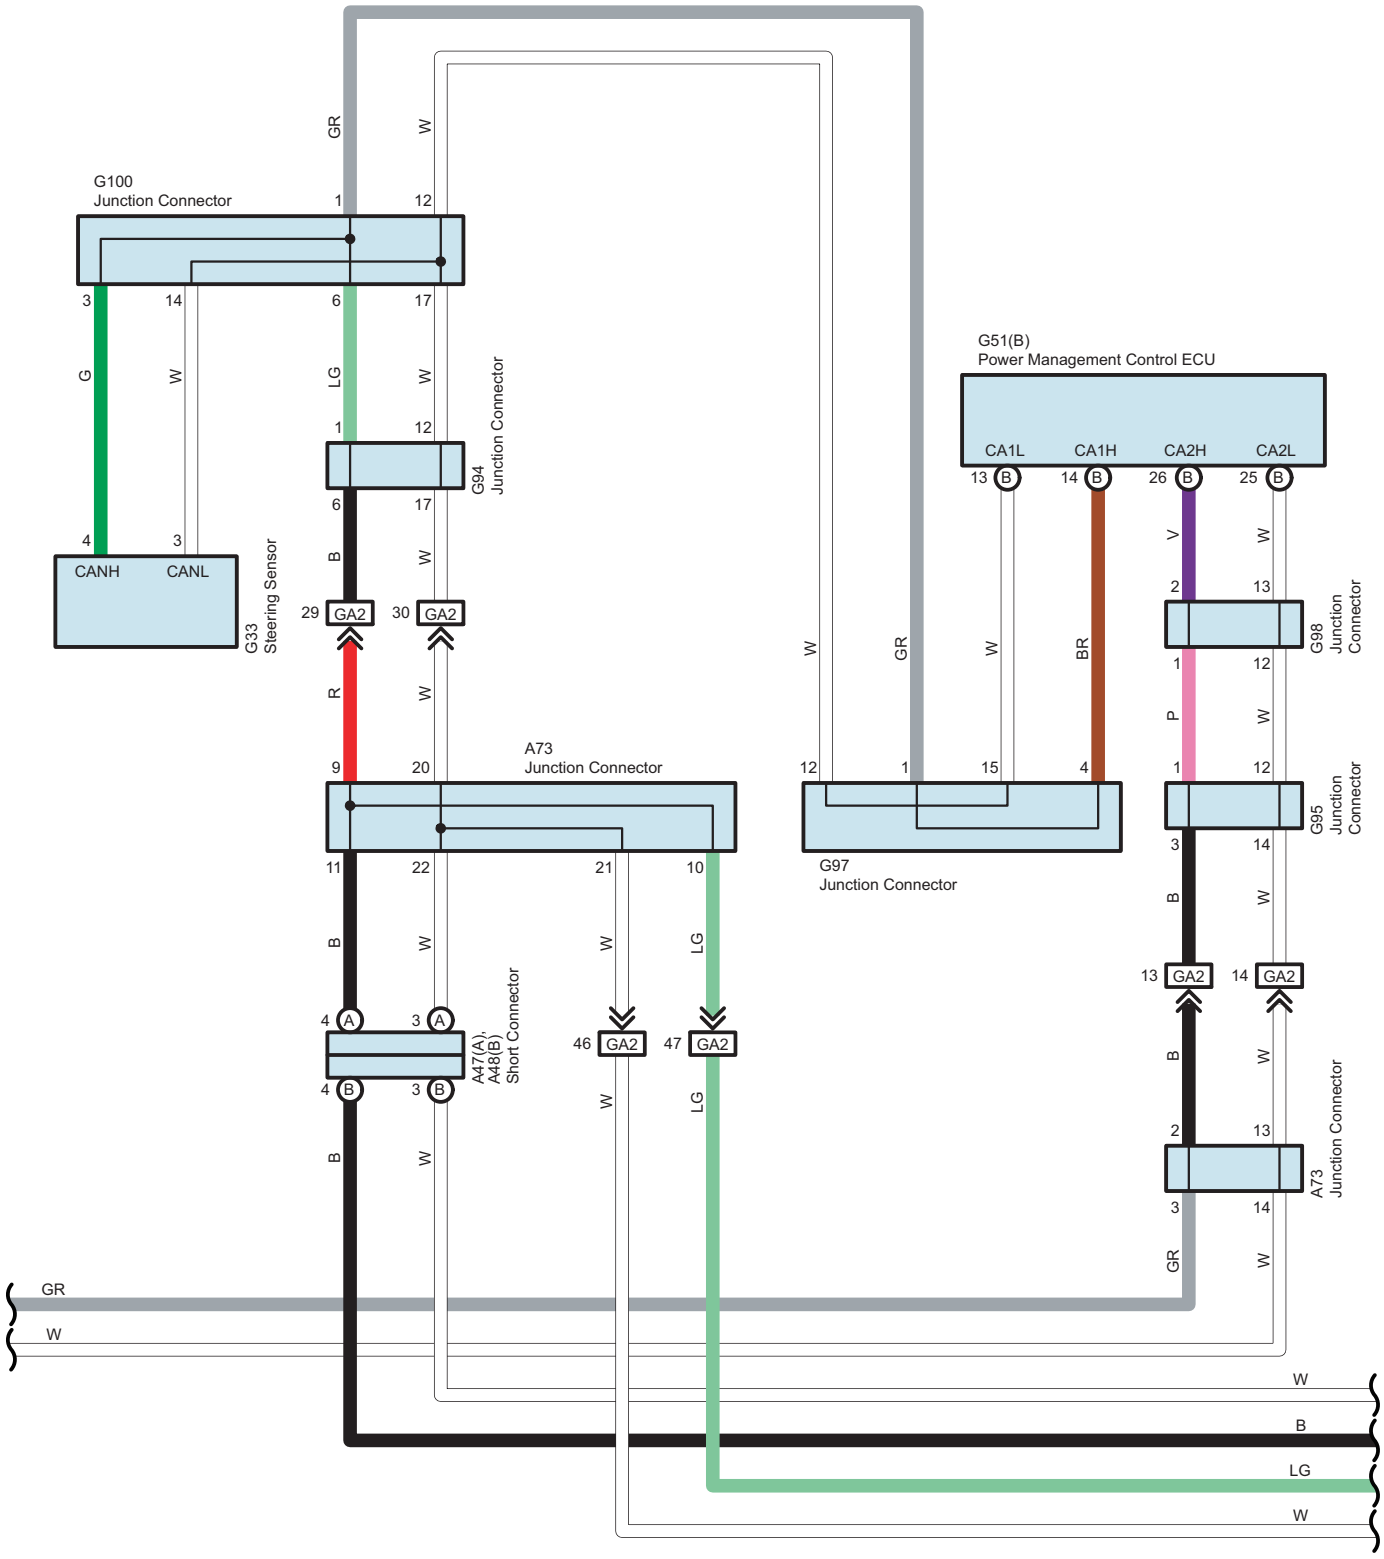
G100
Junction Connector
G94
Junction Connector
G33
Steering Sensor
CANH
CANL
A73
Junction Connector
G51(B)
Power Management Control ECU
CA1L
CA1H
CA2H
CA2L
G97
Junction Connector
G98
Junction Connector
G95
Junction Connector
A73
Junction Connector
A47(A),
A48(B)
Short Connector
GA2
GR
W
G
LG
B
R
BR
V
P

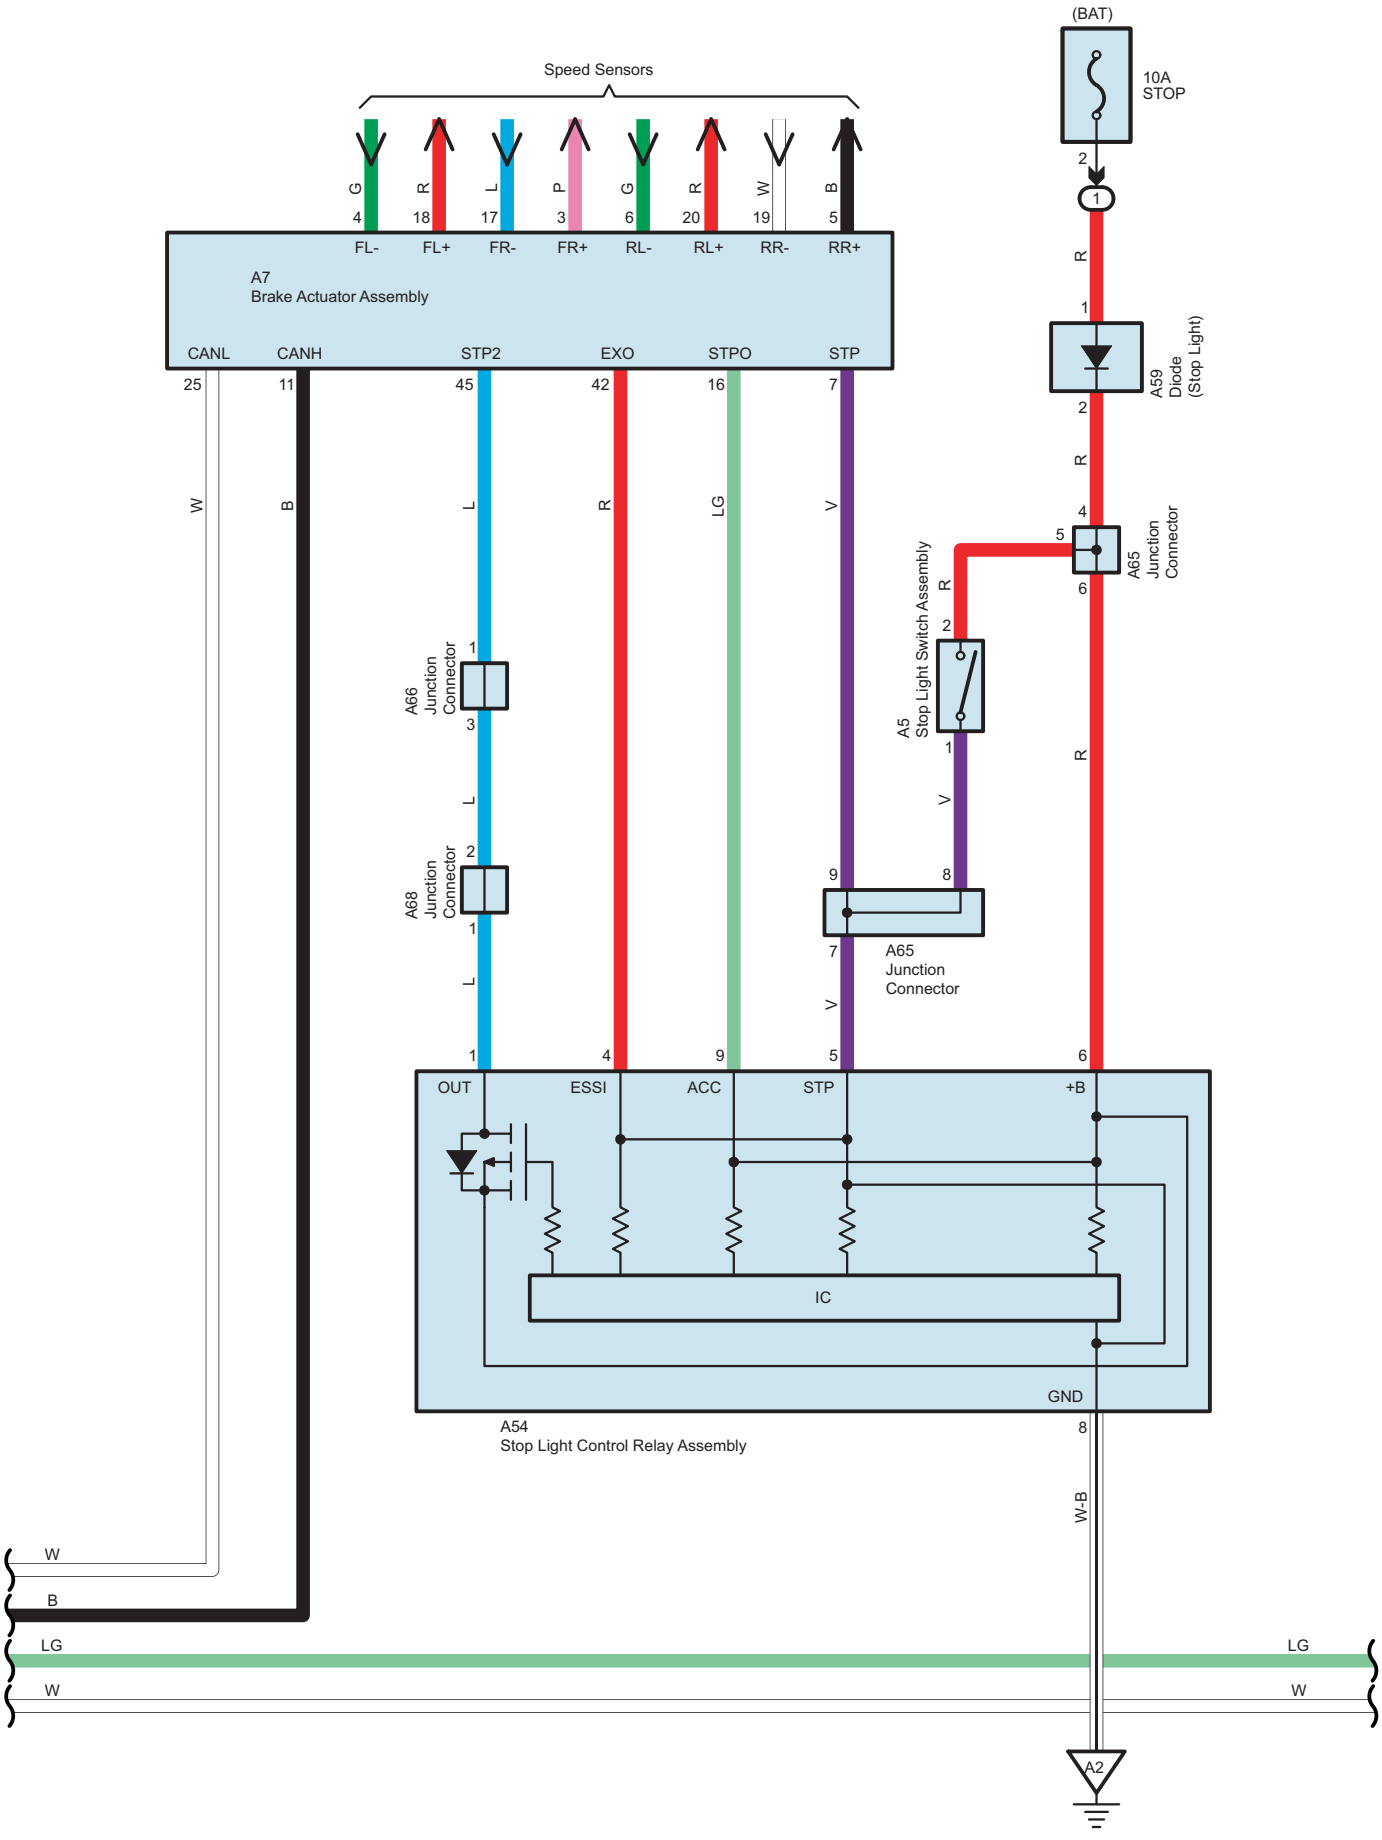

(BAT)
10A
STOP
Speed Sensors
G
R
L
P
G
R
W
B
4
18
17
3
6
20
19
5
FL-
FL+
FR-
FR+
RL-
RL+
RR-
RR+
A7
Brake Actuator Assembly
CANL
CANH
STP2
EXO
STPO
STP
25
11
45
42
16
7
W
B
L
R
LG
V
A59
Diode
(Stop Light)
A65
Junction
Connector
A5
Stop Light Switch Assembly
A66
Junction
Connector
A68
Junction
Connector
A65
Junction
Connector
OUT
ESSI
ACC
STP
+B
IC
GND
A54
Stop Light Control Relay Assembly
W-B
LG
W
A2

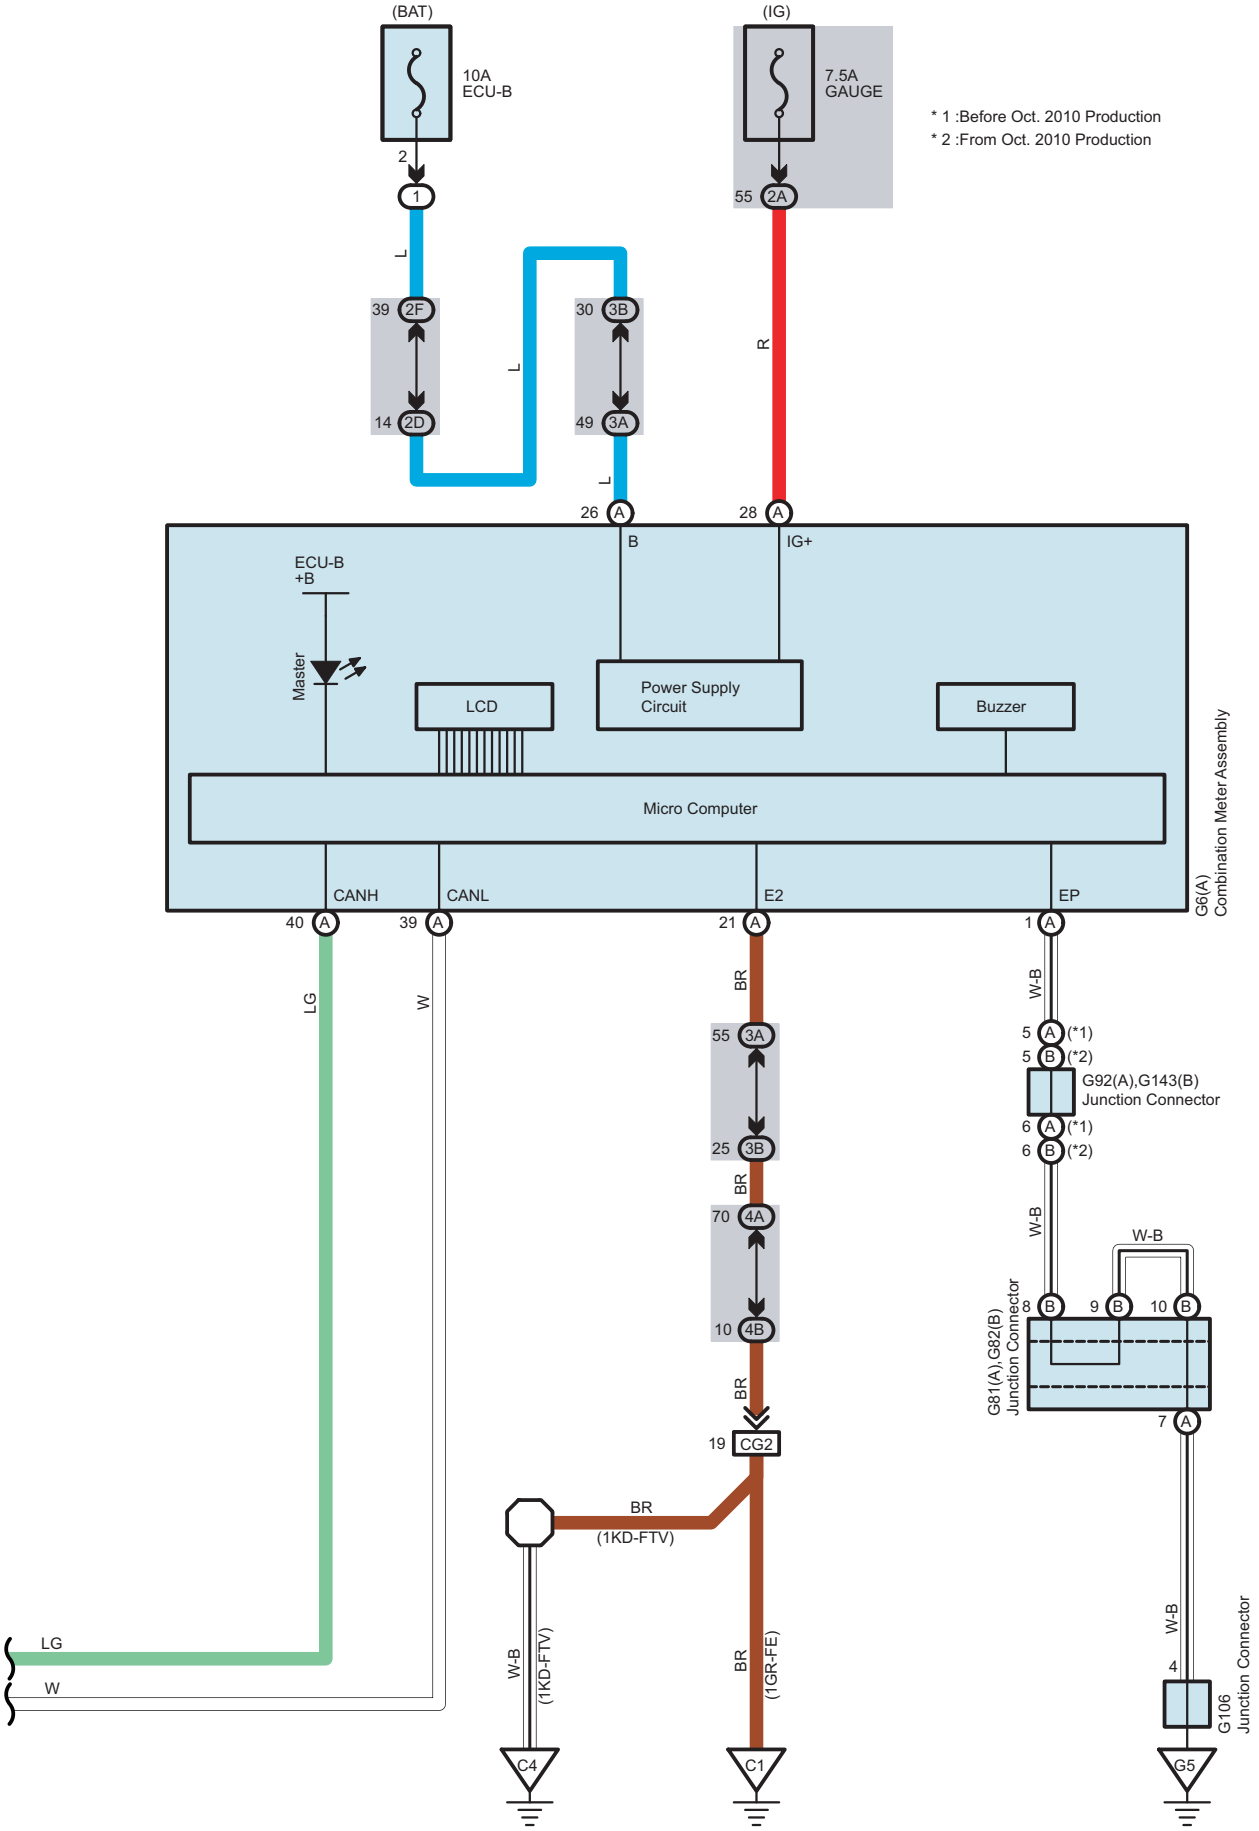
(BAT)
10A
ECU-B
(IG)
7.5A
GAUGE
* 1 :Before Oct. 2010 Production
* 2 :From Oct. 2010 Production
2
1
L
39 2F
14 2D
30 3B
49 3A
L
L
55 2A
R
26 A
28 A
B
IG+
ECU-B
+B
Master
LCD
Power Supply
Circuit
Buzzer
Micro Computer
CANH
CANL
E2
EP
G6(A)
Combination Meter Assembly
40 A
39 A
21 A
1 A
LG
W
BR
W-B
55 3A
25 3B
70 4A
10 4B
19 CG2
5 A (*1)
5 B (*2)
G92(A),G143(B)
Junction Connector
6 A (*1)
6 B (*2)
W-B
G81(A),G82(B)
Junction Connector
8 B
9 B
10 B
7 A
BR
(1KD-FTV)
W-B
(1KD-FTV)
BR
(1GR-FE)
W-B
4
G106
Junction Connector
C4
C1
G5
LG
W


A5
White




A7
Black

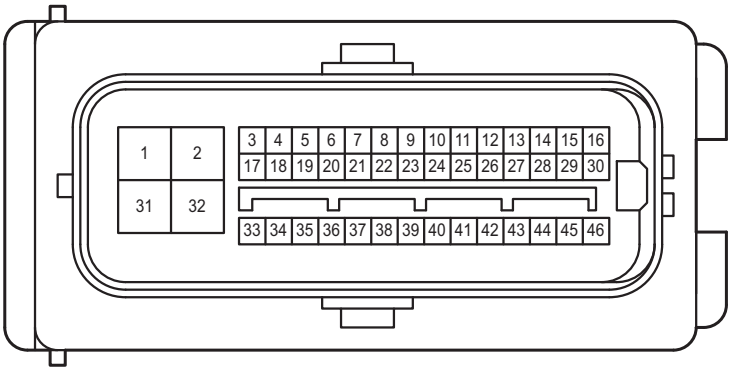

A13
Gray

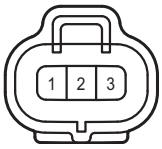

A14
Black

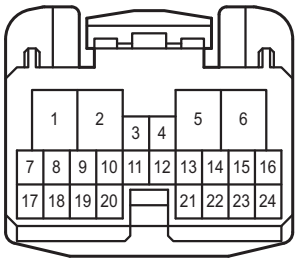


A47
Gray




A48
Gray



A49
Black

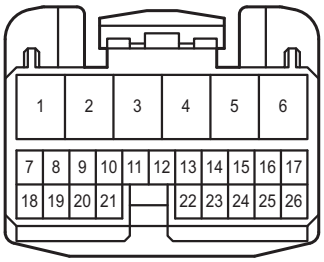

A54
Black

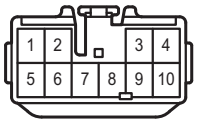

A56
Black




A57
Black




A59
Black




A65
White

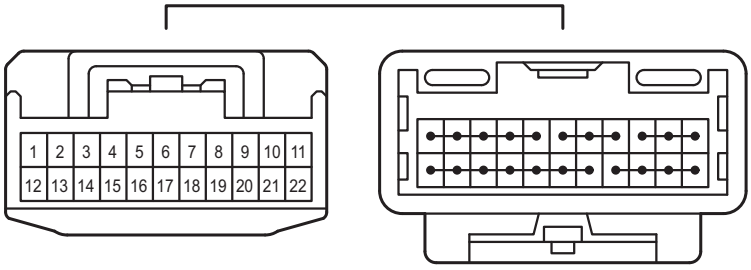


A66
White

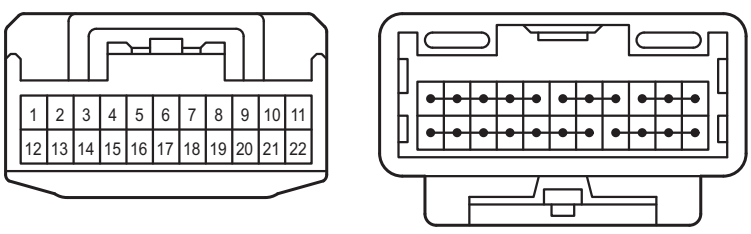


A68
Dark Gray

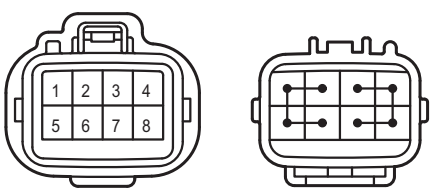


A70
White

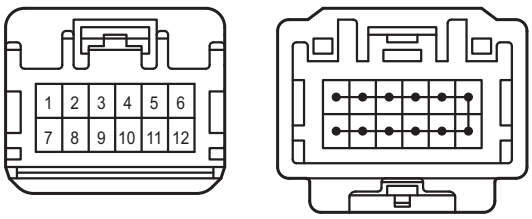


A73
White

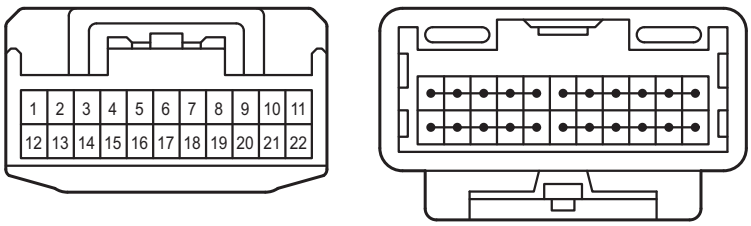


G6
Black

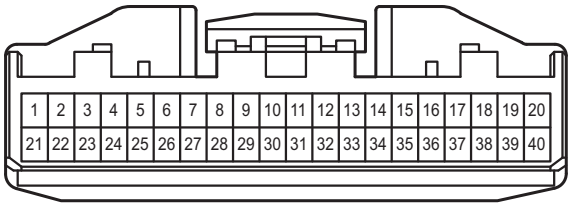


G33
White

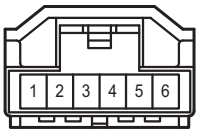


G51
Black

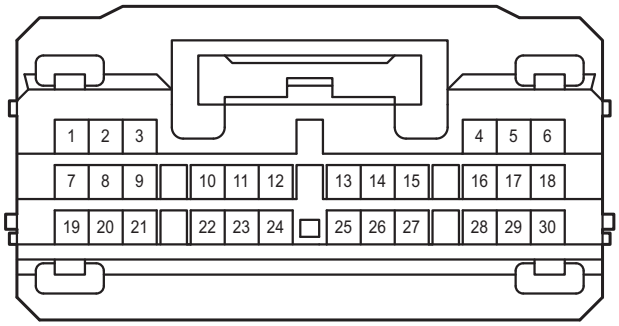


G81
White

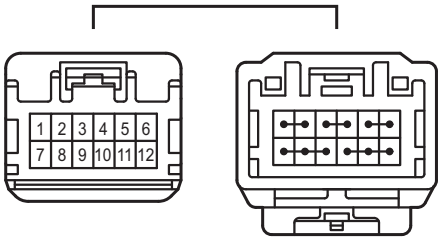


G82
White

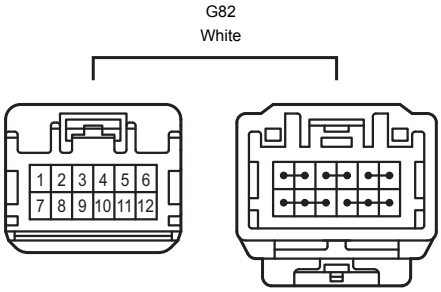


G92
White

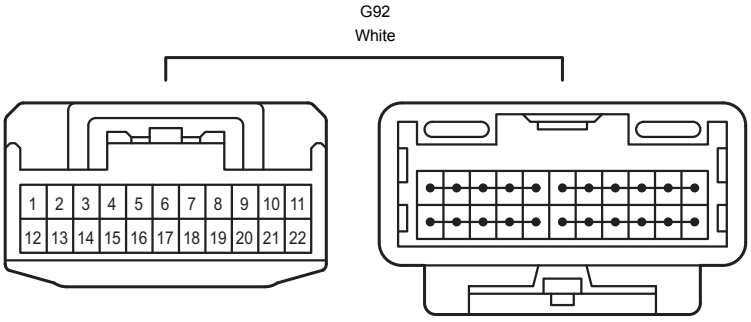


G94
White

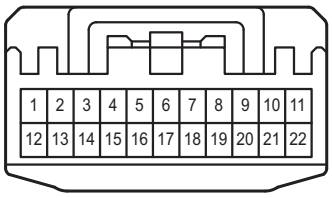


G95
White

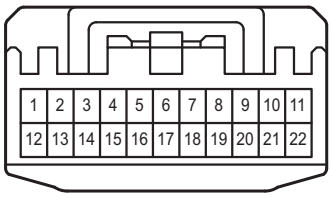


G97
White

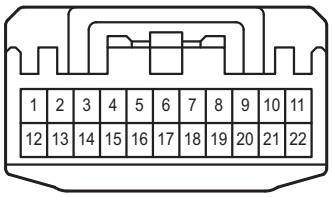


G98
White

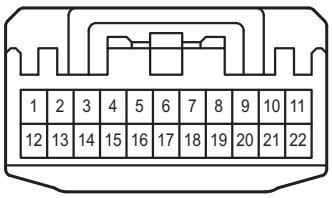


G100
Gray

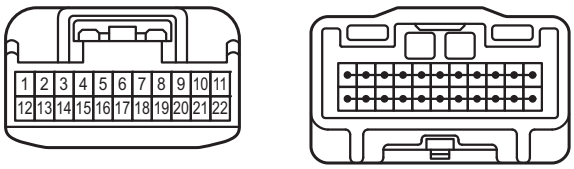


G104
White

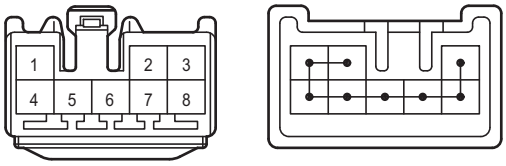


G106
White

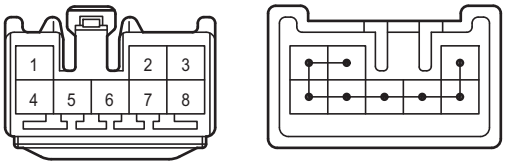


G111
White

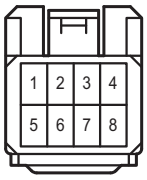


G112
Black

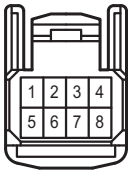

G113
White

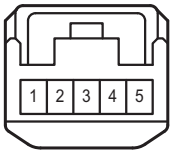


G143
Black

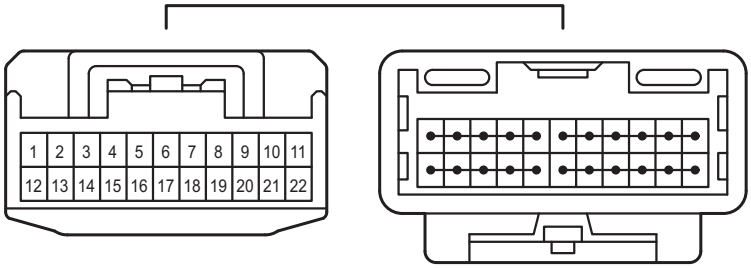


R18
Gray



R19
Black

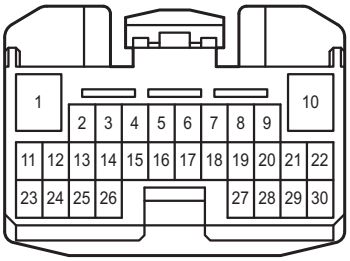

R31
White

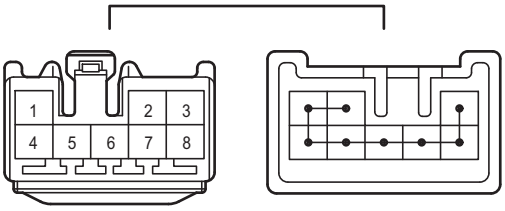

S1
Black



S3
Black



S4
Black



S6
Black



S7
Black




S10
Black




S11
Gray




2 A
White

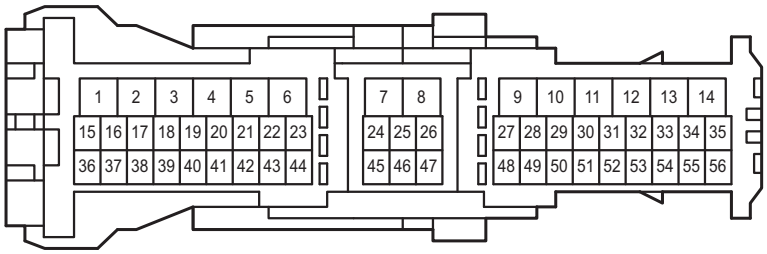


2 D
White

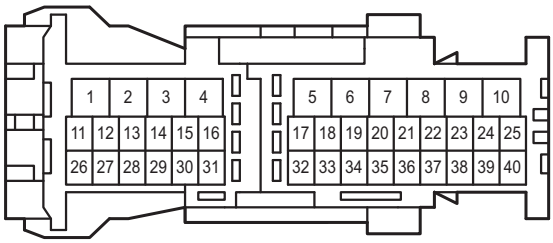


2 F
White

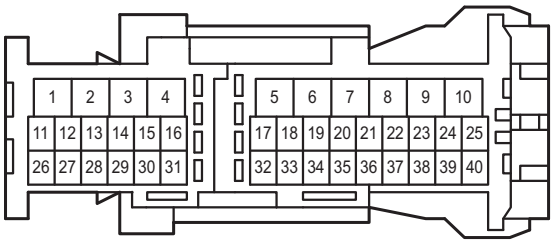


3 A
White

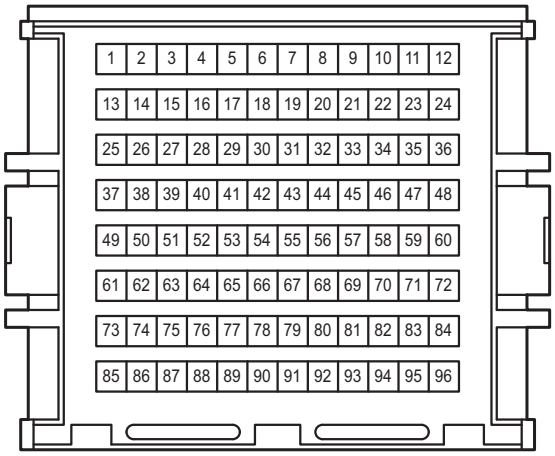


3 B
White

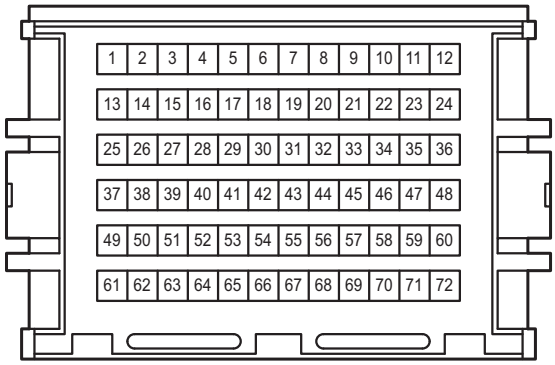


4 A
White

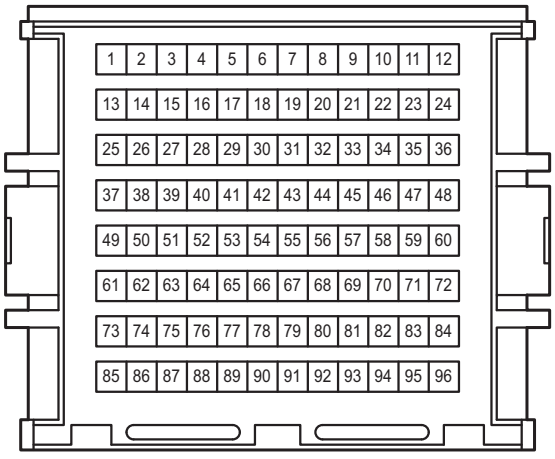


4 B
White

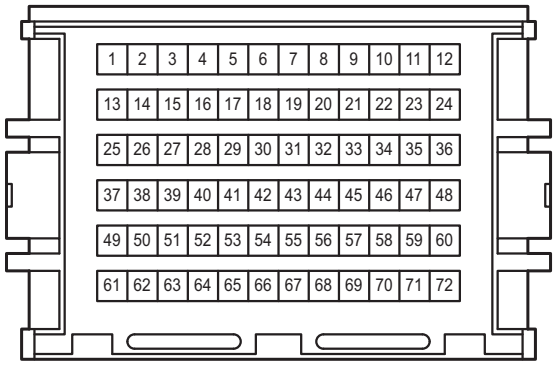


AR1
White

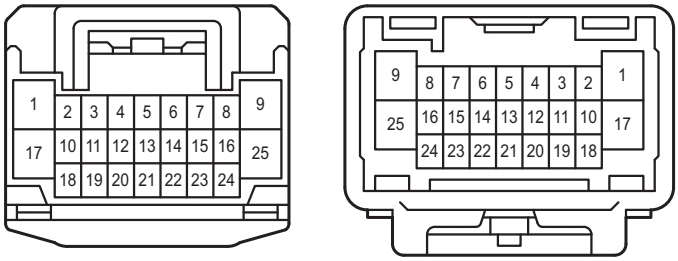


AR2
Gray

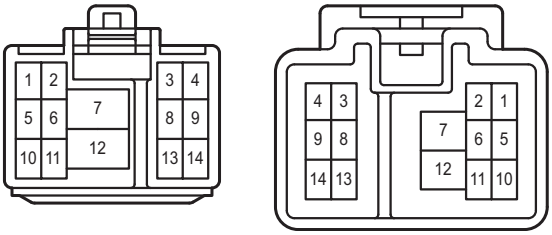


CG2
White

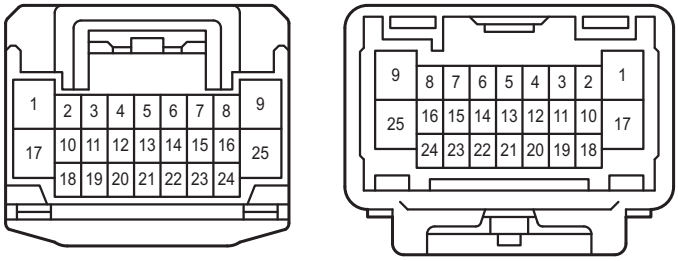

GA1
White

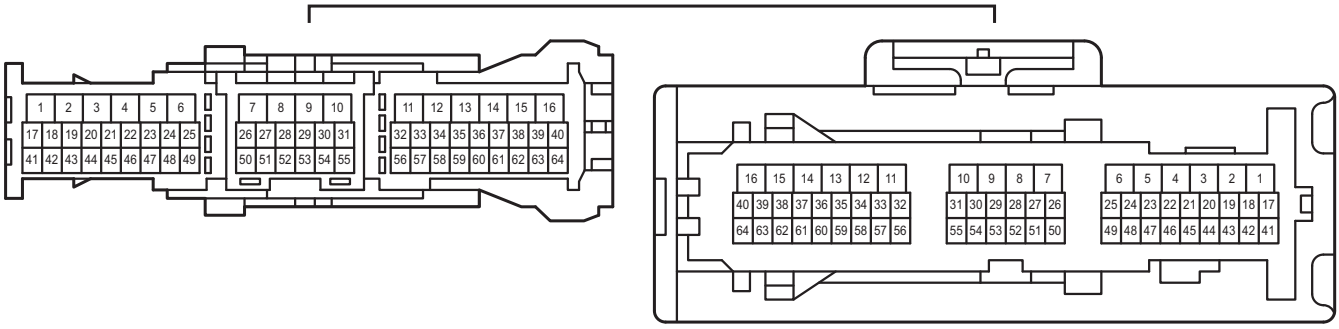


GA2
White

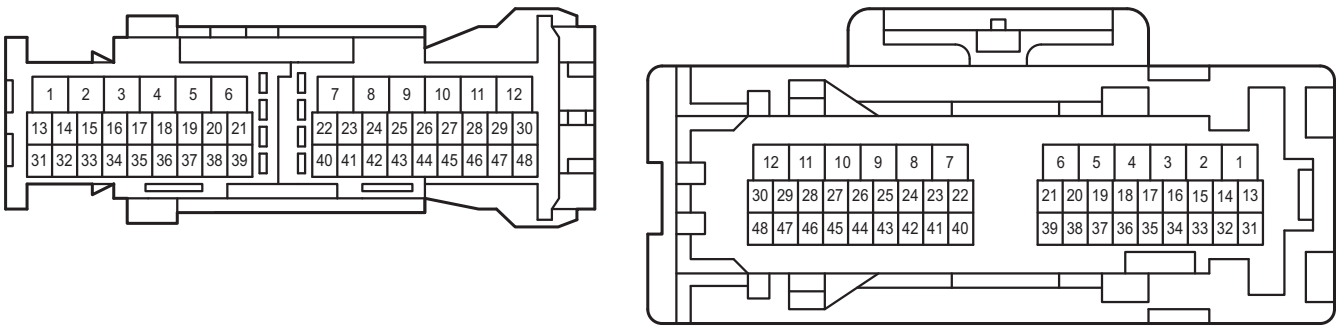


GA6

White

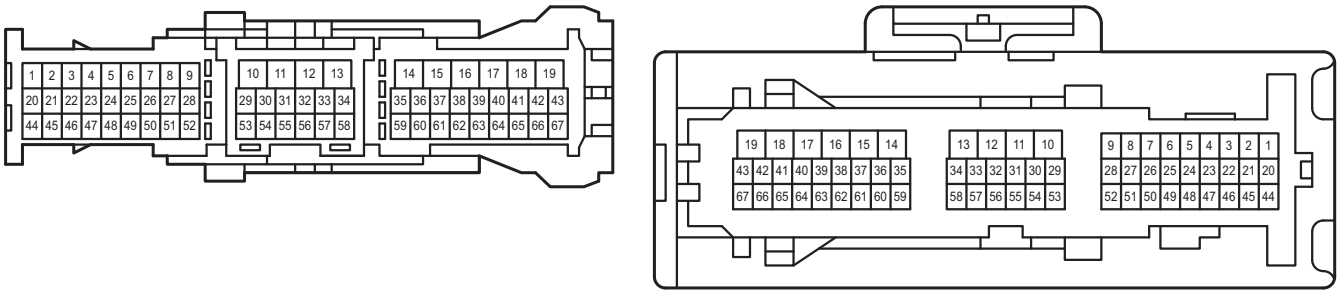

SR1

White

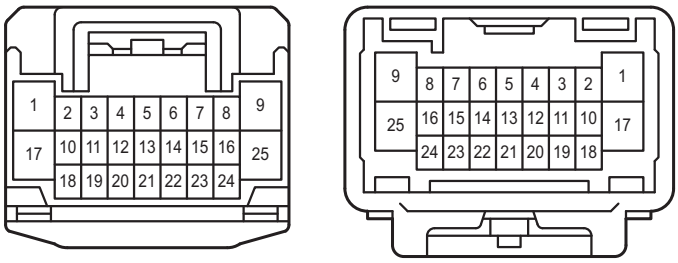

SR2

White

