





(IG)
10A
ECU-IG
NO.2
2
39 2D
L
36 3B
18 3A
14 4A
15 4A
L
L
W
R
R
W
P
W
10 C
7 A
3 C
10 A
2 C
9 A
(A/T)
(M/T)
IG
CANN
CANP
G76(A),G163(C)
Driving Support Switch
Control ECU
5
16
4
15
G133
Junction Connector
P
W
B
W
B
W
40 GA6
41 GA6
GND
SWI1
SWI2
16 A
7 C
3 A
5 C
4 A
14 C
(M/T)
(A/T)
W-B
SB
P
9 A
10 A
DISP
GND1
G40(A),z8(D)
Spiral Cable Sub-Assembly
2 D
3 D
B-W
B
Menu
ENTER
Down
Up
Steering Pad Switch RH
z8(D)
Steering Pad Switch Assembly
23 4A
68 4A
W-B
3
G106
Junction
Connector
G5
B
W
9
20
A72
Junction Connector
11
22
10
21
R
W
LG
W
4 A
3 A
39 GA6
38 GA6
A47(A),A48(B)
Short Connector
4 B
3 B
LG
W
R
W
LG
11
25
CANH
CANL
FL-
FL+
FR-
FR+
RL-
RL+
RR-
RR+
4
18
17
3
6
20
19
5
G
R
L
P
G
R
W
B
A7
Brake Actuator
Assembly
Speed Sensors

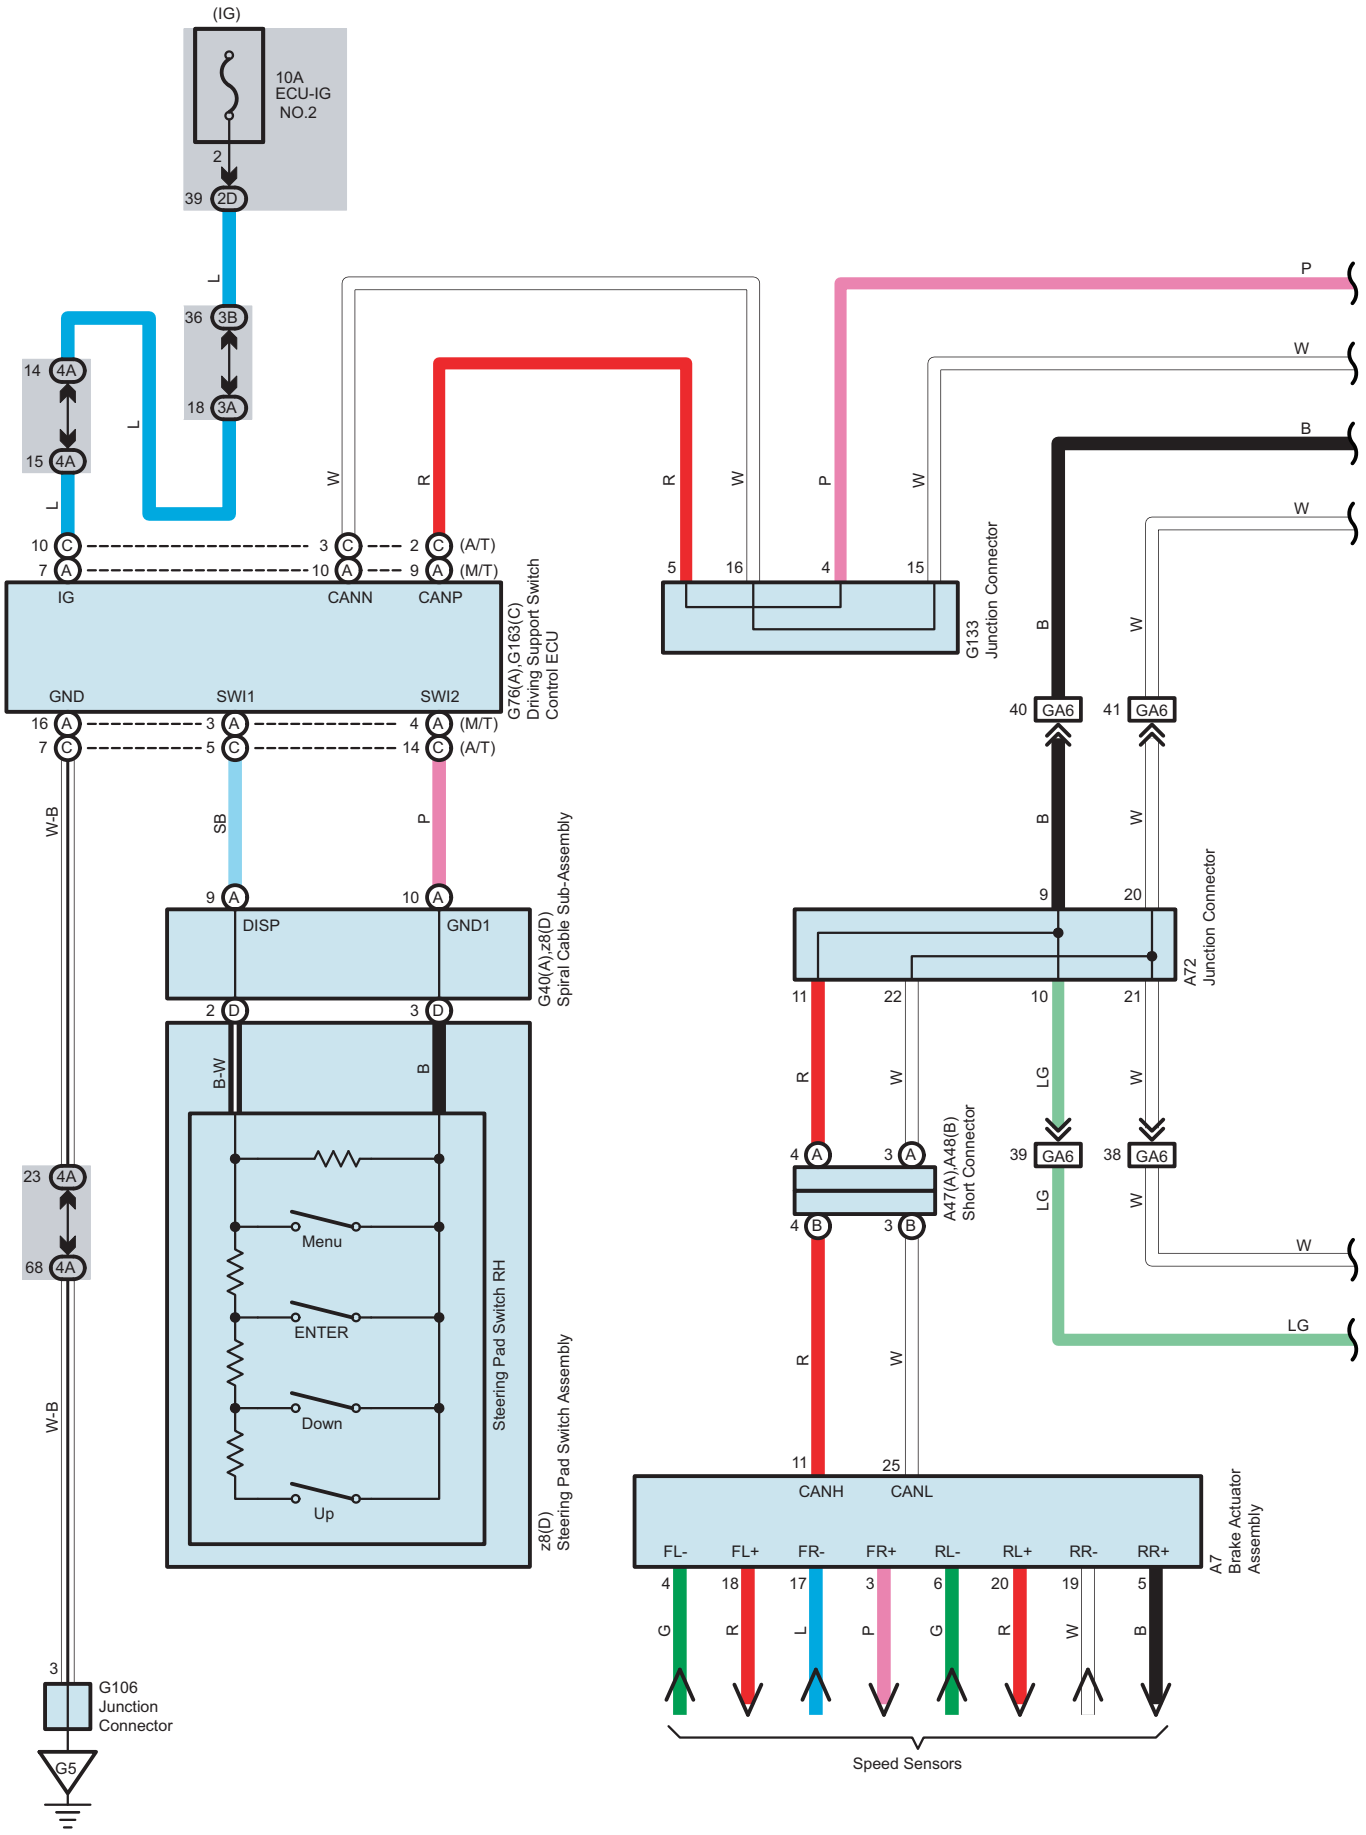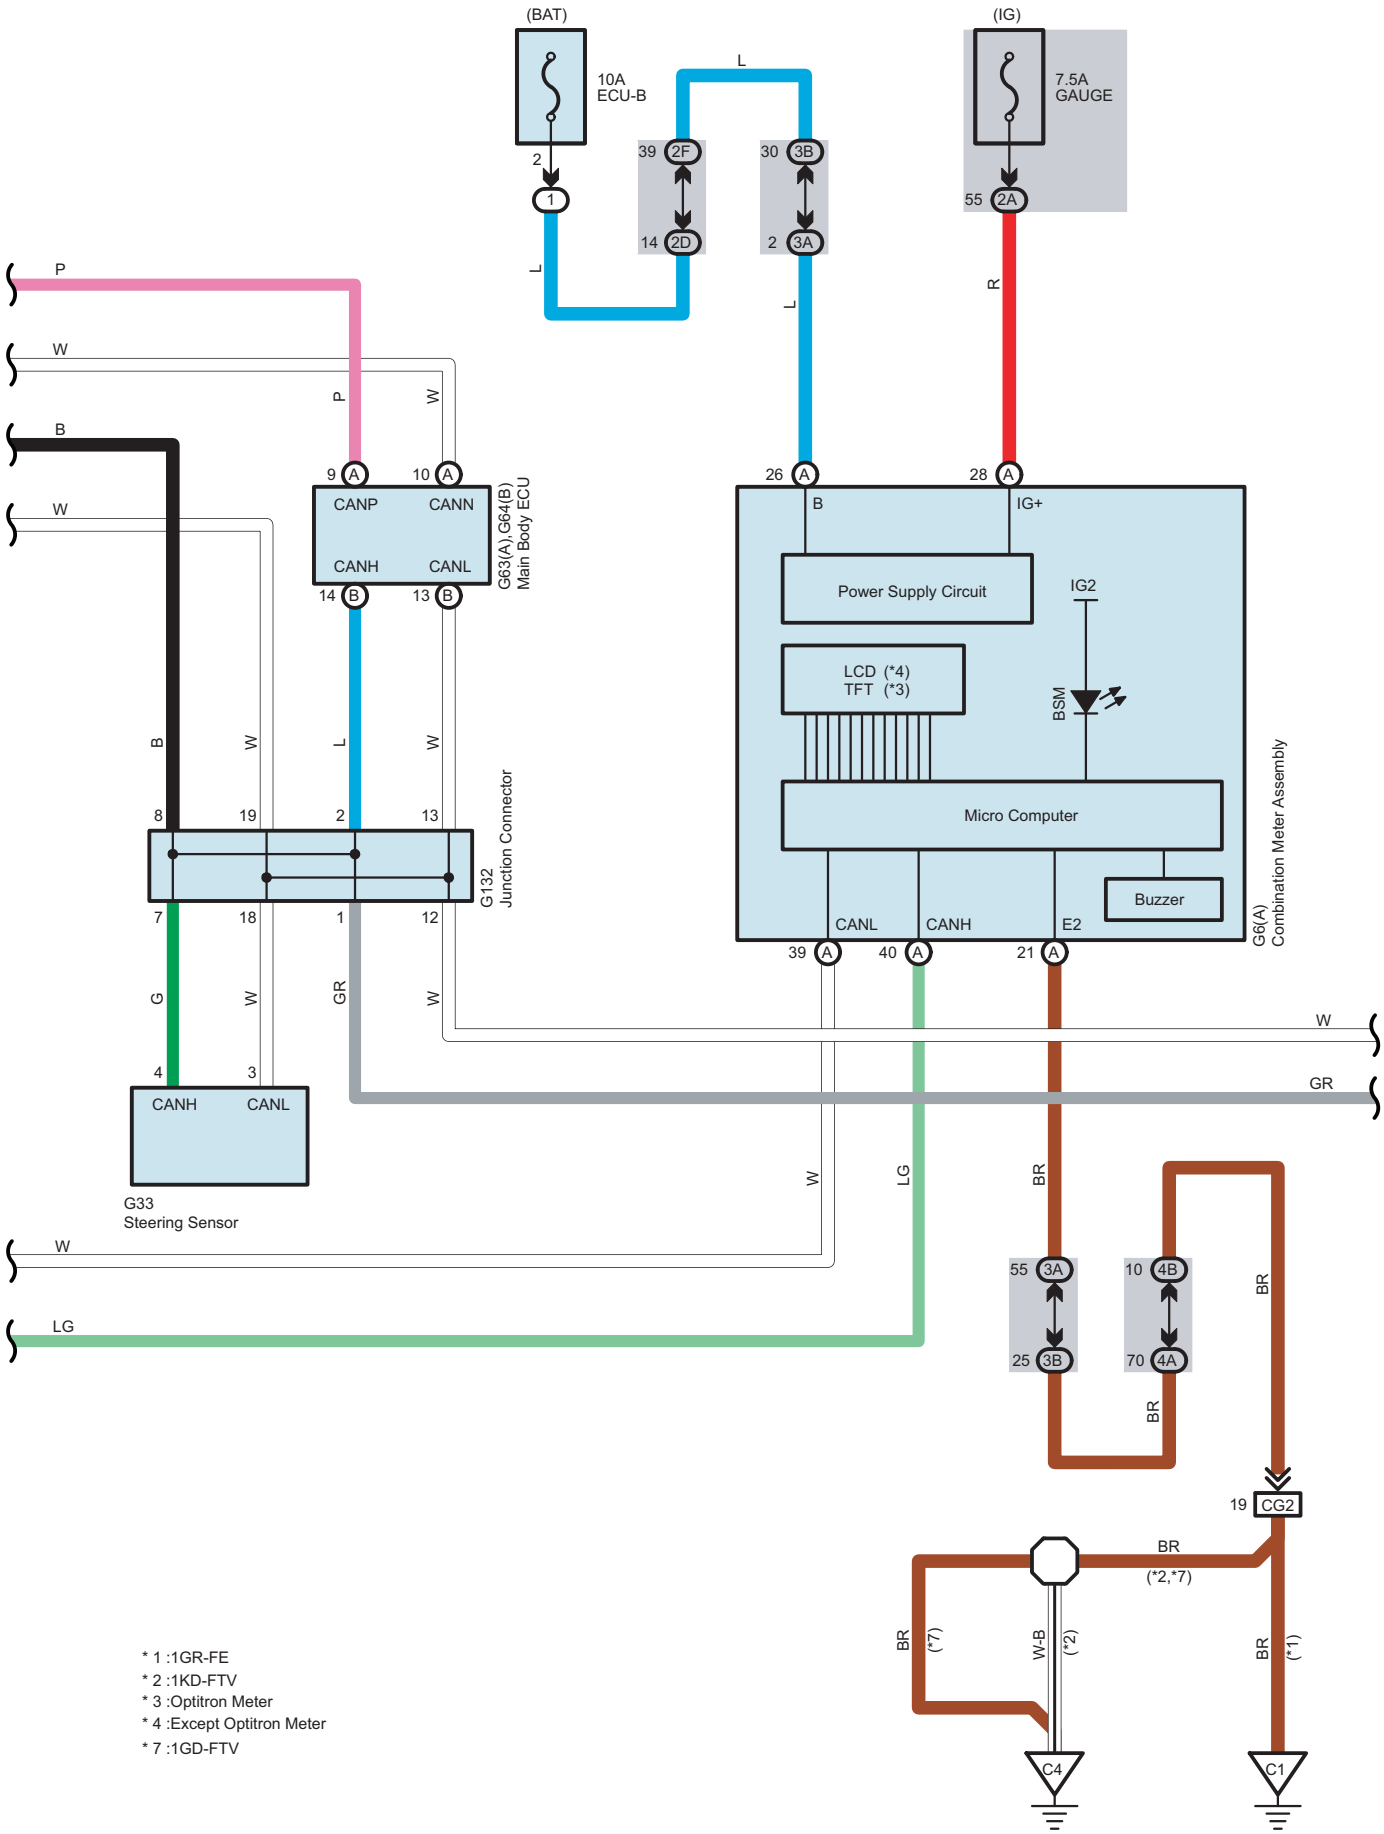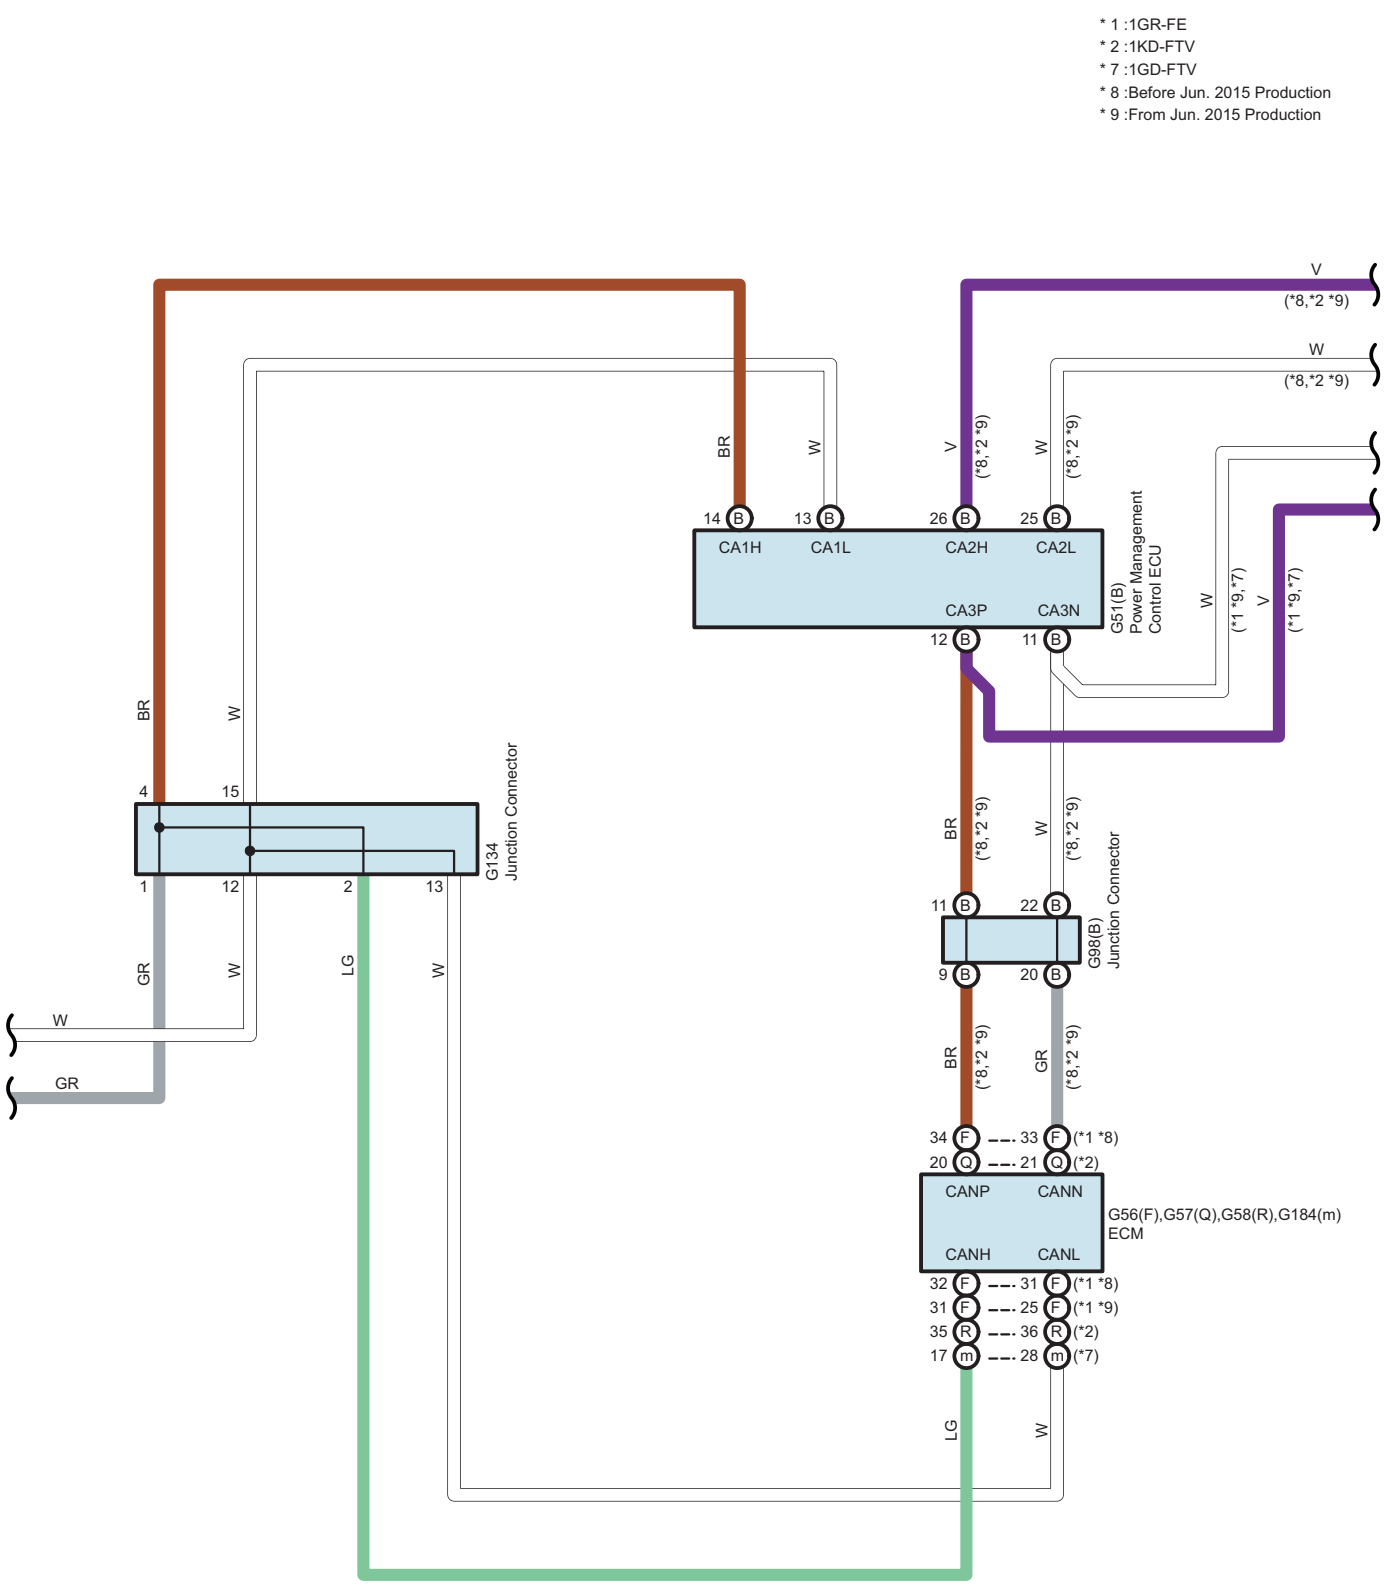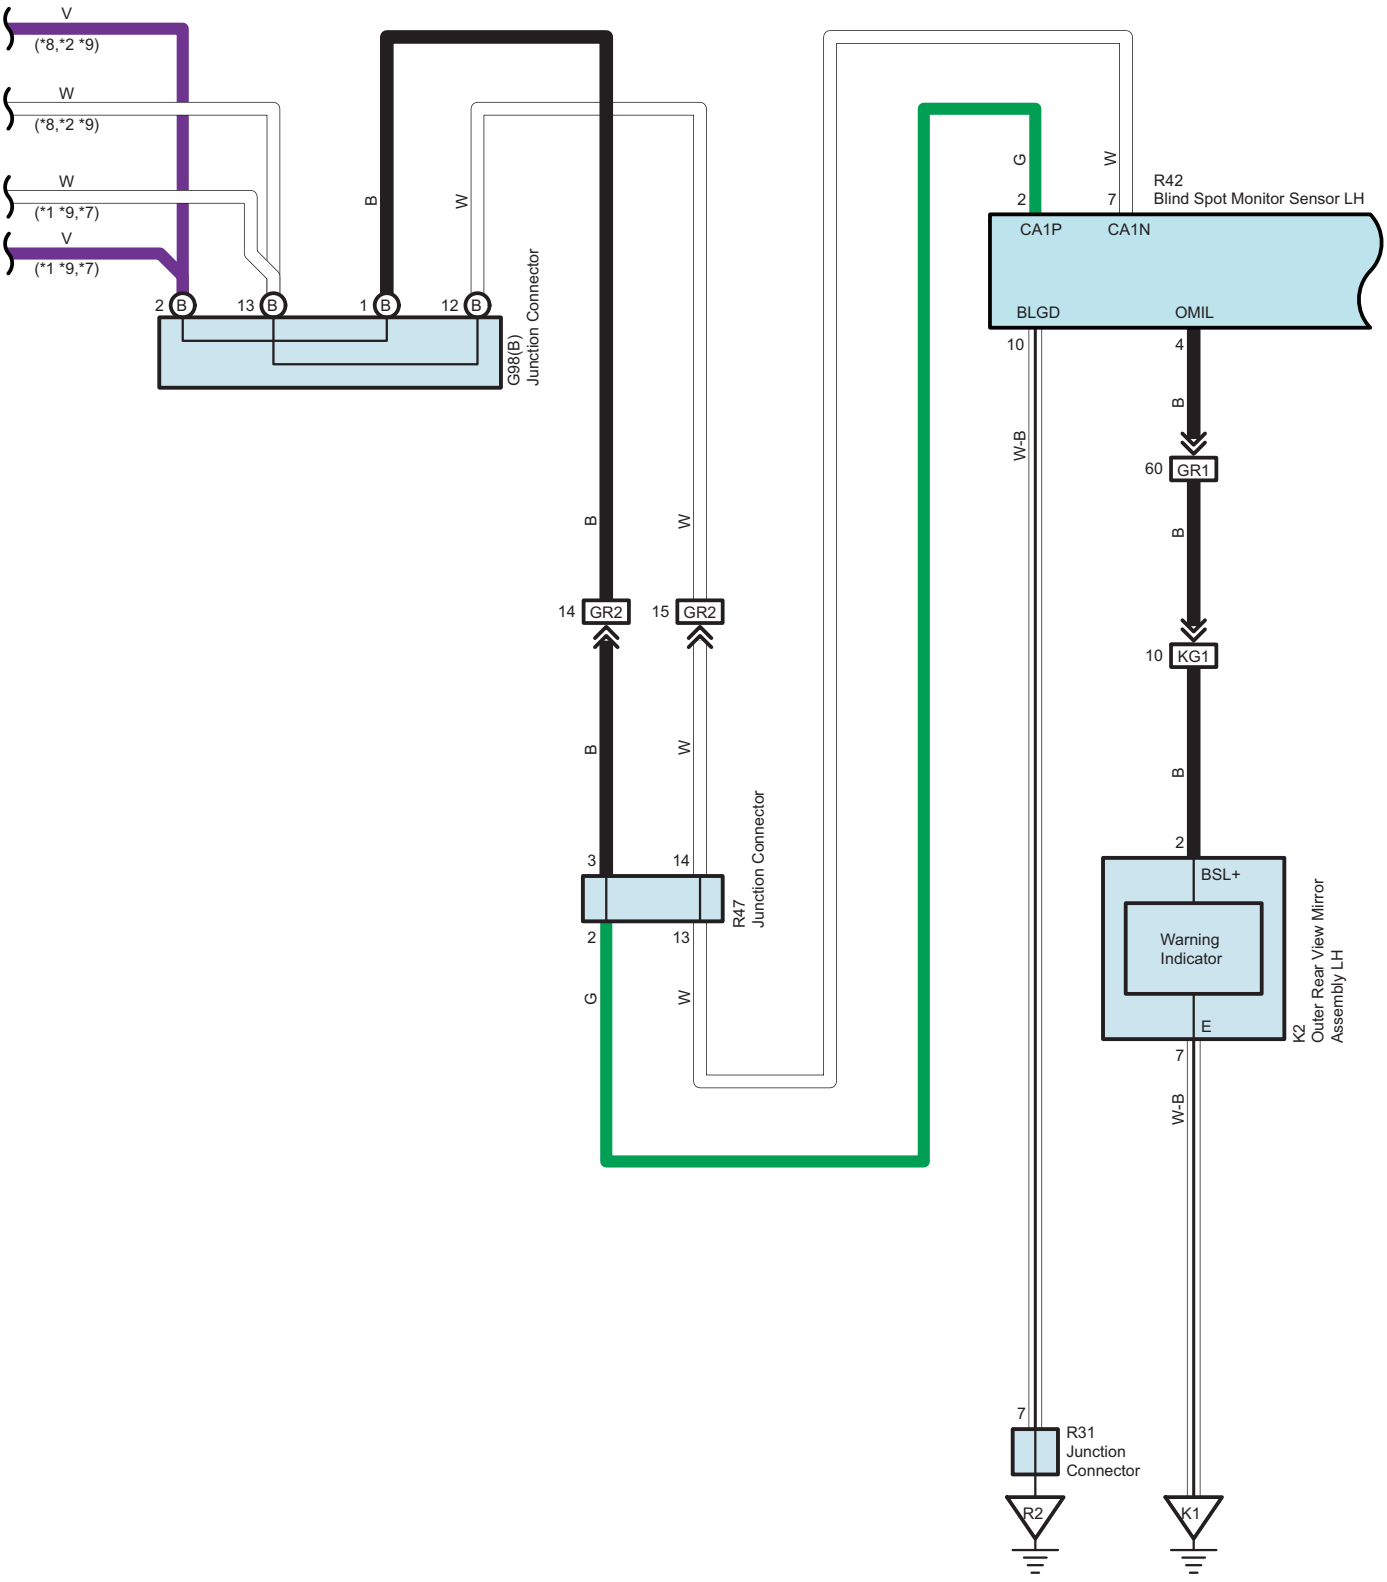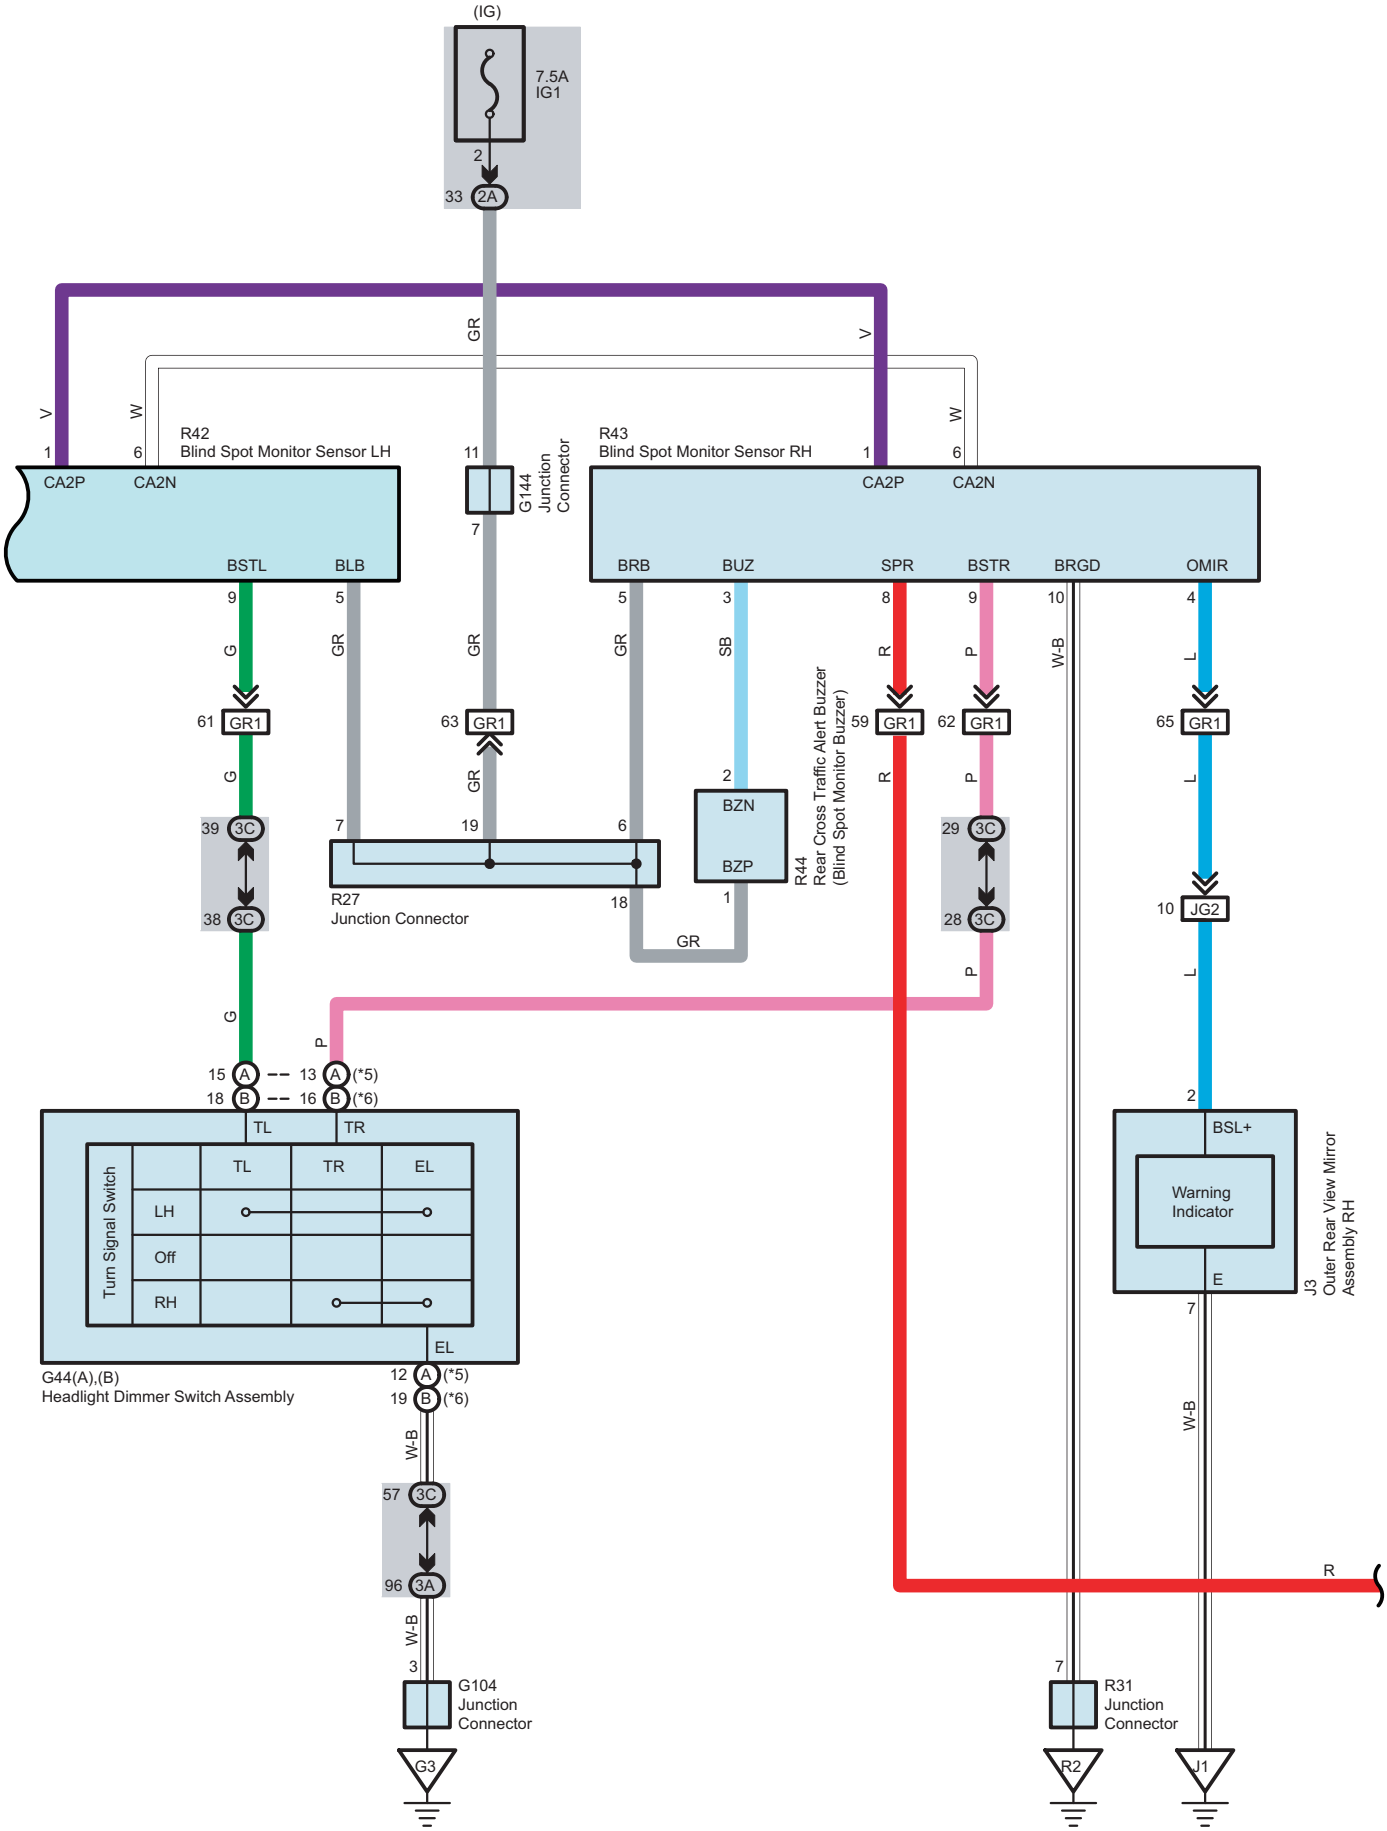


* 1 :1GR-FE
* 2 :1KD-FTV
* 3 :Optitron Meter
* 4 :Except Optitron Meter
* 7 :1GD-FTV


* 1 :1GR-FE
* 2 :1KD-FTV
* 7 :1GD-FTV
* 8 :Before Jun. 2015 Production
* 9 :From Jun. 2015 Production
V
(*8,*2 *9)
W
(*8,*2 *9)
BR
W
V
(*8,*2 *9)
W
(*8,*2 *9)
14 B
13 B
26 B
25 B
CA1H
CA1L
CA2H
CA2L
CA3P
CA3N
12 B
11 B
G51(B)
Power Management
Control ECU
W
(*1 *9,*7)
V
(*1 *9,*7)
BR
W
4
15
1
12
2
13
G134
Junction Connector
BR
(*8,*2 *9)
W
(*8,*2 *9)
11 B
22 B
9 B
20 B
G98(B)
Junction Connector
GR
W
LG
W
W
GR
BR
(*8,*2 *9)
GR
(*8,*2 *9)
34 F
33 F
(*1 *8)
20 Q
21 Q
(*2)
CANP
CANN
CANH
CANL
G56(F),G57(Q),G58(R),G184(m)
ECM
32 F
31 F
(*1 *8)
31 F
25 F
(*1 *9)
35 R
36 R
(*2)
17 m
28 m
(*7)
LG
W



V
(*8,*2 *9)
W
(*8,*2 *9)
W
(*1 *9,*7)
V
(*1 *9,*7)
2 B
13 B
1 B
12 B
G98(B)
Junction Connector
B
W
14 GR2
15 GR2
3
14
2
13
R47
Junction Connector
G
W
R42
Blind Spot Monitor Sensor LH
2
7
CA1P
CA1N
BLGD
OMIL
10
4
W-B
B
60 GR1
10 KG1
2
BSL+
Warning
Indicator
E
K2
Outer Rear View Mirror
Assembly LH
7
R31
Junction
Connector
R2
K1


(IG)
7.5A
IG1
2
33 2A
GR
V
W
R42
Blind Spot Monitor Sensor LH
CA2P
CA2N
BSTL
BLB
11
G144
Junction
Connector
7
R43
Blind Spot Monitor Sensor RH
BRB
BUZ
SPR
BSTR
BRGD
OMIR
G
61 GR1
63 GR1
39 3C
38 3C
R27
Junction Connector
19
6
18
BZN
BZP
R44
Rear Cross Traffic Alert Buzzer
(Blind Spot Monitor Buzzer)
SB
59 GR1
62 GR1
29 3C
28 3C
W-B
65 GR1
10 JG2
15 A
18 B
13 A (*5)
16 B (*6)
TL
TR
Turn Signal Switch
LH
Off
RH
EL
G44(A),(B)
Headlight Dimmer Switch Assembly
12 A (*5)
19 B (*6)
57 3C
96 3A
G104
Junction
Connector
G3
BSL+
Warning
Indicator
E
J3
Outer Rear View Mirror
Assembly RH
R31
Junction
Connector
R2
J1
R

* 2 :1KD-FTV
* 5 :Headlight Dimmer Switch Assembly LH Side Type
* 6 :Headlight Dimmer Switch Assembly RH Side Type
* 7 :1GD-FTV
* 8 :Before Jun. 2015 Production
* 9 :From Jun. 2015 Production

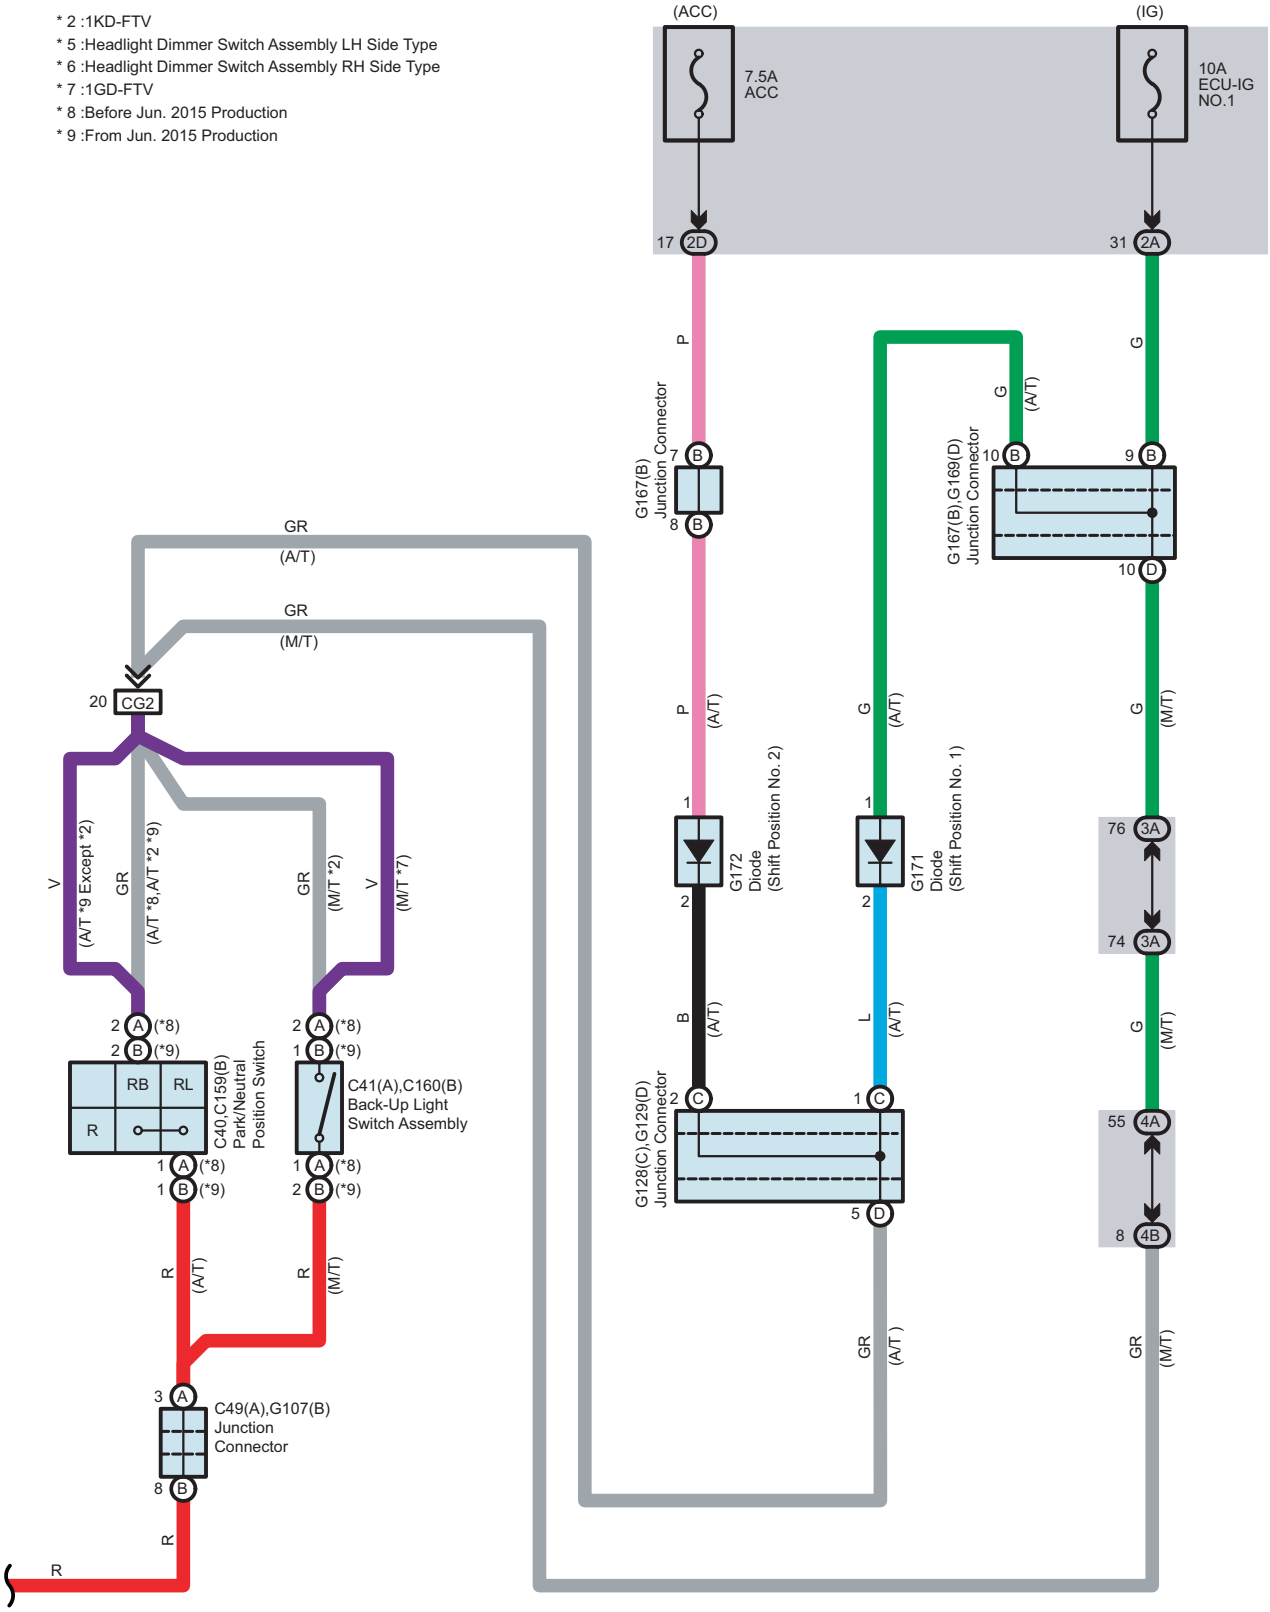

A7
Black

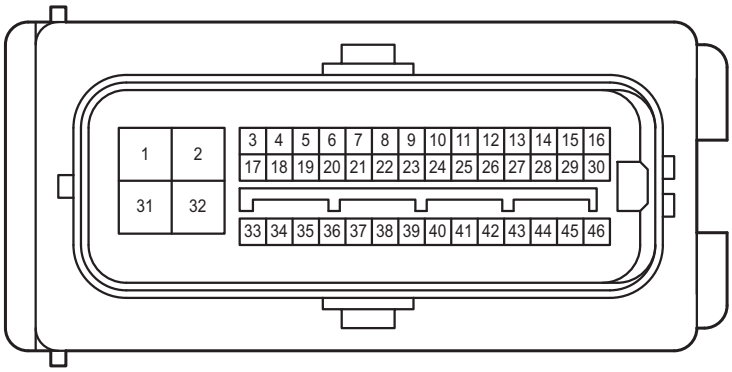


A47
Gray




A48
Gray




A72
White

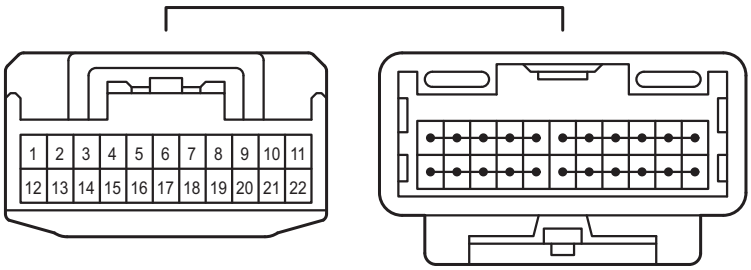


C40
Gray

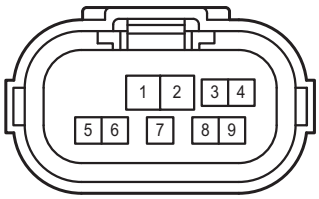


C41
Gray

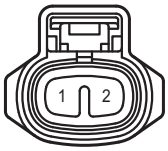

C49
Blue

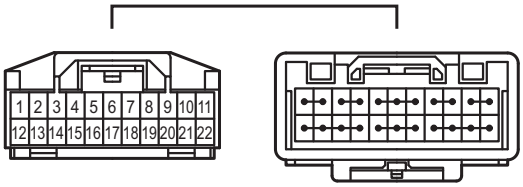


C159
Gray

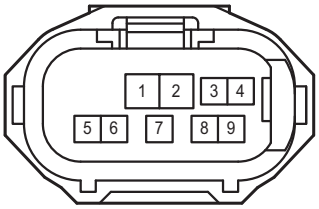


C160
White



G6
Black

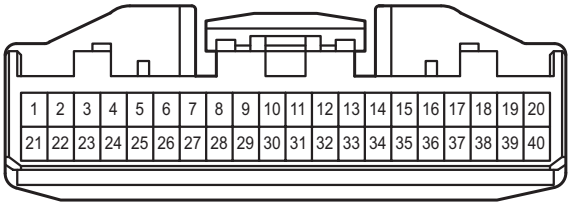


G33
White

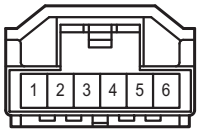


G40
Black




G44
White

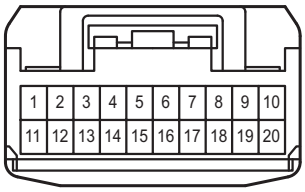


G51
Black

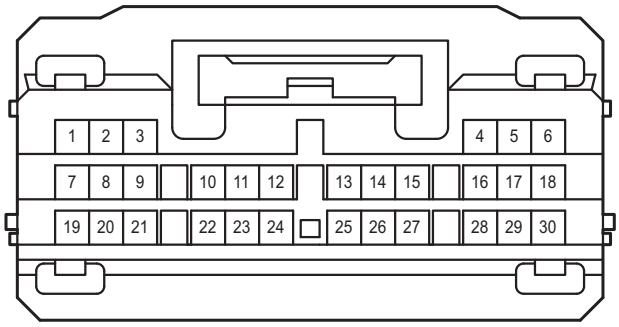


G56
White

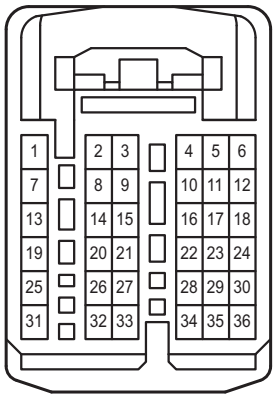


G57
White

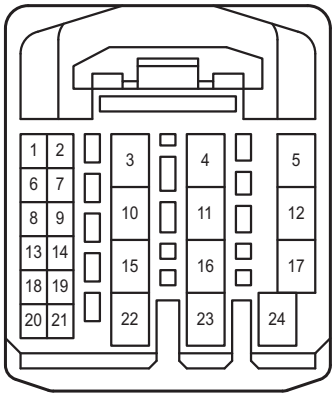


G58
White

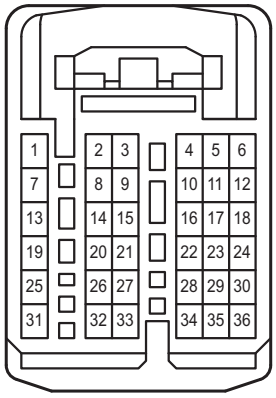


G63
White

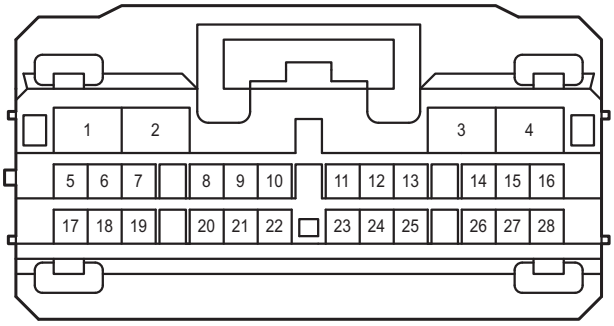


G64
White

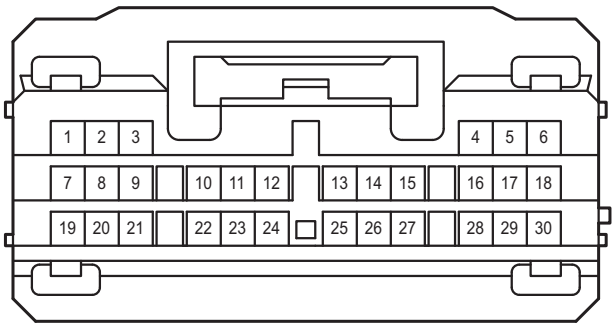


G76
Black

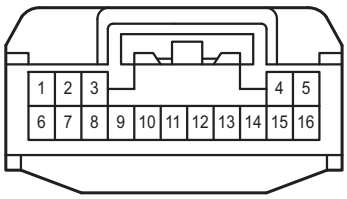


G98
White

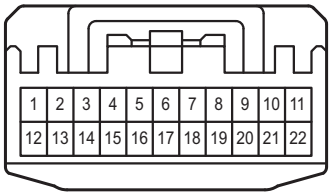


G104
White

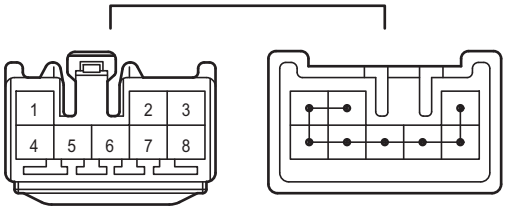


G106
White

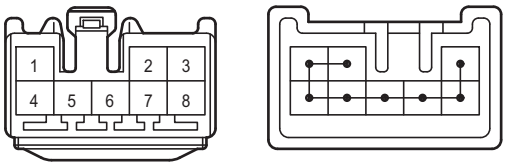


G107
Blue

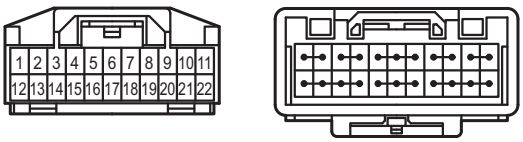


G128
Black

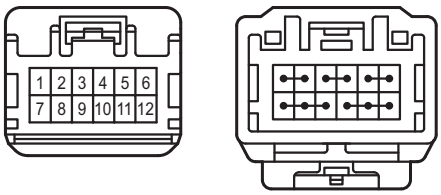


G129
Black

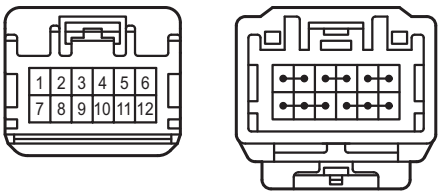


G132
Gray

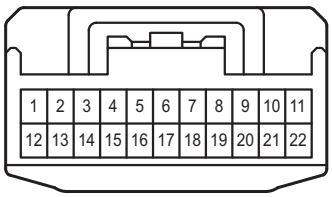


G133
White

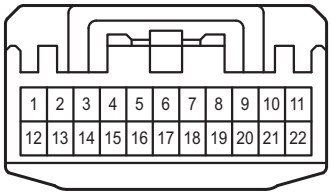

G134
Gray

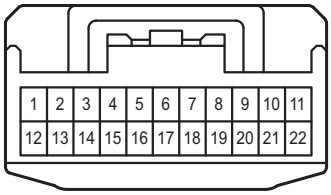


G144
White

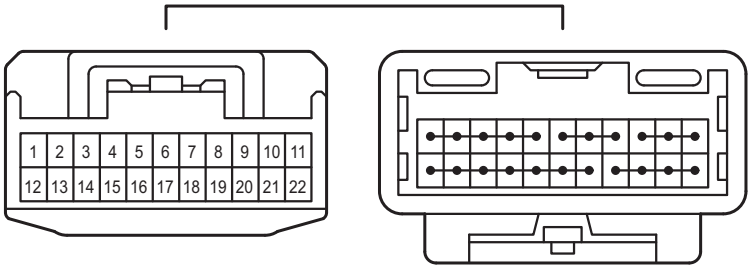


G163
White



G167
Blue

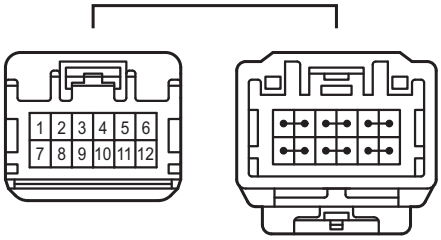

G169
Blue

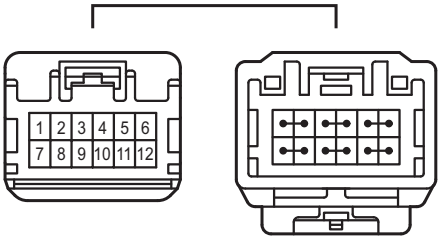


G171
Gray




G172
Gray




G184
White

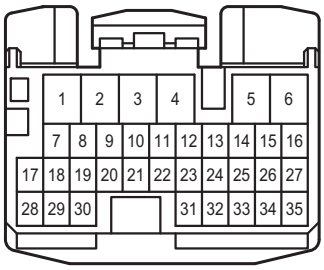


J3
White

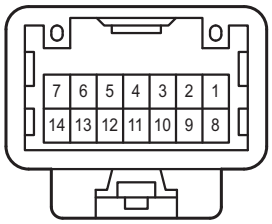


K2
White

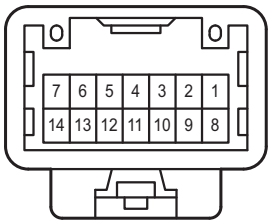

R27
Dark Gray

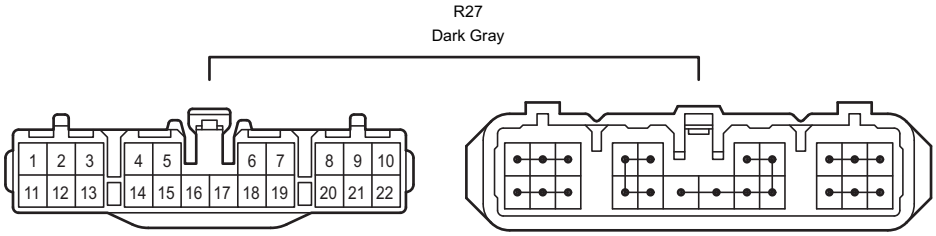

R31
White

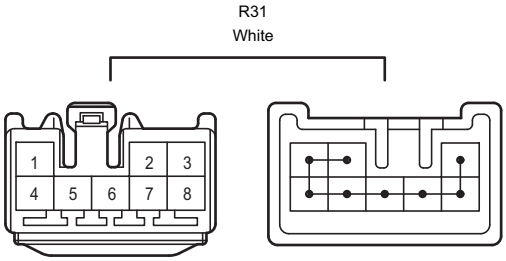

R42
Black




R43
Black




R44
Black




R47
Gray

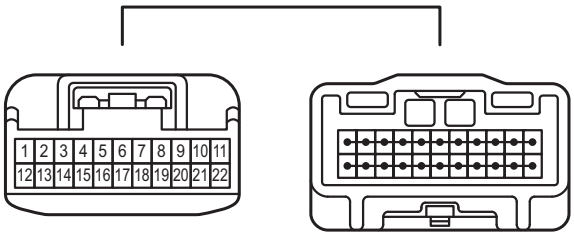


z8
White

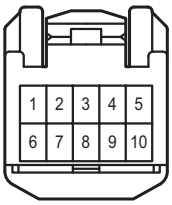


2 A
White

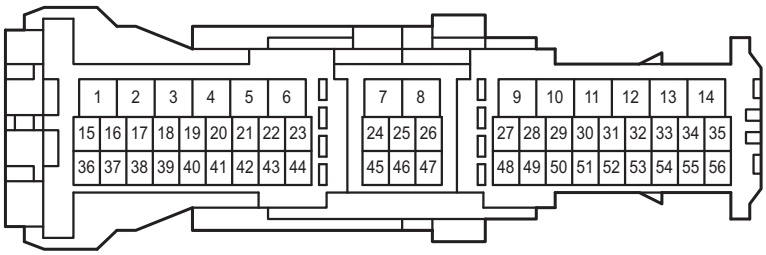


2 D
White

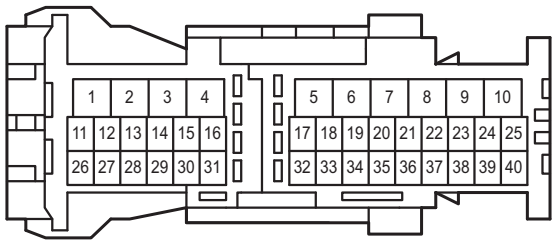


2 F
White

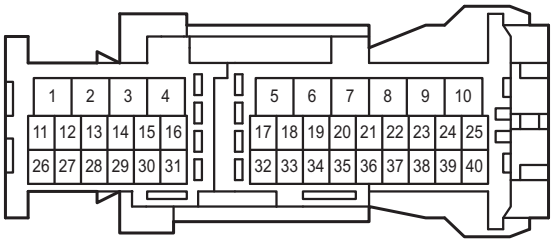


3 A
White

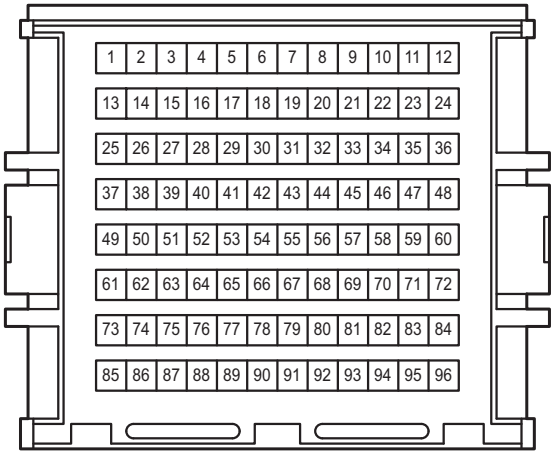


3 B
White

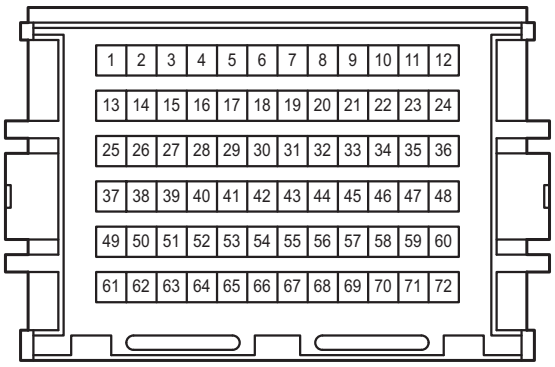


3 C
White

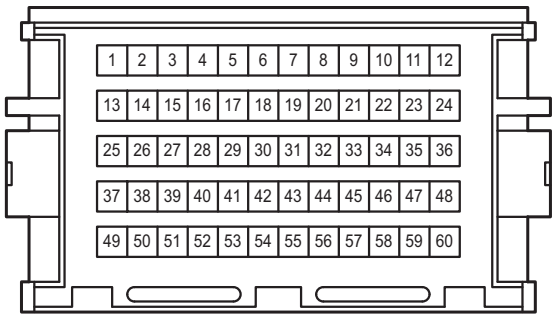

4 A
White

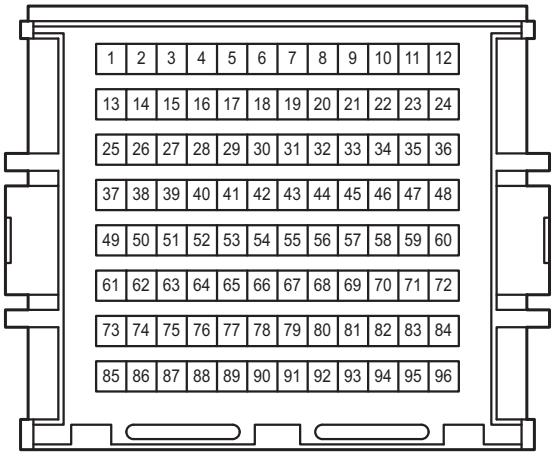


4 B
White

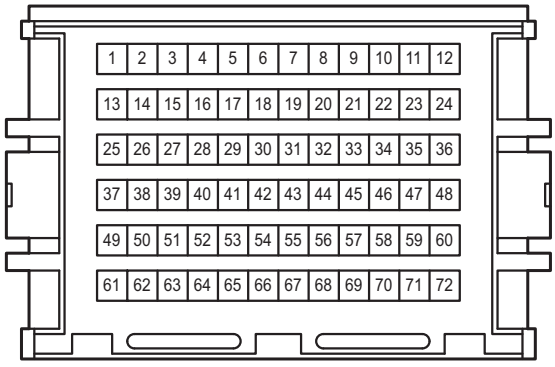


CG2

White

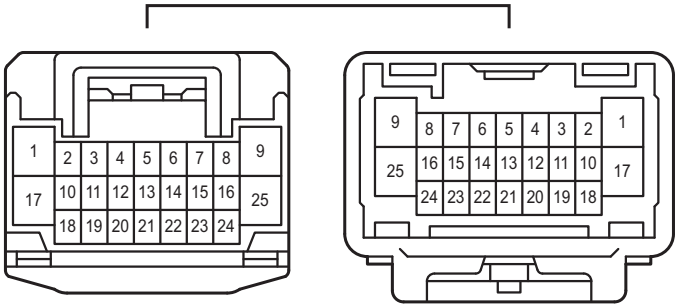


GA6

White

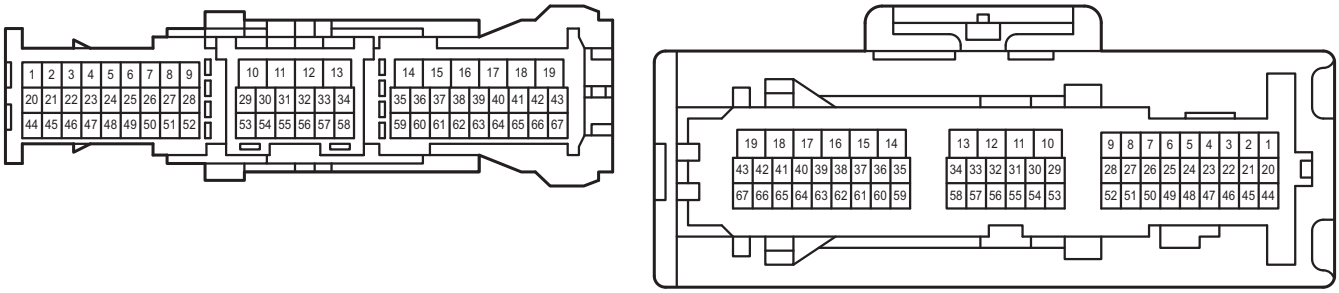


GR1

White

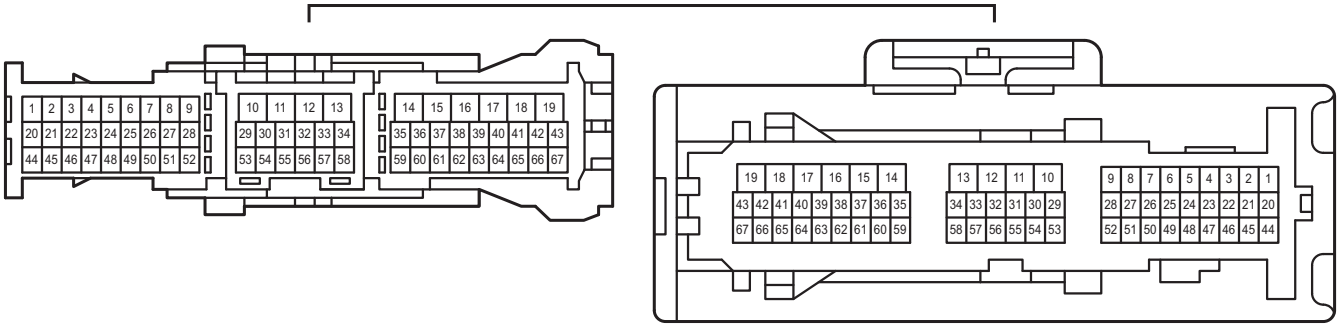


GR2

Gray

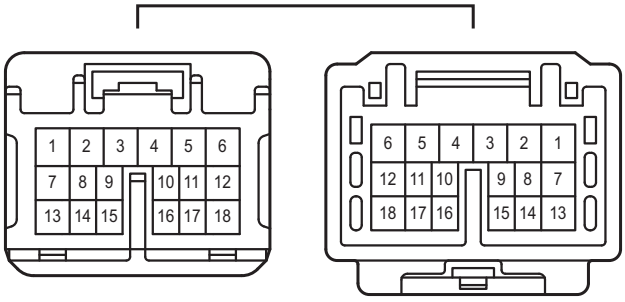

JG2

White

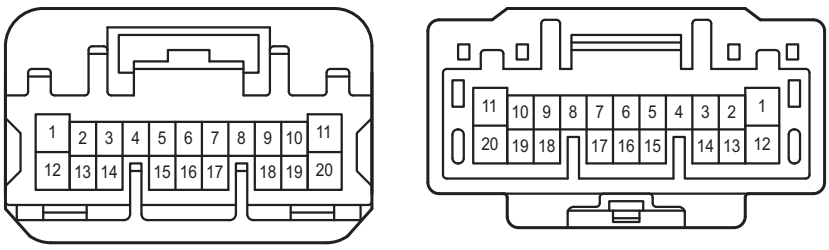

KG1

Gray

