



* 1 :1GR-FE
* 2 :w/ Entry & Start System
* 3 :1KD-FTV
* 4 :5L-E
* 5 :Except 5L-E
* 6 :w/ Auto Wiper System
* 7 :Optitron Meter
* 8 :w/ Tail Cancel Switch
* 9 :Radio & Display Receiver Assembly Type
*10 :Navigation Receiver Assembly Type
*11 :5-Door
*12 :3-Door
*16 :Except Optitron Mefer
*19 :Headlight Dimmer Switch LH Side Type
*20 :Headlight Dimmer Switch RH Side Type
*28 :w/ Stereo Component Amplifier Assembly
*31 :w/ Tire Pressure Warning System
*32 :w/ Parking Assist (TOYOTA Parking Assist-Sensor)
* 33 :Radio Receiver Assembly Type
* 34 :1GD-FTV
* 35 :1GD-FTV w/ Urea SCR
R
G6(A),G7(B)
Combination Meter Assembly
Speedometer
Tachometer
Fuel
Temperature
Micro Computer
LCD (*16)
TFT (*7)
Buzzer
+S
E2
R41
Tire Pressure Warning ECU and Receiver
G70(B)
Transmission Control ECU Assembly
G120(A)
Windshield Wiper Switch Assembly
G51(B)
Power Management Control ECU
SPD1
SPD
GR3
IG1
GH1
CG2
H24(A),H25(B)
Junction Connector
I1
Clearance Warning ECU Assembly
H56(E)
Navigation Receiver Assembly
H51(E)
Radio & Display Receiver Assembly
H47(C)
Radio Receiver Assembly
H63(A)
Stereo Component Amplifier Assembly
C4
C6
C1
W-B
BR
(A/T *3)
(*4)
(*5)
(*6)
(*9)
(*10)
(*28)
(*31)
(*32)
(*33)
(*34)
(*1)
(*3, *34)
(*19)
(*20)


R
R
(IG)
7.5A
GAUGE
55 2A
(BAT)
10A
ECU-B
2
1
L
R
L
2 3A
30 3B
39 2F
14 2D
L
Turn Signal
Flasher Assembly
Y
G
28 A
IG+
26 A
B
19 A
B
20 A
B
G6(A),G7(B)
Combination Meter Assembly
+B
ECU-B
+B
Power Supply Circuit
Turn LH
Turn RH
Door
Tail
Beam
Rear Fog
Front Fog
Master (*7, *16 *35)
Smart Key (*2 *16)
Micro Computer
TIRE
EC
L
E
TC
SW1
SW2
SW3
RSET
16 B
Y
(*31)
59 GQ1
Y
(*31)
12 RQ1
Y
(*31)
5
IND
17 B
BR
(*31)
58 GQ1
BR
(*31)
7 RQ1 (*12)
10 RQ1 (*11)
BR
(*31)
9
GND3
R41
Tire Pressure Warning
ECU and Receiver
9 A
B
16 GR1
W
(*11)
W
(*12)
2 SR2
W
(*11)
R40
Fuel Sender
Gauge Assembly
3
Gauge
1
2
Gauge
3
S5
Fuel Sender
Gauge Assembly
24 A
W
17 GR1
B
(*12)
B
(*11)
1 SR2
B
(*11)
10 A
W
(*8)
7
TC
(*8)
(*8)
Tail Cancel
Switch
6 A
B
8
T
7 A
GR
6
RV
22 A
LG
4
E
11 A
P
1
A/B
ODO/TRIP
G16
Trip Switch

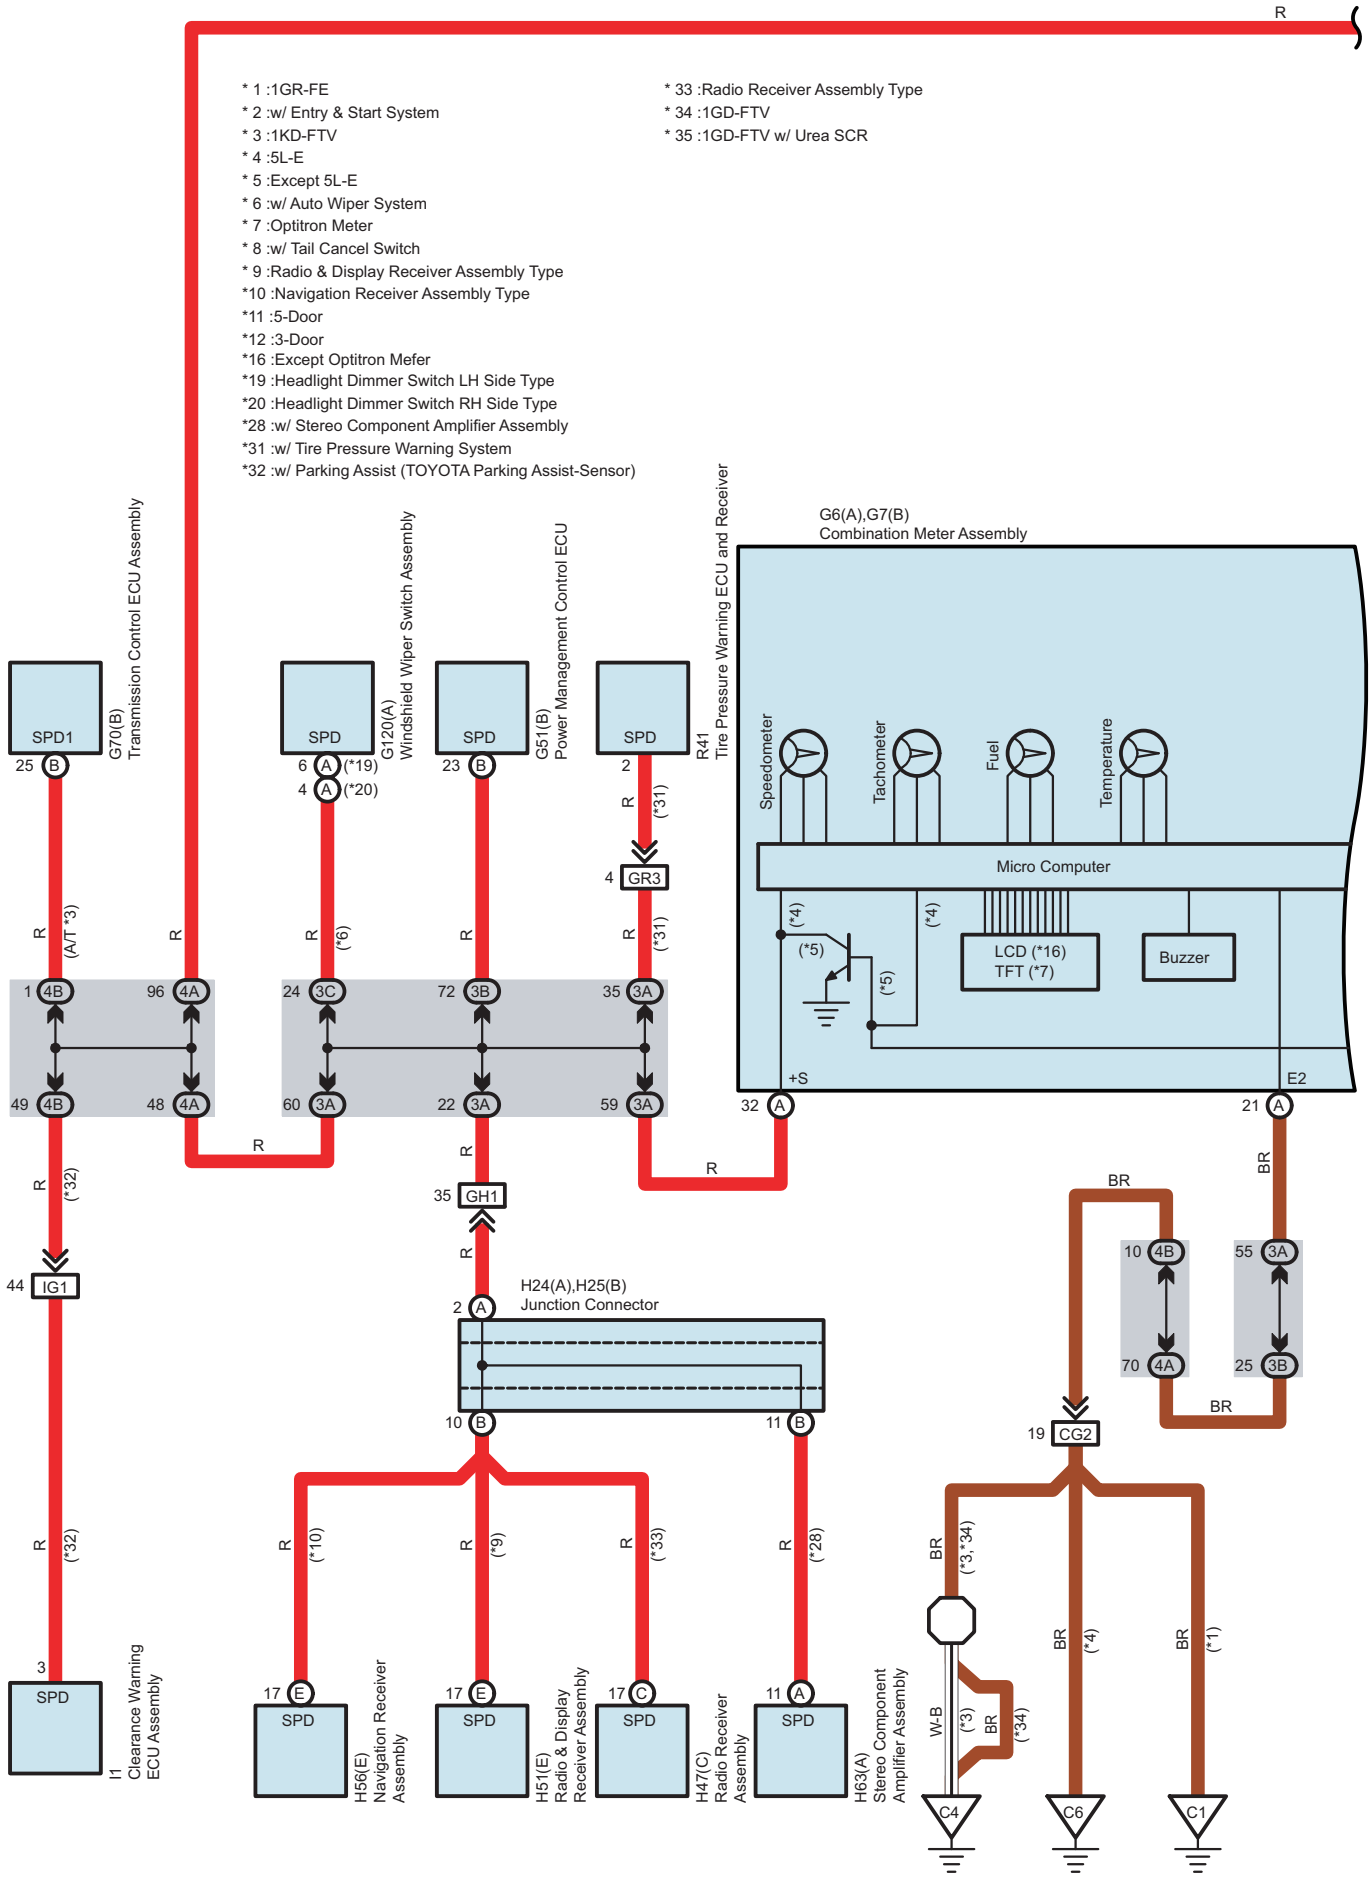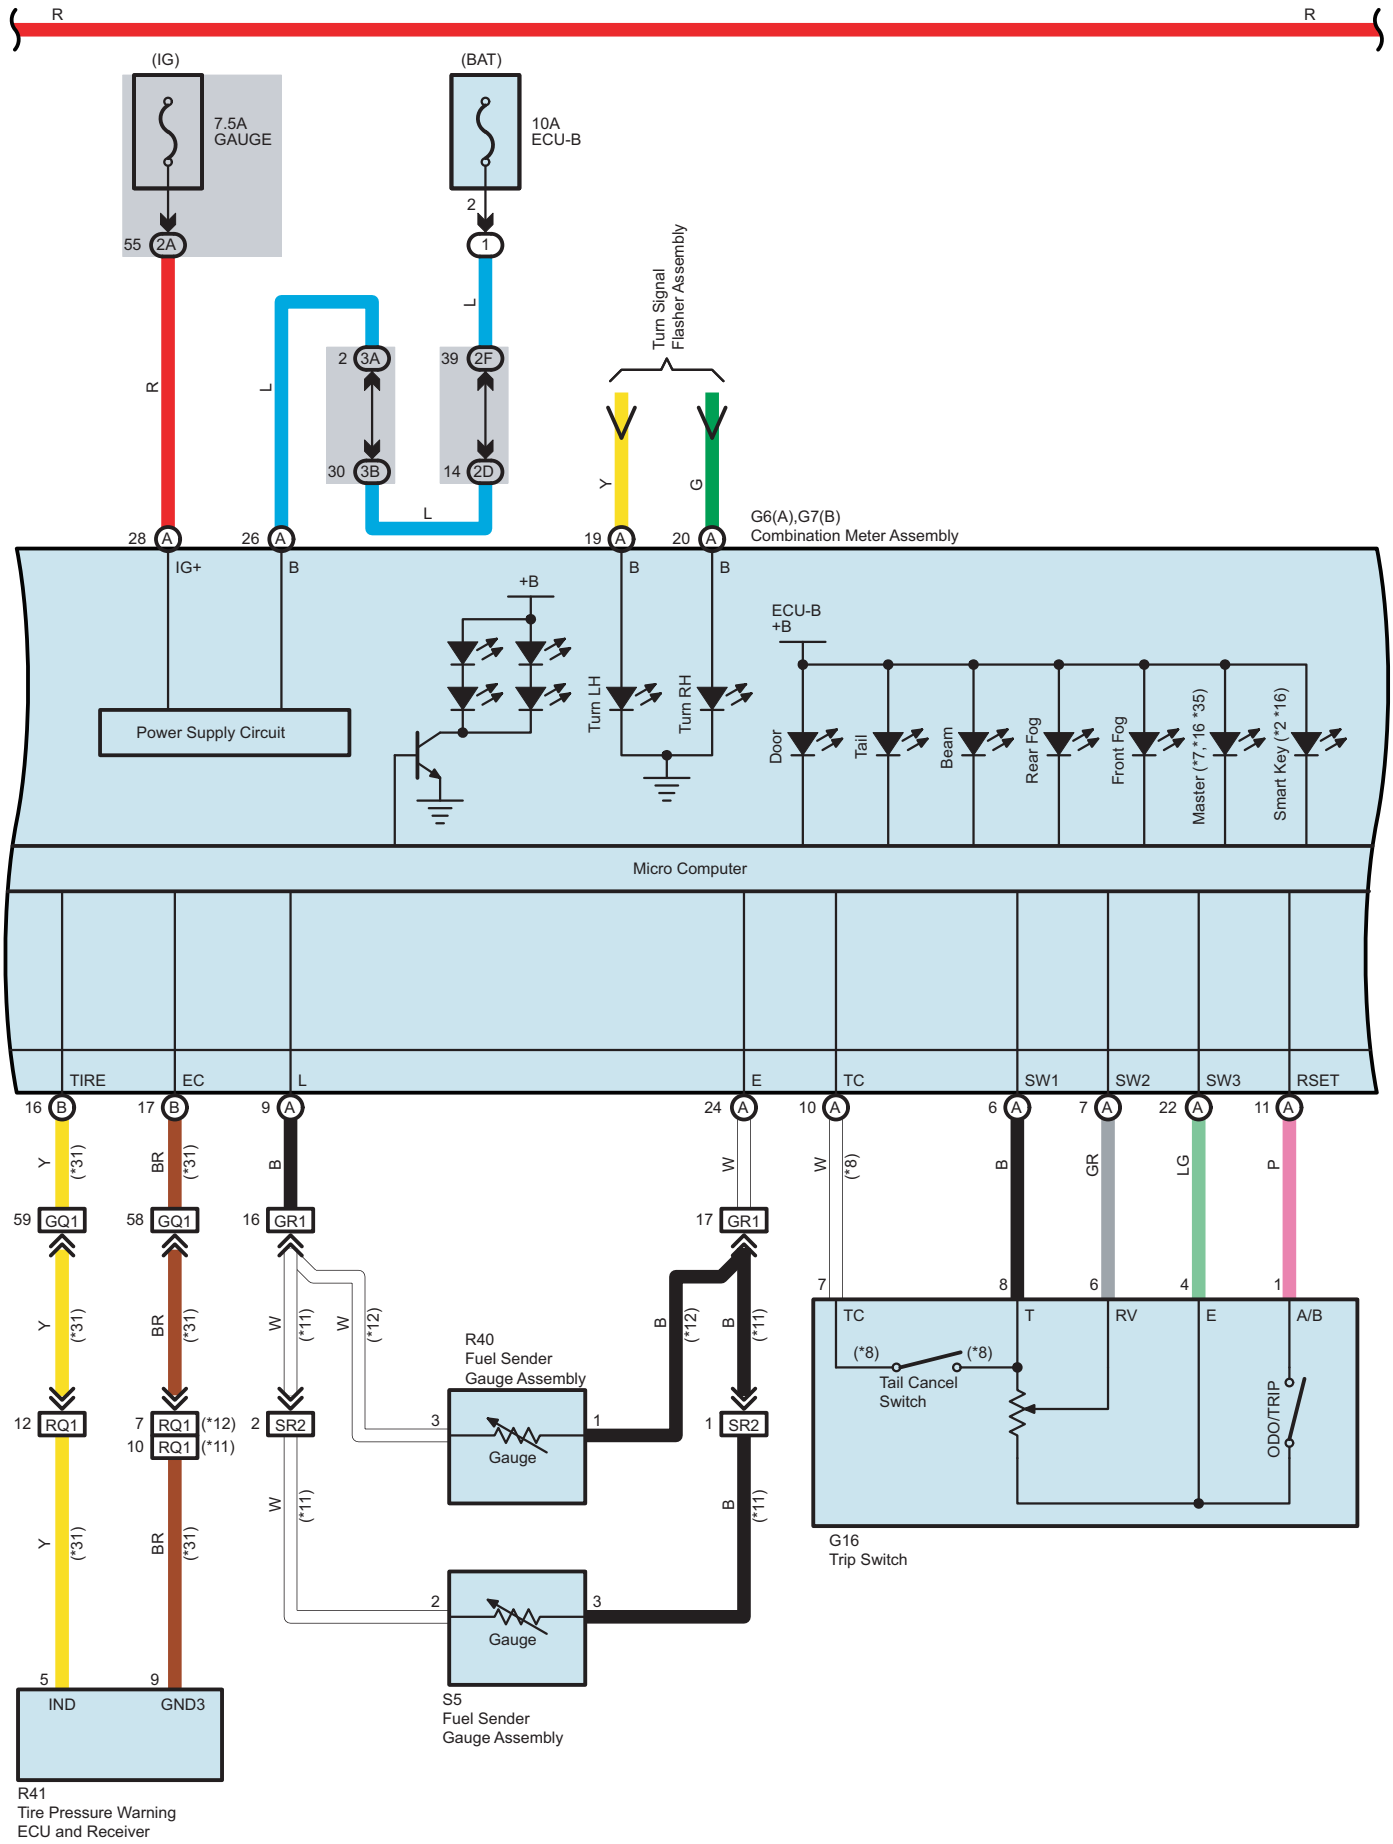



* 1 :1GR-FE
* 3 :1KD-FTV
* 4 :5L-E
* 5 :Except 5L-E
* 7 :Optitron Meter
*12 :3-Door
*13 :w/ VSC
*15 :5-Door w/ Fuel Sub Tank
*16 :Except Optitron Meter
*17 :w/ Downhill Assist Control
*18 :w/ Kinetic Dynamic Suspension System

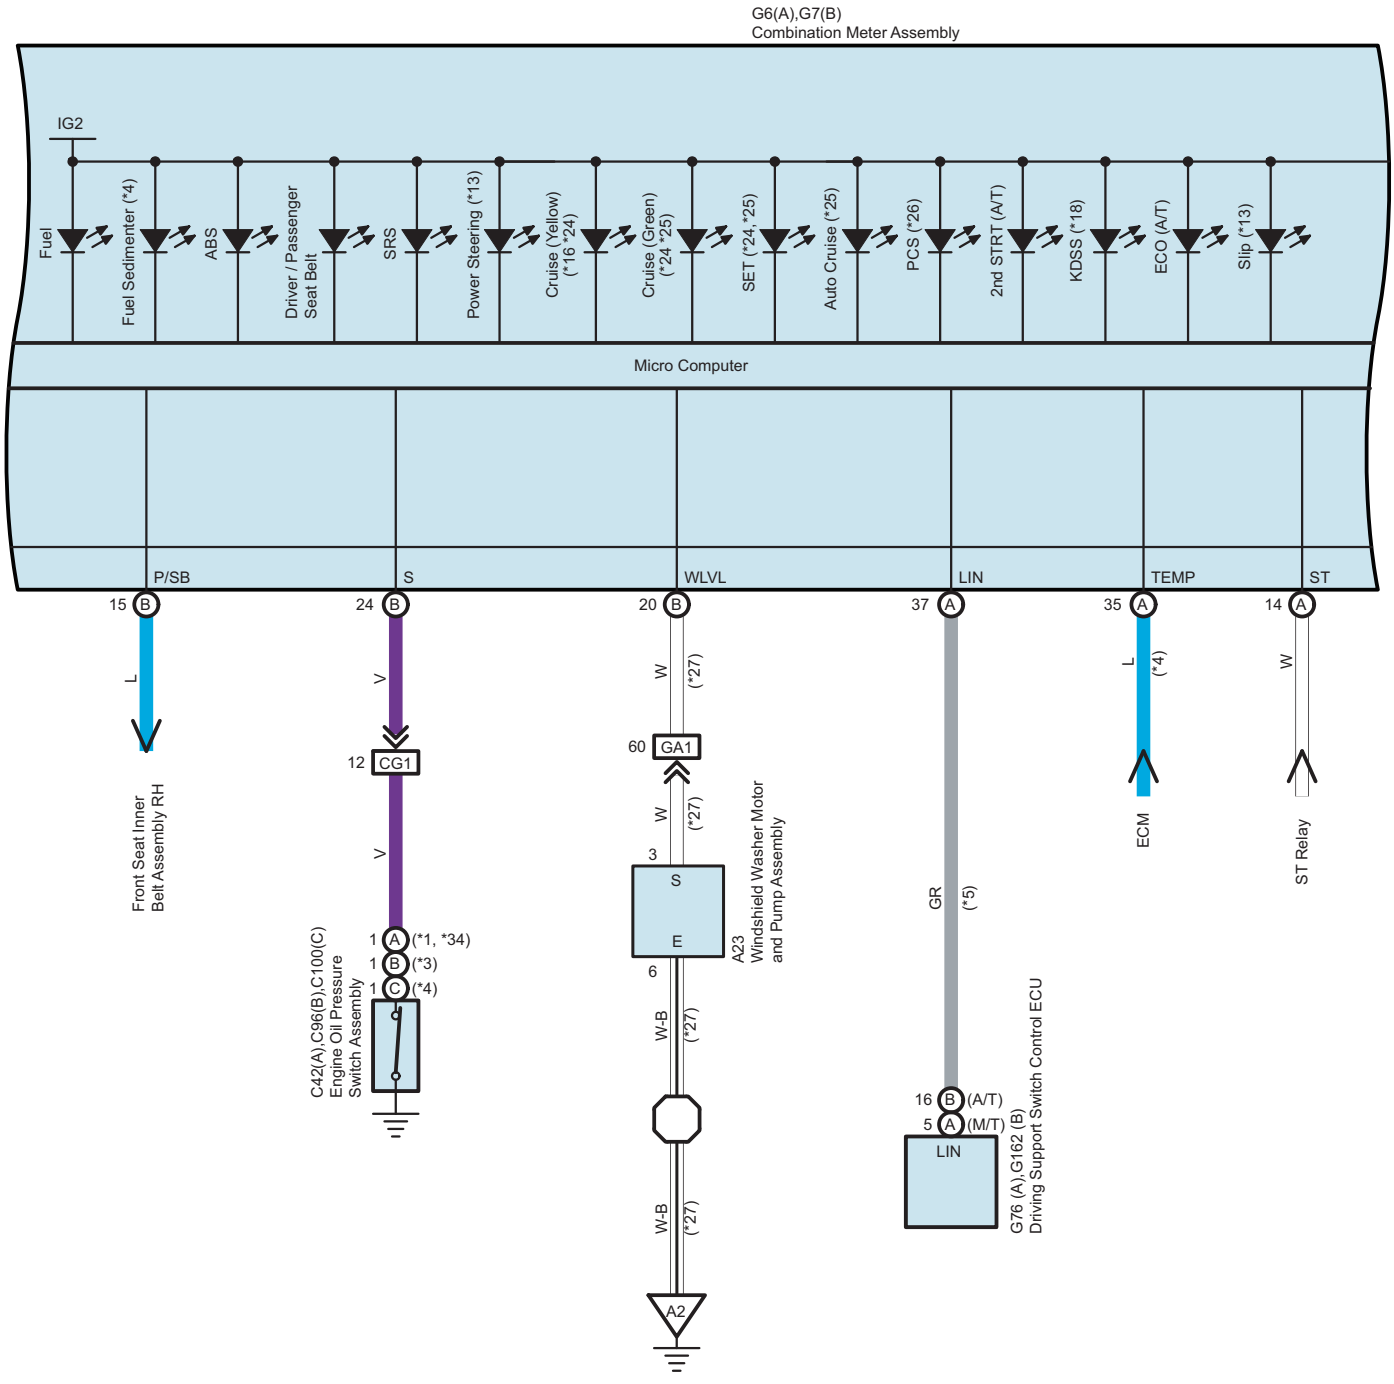


R R


*21 :w/ Crawl
*22 :w/ Multi-terrain Select
*23 :w/ Rear Differential Lock
*24 :w/ Cruise Control
*25 :w/ Dynamic@Radar Cruise Control
*26 :w/ Pre-Crash Safety System
*27 :Cold Area Spec.
*29 :w/ 8 Sensor
*34 :1GD-FTV
*36 :1GR-FE, 2TR-FE, 1KD-FTV, 1GD-FTV w/o Urea SCR
*37 :Except 1GD-FTV w/ Urea SCR

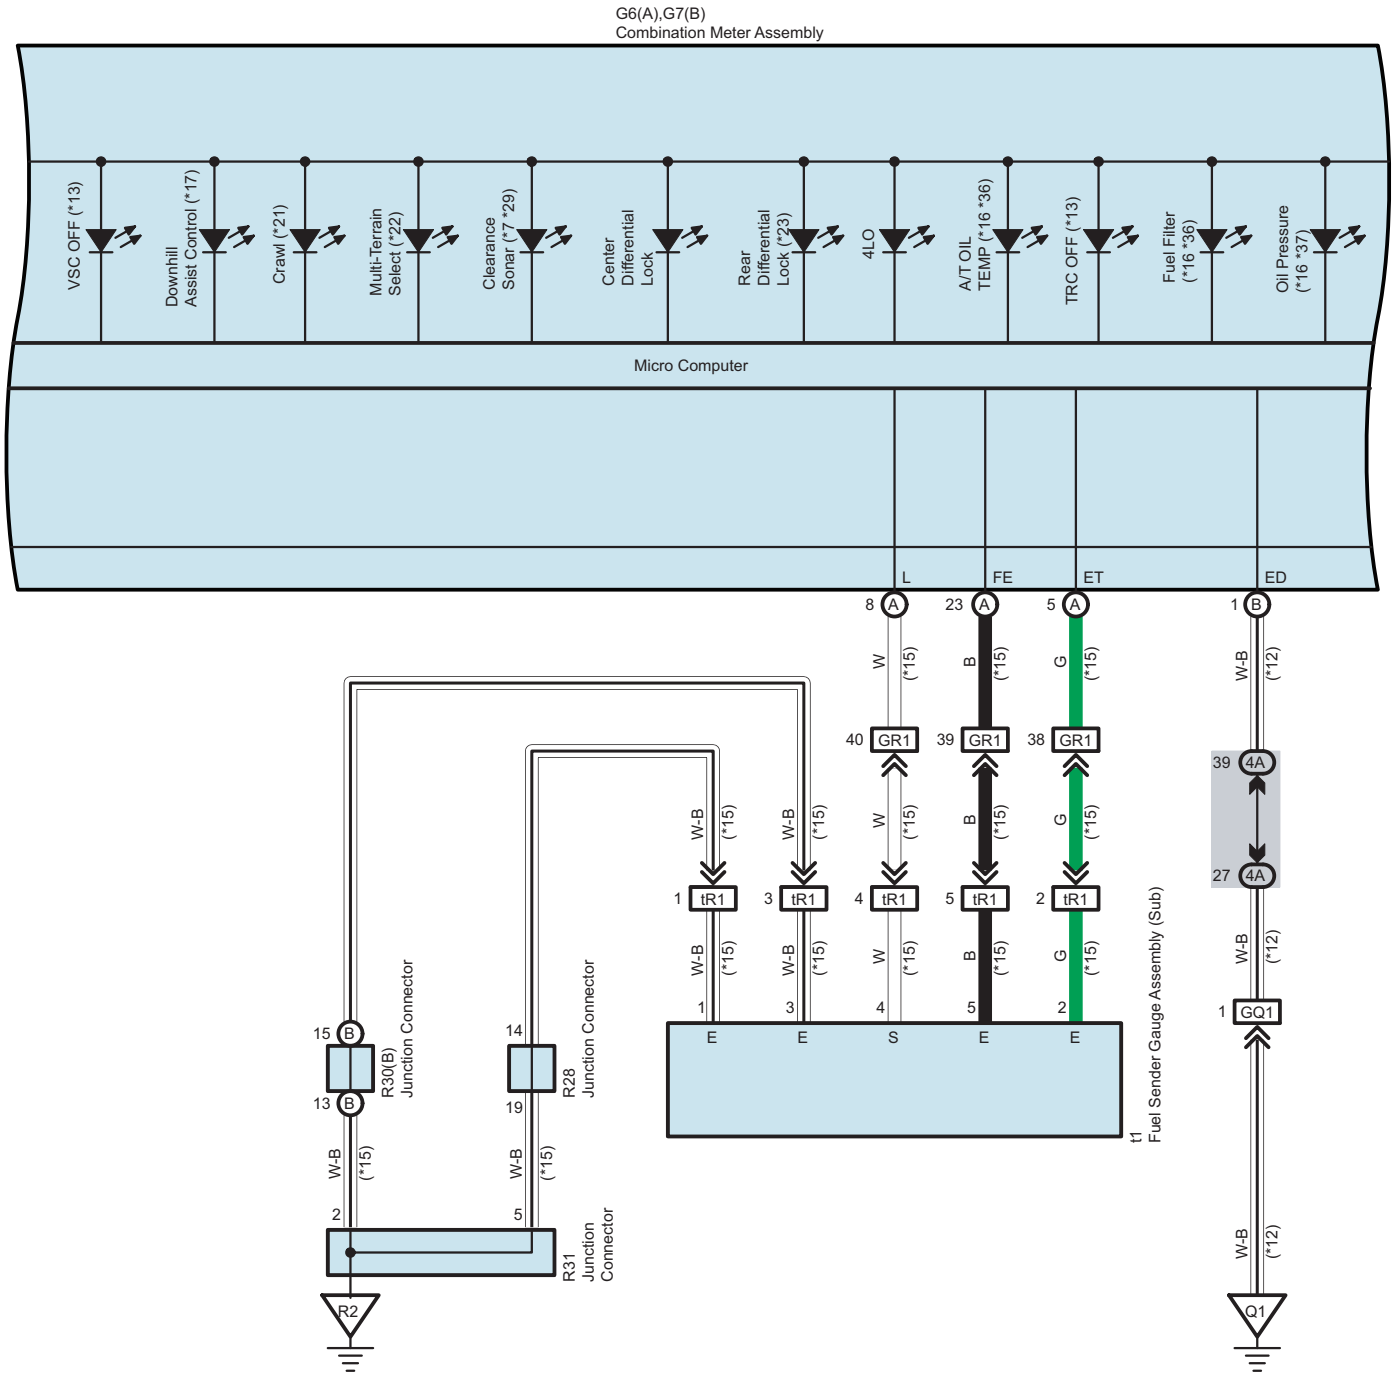


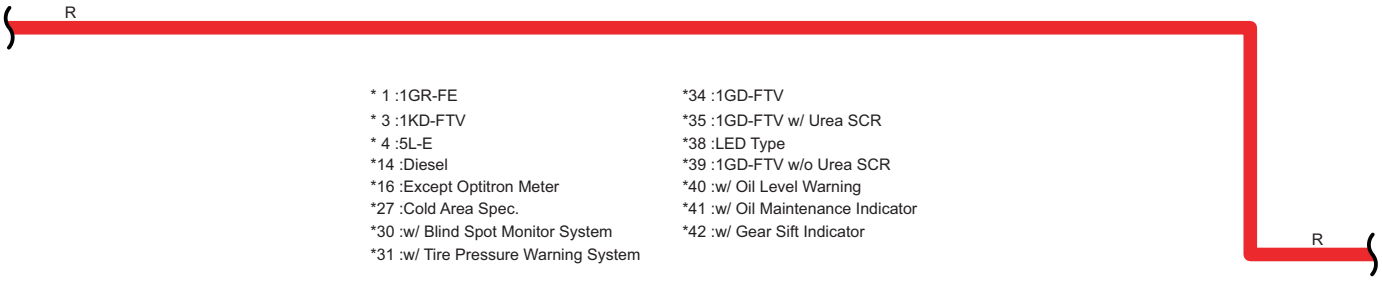



* 1 :1GR-FE
* 3 :1KD-FTV
* 4 :5L-E
*14 :Diesel
*16 :Except Optitron Meter
*27 :Cold Area Spec.
*30 :w/ Blind Spot Monitor System
*31 :w/ Tire Pressure Warning System
*34 :1GD-FTV
*35 :1GD-FTV w/ Urea SCR
*38 :LED Type
*39 :1GD-FTV w/o Urea SCR
*40 :w/ Oil Level Warning
*41 :w/ Oil Maintenance Indicator
*42 :w/ Gear Sift Indicator

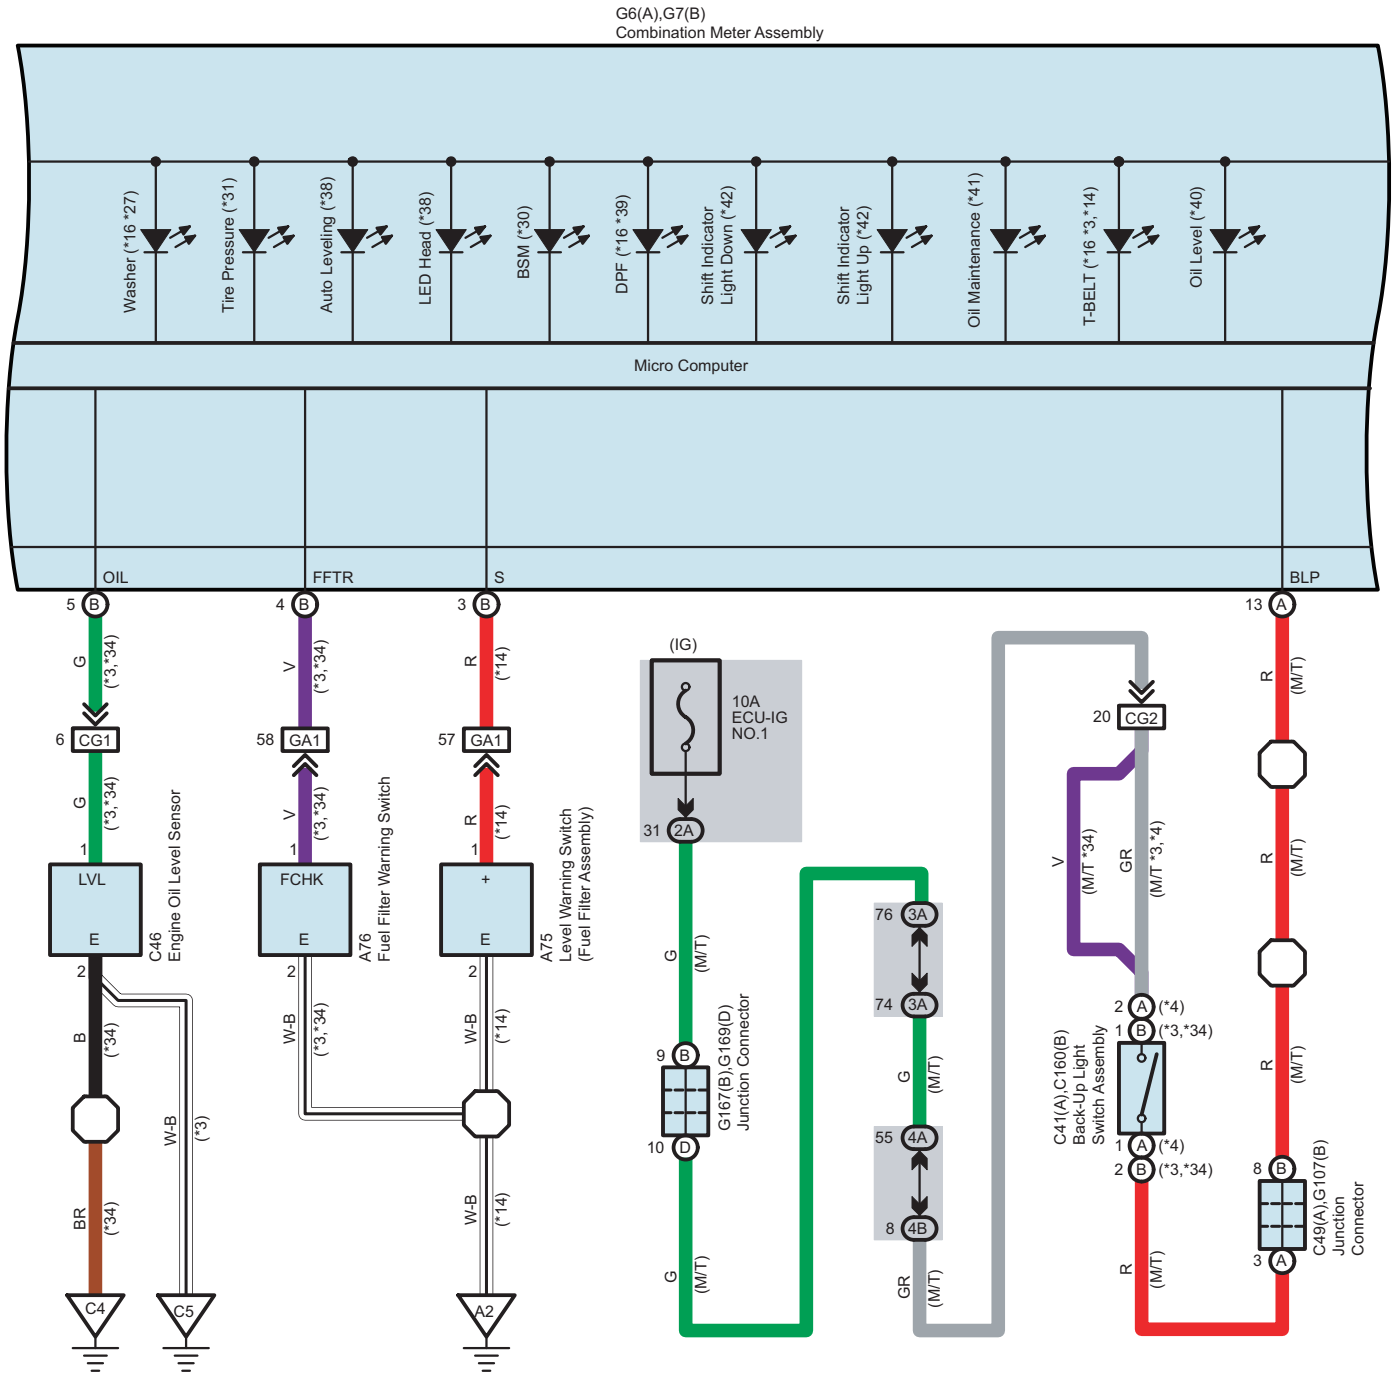


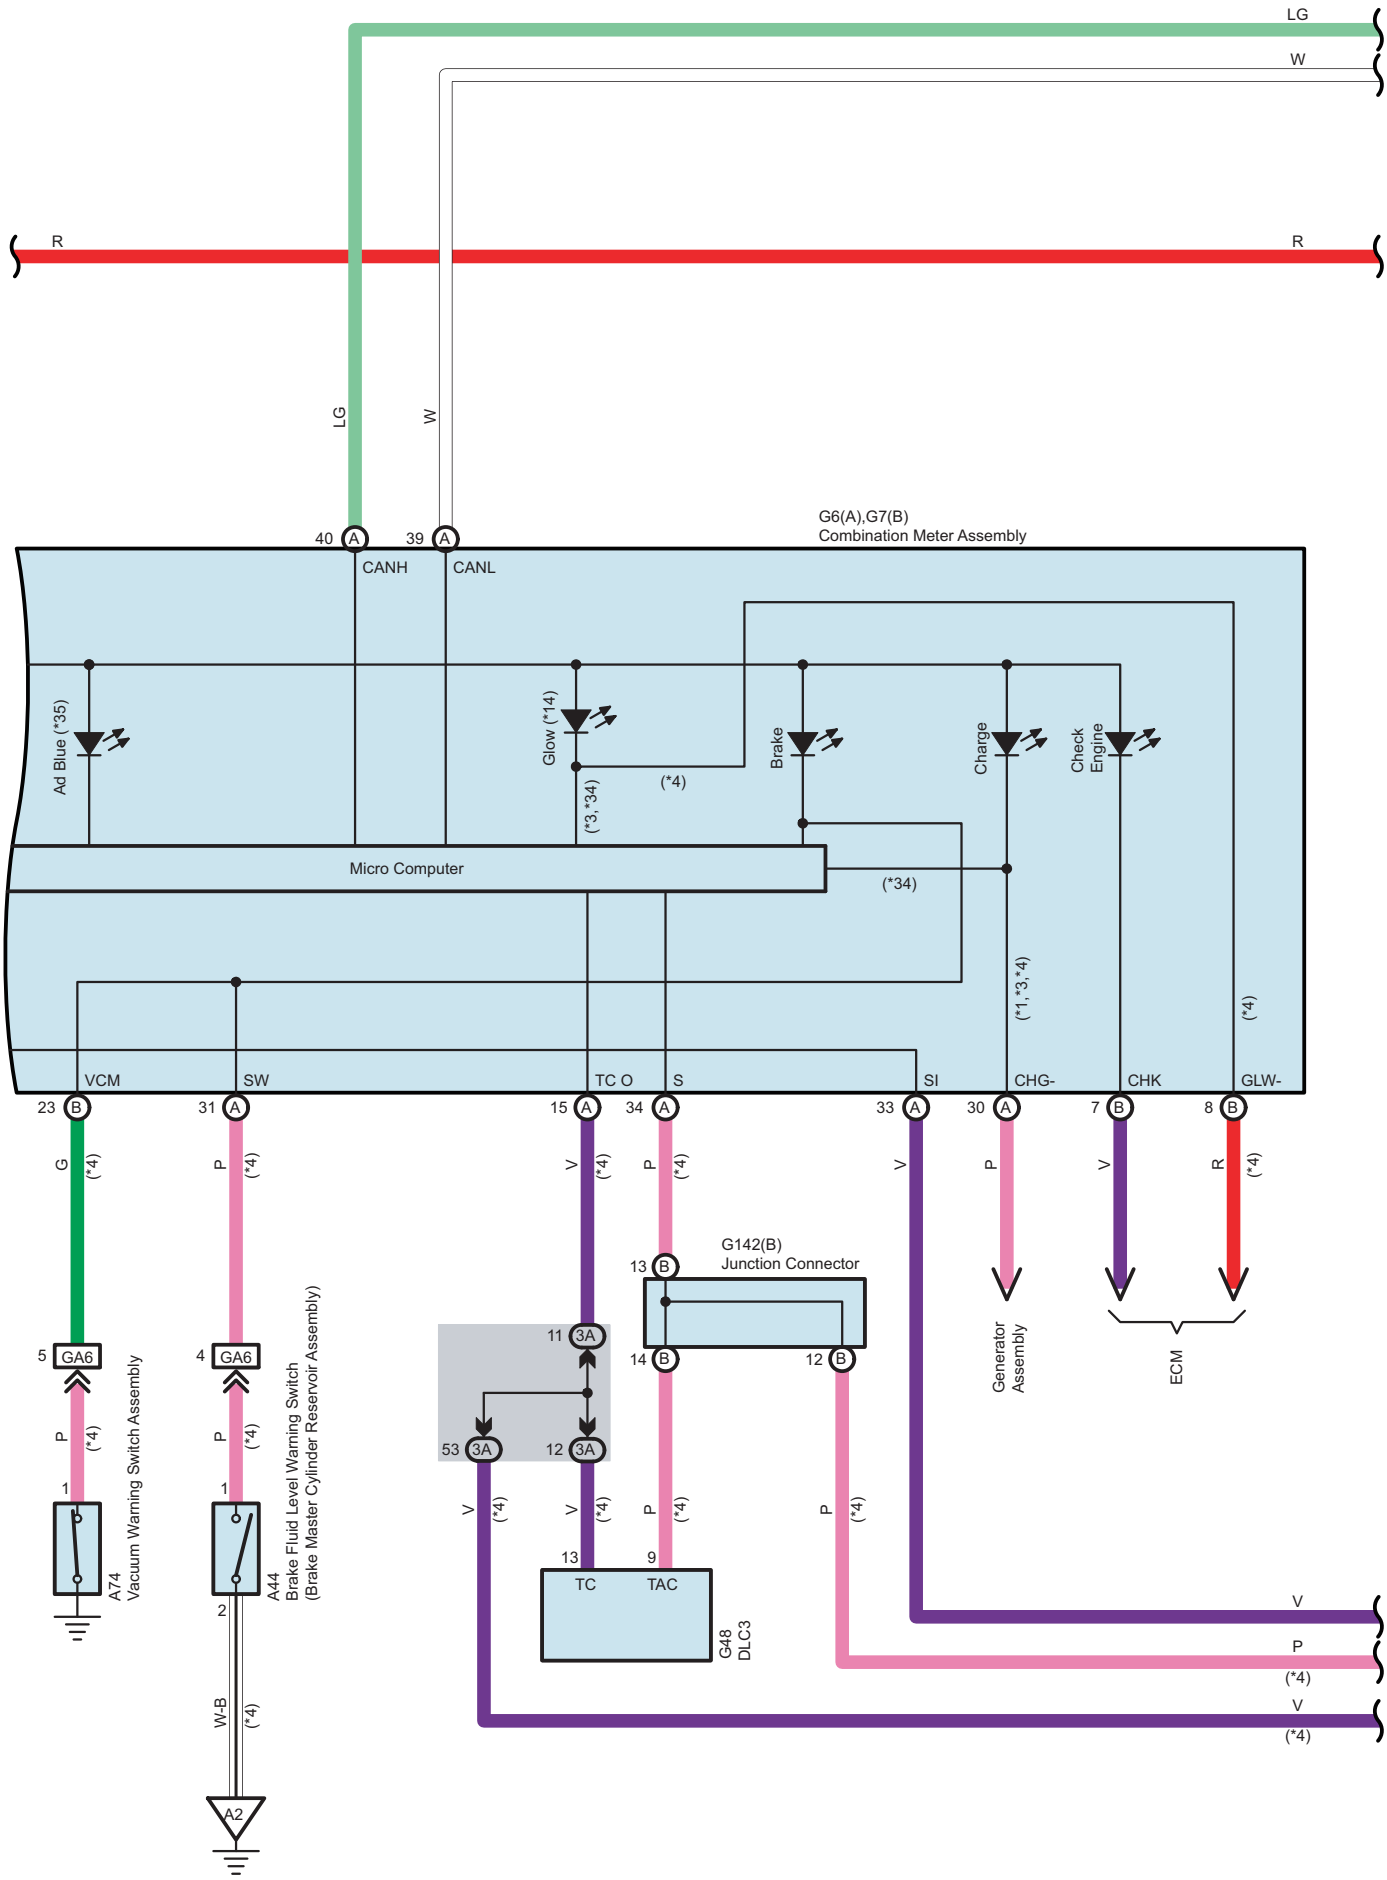

LG
W
R
R
LG
W
40 A
39 A
CANH
CANL
G6(A),G7(B)
Combination Meter Assembly
Ad Blue (*35)
Glow (*14)
(*3, *34)
(*4)
Brake
Charge
Check Engine
Micro Computer
(*34)
(*1, *3, *4)
(*4)
VCM
SW
TC O
S
SI
CHG-
CHK
GLW-
23 B
31 A
15 A
34 A
33 A
30 A
7 B
8 B
G
P
V
P
V
P
V
R
(*4)
5 GA6
4 GA6
11 3A
13 B
14 B
12 B
G142(B)
Junction Connector
Generator Assembly
ECM
1
2
53 3A
12 3A
13
9
TC
TAC
G48
DLC3
A74
Vacuum Warning Switch Assembly
A44
Brake Fluid Level Warning Switch
(Brake Master Cylinder Reservoir Assembly)
W-B
A2
V
P
(*4)
V
(*4)

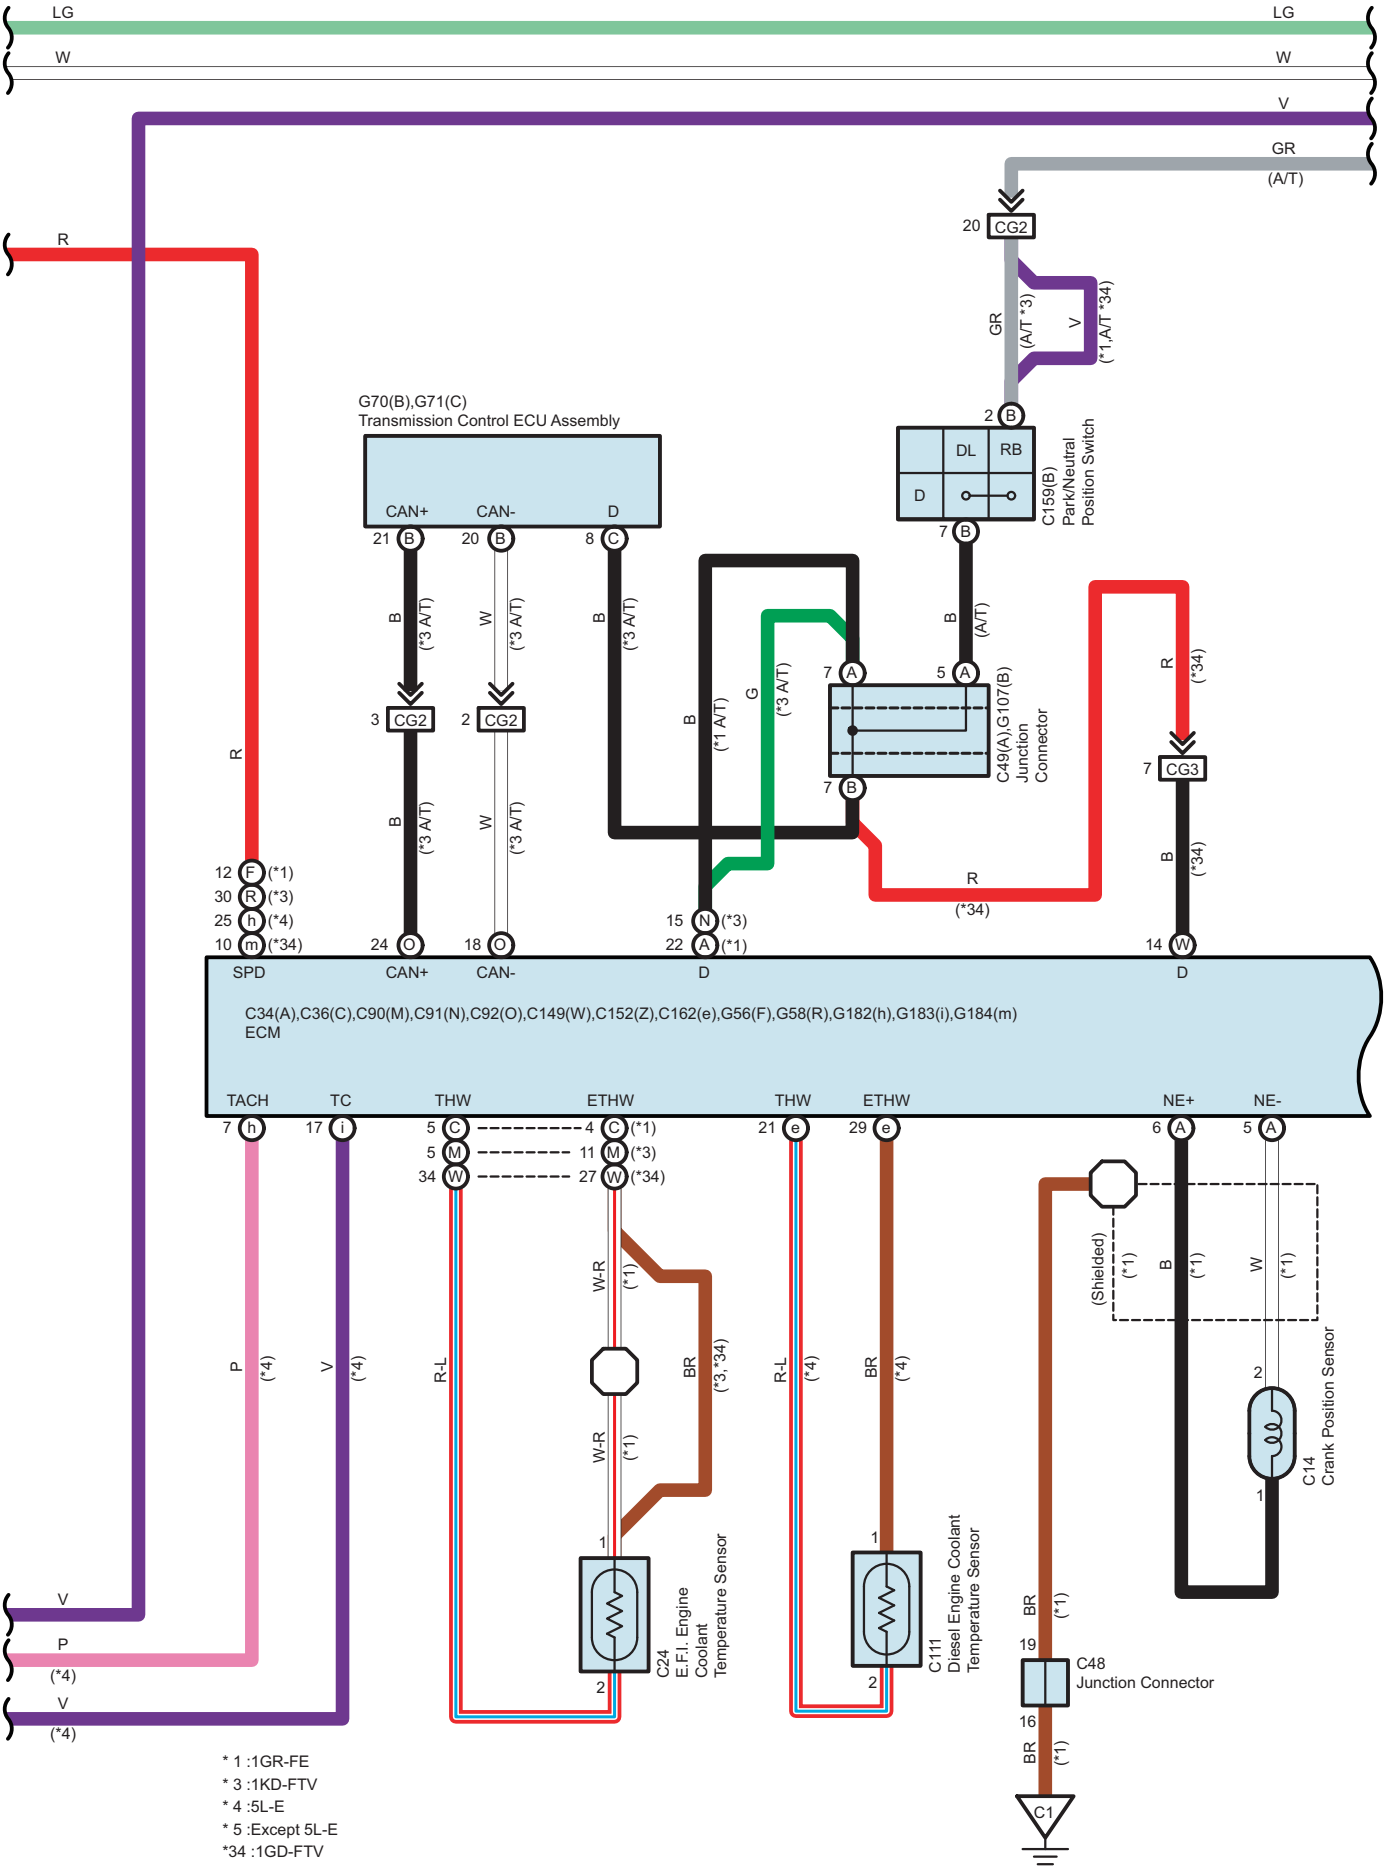

LG
W
V
GR
(A/T)
R
20 CG2
GR
(A/T *3)
V
(*1,A/T *34)
2 B
DL
RB
D
C159(B)
Park/Neutral
Position Switch
7 B
G70(B),G71(C)
Transmission Control ECU Assembly
CAN+
CAN-
D
21 B
20 B
8 C
B
(*3 A/T)
W
(*3 A/T)
B
(*3 A/T)
B
(A/T)
7 A
5 A
C49(A),G107(B)
Junction
Connector
7 B
B
(*1 A/T)
G
(*3 A/T)
R
(*34)
7 CG3
B
(*34)
3 CG2
2 CG2
B
(*3 A/T)
W
(*3 A/T)
12 F (*1)
30 R (*3)
25 h (*4)
10 m (*34)
24 O
18 O
15 N (*3)
22 A (*1)
14 W
SPD
CAN+
CAN-
D
D
C34(A),C36(C),C90(M),C91(N),C92(O),C149(W),C152(Z),C162(e),G56(F),G58(R),G182(h),G183(i),G184(m)
ECM
TACH
TC
THW
ETHW
THW
ETHW
NE+
NE-
7 h
17 i
5 C
5 M
34 W
4 C (*1)
11 M (*3)
27 W (*34)
21 e
29 e
6 A
5 A
P
(*4)
V
(*4)
R-L
W-R
(*1)
BR
(*3, *34)
R-L
(*4)
BR
(*4)
(Shielded)
(*1)
B
(*1)
W
(*1)
2
1
C14
Crank Position Sensor
1
2
C24
E.F.I. Engine
Coolant
Temperature Sensor
1
2
C111
Diesel Engine Coolant
Temperature Sensor
BR
(*1)
19
C48
Junction Connector
16
BR
(*1)
C1
V
P
(*4)
V
(*4)
* 1 :1GR-FE
* 3 :1KD-FTV
* 4 :5L-E
* 5 :Except 5L-E
*34 :1GD-FTV

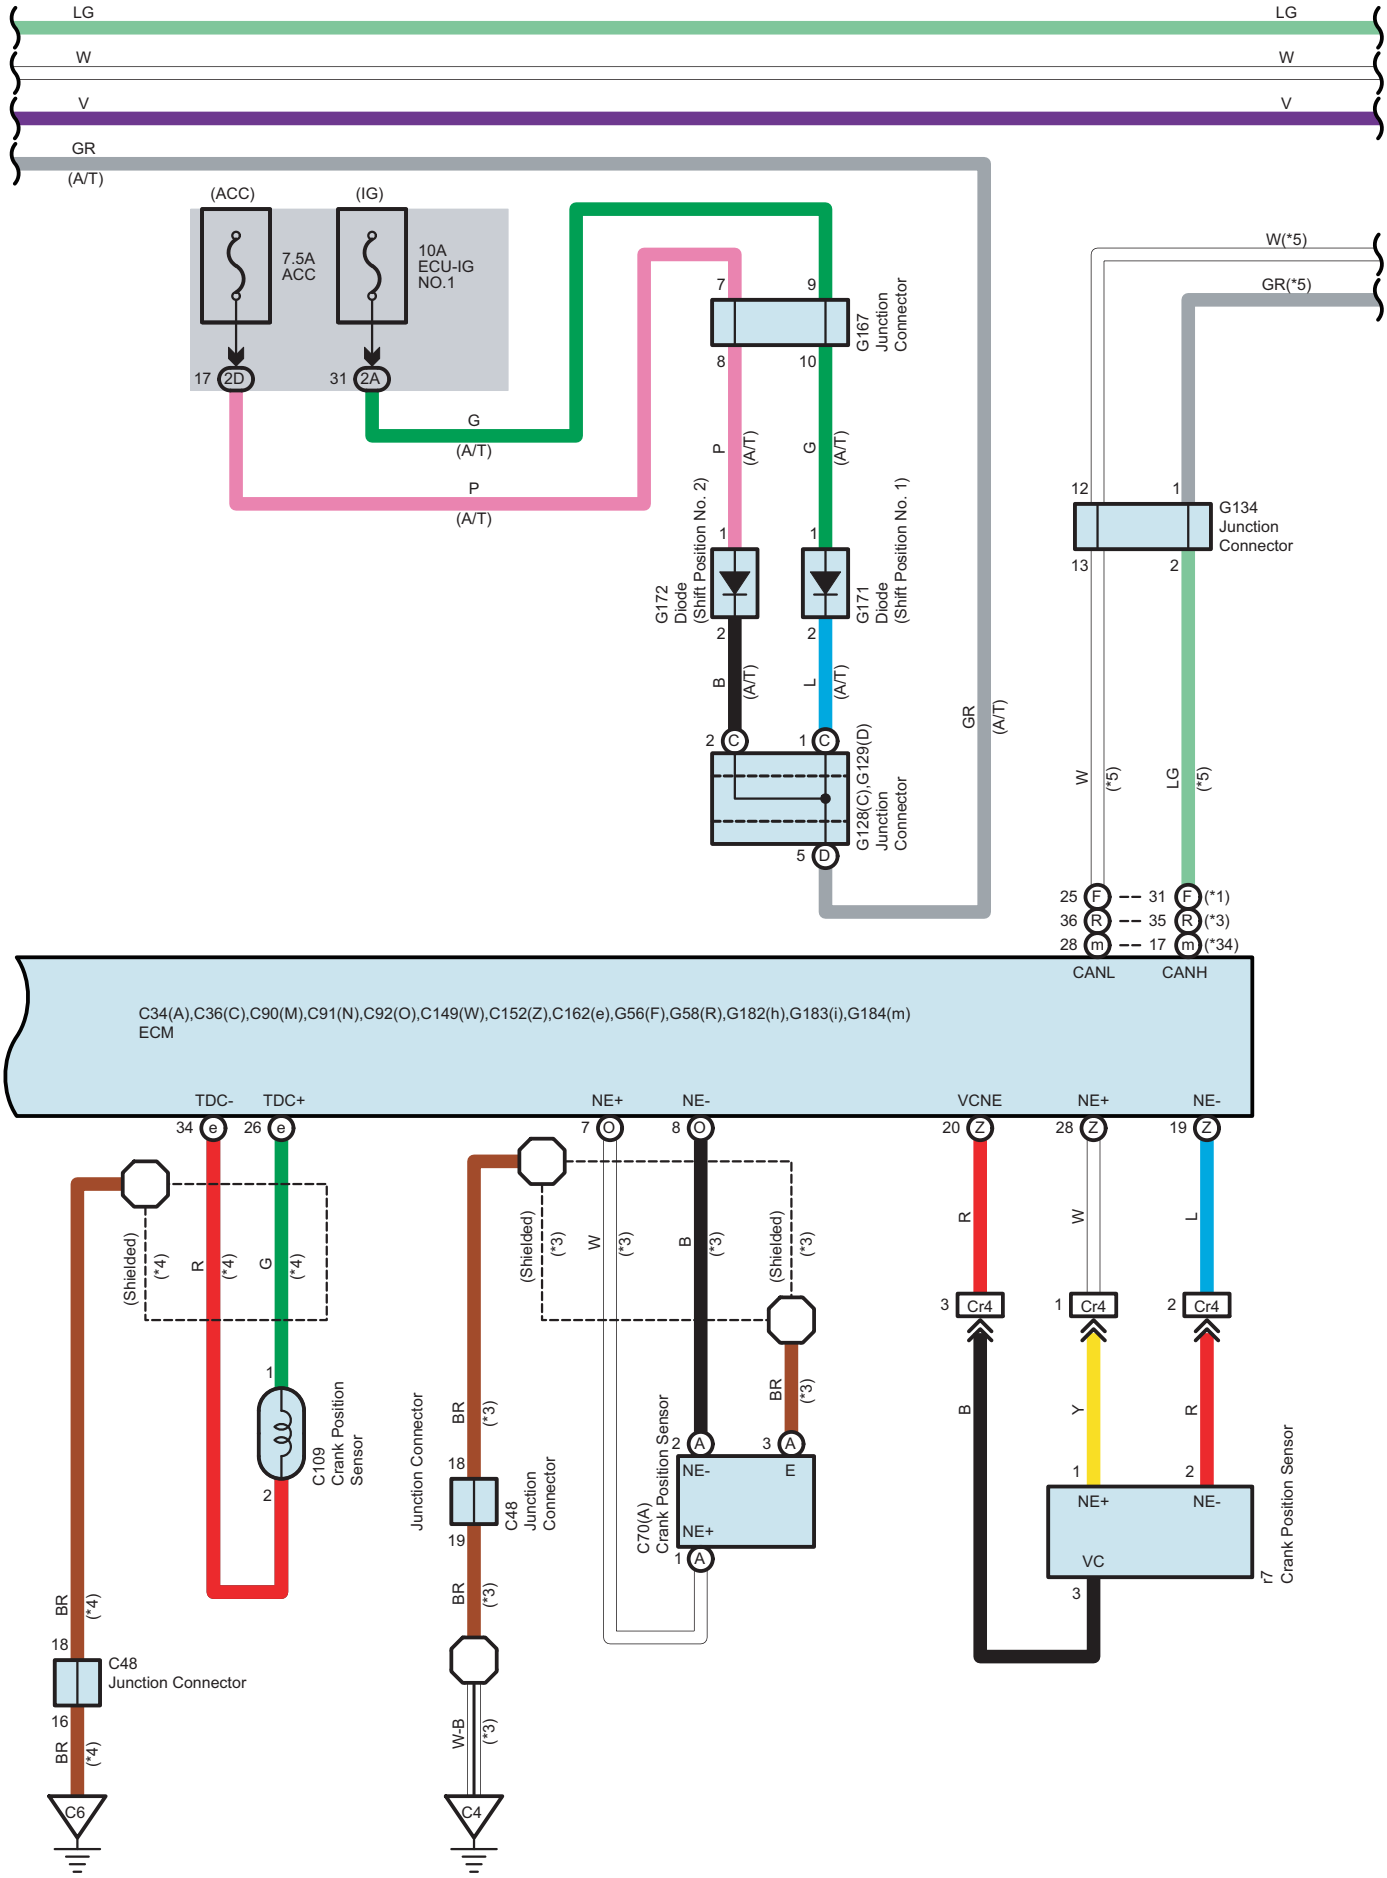
LG
W
V
GR
(A/T)
LG
W
V
(ACC)
(IG)
7.5A
ACC
10A
ECU-IG
NO.1
17 2D
31 2A
G
(A/T)
P
(A/T)
7
9
8
10
G167
Junction
Connector
P
(A/T)
G
(A/T)
G172
Diode
(Shift Position No. 2)
G171
Diode
(Shift Position No. 1)
B
(A/T)
L
(A/T)
2 C
1 C
G128(C),G129(D)
Junction
Connector
5 D
GR
(A/T)
W(*5)
GR(*5)
12
1
13
2
G134
Junction
Connector
W
(*5)
LG
(*5)
25 F
31 F
(*1)
36 R
35 R
(*3)
28 m
17 m
(*34)
CANL
CANH
C34(A),C36(C),C90(M),C91(N),C92(O),C149(W),C152(Z),C162(e),G56(F),G58(R),G182(h),G183(i),G184(m)
ECM
TDC-
TDC+
NE+
NE-
VCNE
NE+
NE-
34 e
26 e
7 O
8 O
20 Z
28 Z
19 Z
(Shielded)
(*4)
R
(*4)
G
(*4)
1
2
C109
Crank Position
Sensor
(Shielded)
(*3)
W
(*3)
B
(*3)
(Shielded)
(*3)
BR
(*3)
2 A
3 A
NE-
E
NE+
1 A
C70(A)
Crank Position Sensor
R
3 Cr4
W
1 Cr4
L
2 Cr4
B
Y
R
1
2
NE+
NE-
VC
3
r7
Crank Position Sensor
BR
(*4)
18
C48
Junction Connector
16
BR
(*4)
C6
Junction Connector
BR
(*3)
18
19
C48
Junction
Connector
BR
(*3)
W-B
(*3)
C4

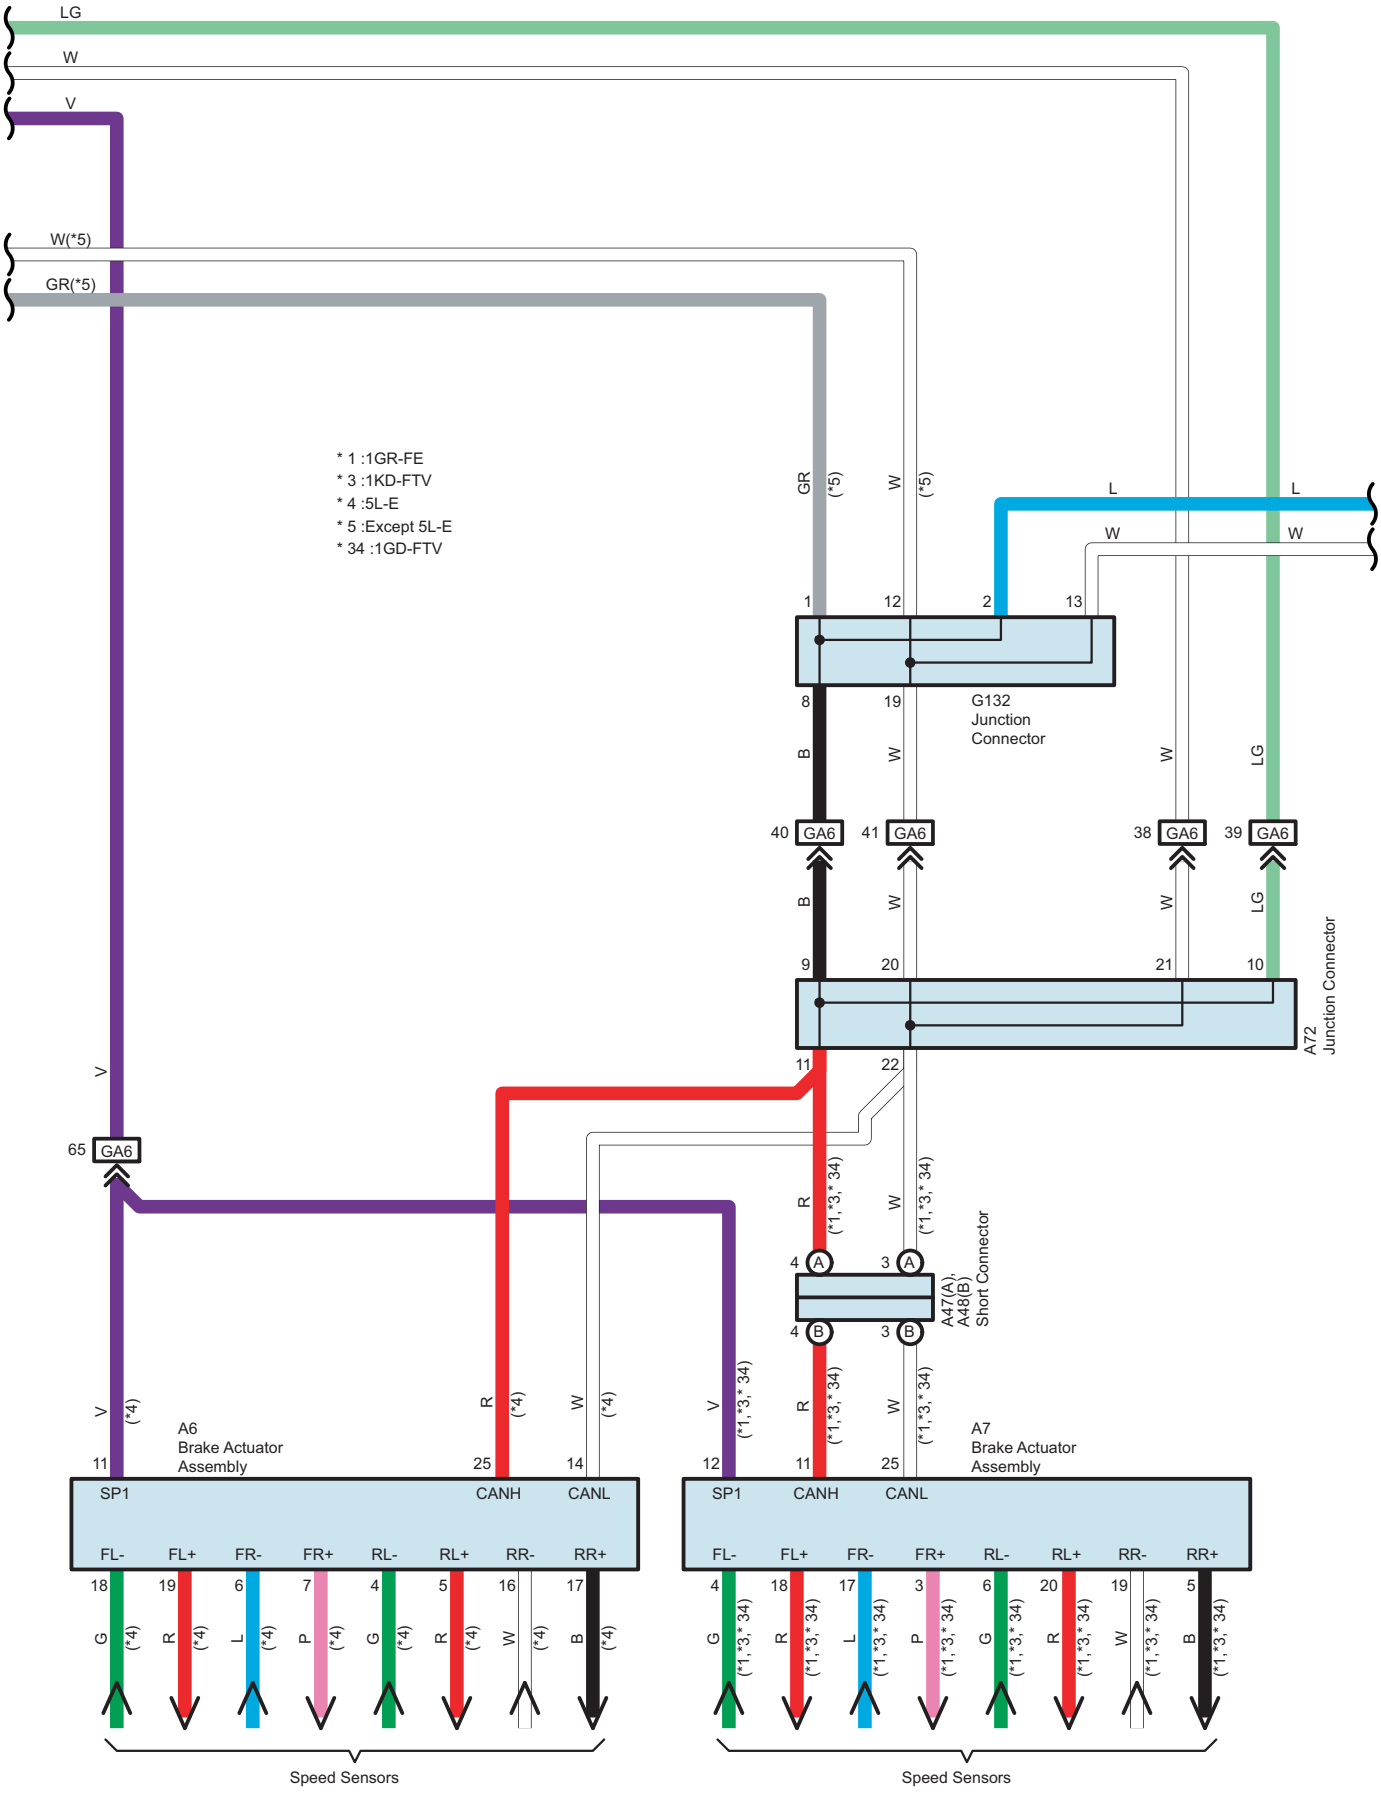
LG
W
V
W(*5)
GR(*5)
* 1 :1GR-FE
* 3 :1KD-FTV
* 4 :5L-E
* 5 :Except 5L-E
* 34 :1GD-FTV
G132
Junction
Connector
A72
Junction Connector
A47(A);
A48(B)
Short Connector
A6
Brake Actuator
Assembly
A7
Brake Actuator
Assembly
SP1
CANH
CANL
FL-
FL+
FR-
FR+
RL-
RL+
RR-
RR+
GA6
Speed Sensors
Speed Sensors

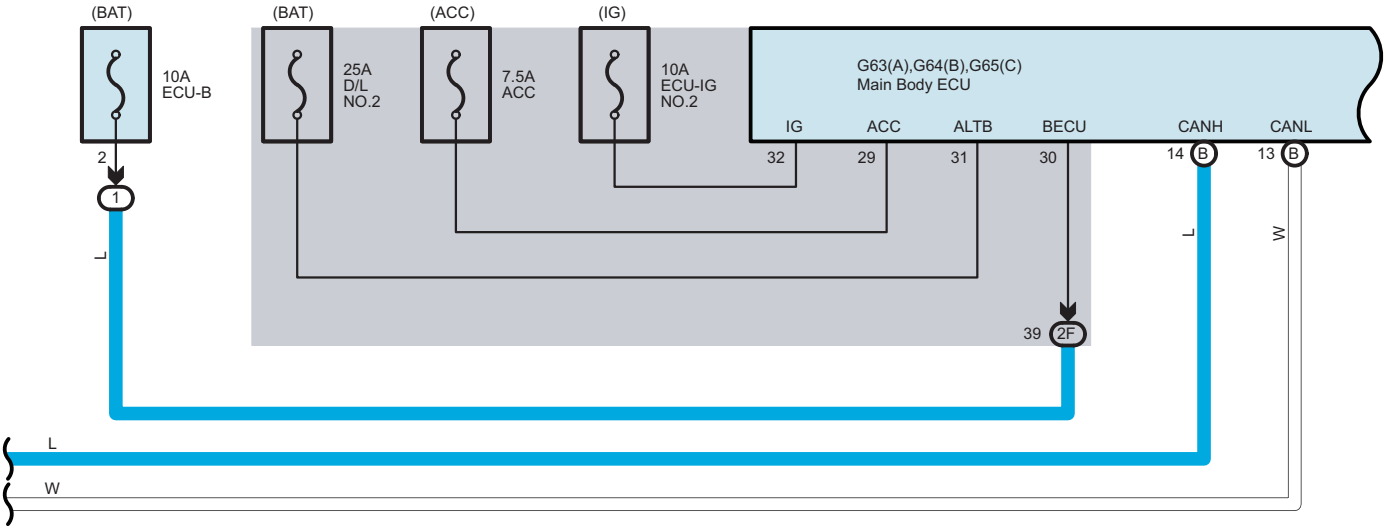

(BAT)
10A
ECU-B
2
1
L
(BAT)
25A
D/L
NO.2
(ACC)
7.5A
ACC
(IG)
10A
ECU-IG
NO.2
G63(A),G64(B),G65(C)
Main Body ECU
IG
ACC
ALTB
BECU
CANH
CANL
32
29
31
30
14
B
13
B
L
W
39
2F
L
W

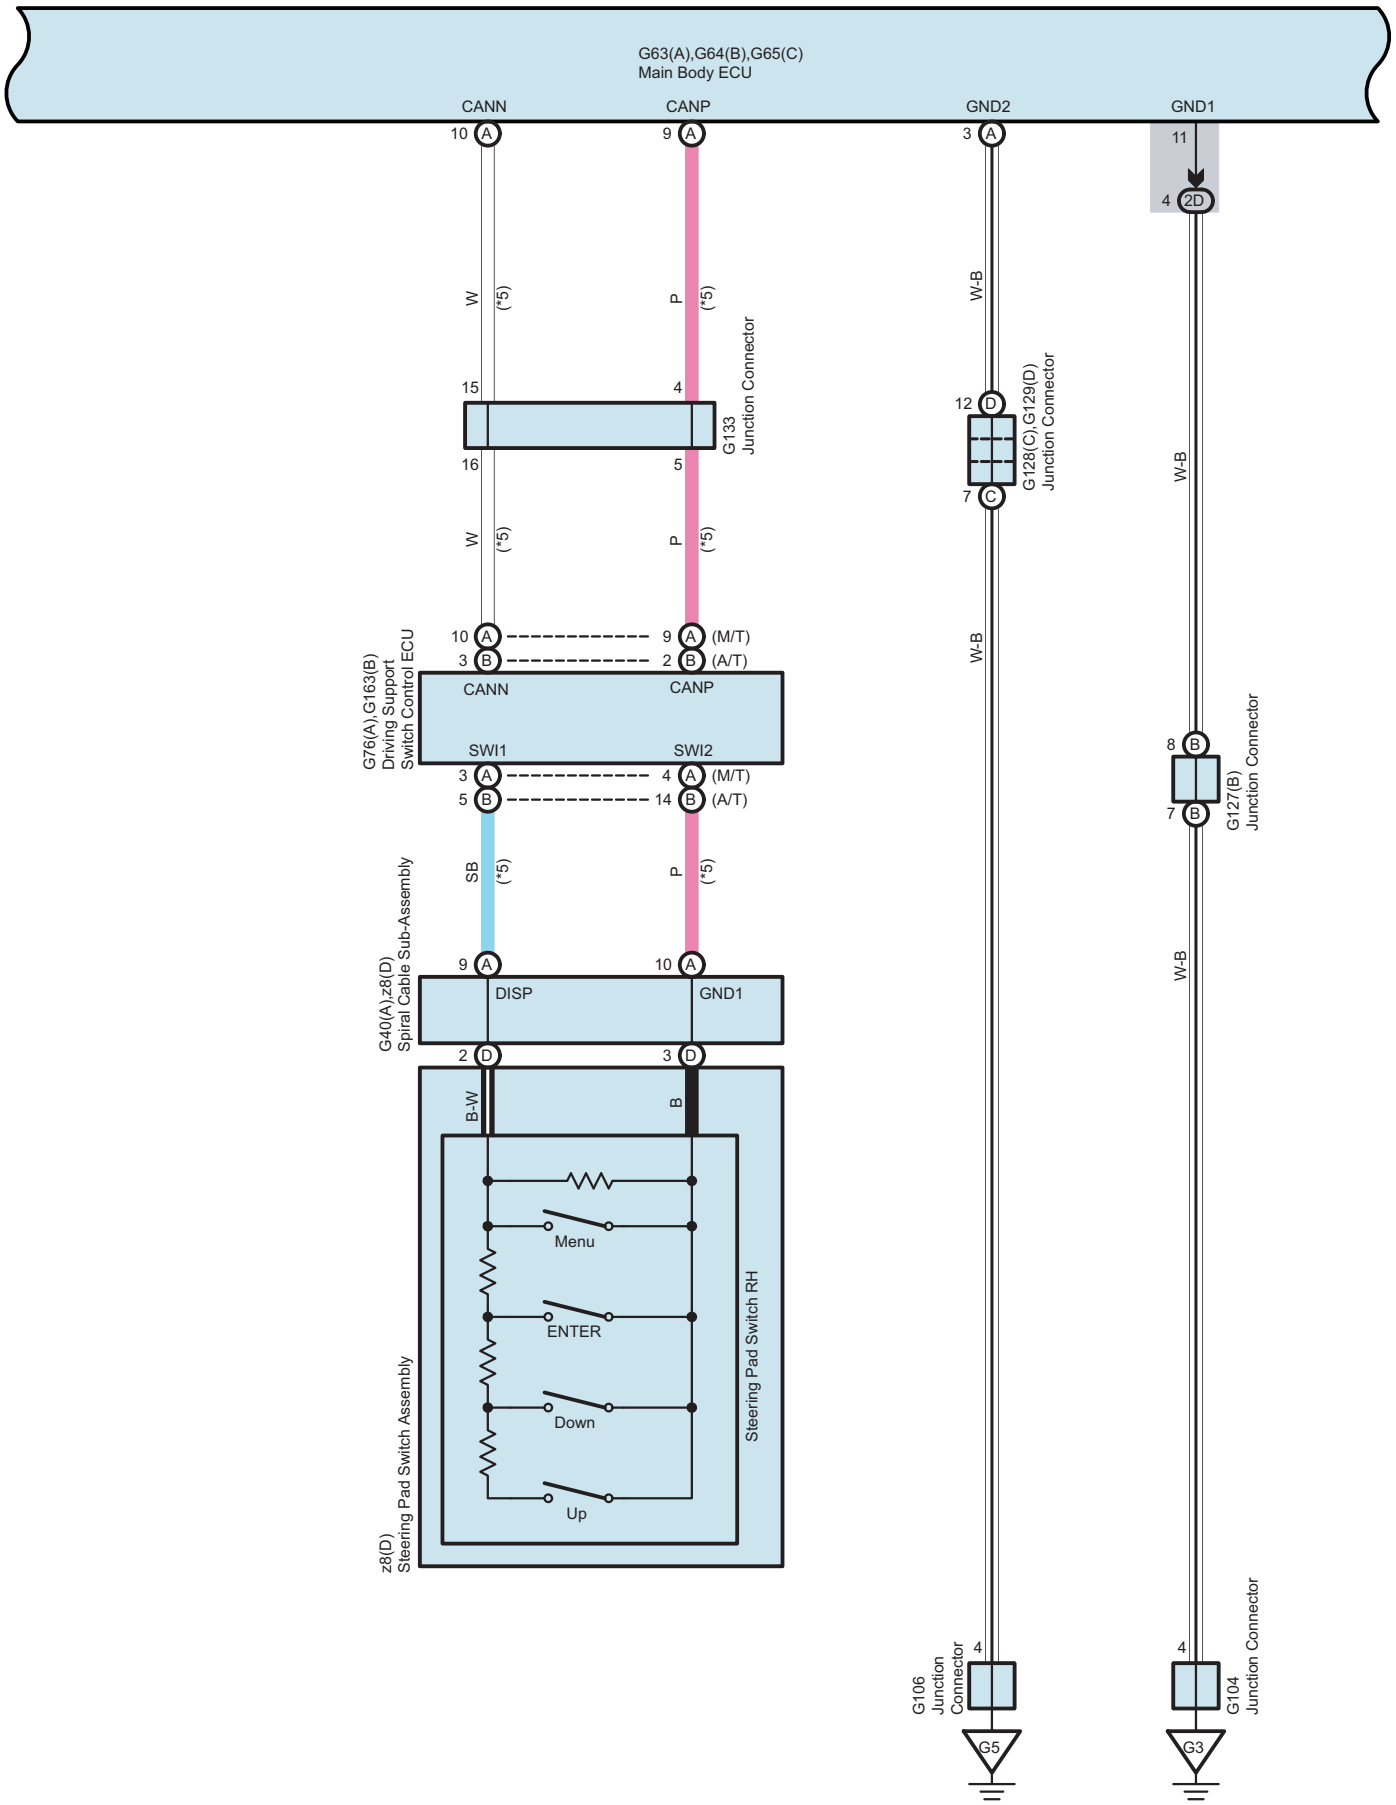
G63(A),G64(B),G65(C)
Main Body ECU
CANN
CANP
GND2
GND1
10 A
9 A
3 A
11
4 2D
W
(*5)
P
(*5)
W-B
15
4
16
5
G133
Junction Connector
12 D
7 C
G128(C),G129(D)
Junction Connector
W-B
W
(*5)
P
(*5)
10 A
9 A (M/T)
3 B
2 B (A/T)
G76(A),G163(B)
Driving Support
Switch Control ECU
CANN
CANP
SWI1
SWI2
3 A
4 A (M/T)
5 B
14 B (A/T)
W-B
8 B
7 B
G127(B)
Junction Connector
SB
(*5)
P
(*5)
W-B
9 A
10 A
G40(A),z8(D)
Spiral Cable Sub-Assembly
DISP
GND1
2 D
3 D
B-W
B
Menu
ENTER
Down
Up
Steering Pad Switch RH
z8(D)
Steering Pad Switch Assembly
G106
Junction
Connector
4
G5
4
G104
Junction Connector
G3

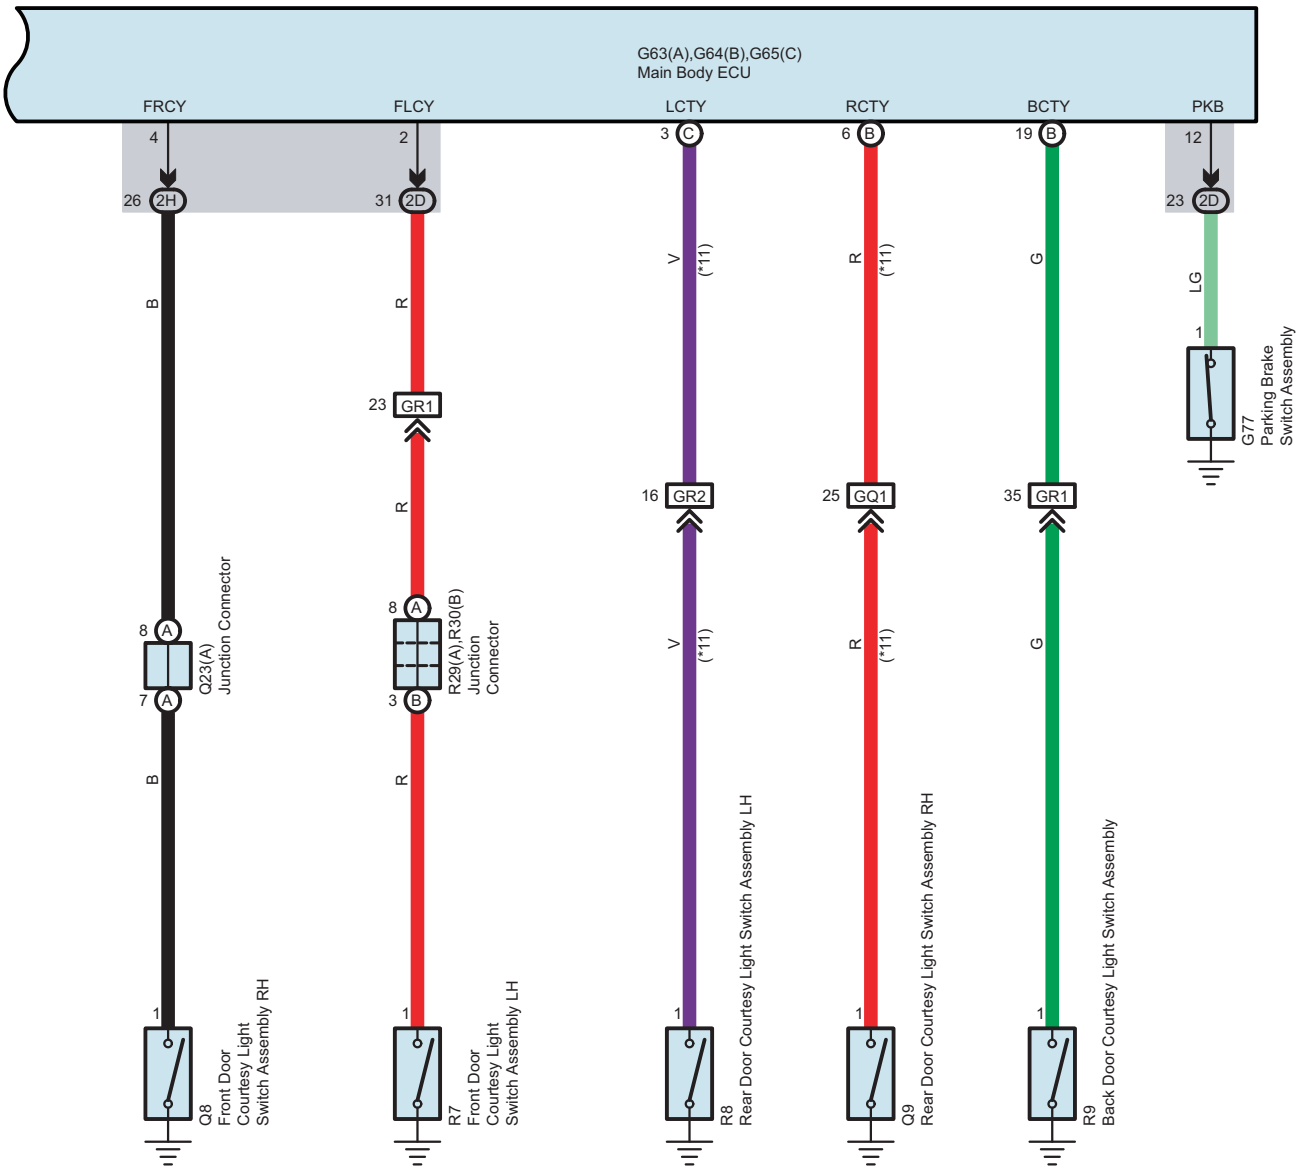


* 5 :Except 5L-E
*11 :5-Door

A6
Black

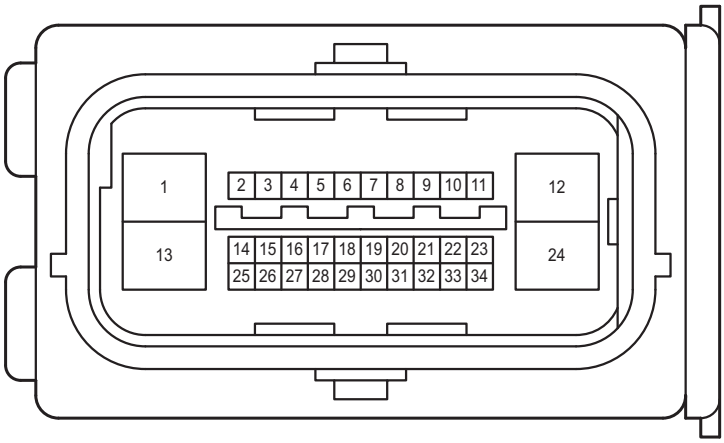

90980-12686

A7
Black

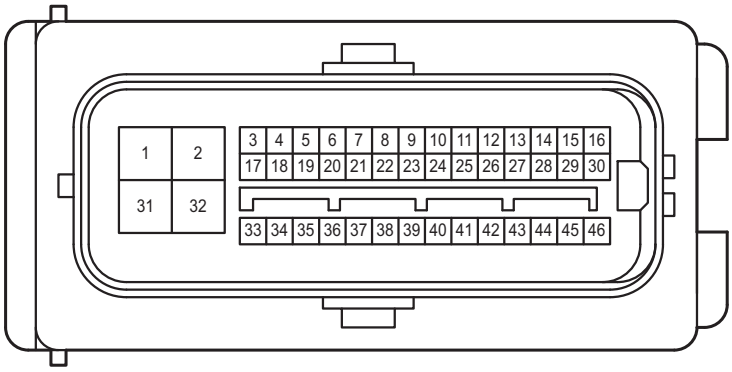

90980-12297

A23
Dark Gray



90980-11193

A44
Gray



90980-11207

A47
Gray




90980-10945

A48
Gray



90980-10946

A72
White

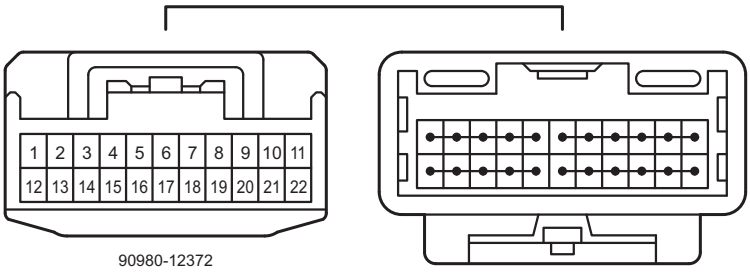

90980-12372

A74
Gray



90980-11252

A75
Gray




90980-11003

A76
Black



90980-12416

C14
Black

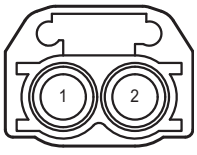


90980-12028

C24
Black (1GR-FE 2TR-FE 1KD-FTV ,1GD-FTV Before Jun. 2018 Production ,1GD-FTV w/o Urea SCR From Jun. 2018 Production) / White (1GD-FTV w/ Urea SCR From Jun. 2018 Production)




90980-10735

C34
White

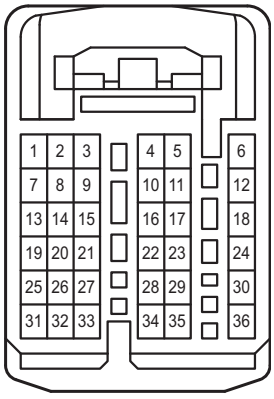

82824-26130

C36
White

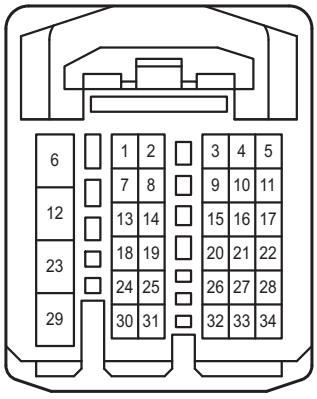

82824-26150

C41
Gray



90980-11250

C42
Gray




90980-11363

C46
Gray




90980-11235

C48
White

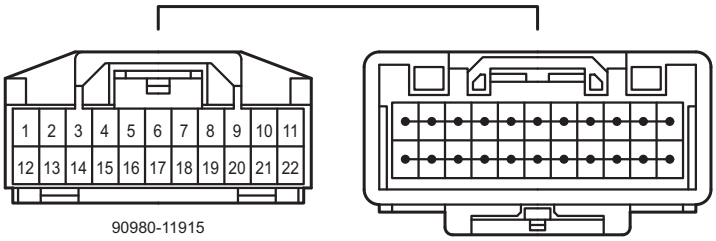


90980-11915

C49
Blue

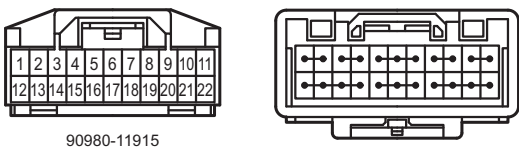


90980-11915

C70
Gray

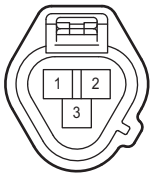


90980-11016

C90
White

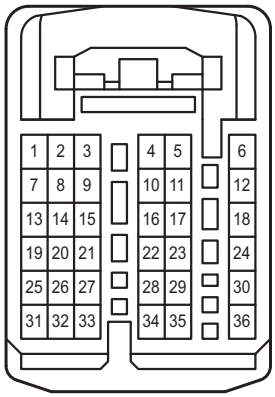


82824-26130

C91
White

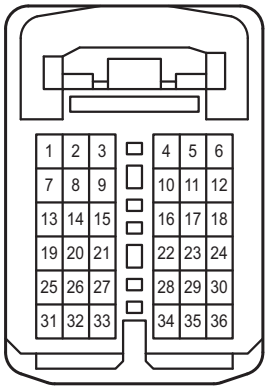

82824-26140

C92
White

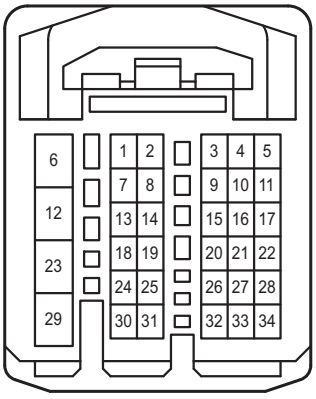

82824-26150

C96
Black



90980-11363

C100
Black



90980-10703

C109
Black




90980-11162

C111
Black




90980-10737

C149
White

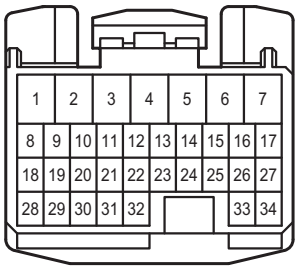


90980-12527

C152
White

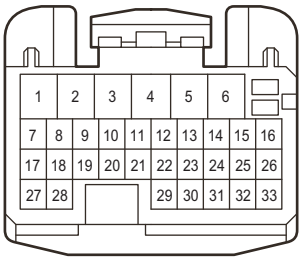

90980-12700

C159
Gray

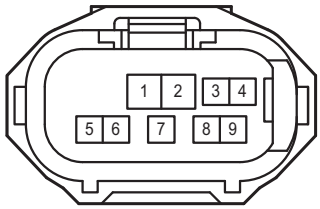


90980-12A23

C160
White




90980-12B06

C162
White

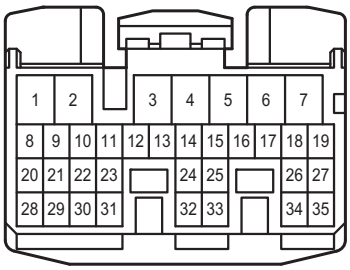


90980-12528

G6
Black

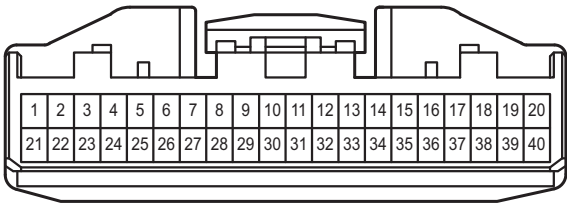


90980-12557

G7
Black

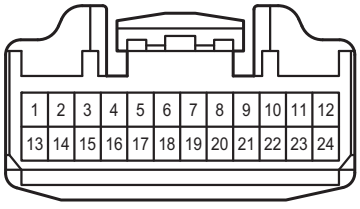

90980-12554

G16
White

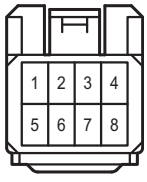


90980-12113

G40
Black




90980-12552

G48
White

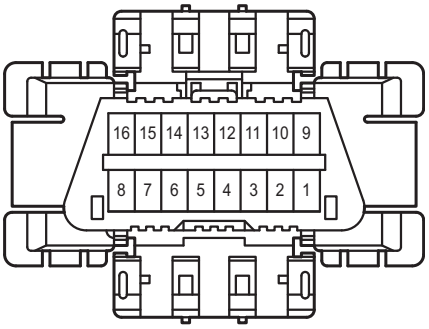


90980-11978

G51
Black

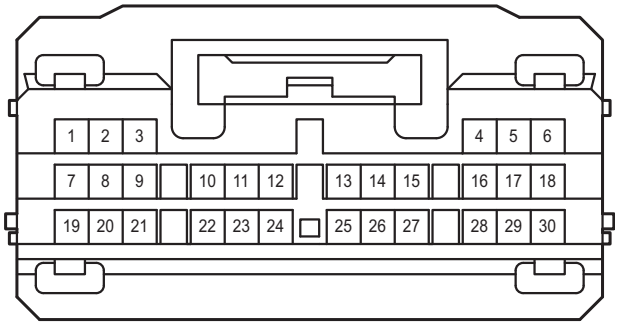


90980-12844

G56
White

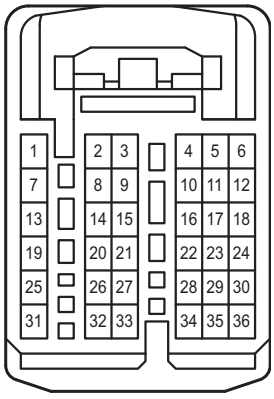


82824-26120

G58
White

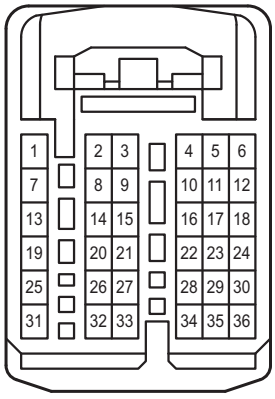


82824-26120

G63
White

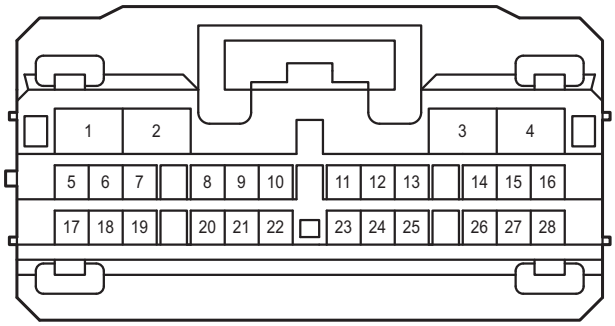


90980-12793

G64
White

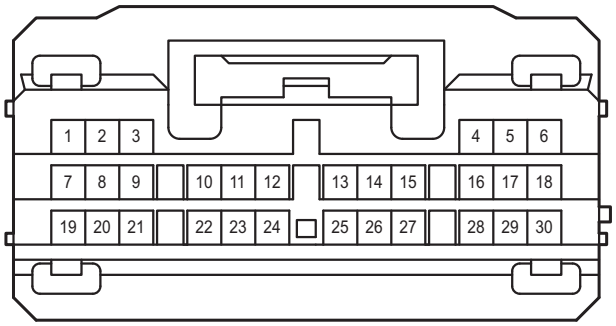


90980-12753

G65
White

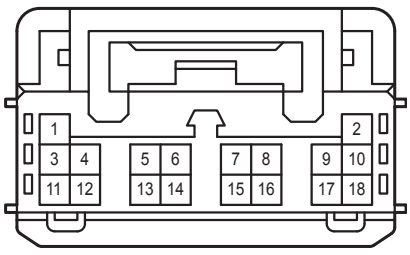


90980-12750

G70
White

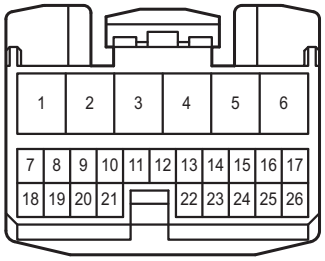


90980-12561

G71
White

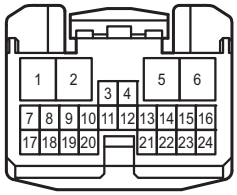

90980-12560

G76
Black

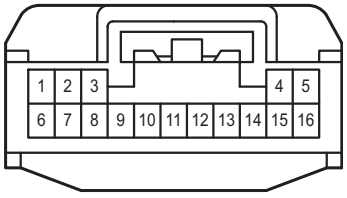


90980-12423

G77
White




90980-10871

G104
White (Before Aug. 2017 Production) / Gray (From Aug. 2017 Production)

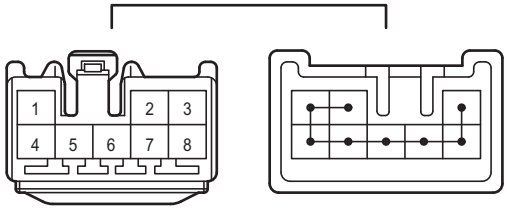


90980-11686

G106
White (Before Aug. 2017 Production) / Gray (From Aug. 2017 Production)

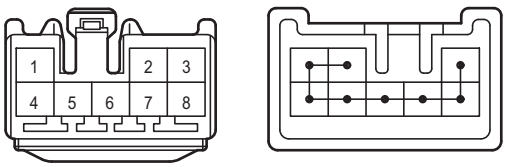


90980-11686

G107
Blue

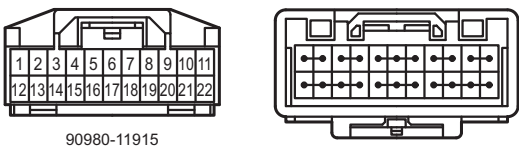


90980-11915

G120
White

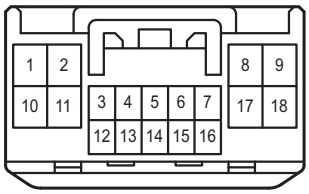


90980-12376

G127
Black

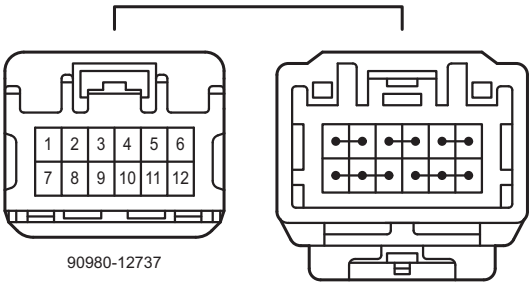


90980-12737

G128
Black

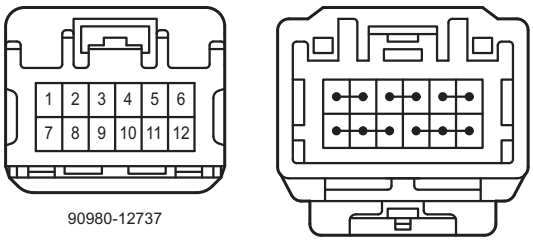


90980-12737

G129
Black

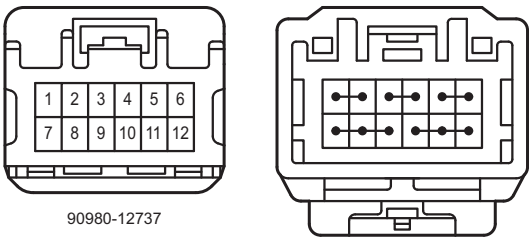


90980-12737

G132
Gray

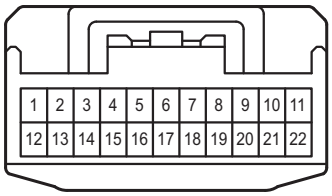


90980-12372

G133
White

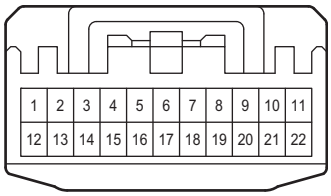


82824-30420

G134
Gray

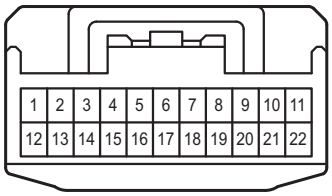


90980-12372

G142
White

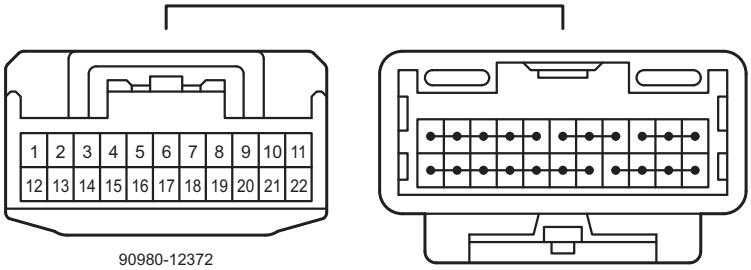

90980-12372

G162
Black

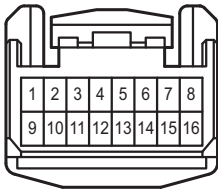


90980-12553

G163
White




90980-12804

G167
Blue

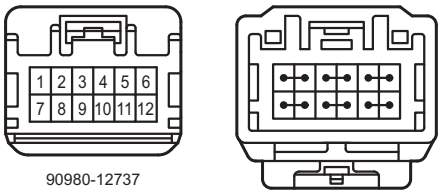

90980-12737

G169
Blue

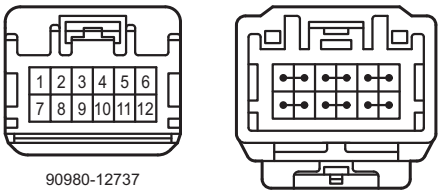

90980-12737

G171
Gray




90980-11608

G172
Gray




90980-11608

G182
White

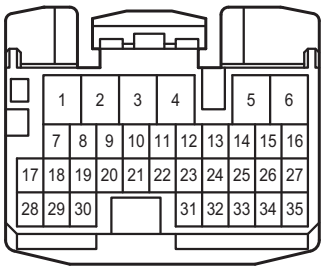


90980-12529

G183
White

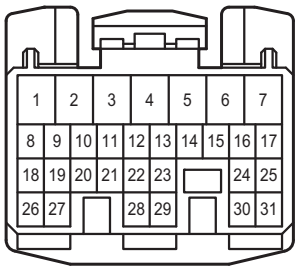


90980-12525

G184
White

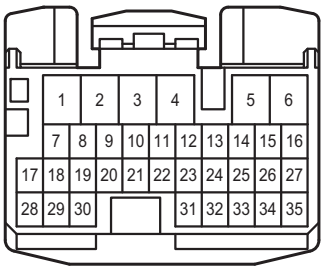


90980-12529

H24
White (Before Aug. 2017 Production) / Blue (From Aug. 2017 Production)

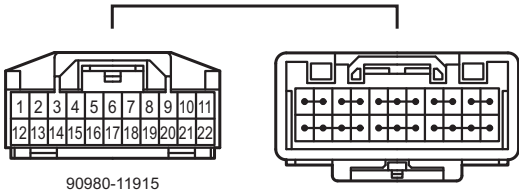


90980-11915

H25
White (Before Aug. 2017 Production) / Blue (From Aug. 2017 Production)

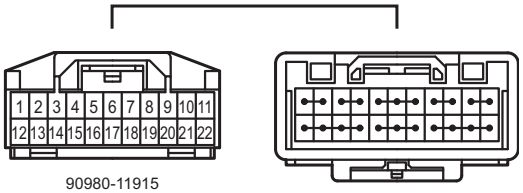


90980-11915

H47
White

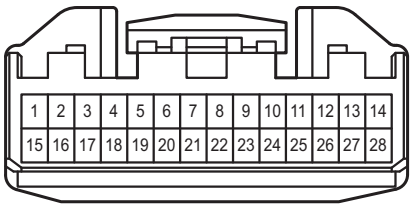


90980-12555

H51
White

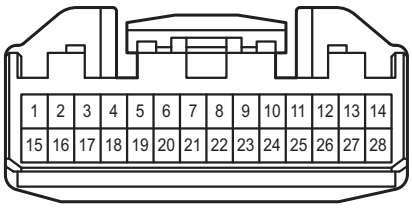


90980-12555

H56
White

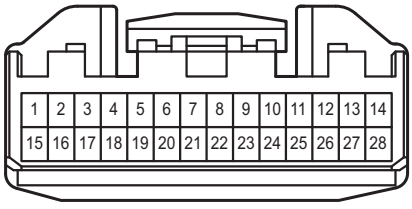


90980-12555

H63
White

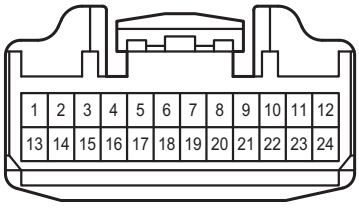

90980-12554

I1
White

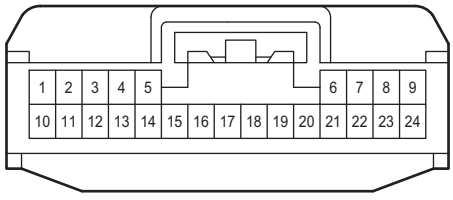

90980-12404

Q8
Black




90980-10871

Q9
White



90980-10871

Q23
White

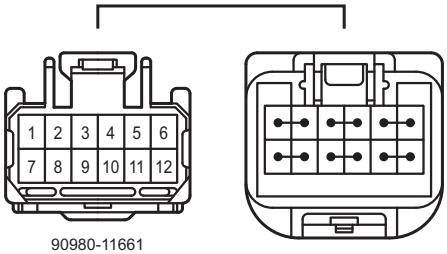

90980-11661

R7
Black



90980-10871

R8
White




90980-10871

R9
Black




90980-10871

R28
White

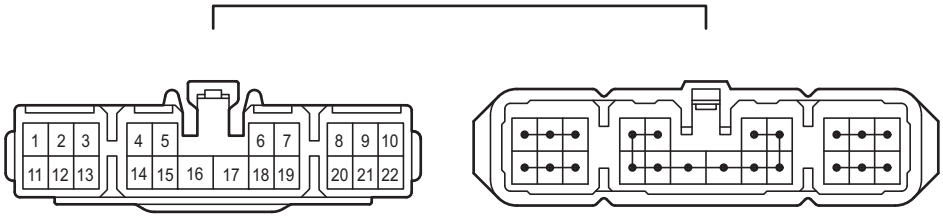


90980-10875

R29
Blue

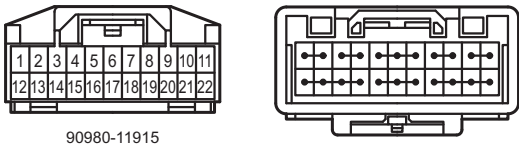


90980-11915

R30
Blue

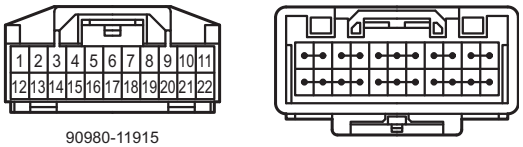

90980-11915

R31
White

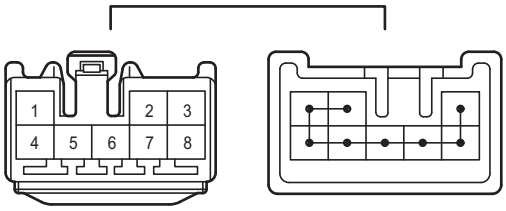

90980-11686

R40
Black



82890-32030

R41
Black (Before Aug. 2017 Production) / White (From Aug. 2017 Production)



90980-12552

S5
White



90980-11077

r7
Black




90980-12353

t1
Gray




90980-11598

z8
White

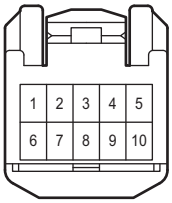


90980-12361

2A
White

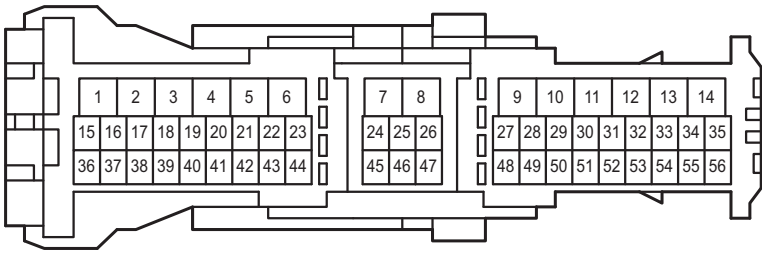


90980-12822

2D
White

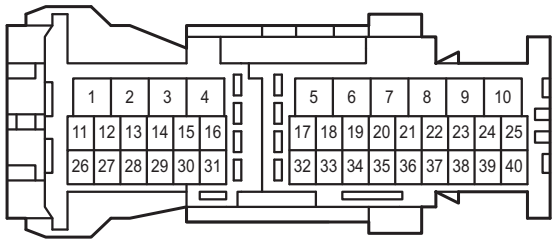


90980-12818

2F
White

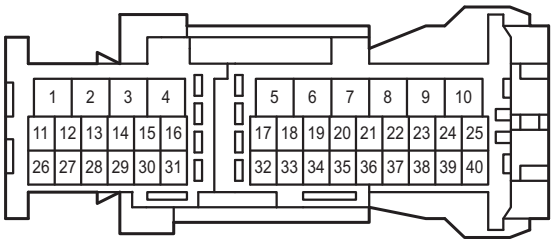


90980-12794

2H
White

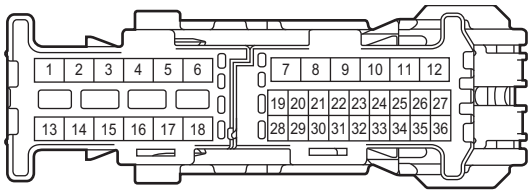


90980-12825

3A
White

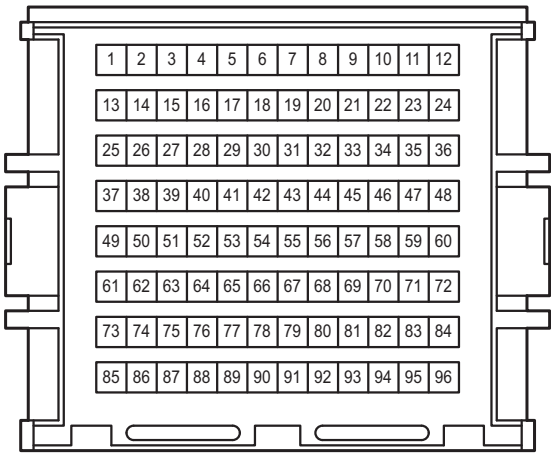


82890-12030

3B
White

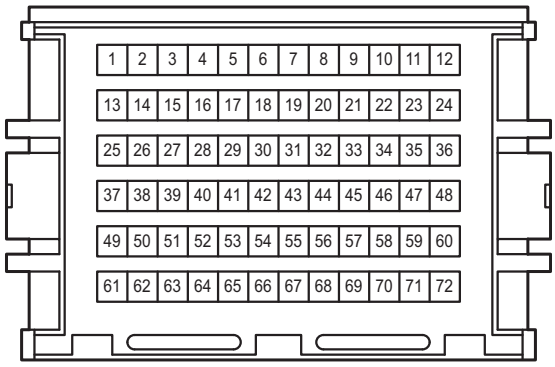


82890-42010

3C
White

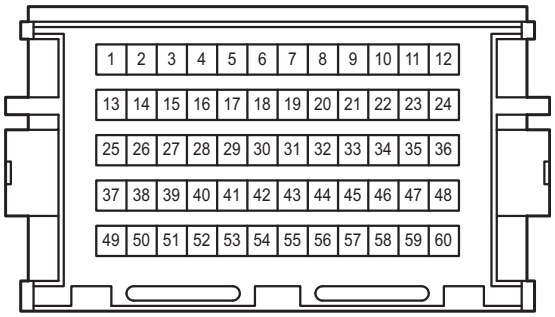


82890-12020

4A
White

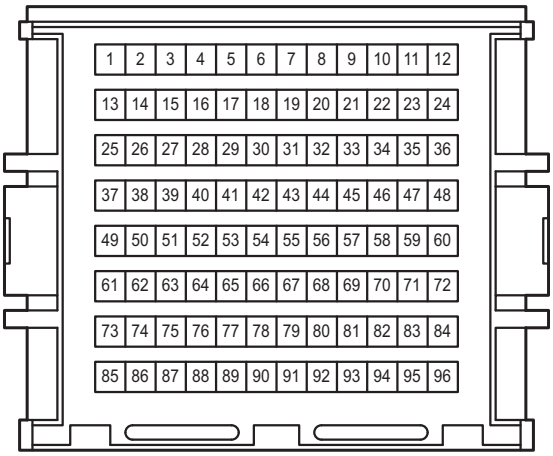


82890-12030

4B
White

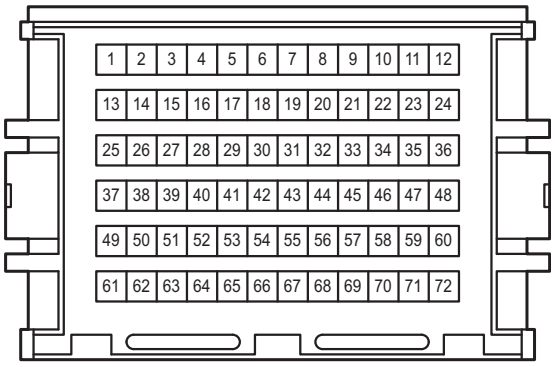


82890-42010

CG1
White

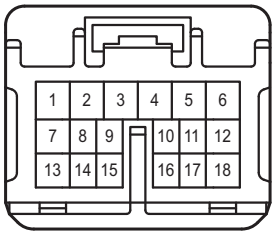


90980-12745

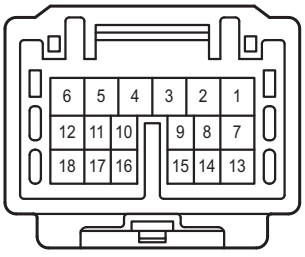


90980-12744

CG2
White

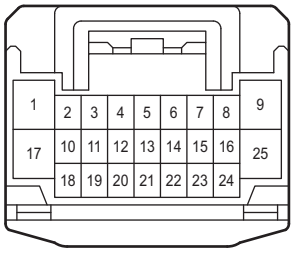


90980-12414

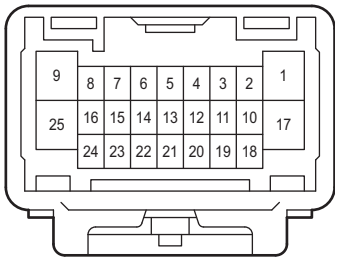


90980-12413

CG3
White

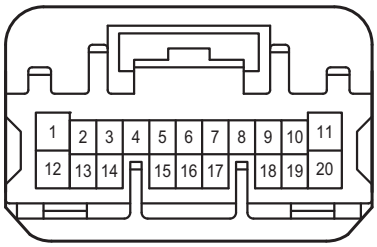

90980-12741

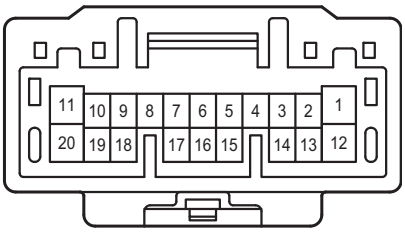

90980-12740

Cr4
Black




90980-12353




90980-12719

GA1
White

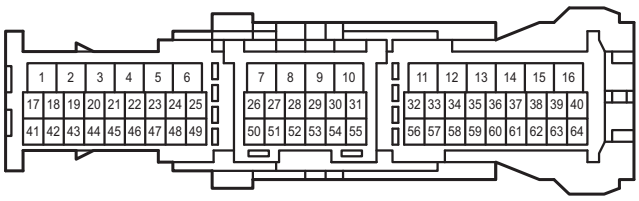


90980-12774

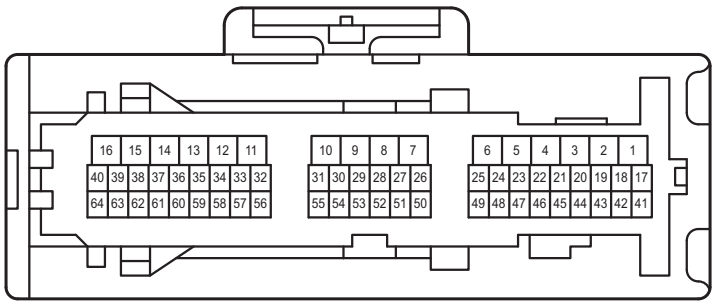


90980-12798

GA6
White

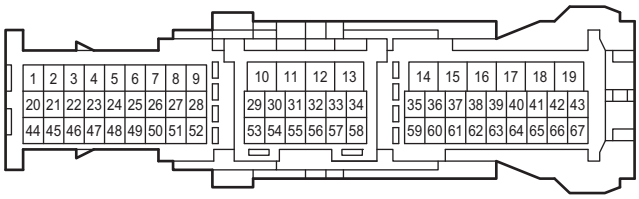


90980-12783

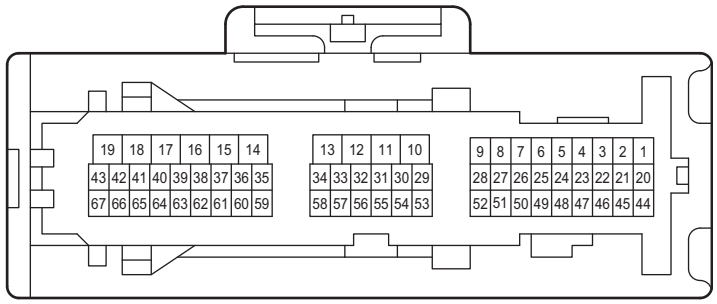


90980-12800

GH1
White

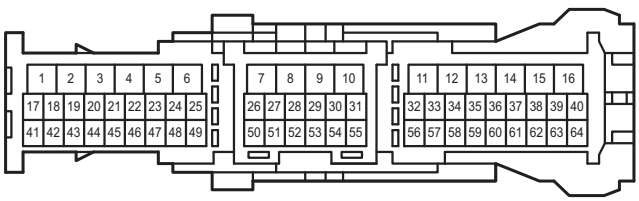


90980-12774

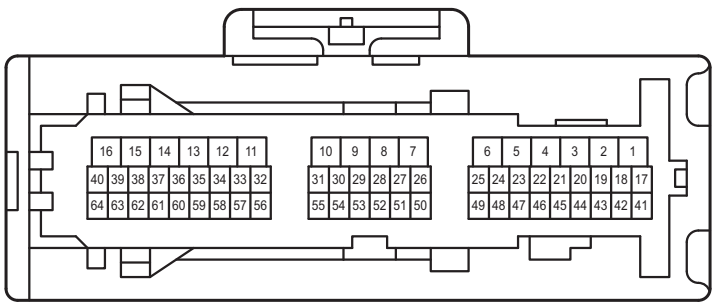


90980-12798

GQ1
White

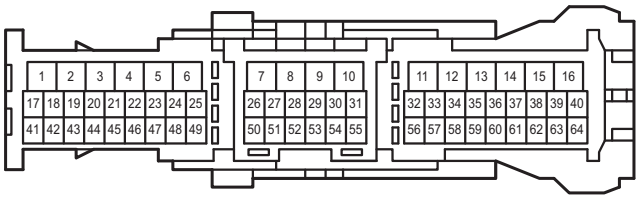


90980-12774

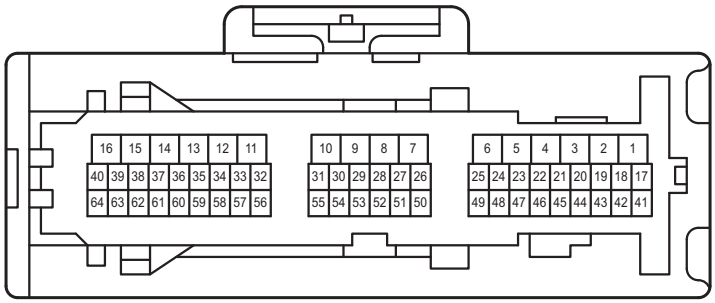


90980-12798

GR1
White

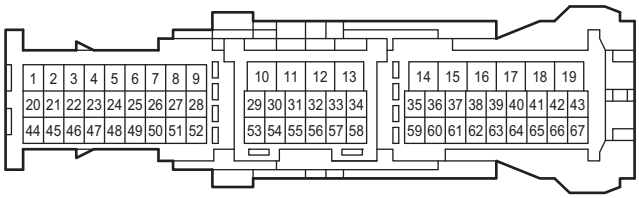


90980-12783

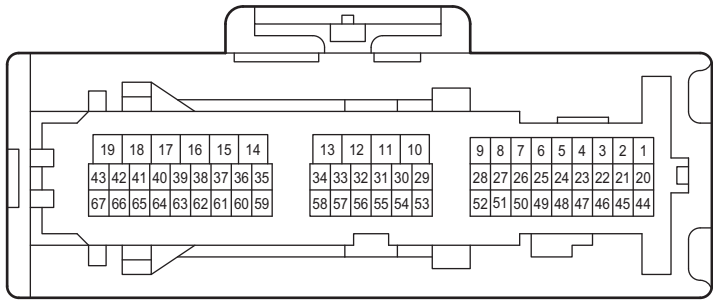


90980-12800

GR2
Gray

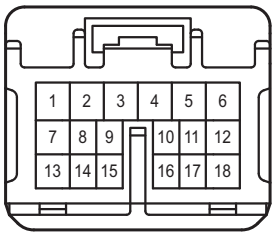


90980-12745

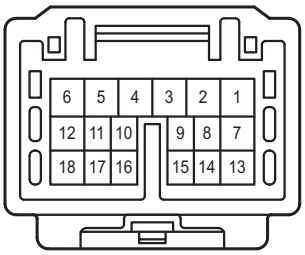


90980-12744

GR3
Blue

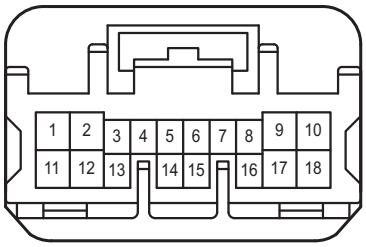


90980-12739

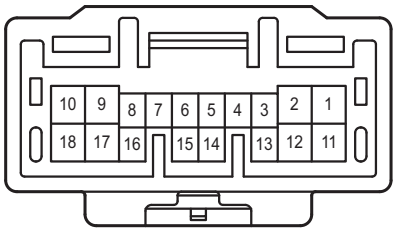


90980-12738

IG1
White

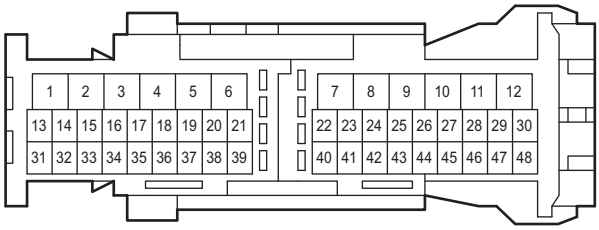


90980-12779

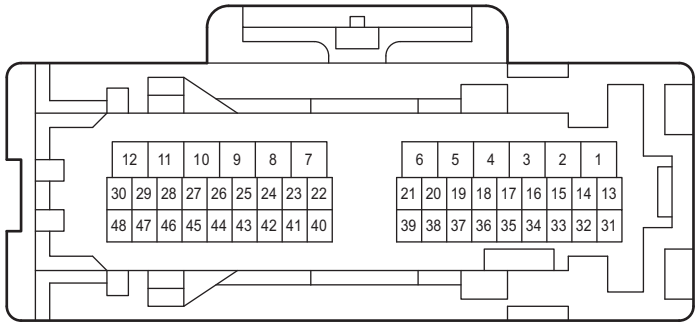


90980-12799

RQ1
White

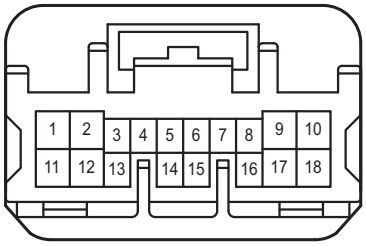


90980-12739

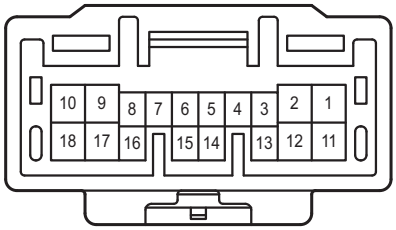


90980-12738

SR2
White

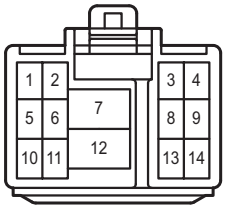

90980-10813

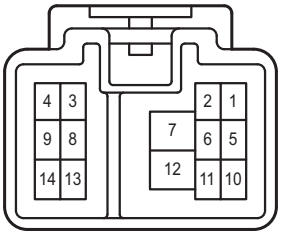

90980-10812

tR1
Gray



90980-11599



90980-11598