





(BAT)
10A
ECU-B
2
1
L
(BAT)
25A
D/L
NO.2
(ACC)
7.5A
ACC
(IG)
10A
ECU-IG
NO.2
G63(A),G64(B),G65(C)
Main Body ECU
IG
ACC
ALTB
BECU
32
29
31
30
39
2F


G63(A),G64(B),G65(C)
Main Body ECU
GND2
3 A
GND1
11
4 2D
W-B (RHD)
W-B (LHD)
8 B
7 B
G127(B) Junction Connector
11 D
7 C
G140(C),G141(D) Junction Connector
12 D
7 C
G128(C),G129(D) Junction Connector
12 F
7 E
G164(E),G165(F) Junction Connector
4
G106 Junction Connector
G5
G104 Junction Connector
G3

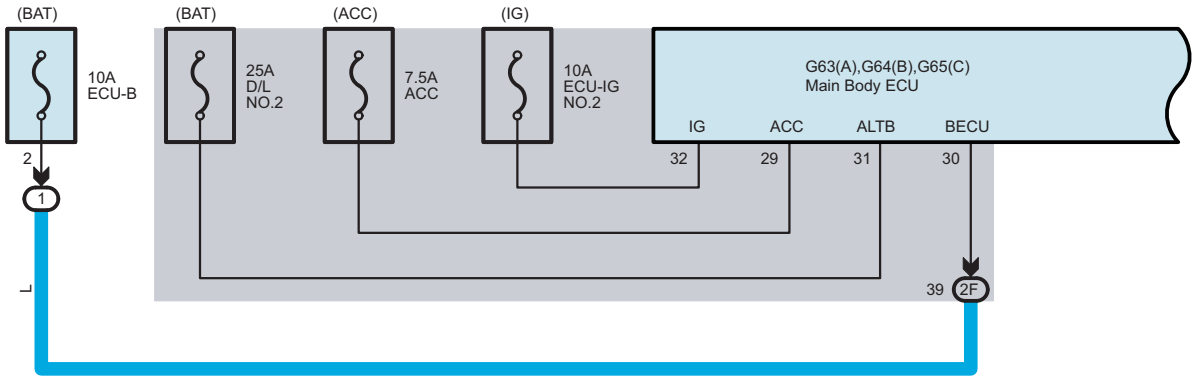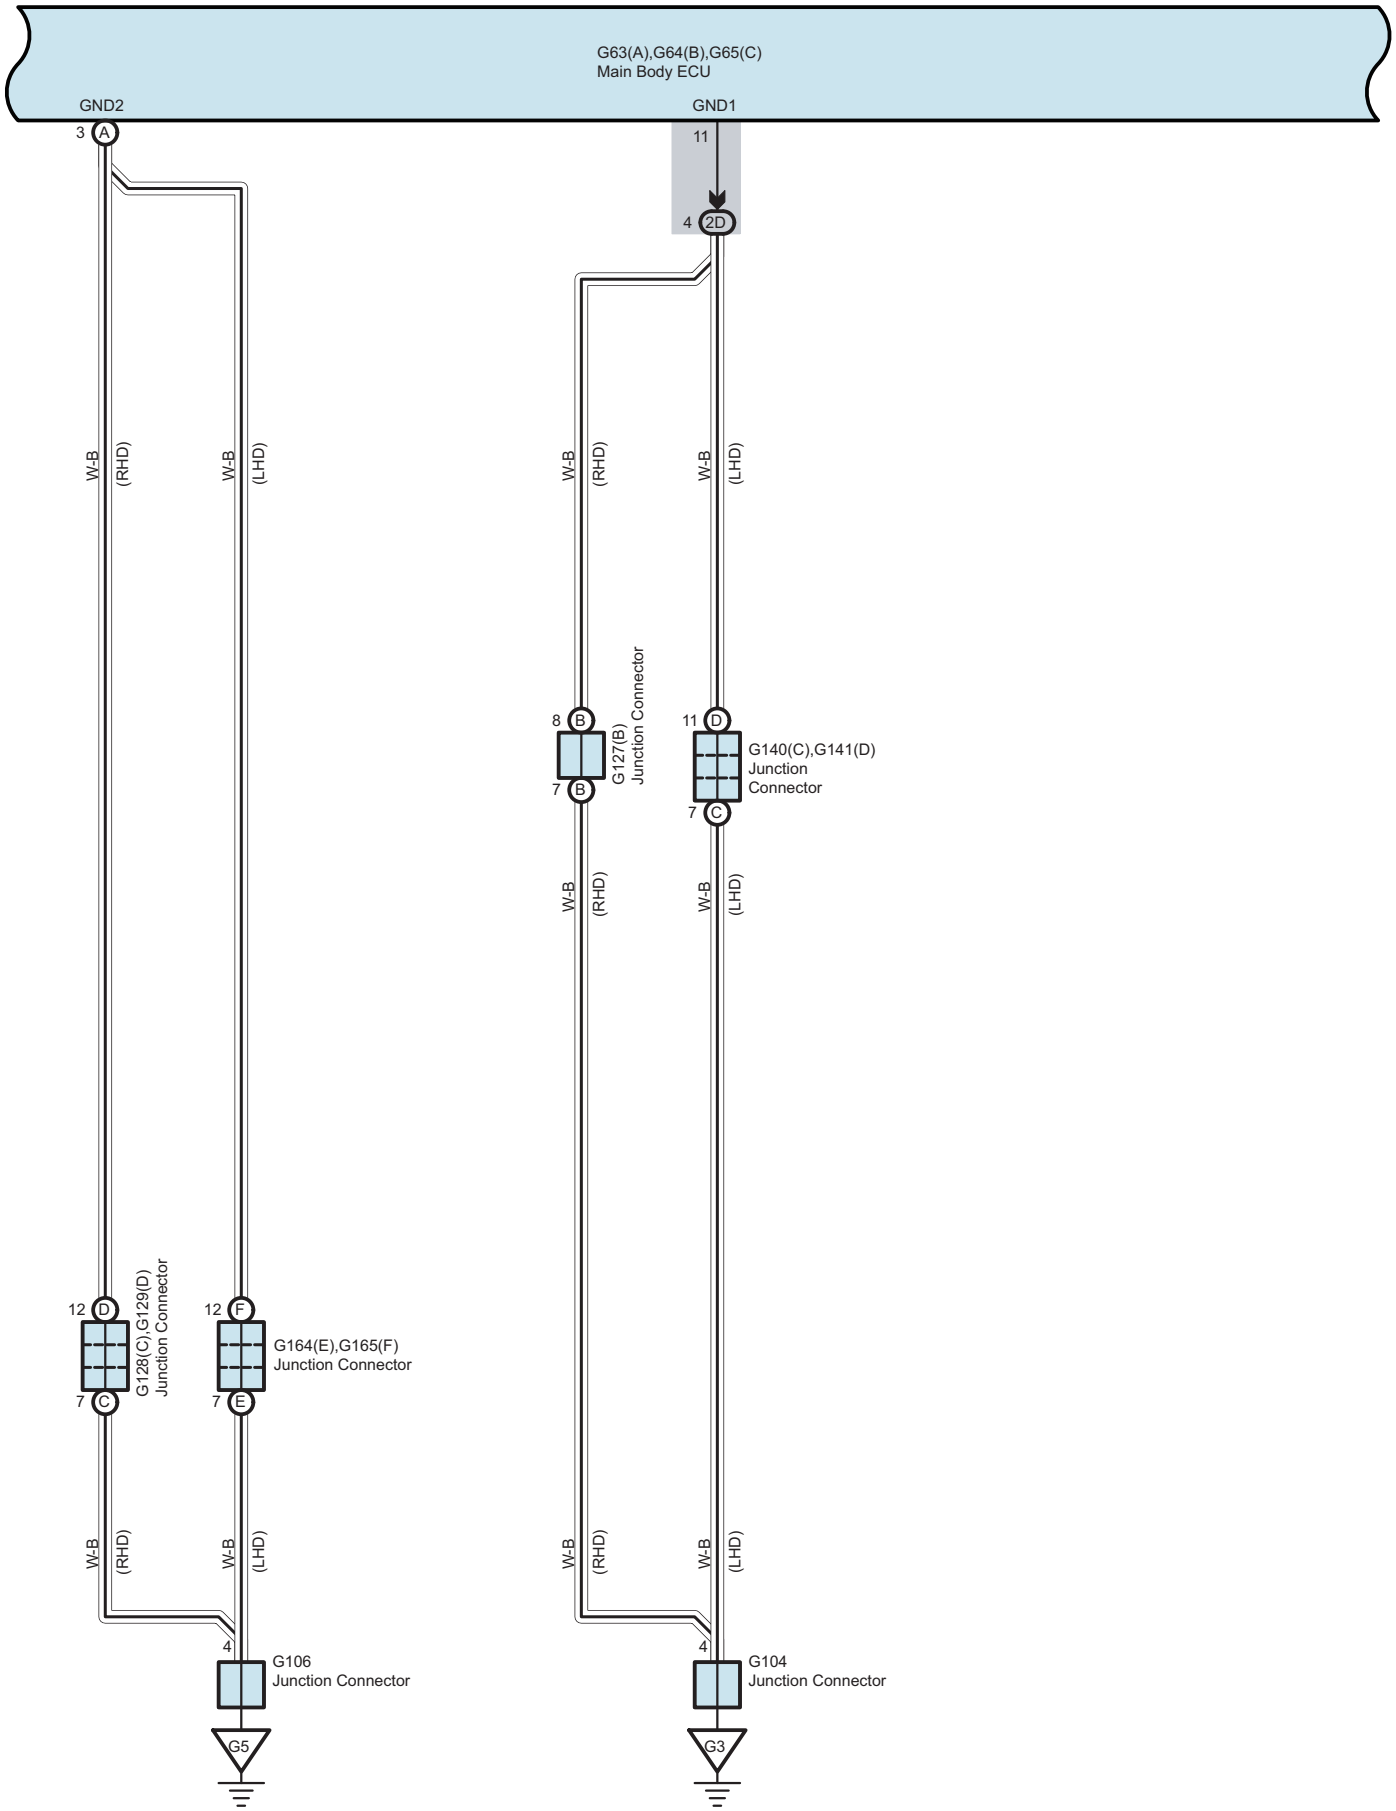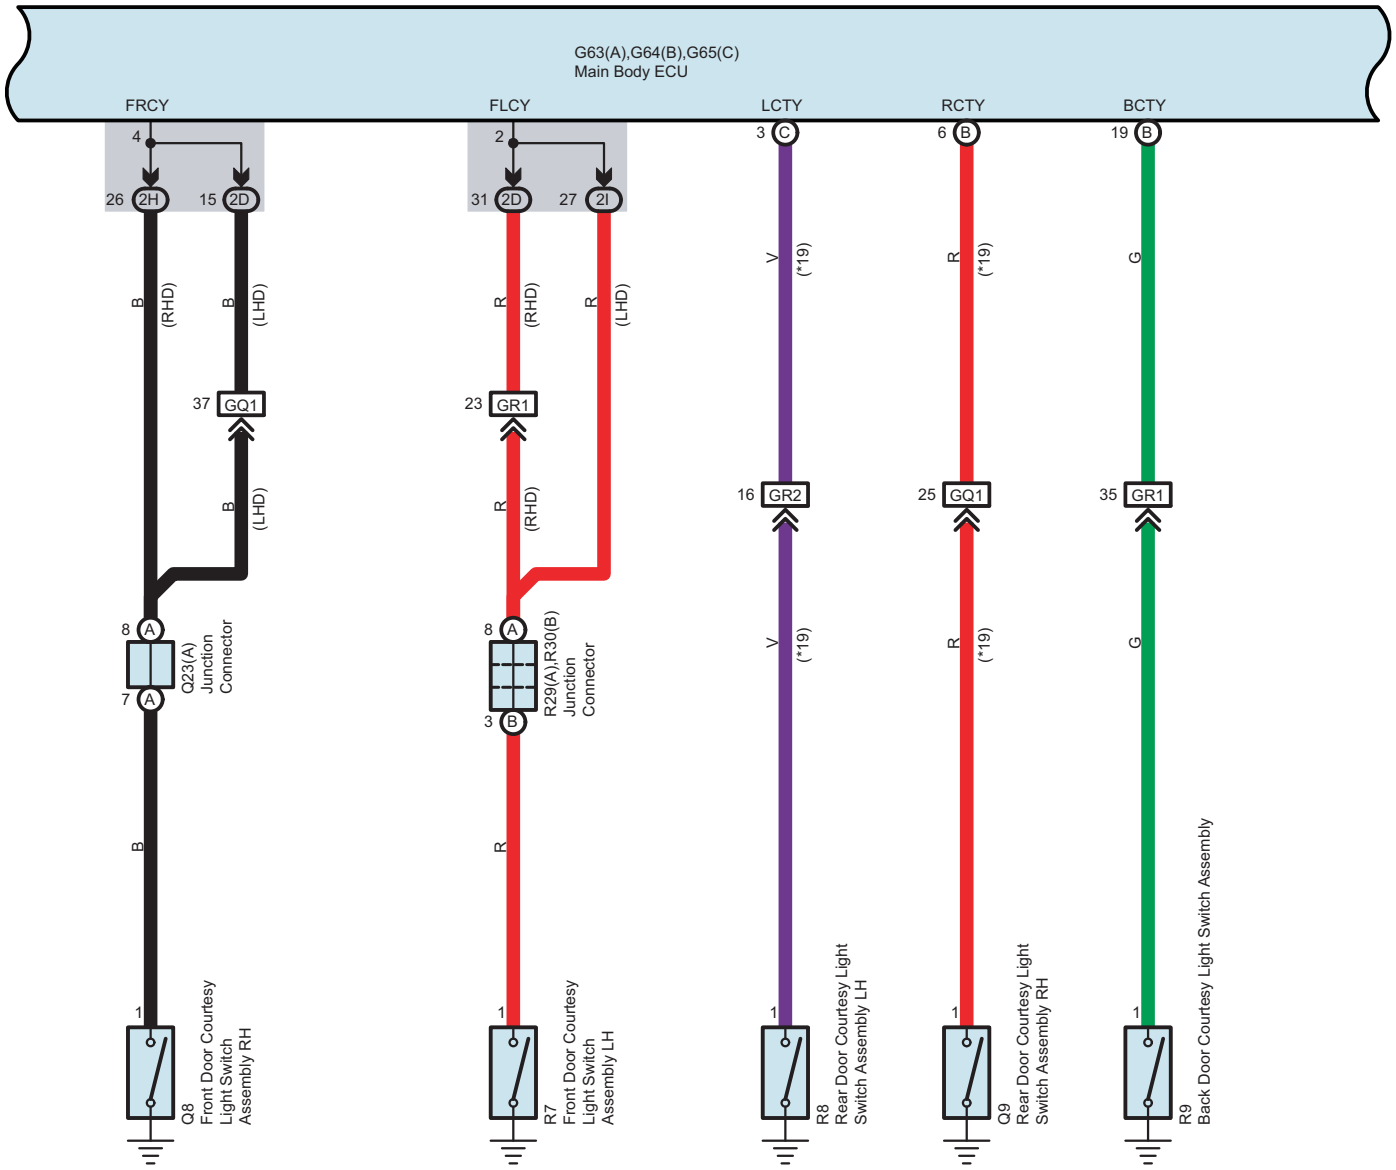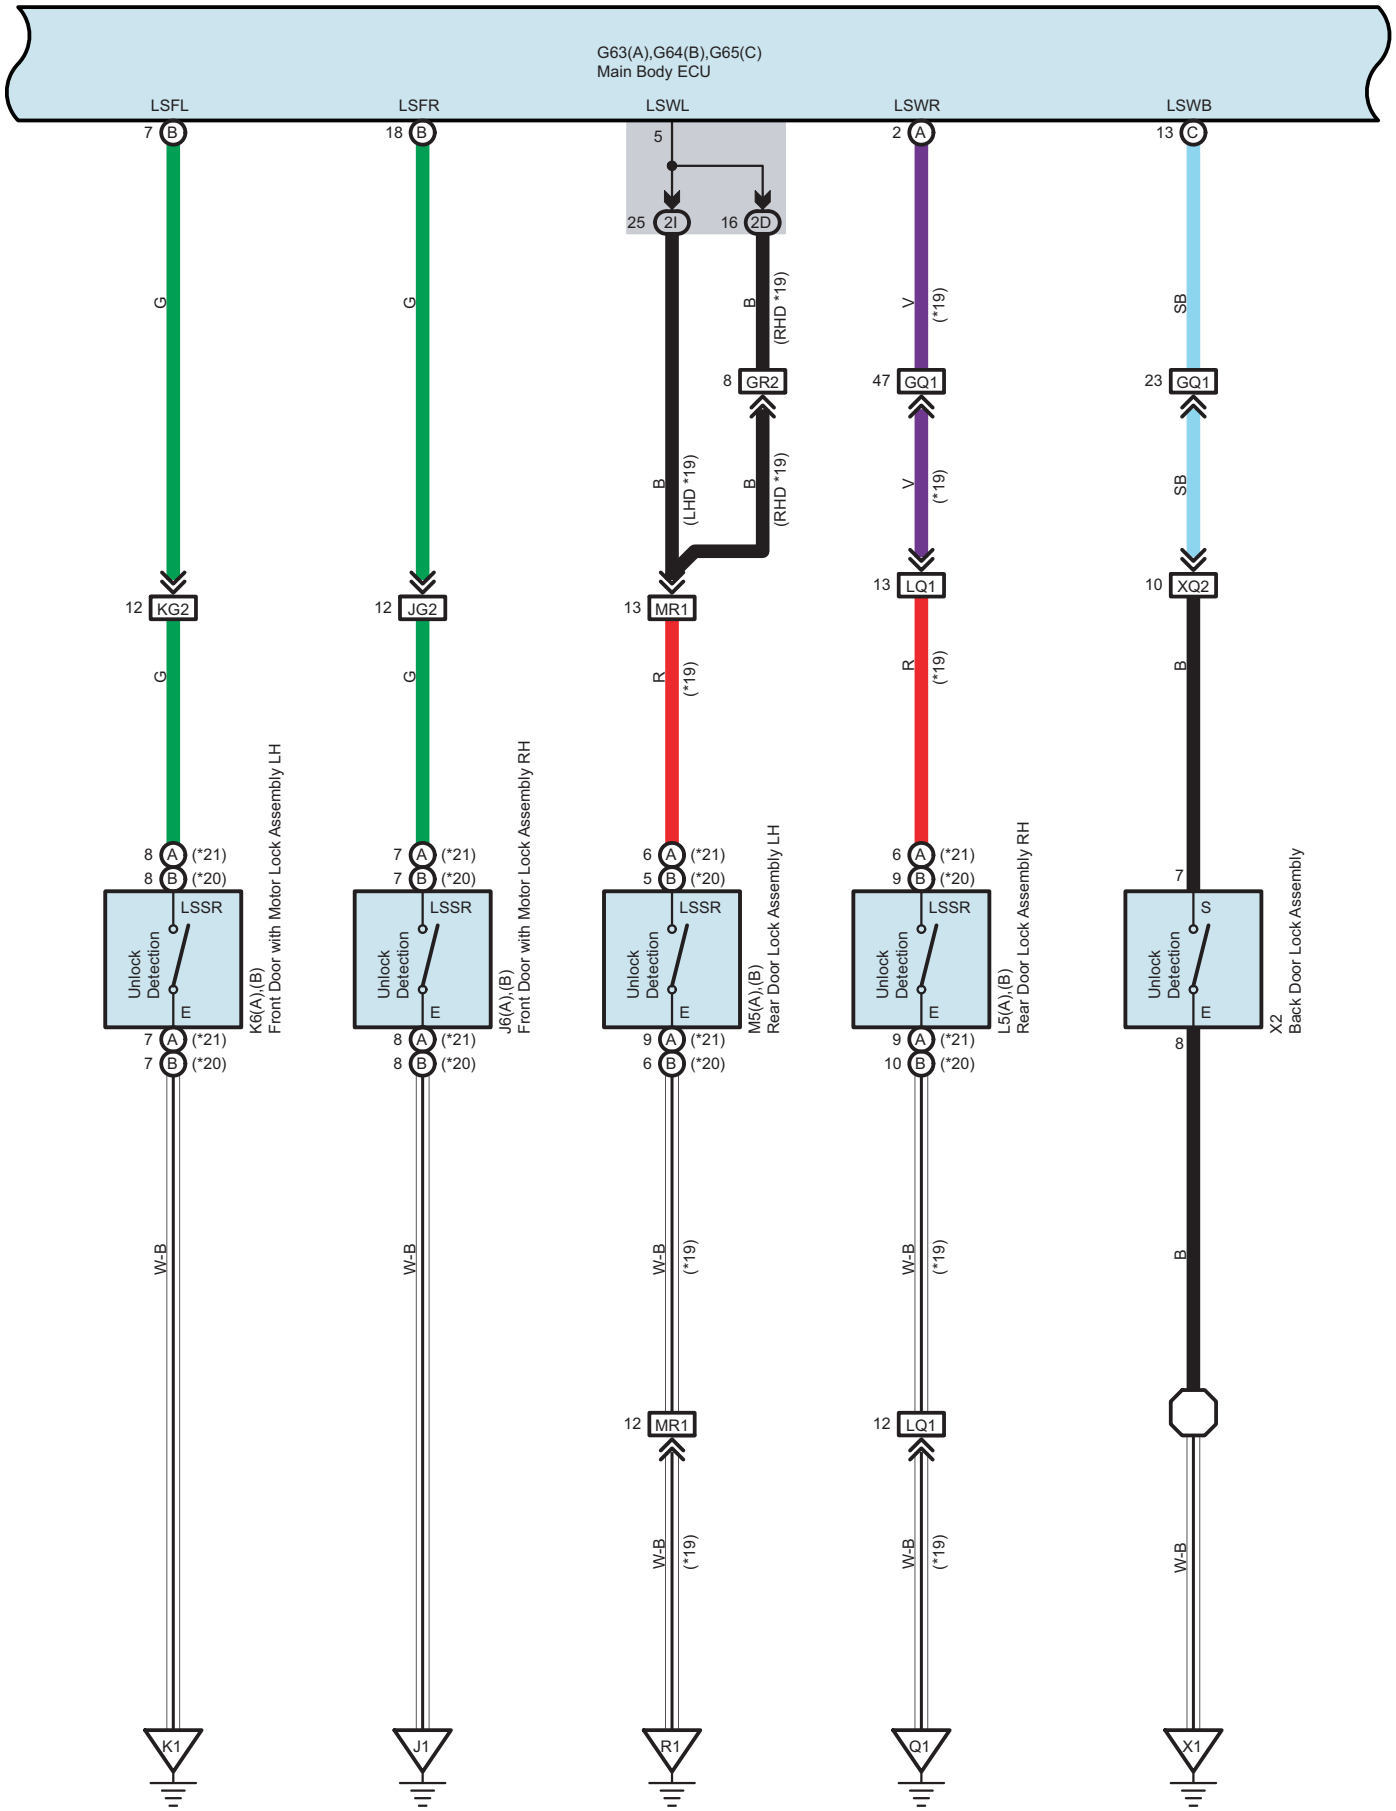


*19 :5-Door
*20 :w/ Double Locking
*21 :w/o Double Locking



G63(A),G64(B),G65(C)
Main Body ECU
LSFL
LSFR
LSWL
LSWR
LSWB
7 B
18 B
5
25 2I
16 2D
2 A
13 C
G
B (LHD *19)
B (RHD *19)
V (*19)
SB
8 GR2
47 GQ1
23 GQ1
12 KG2
12 JG2
13 MR1
13 LQ1
10 XQ2
R (*19)
B
8 A (*21)
8 B (*20)
7 A (*21)
7 B (*20)
6 A (*21)
5 B (*20)
6 A (*21)
9 B (*20)
7
LSSR
Unlock Detection
S
E
7 A (*21)
7 B (*20)
8 A (*21)
8 B (*20)
9 A (*21)
6 B (*20)
9 A (*21)
10 B (*20)
8
W-B
W-B (*19)
K6(A),(B)
Front Door with Motor Lock Assembly LH
J6(A),(B)
Front Door with Motor Lock Assembly RH
M5(A),(B)
Rear Door Lock Assembly LH
L5(A),(B)
Rear Door Lock Assembly RH
X2
Back Door Lock Assembly
K1
J1
R1
Q1
X1

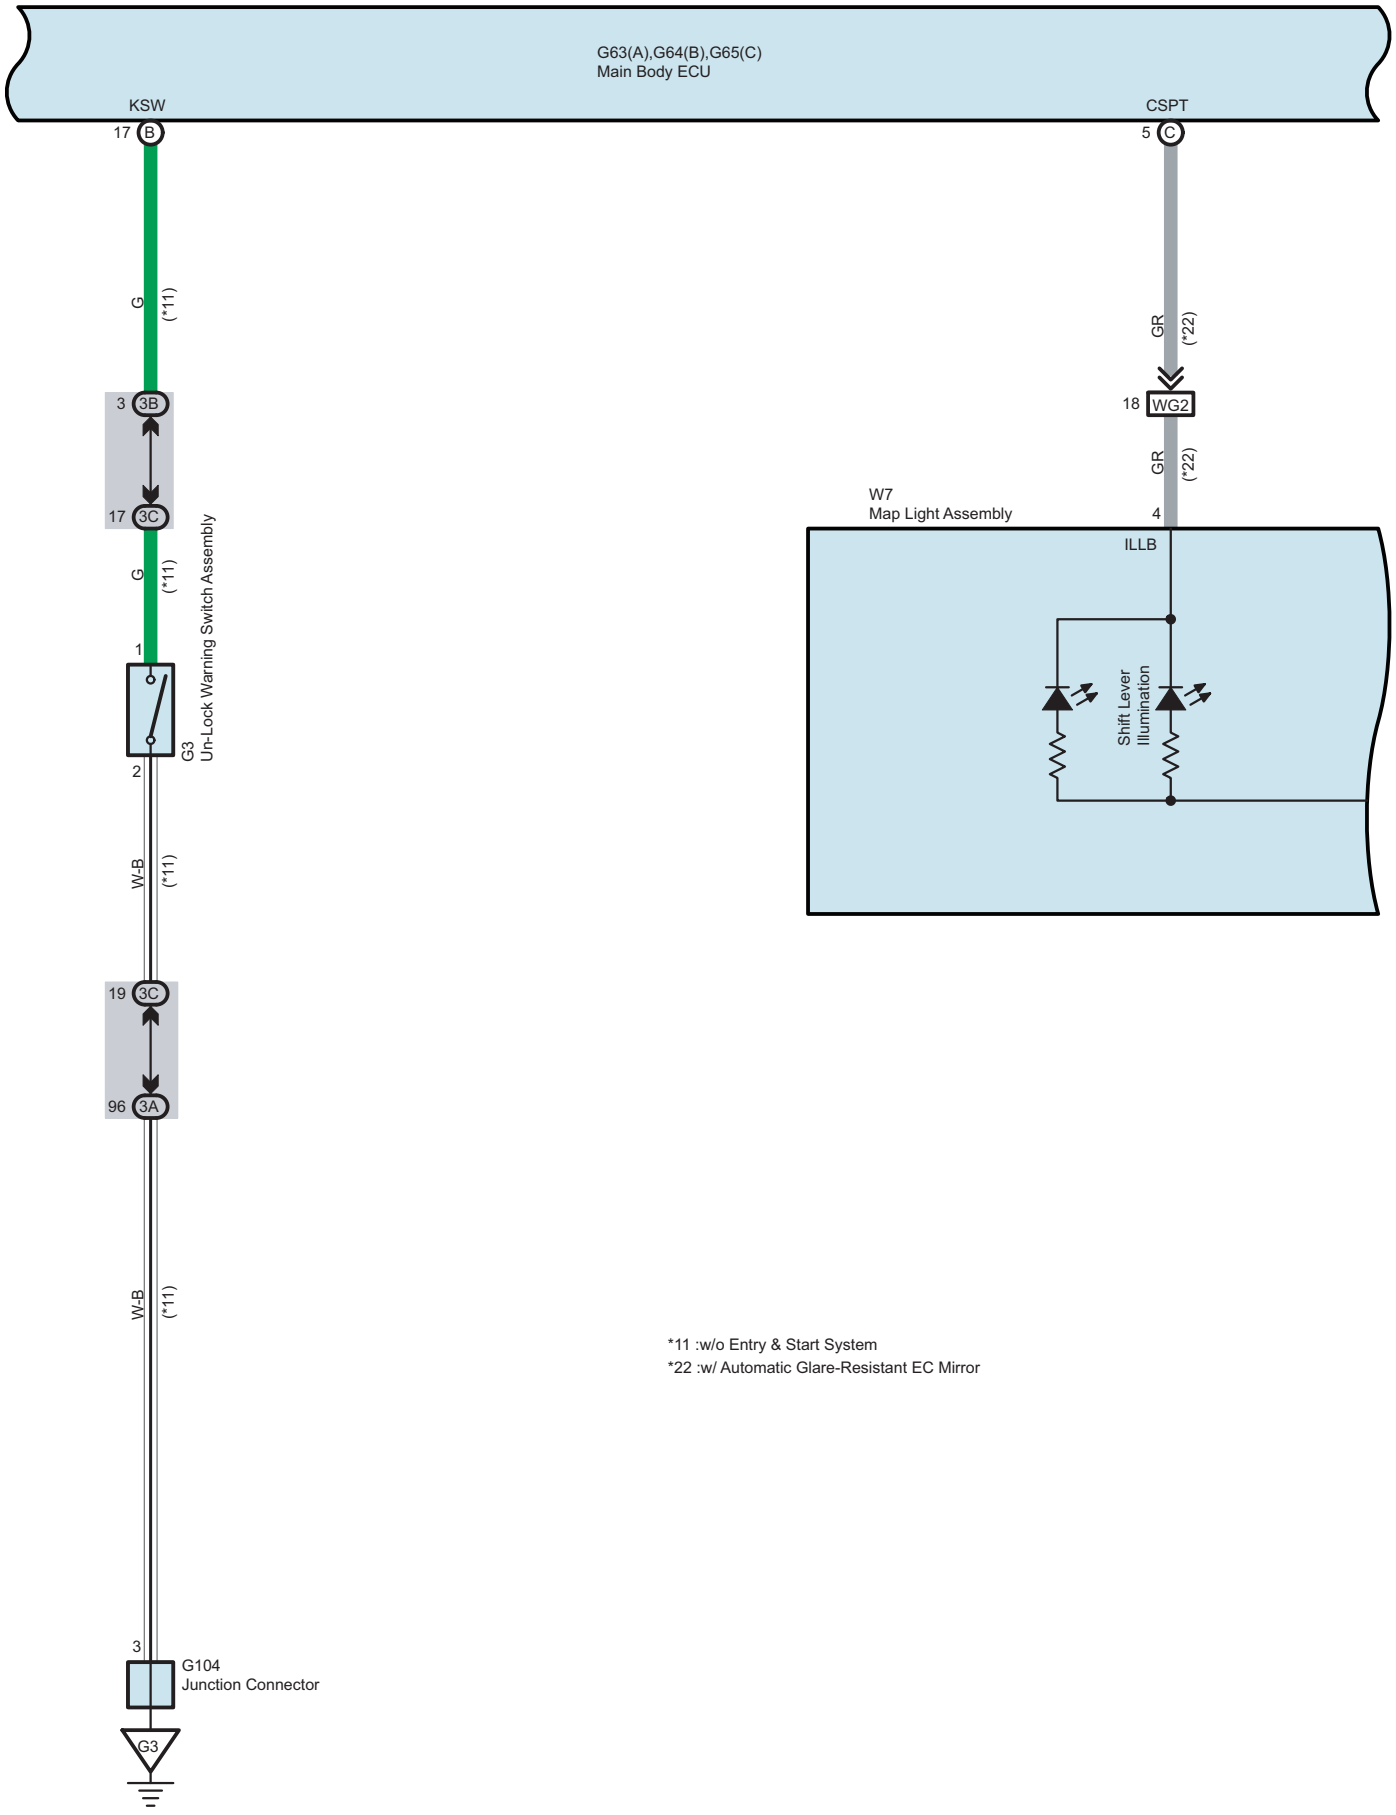


*11 :w/o Entry & Start System
*22 :w/ Automatic Glare-Resistant EC Mirror

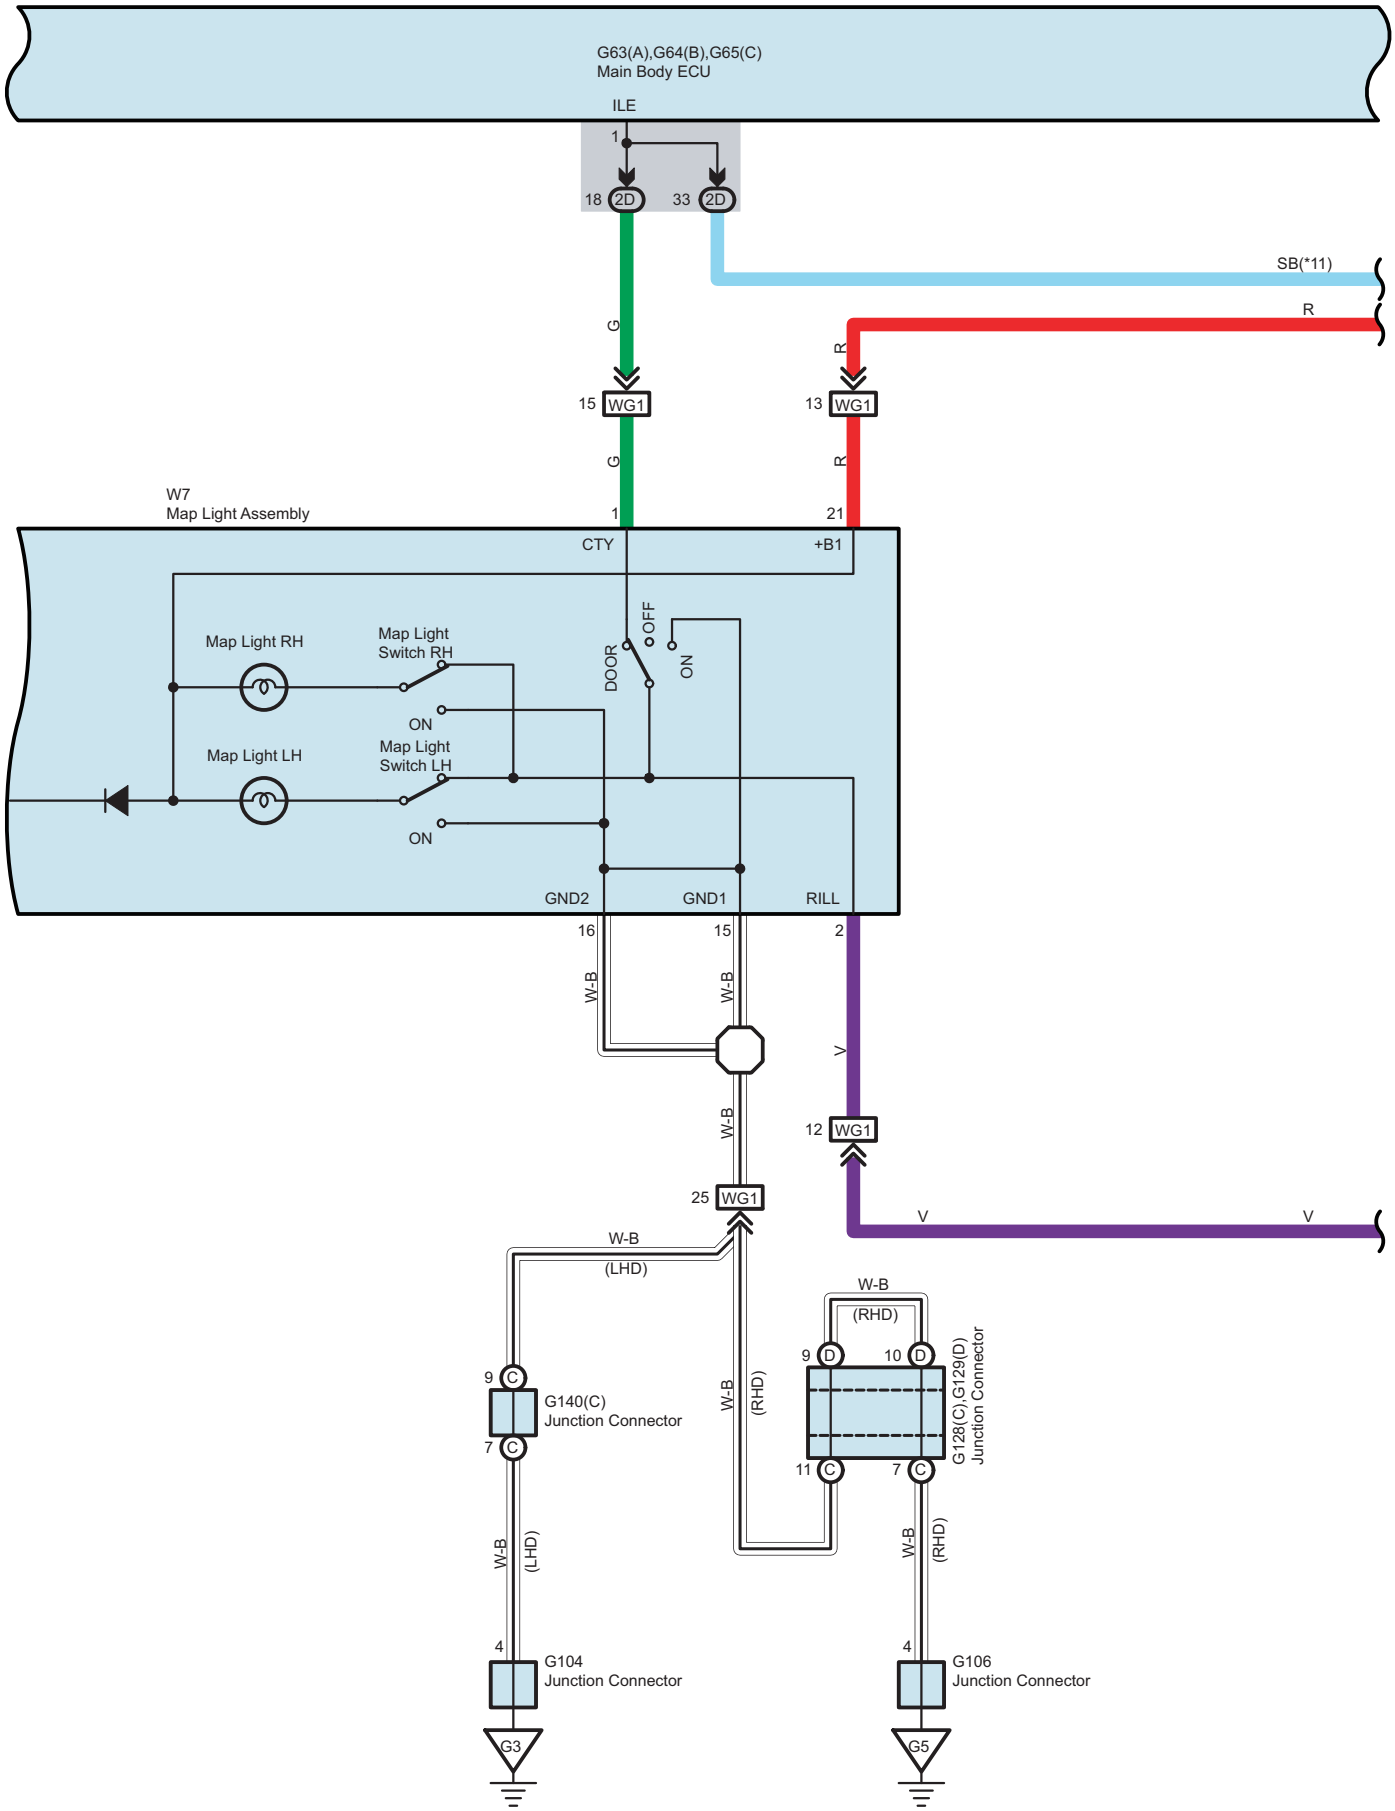

G63(A),G64(B),G65(C)
Main Body ECU
ILE
1
18 2D
33 2D
SB(*11)
R
G
R
15 WG1
13 WG1
G
R
W7
Map Light Assembly
1
21
CTY
+B1
Map Light RH
Map Light
Switch RH
DOOR
OFF
ON
ON
Map Light LH
Map Light
Switch LH
ON
GND2
GND1
RILL
16
15
2
W-B
W-B
V
W-B
12 WG1
25 WG1
V
V
W-B
(LHD)
W-B
(RHD)
9 C
G140(C)
Junction Connector
7 C
W-B
(LHD)
4
G104
Junction Connector
G3
W-B
(RHD)
9 D
10 D
11 C
7 C
G128(C),G129(D)
Junction Connector
W-B
(RHD)
4
G106
Junction Connector
G5


G63(A),G64(B),G65(C)
Main Body ECU

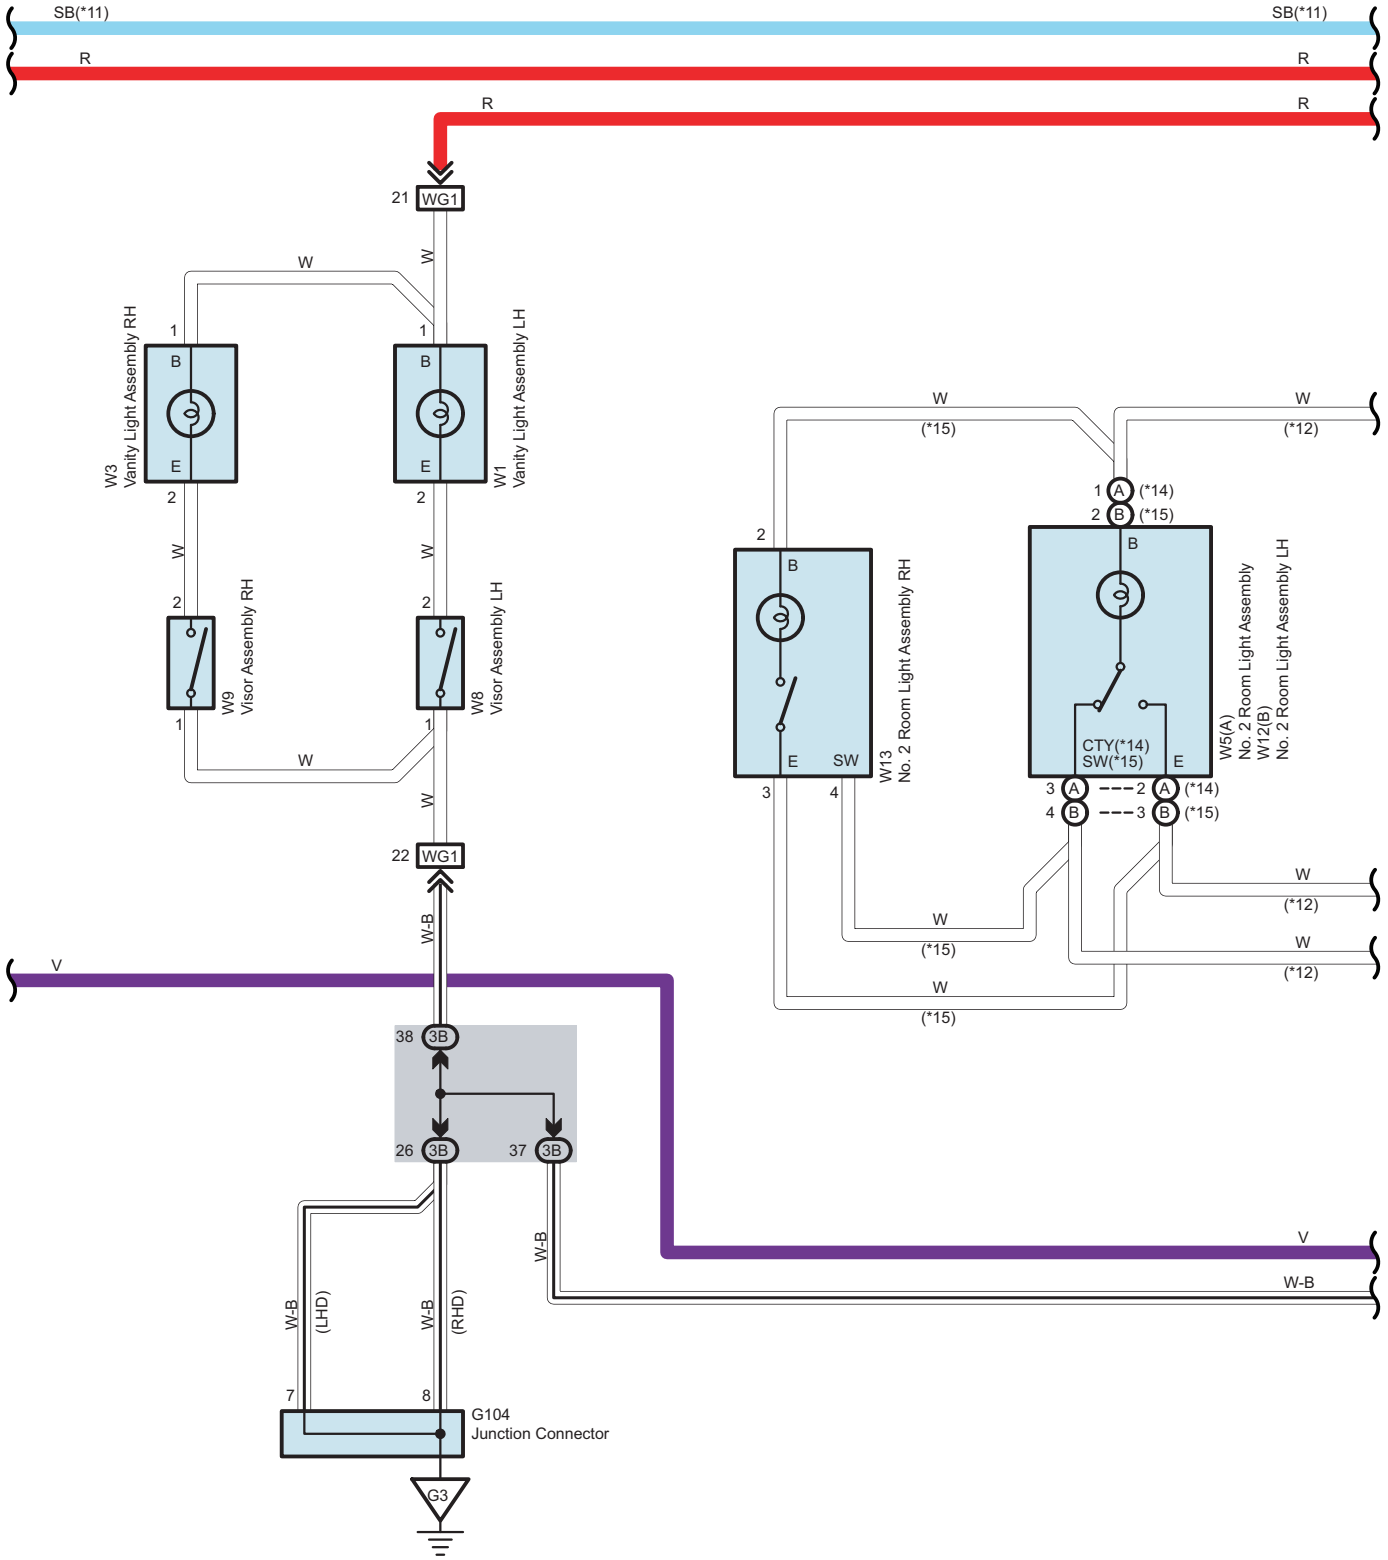



G63(A),G64(B),G65(C)
Main Body ECU

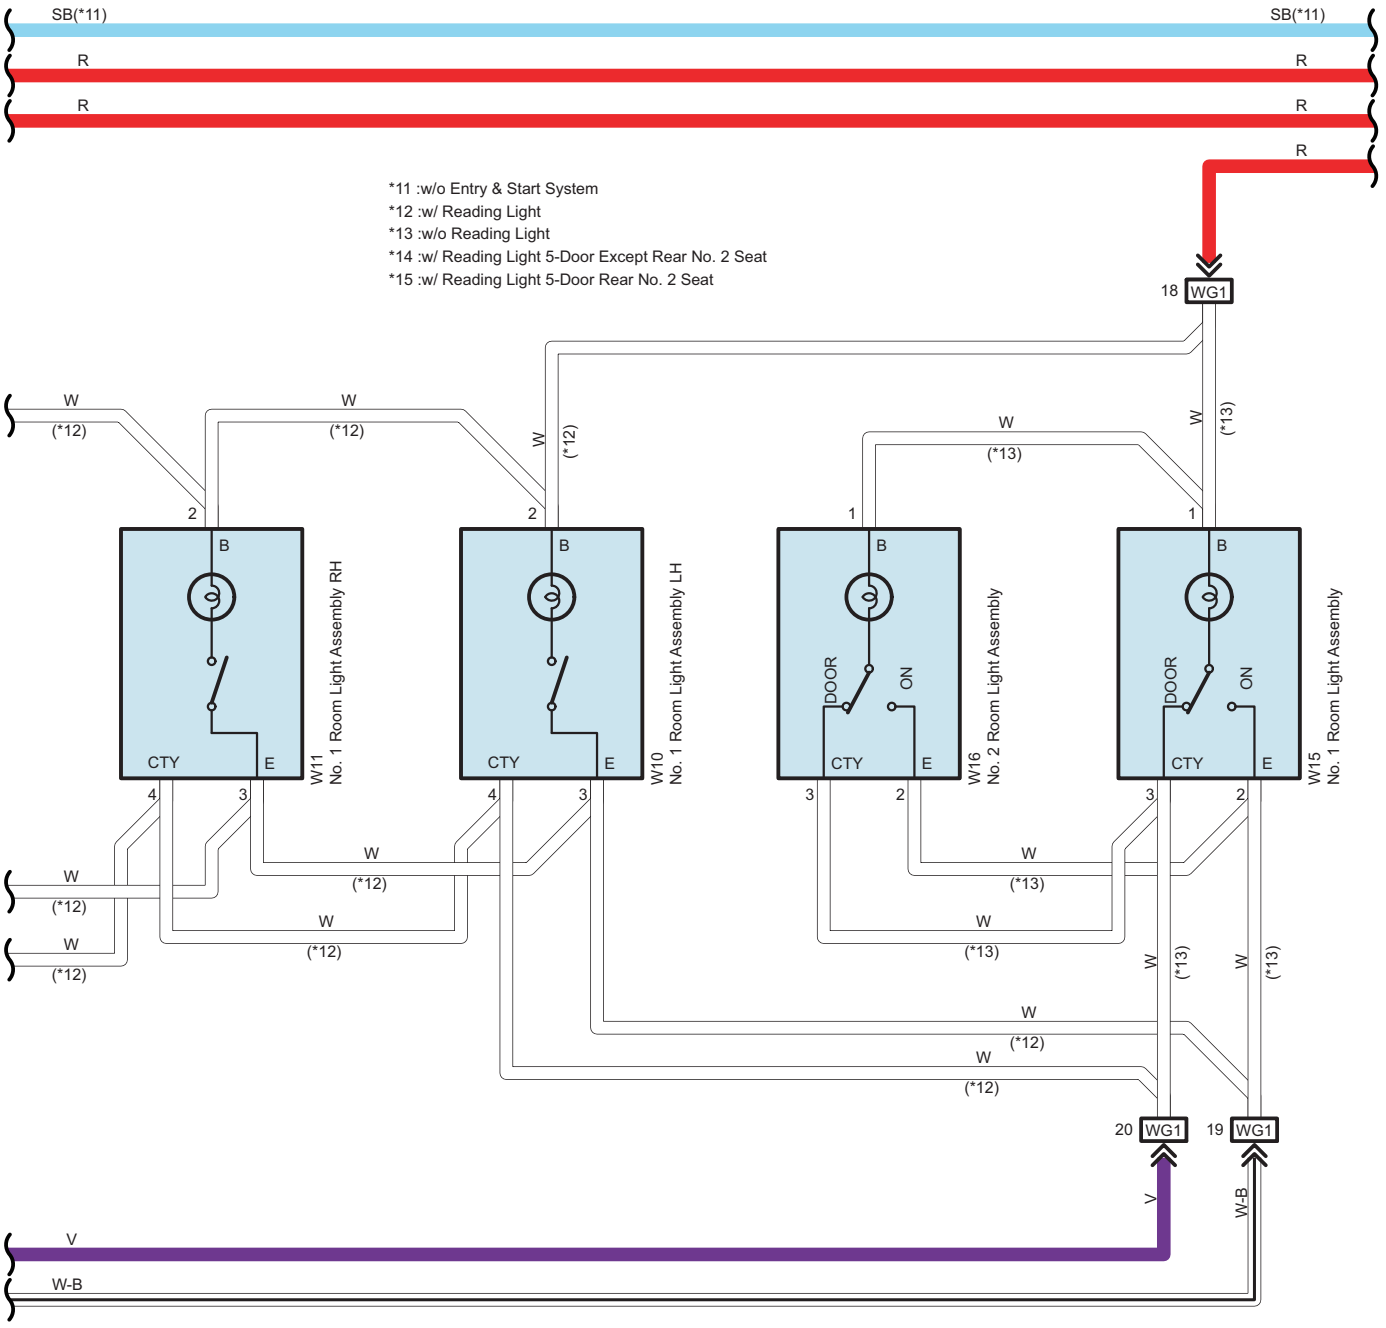

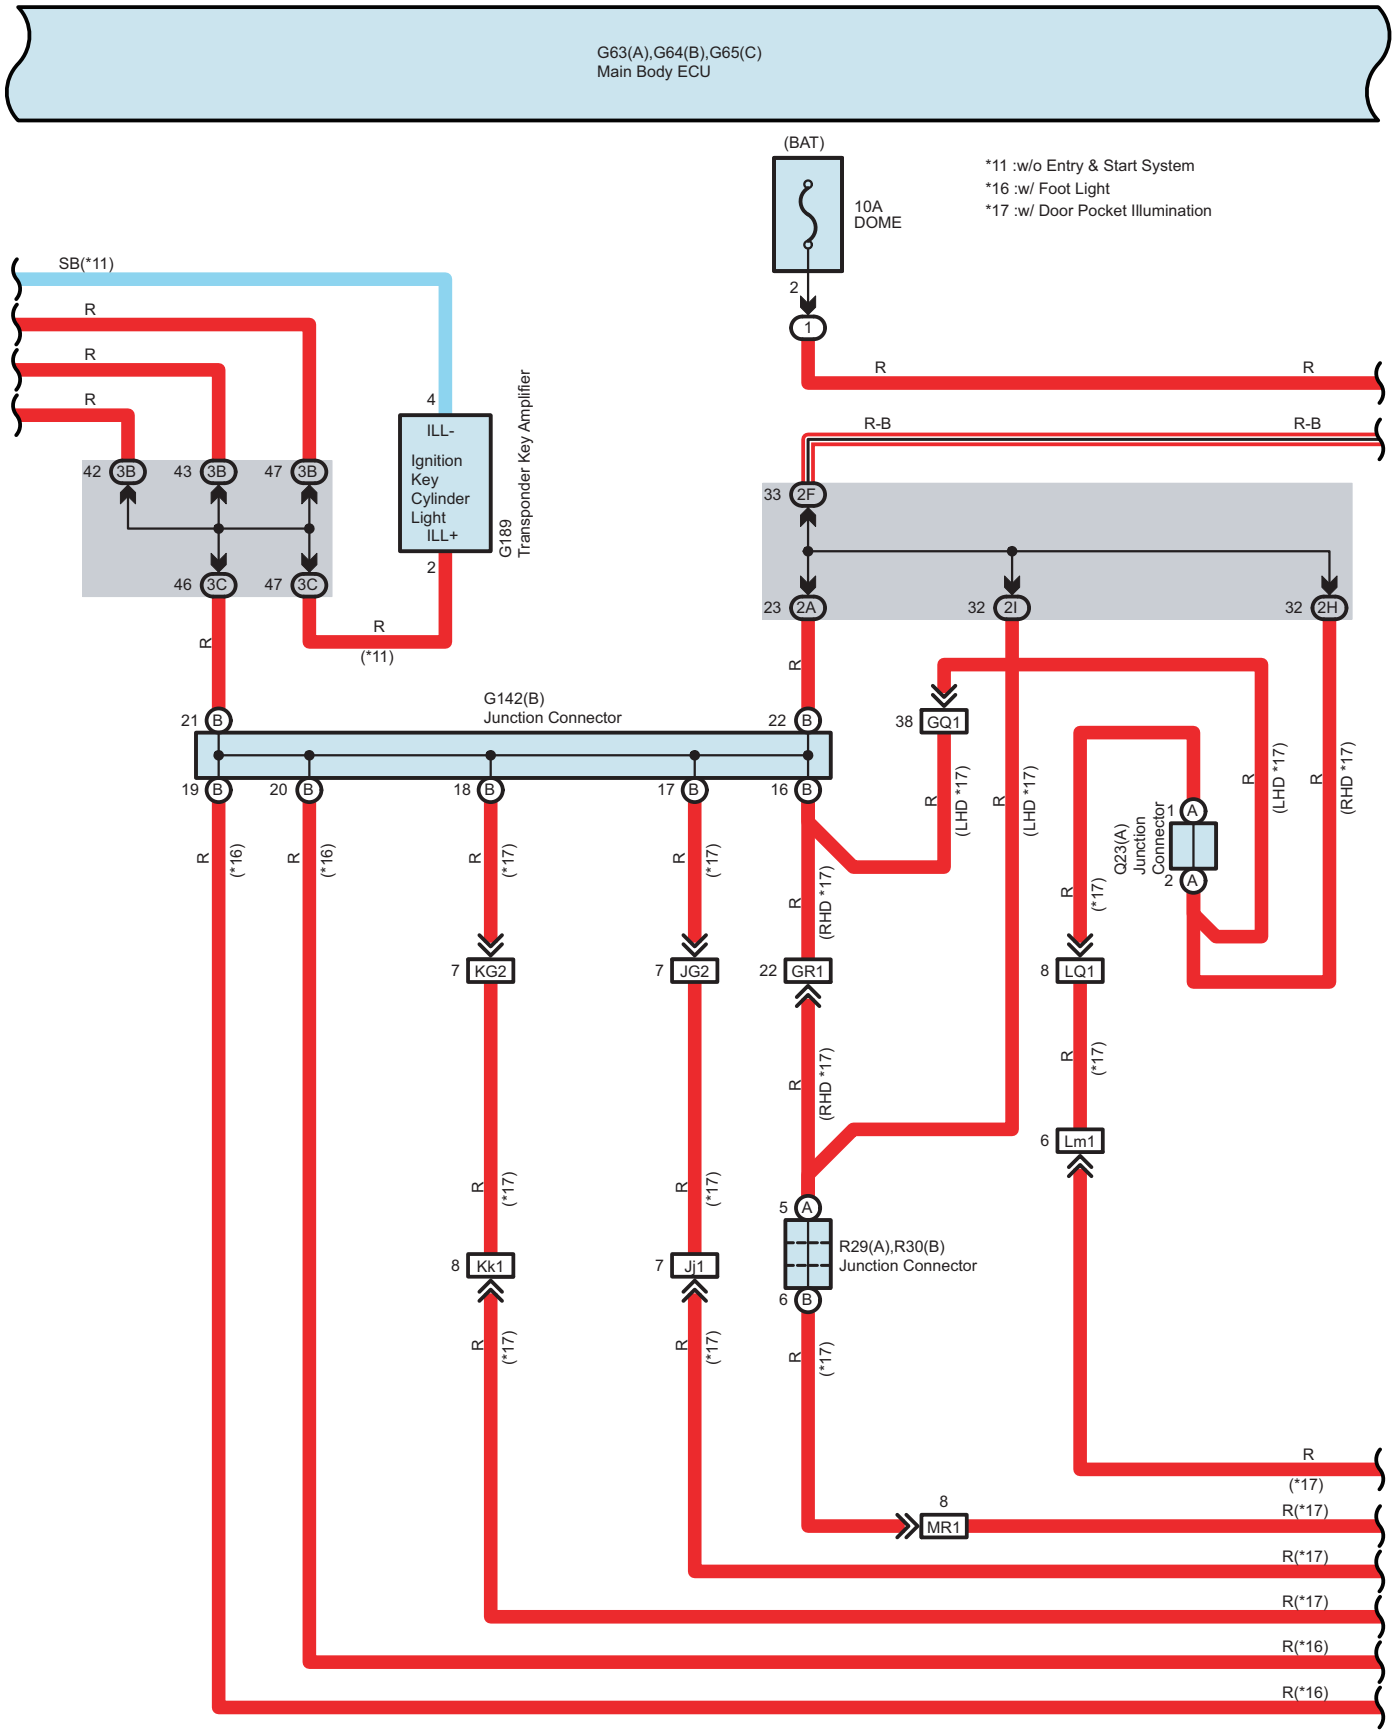

G63(A),G64(B),G65(C)
Main Body ECU
(BAT)
10A
DOME
*11 :w/o Entry & Start System
*16 :w/ Foot Light
*17 :w/ Door Pocket Illumination
SB(*11)
R
R
R
4
ILL-
Ignition
Key
Cylinder
Light
ILL+
2
G189
Transponder Key Amplifier
42 3B
43 3B
47 3B
46 3C
47 3C
R
(*11)
2
1
R
R
R-B
R-B
33 2F
23 2A
32 2I
32 2H
G142(B)
Junction Connector
21 B
22 B
19 B
20 B
18 B
17 B
16 B
38 GQ1
(LHD *17)
(RHD *17)
(*16)
(*17)
7 KG2
7 JG2
22 GR1
8 LQ1
6 Lm1
Q23(A)
Junction
Connector
1 A
2 A
5 A
6 B
R29(A),R30(B)
Junction Connector
8 Kk1
7 Jj1
8 MR1
R(*17)
R(*16)

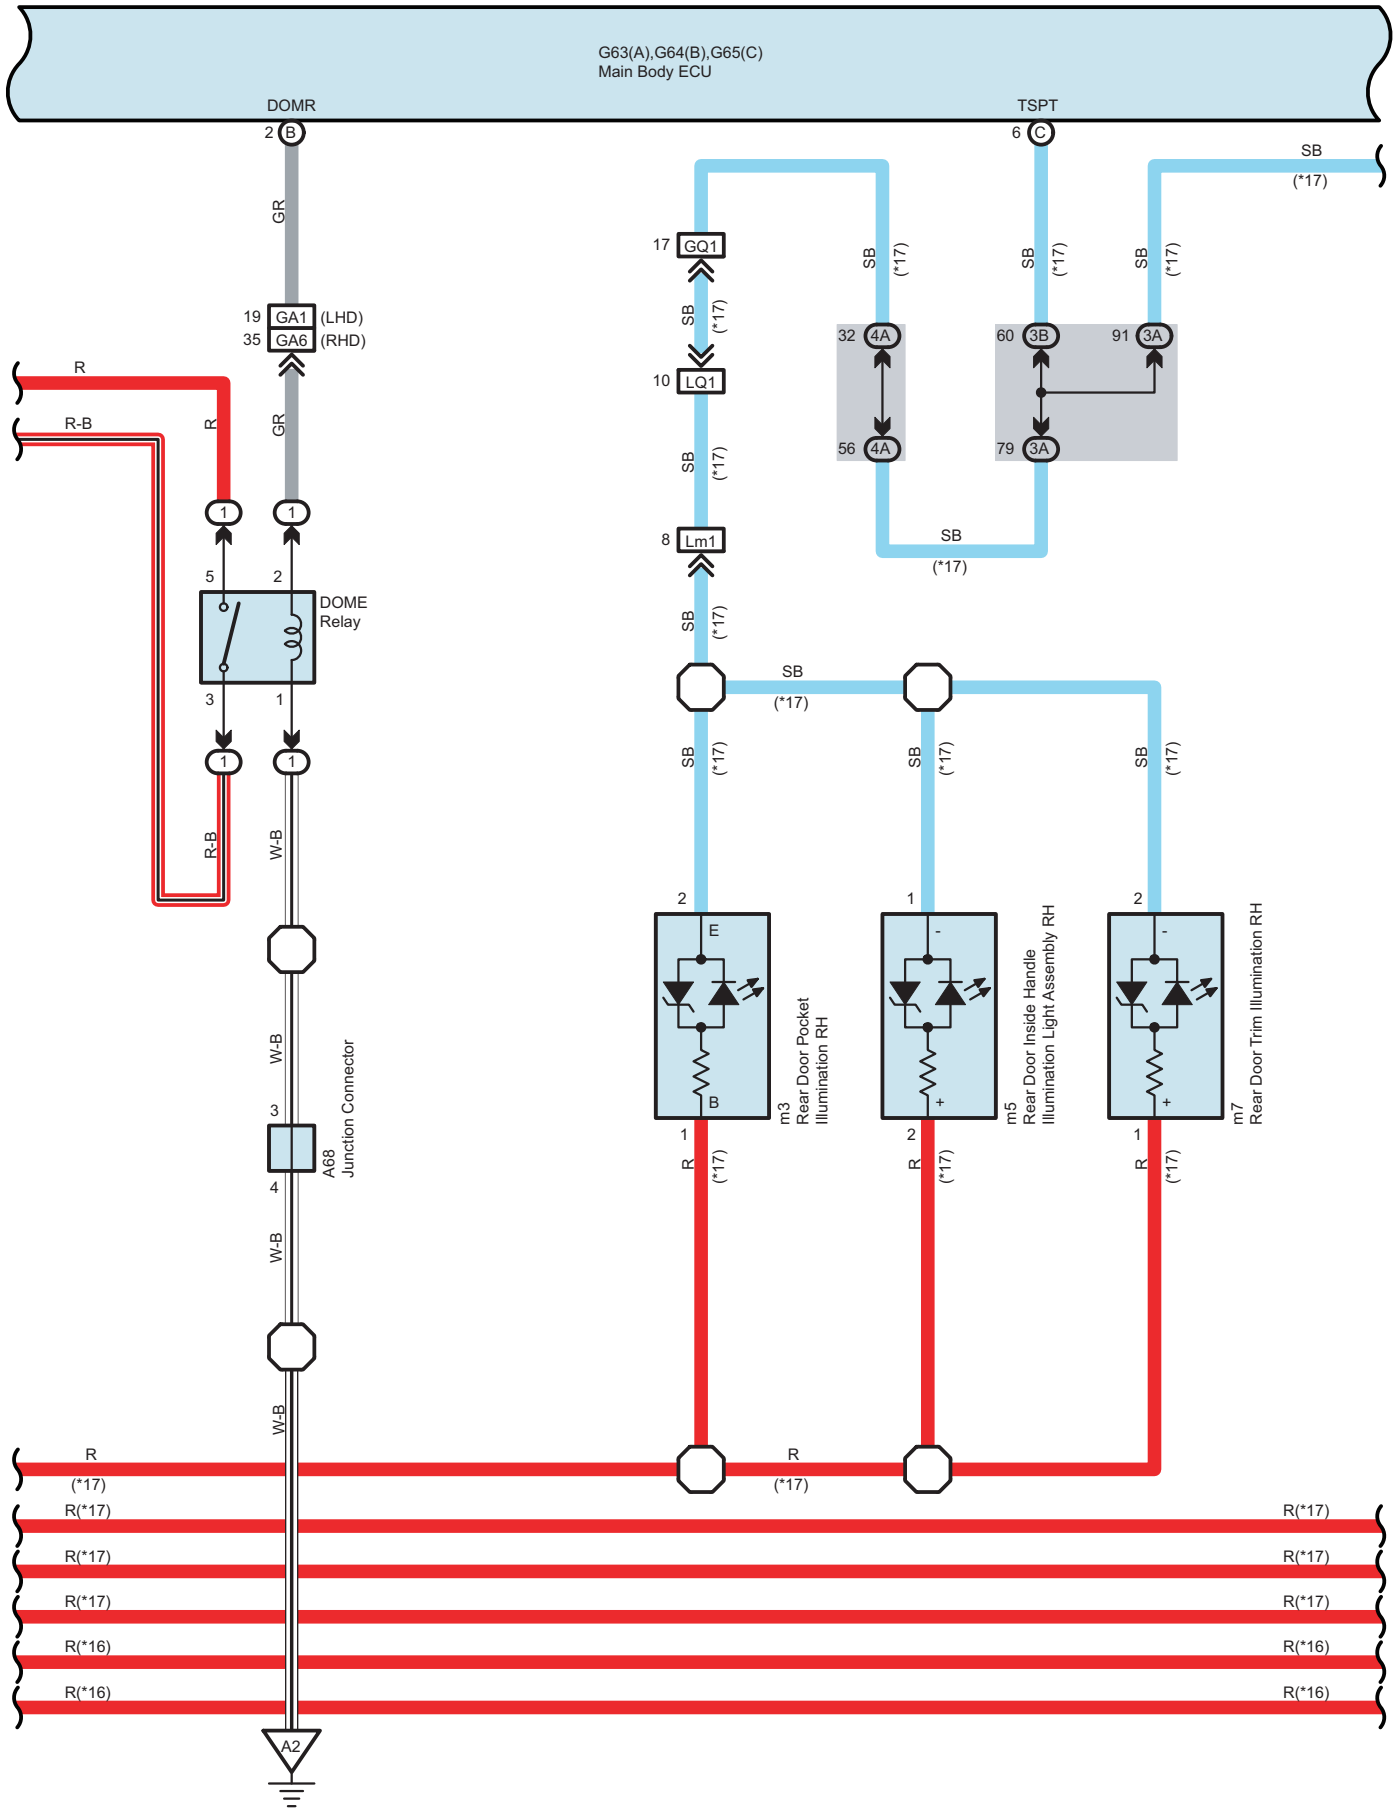

G63(A),G64(B),G65(C)
Main Body ECU
DOMR
2 B
GR
19 GA1 (LHD)
35 GA6 (RHD)
R
R-B
1
5
2
DOME
Relay
3
1
W-B
3
A68
Junction Connector
4
A2
TSPT
6 C
SB
(*17)
17 GQ1
10 LQ1
8 Lm1
32 4A
56 4A
60 3B
79 3A
91 3A
E
B
m3
Rear Door Pocket
Illumination RH
m5
Rear Door Inside Handle
Illumination Light Assembly RH
m7
Rear Door Trim Illumination RH
R(*17)
R(*16)

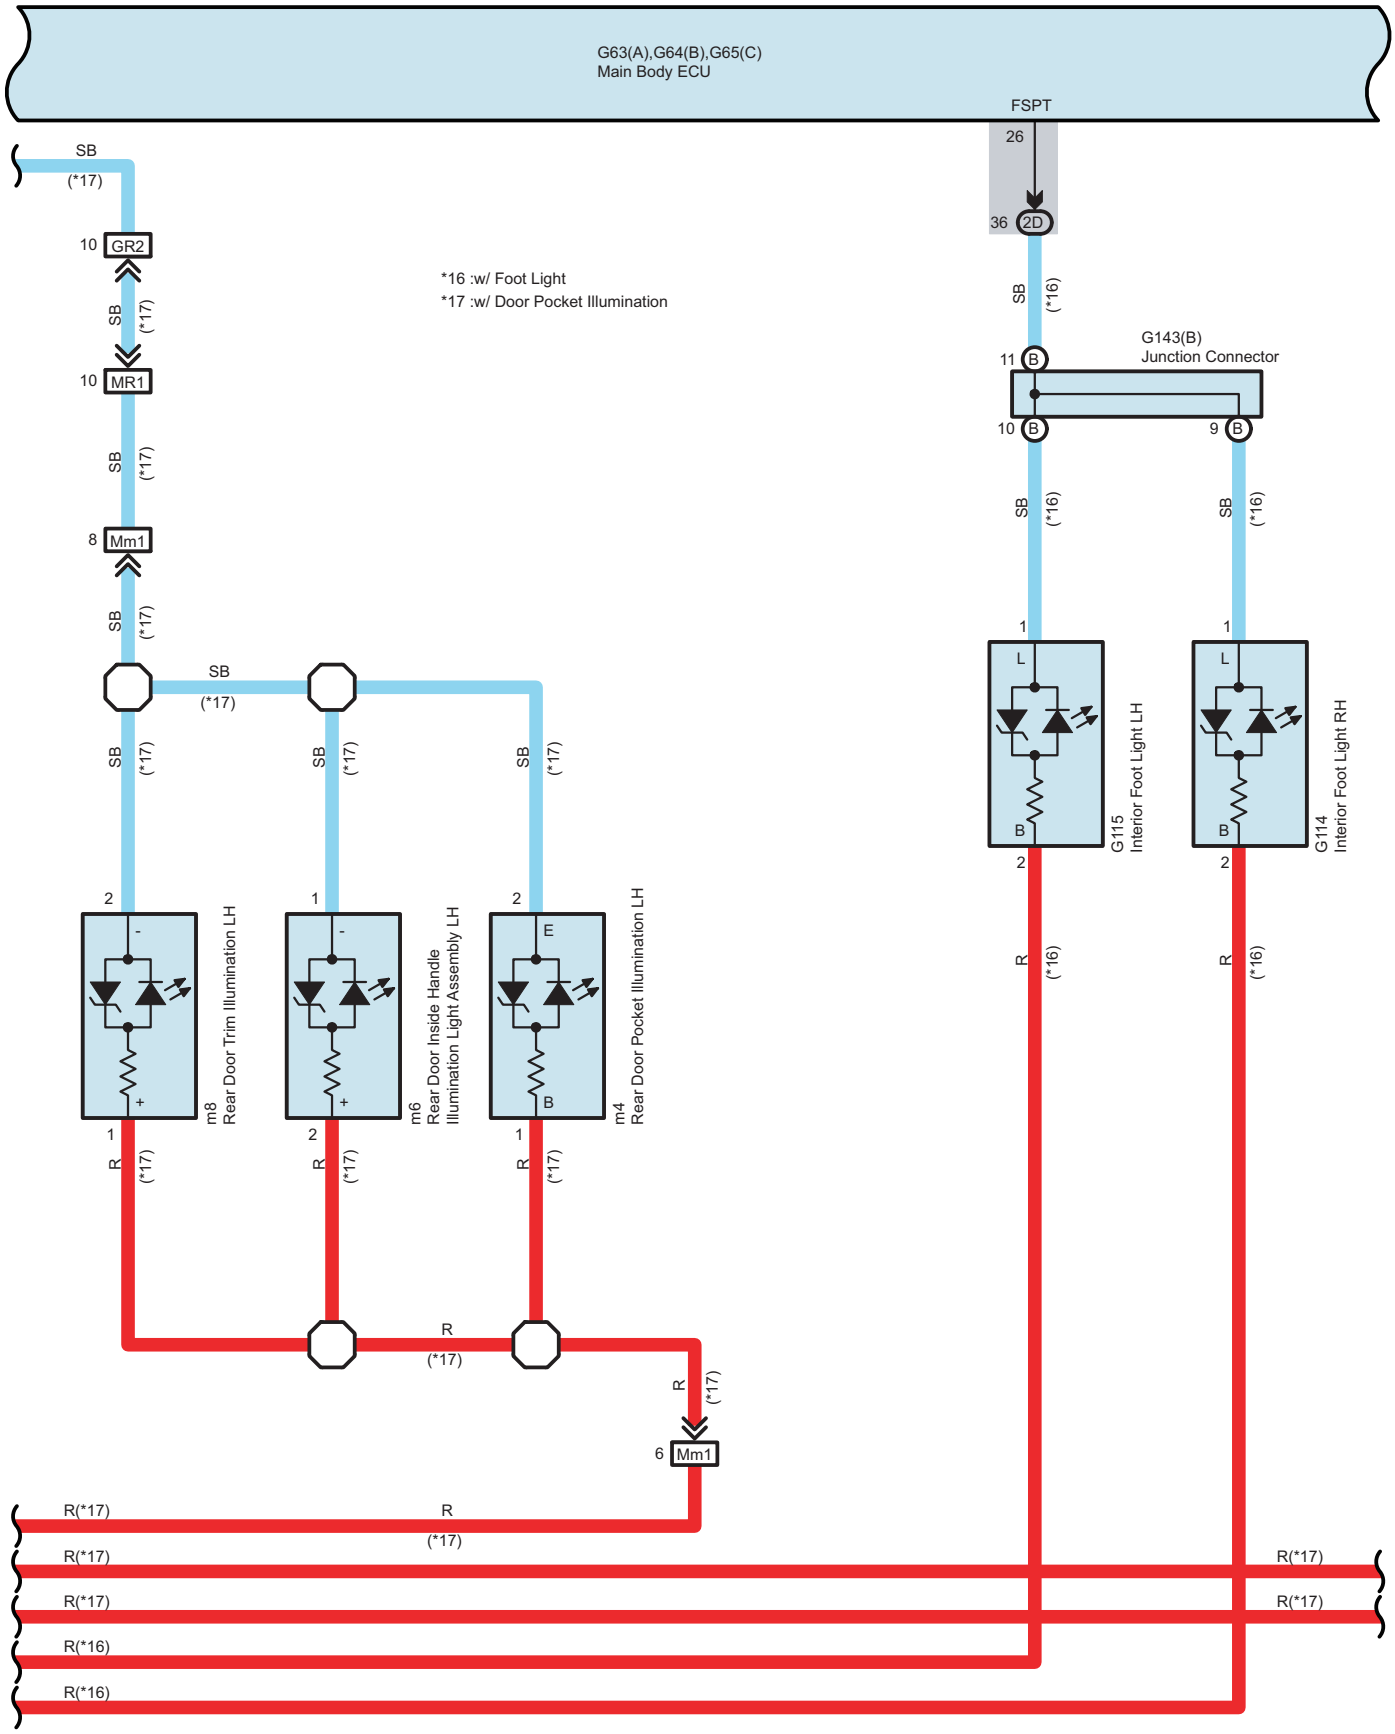

G63(A),G64(B),G65(C)
Main Body ECU
FSPT
26
36 2D
*16 :w/ Foot Light
*17 :w/ Door Pocket Illumination
G143(B)
Junction Connector
11 B
10 B
9 B
SB (*16)
SB (*17)
10 GR2
10 MR1
8 Mm1
6 Mm1
1 L B 2
G115 Interior Foot Light LH
G114 Interior Foot Light RH
m8 Rear Door Trim Illumination LH
m6 Rear Door Inside Handle Illumination Light Assembly LH
m4 Rear Door Pocket Illumination LH
R (*17)
R (*16)
R(*17)
R(*16)

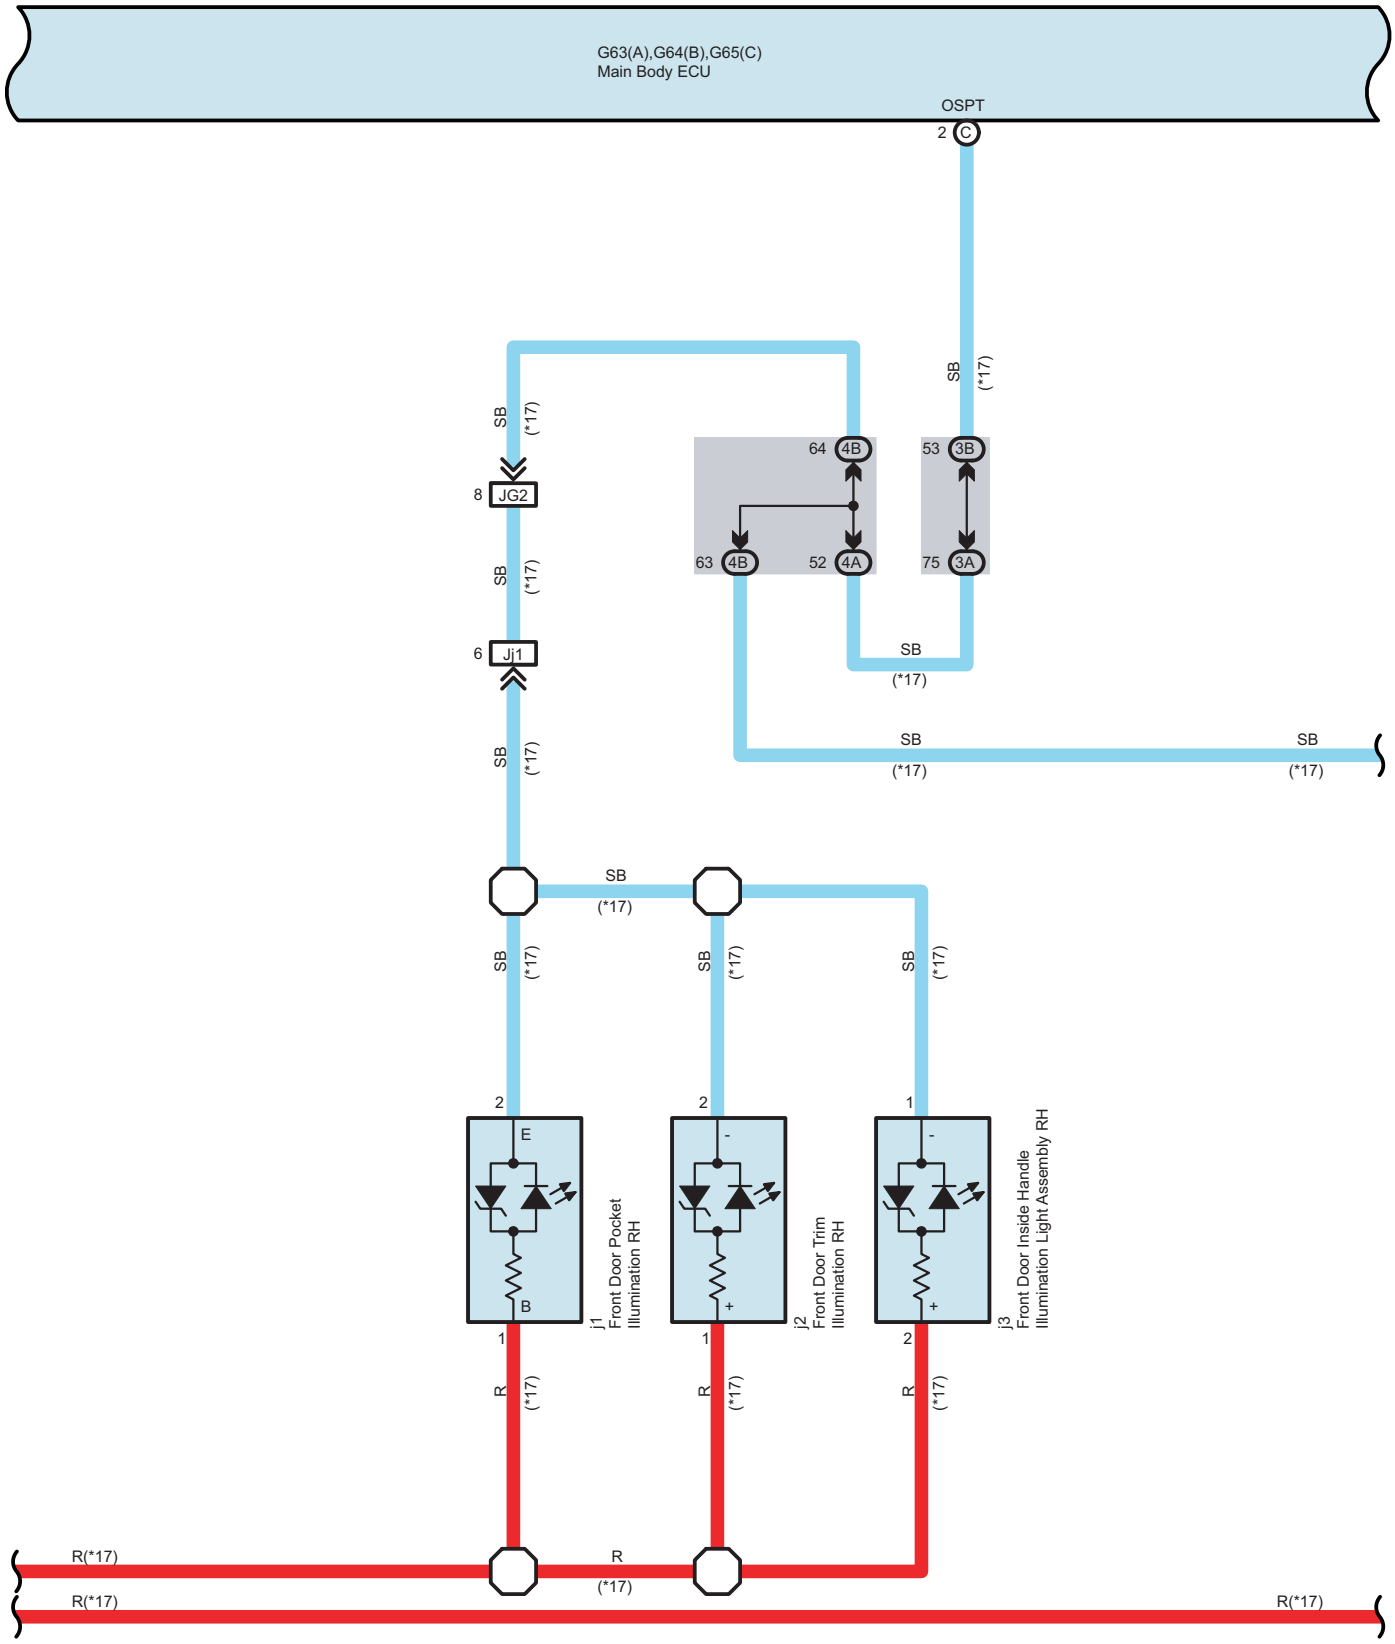

G63(A),G64(B),G65(C)
Main Body ECU
OSPT
2 C
SB (*17)
64 4B
53 3B
63 4B
52 4A
75 3A
8 JG2
6 Ji1
SB (*17)
SB
(*17)
SB
(*17)
SB
(*17)
2
E
B
1
j1
Front Door Pocket Illumination RH
2
-
+
1
j2
Front Door Trim Illumination RH
1
-
+
2
j3
Front Door Inside Handle Illumination Light Assembly RH
R (*17)
R(*17)
R
(*17)
R(*17)
R(*17)

G63(A),G64(B),G65(C)
Main Body ECU

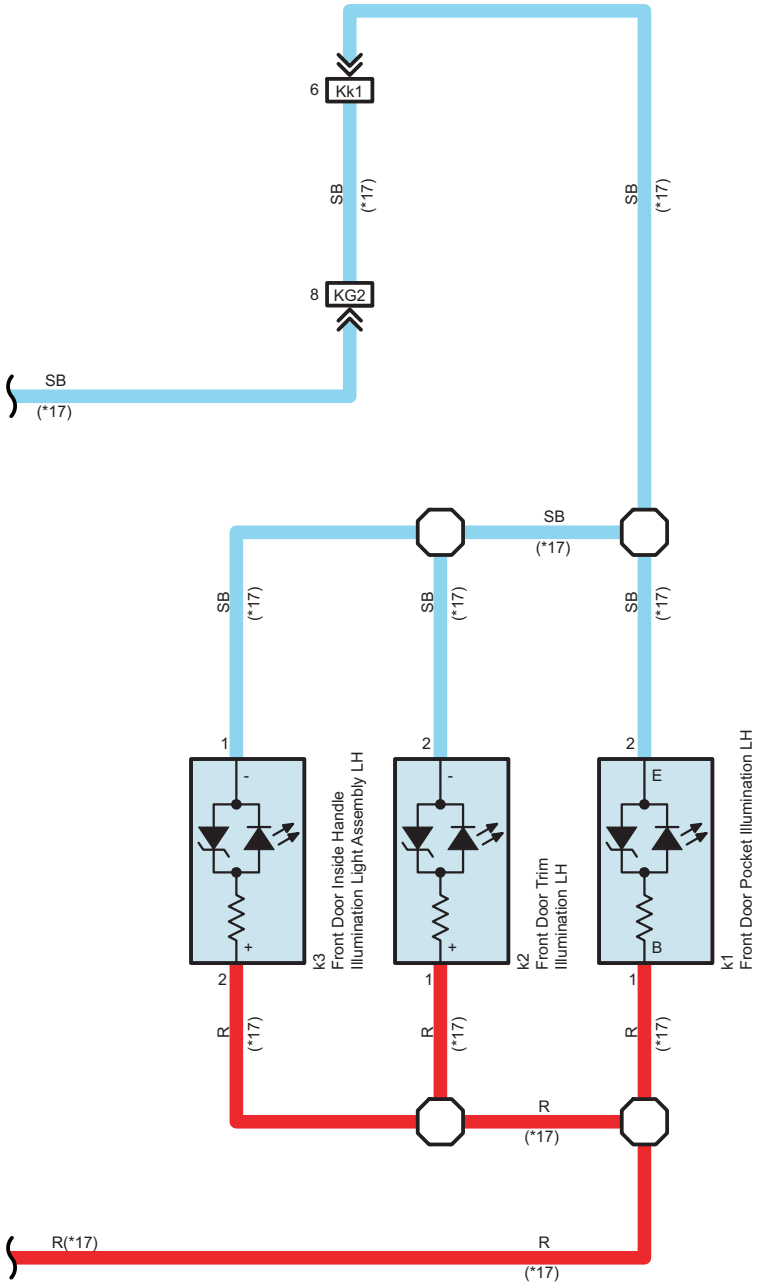

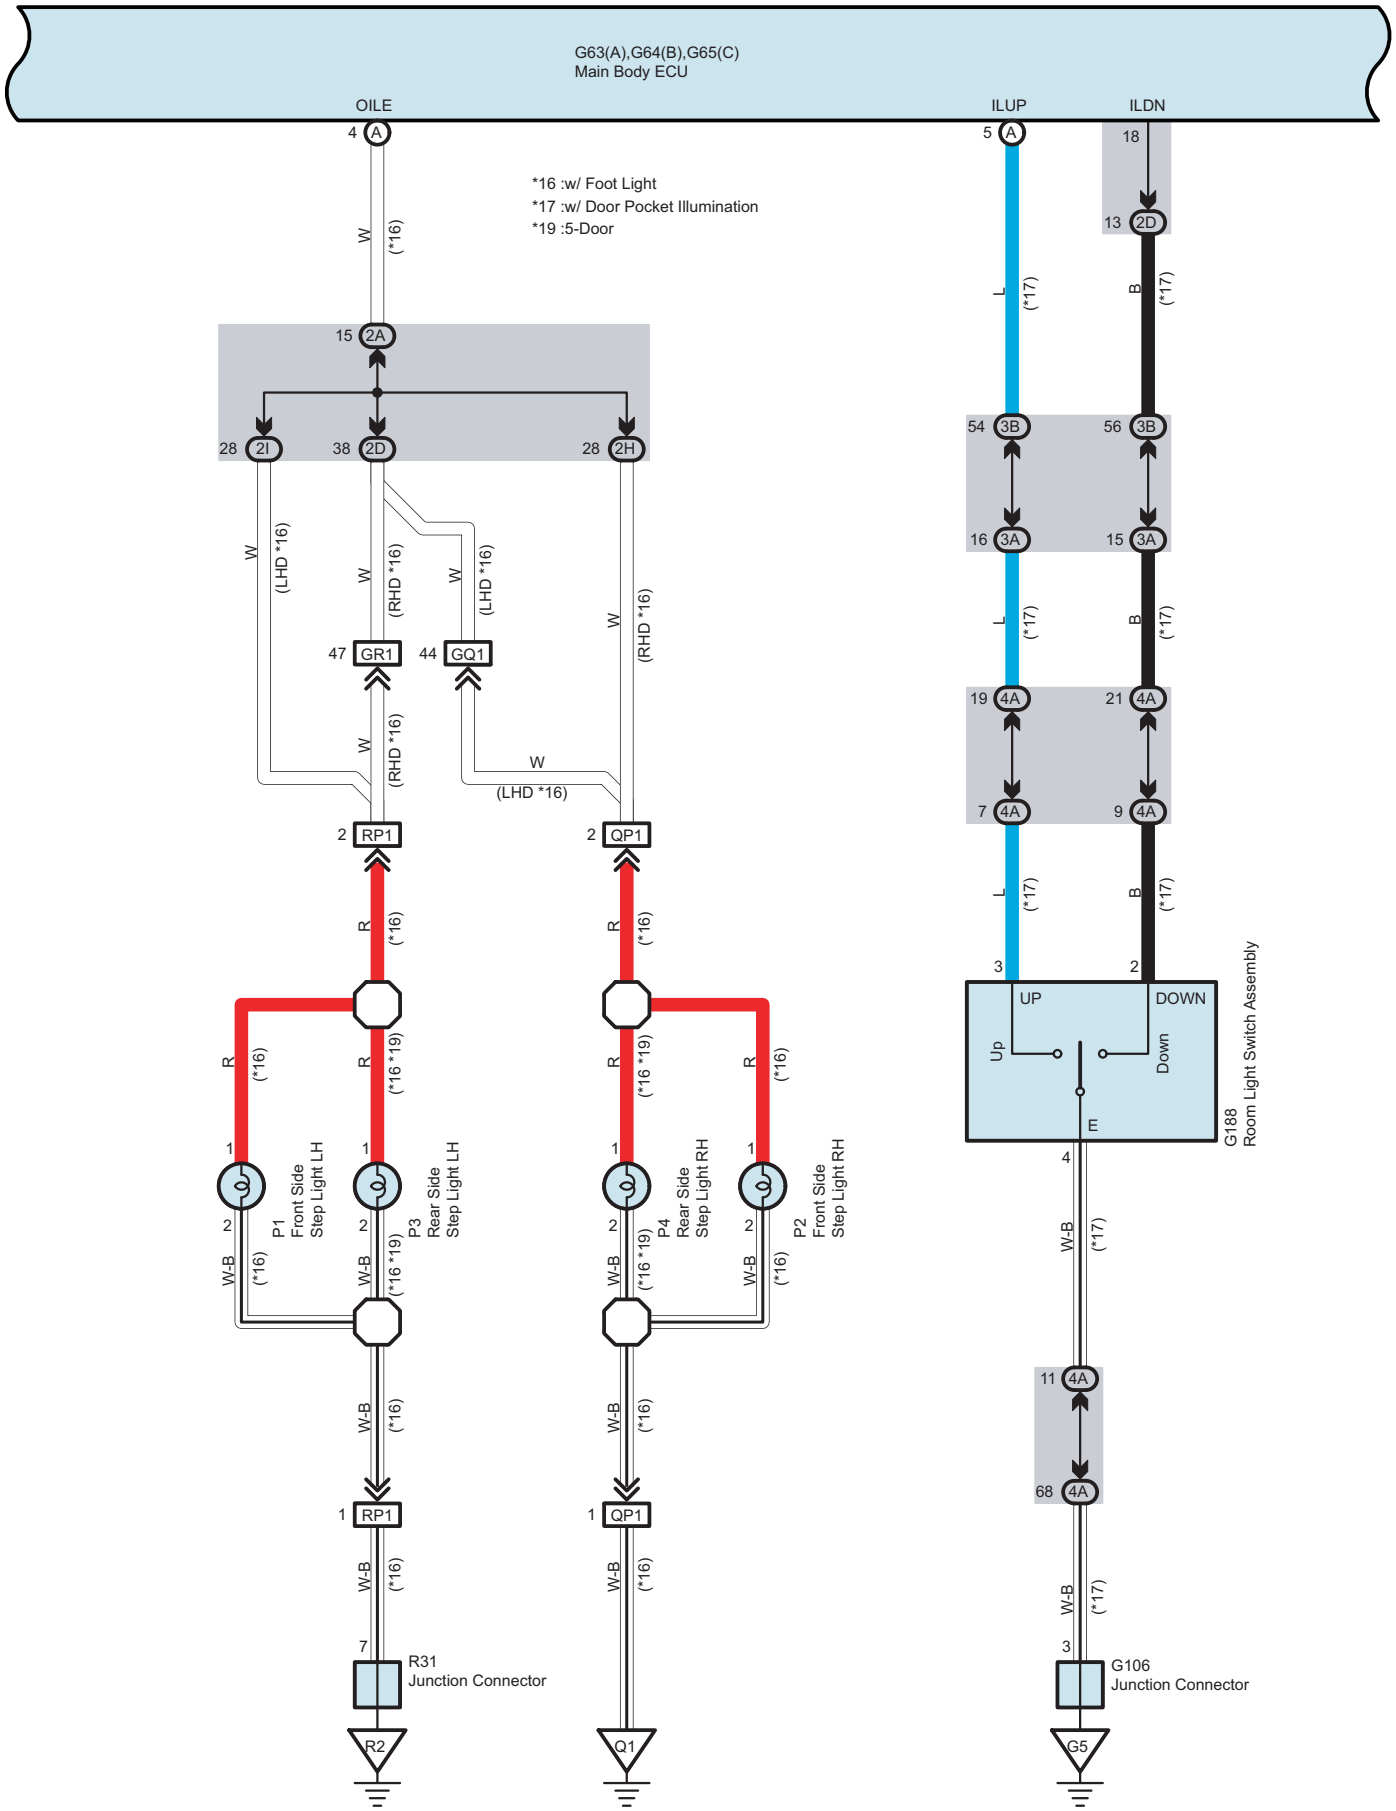

G63(A),G64(B),G65(C)
Main Body ECU
OILE
ILUP
ILDN
*16 :w/ Foot Light
*17 :w/ Door Pocket Illumination
*19 :5-Door
4 A
5 A
18
13 2D
15 2A
28 2I
38 2D
28 2H
54 3B
56 3B
16 3A
15 3A
19 4A
21 4A
7 4A
9 4A
3
2
UP
DOWN
Up
Down
E
G188
Room Light Switch Assembly
47 GR1
44 GQ1
2 RP1
2 QP1
1 RP1
1 QP1
7
R31
Junction Connector
R2
Q1
4
11 4A
68 4A
3
G106
Junction Connector
G5
P1
Front Side
Step Light LH
P3
Rear Side
Step Light LH
P4
Rear Side
Step Light RH
P2
Front Side
Step Light RH
W
(LHD *16)
(RHD *16)
L
(*17)
B
R
W-B
(*16)
(*16 *19)

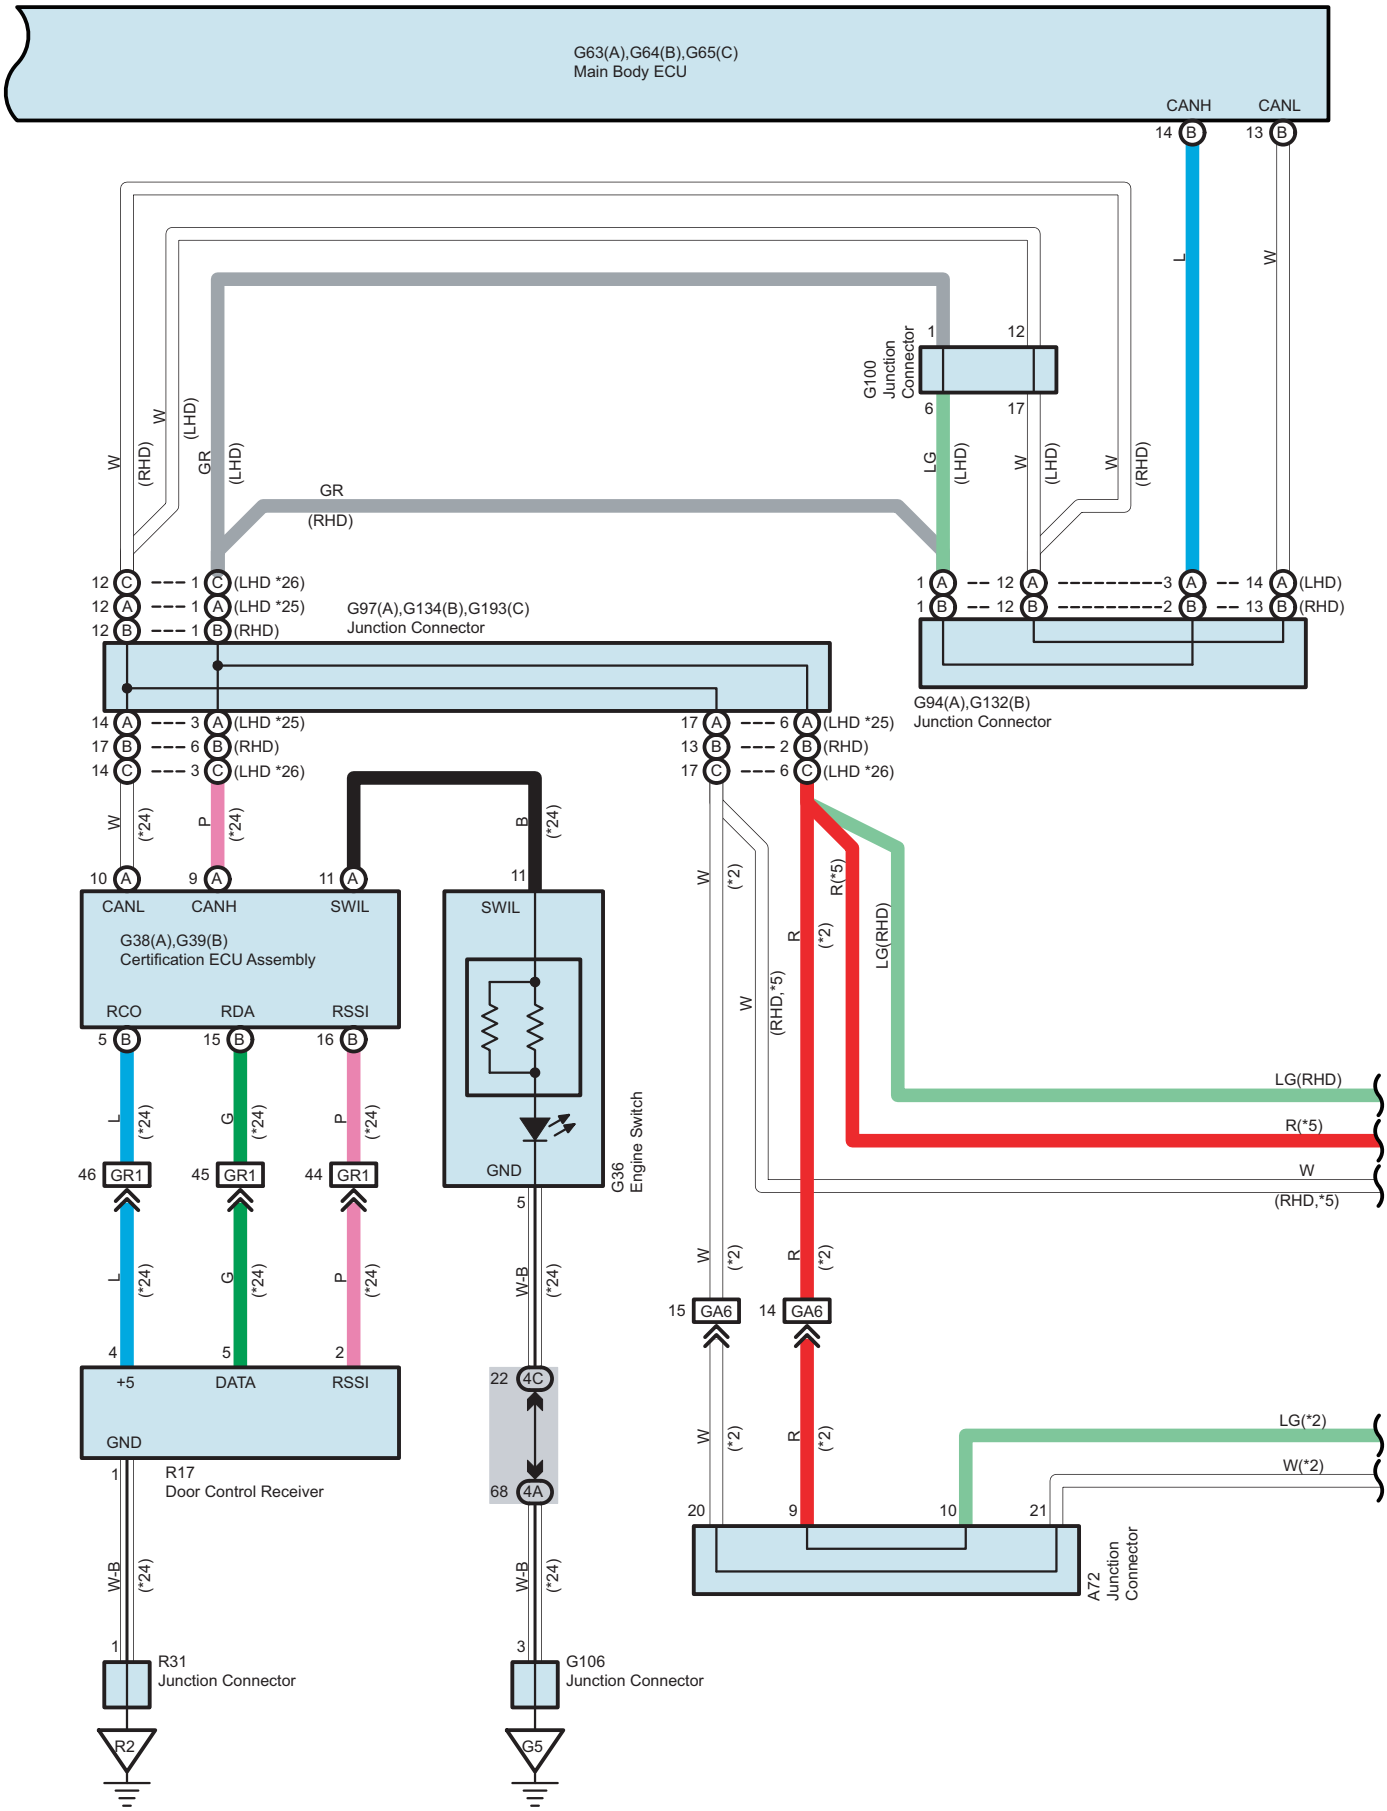
G63(A),G64(B),G65(C)
Main Body ECU
CANH
CANL
G100 Junction Connector
G97(A),G134(B),G193(C) Junction Connector
G94(A),G132(B) Junction Connector
G38(A),G39(B) Certification ECU Assembly
CANL
CANH
SWIL
RCO
RDA
RSSI
+5
DATA
GND
R17 Door Control Receiver
R31 Junction Connector
R2
G36 Engine Switch
G106 Junction Connector
G5
GA6
A72 Junction Connector
LG(RHD)
R(*5)
W (RHD,*5)
LG(*2)
W(*2)

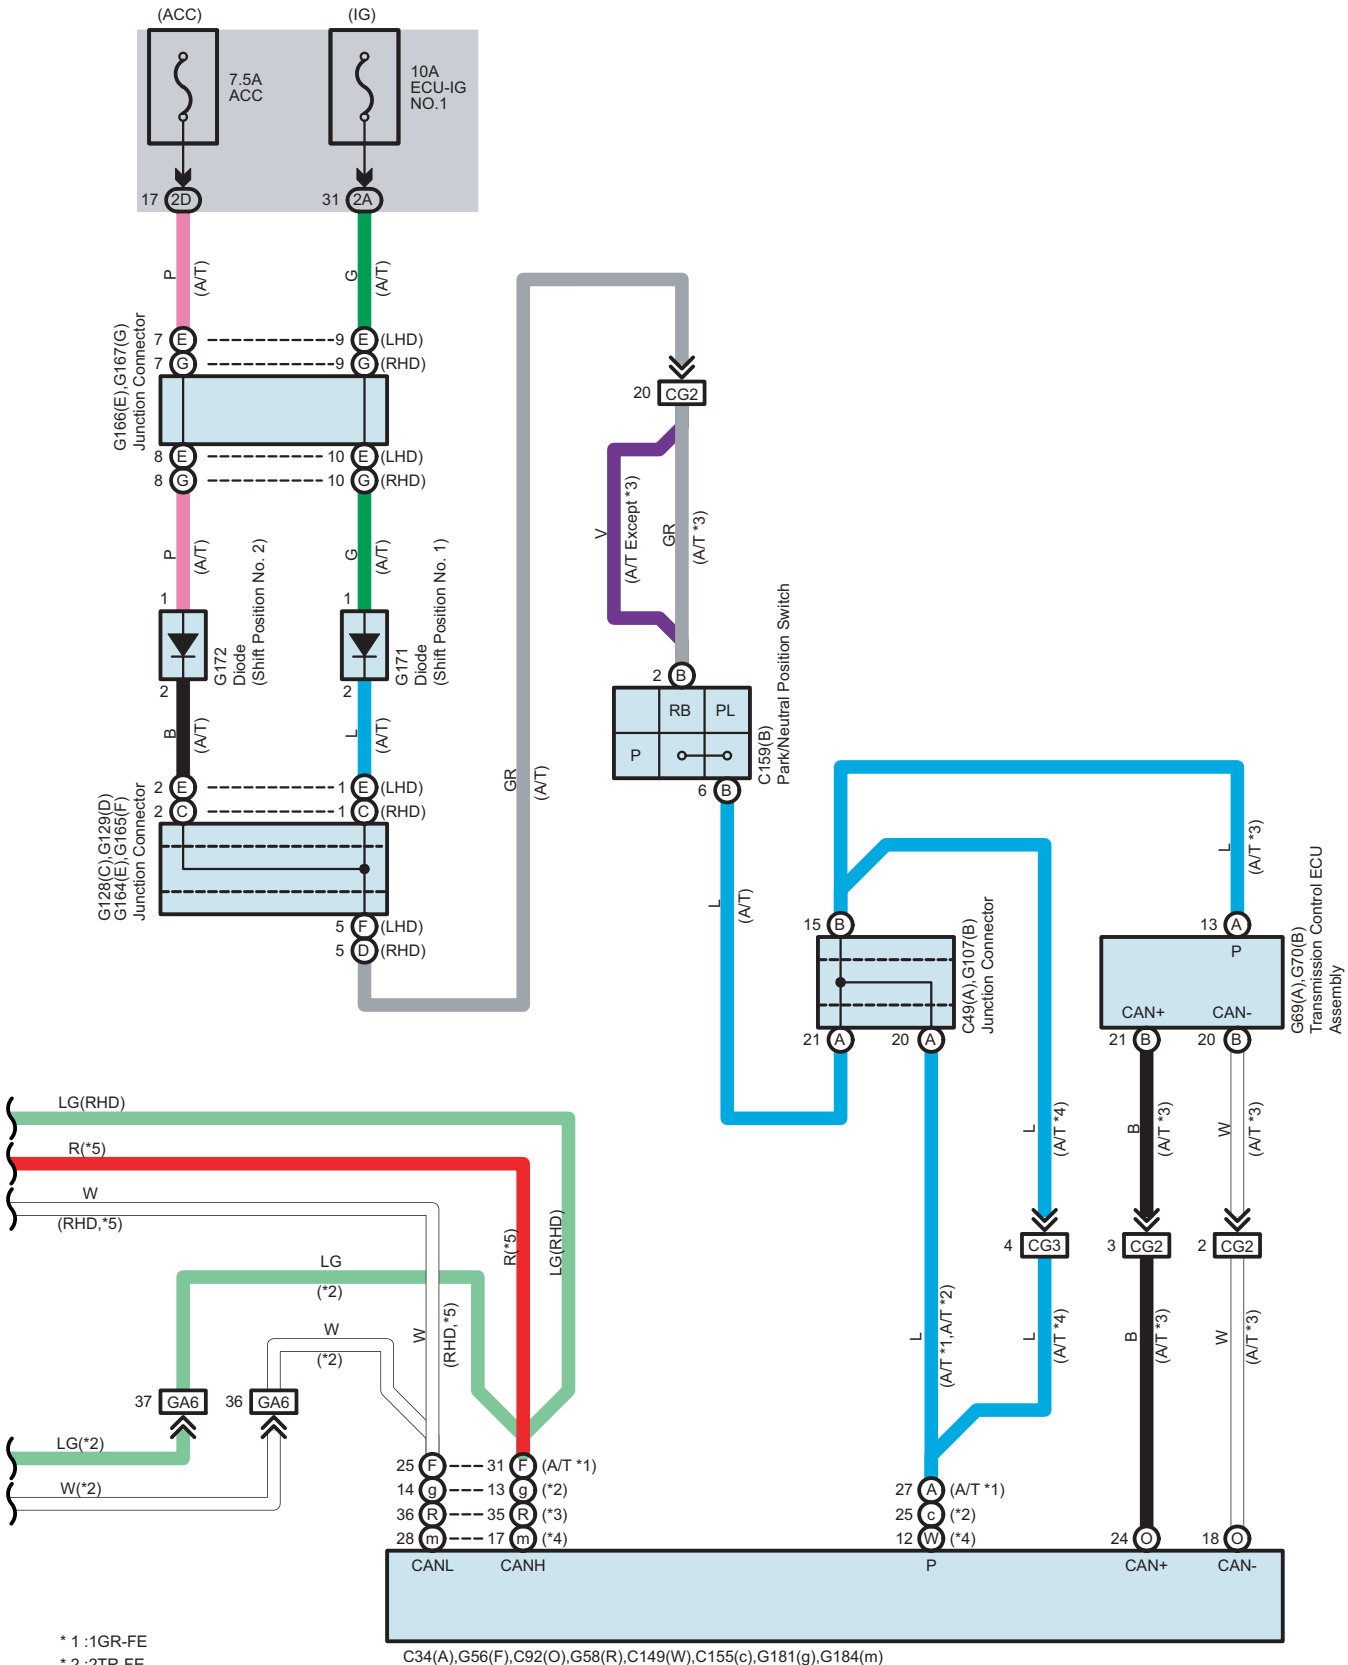


* 1 :1GR-FE
* 2 :2TR-FE
* 3 :1KD-FTV
* 4 :1GD-FTV
* 5 :LHD 1GR-FE, LHD 1KD-FTV, LHD 1GD-FTV
*24 :w/ Entry & Start System
*25 :Before Aug. 2016 Production
*26 :From Aug. 2016 Production

A68
Dark Gray

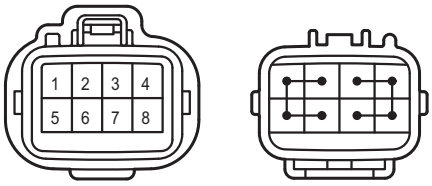


90980-10891

A72
White

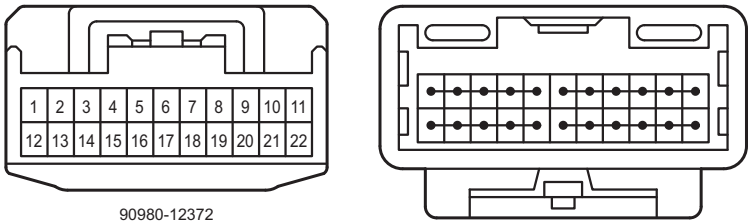


90980-12372

C34
White

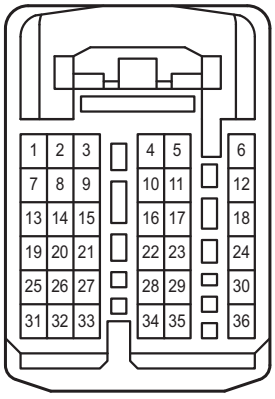


82824-26130

C49
Blue

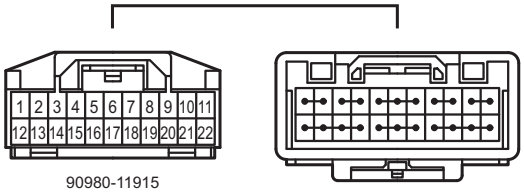


90980-11915

C92
White

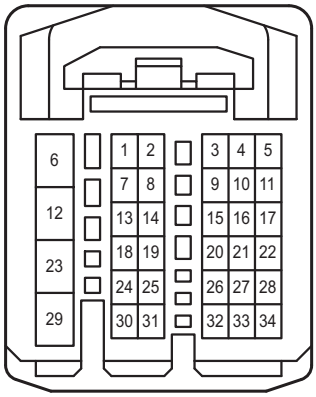


82824-26150

C149
White

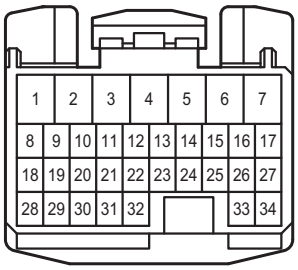


90980-12527

C155
White

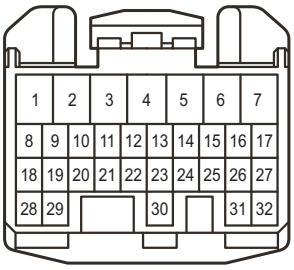

90980-12526

C159
Gray

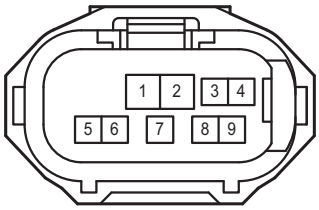


90980-12A23

G3
White




90980-12063

G36
Black

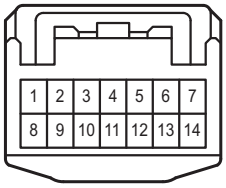


90980-12370

G38
White

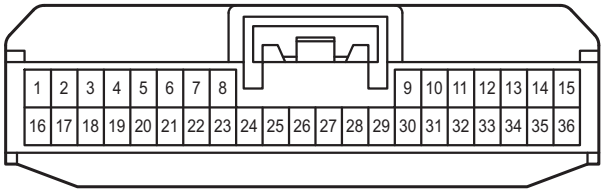


90980-12564

G39
White

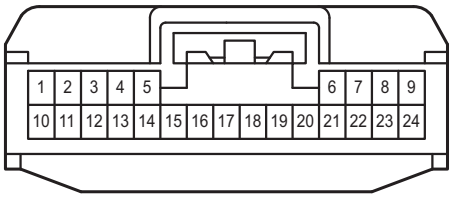


90980-12404

G56
White

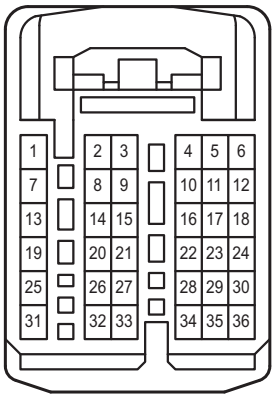


82824-26120

G58
White

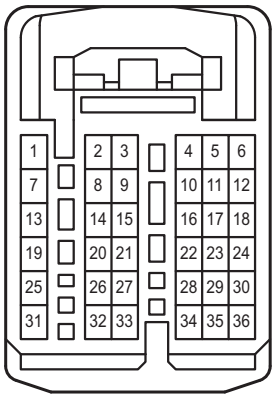


82824-26120

G63
White

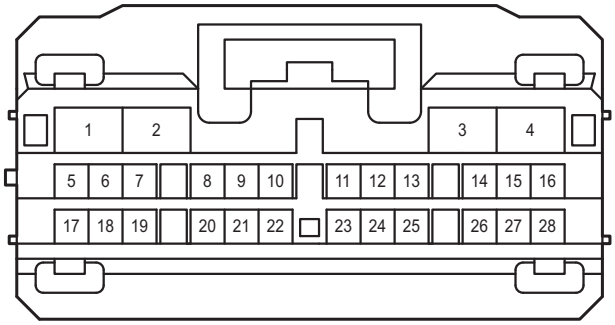


90980-12793

G64
White

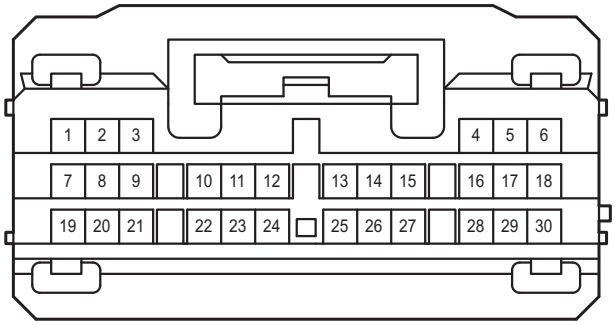


90980-12753

G65
White

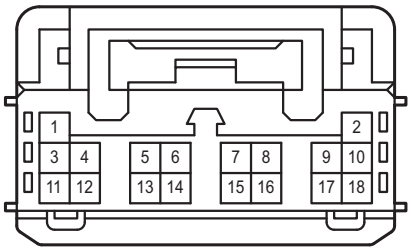


90980-12750

G69
White

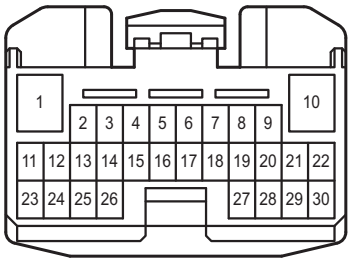


90980-12562

G70
White

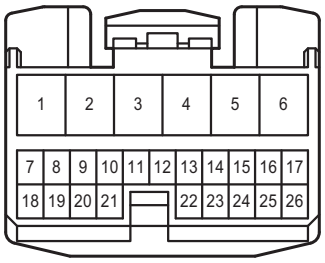


90980-12561

G94
White

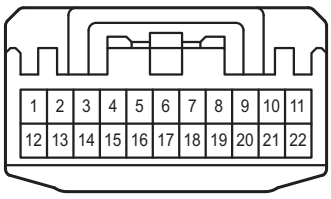


82824-30420

G97
White

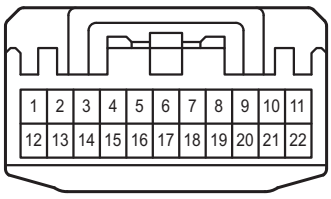


82824-30420

G100
Gray

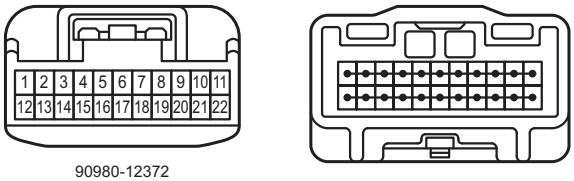


90980-12372

G104
White

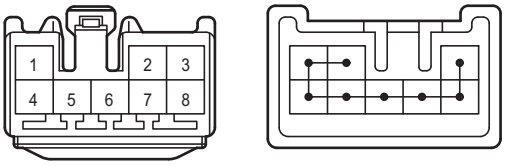


90980-11686

G106
White

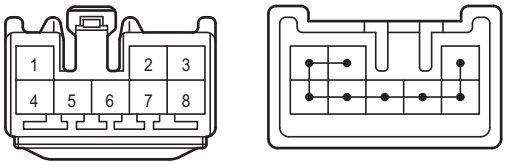


90980-11686

G107
Blue

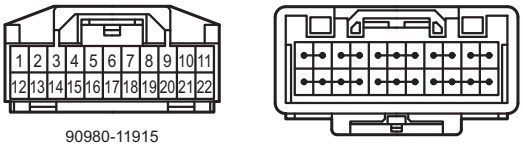


90980-11915


G114
Black



G115
Black




G127
Black

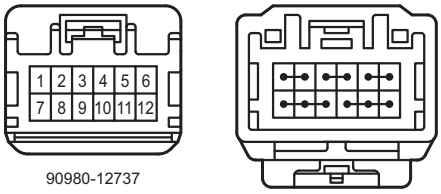


90980-12737

G128
Black

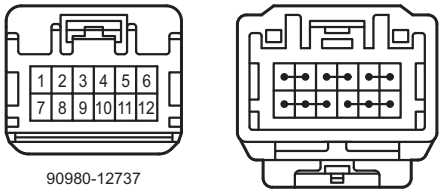


90980-12737

G129
Black

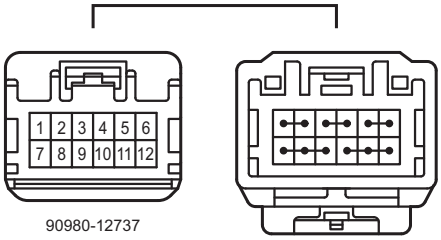


90980-12737

G132
Gray

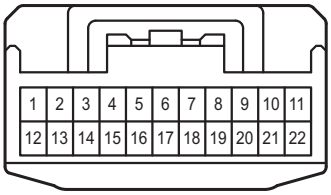


90980-12372

G134
Gray

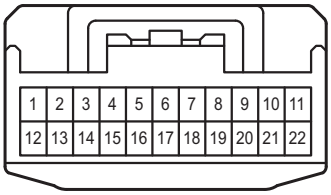


90980-12372

G140
Black

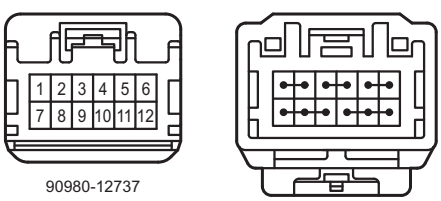


90980-12737

G141
Black

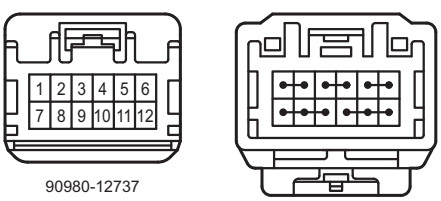


90980-12737

G142
White

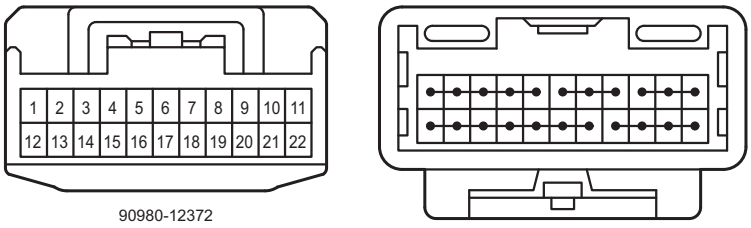


90980-12372

G143
Black

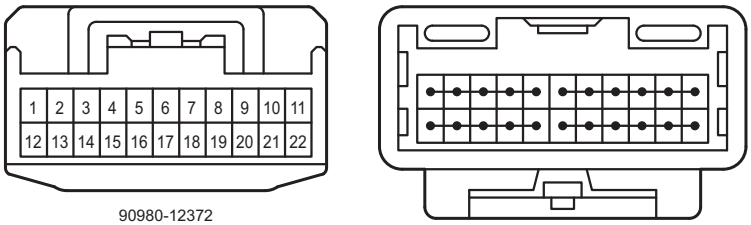


90980-12372

G164
Black

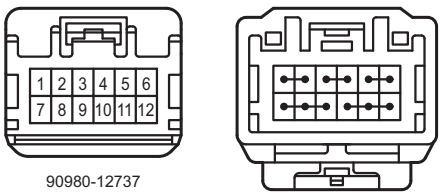


90980-12737

G165
Black

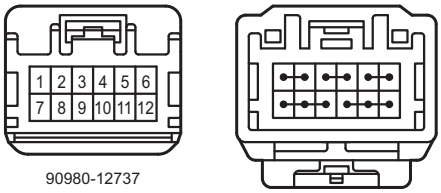


90980-12737

G166
Blue

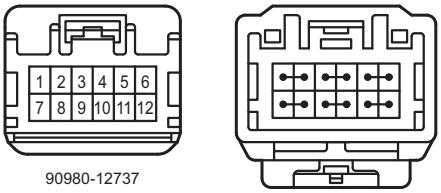

90980-12737

G167
Blue

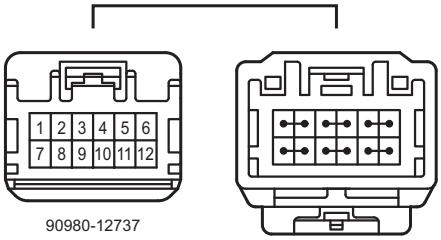

90980-12737

G171
Gray




90980-11608

G172
Gray




90980-11608

G181
White

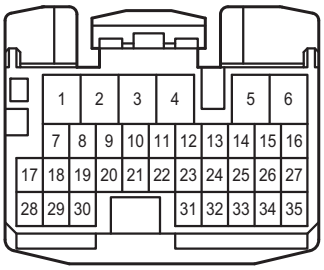


90980-12529

G184
White

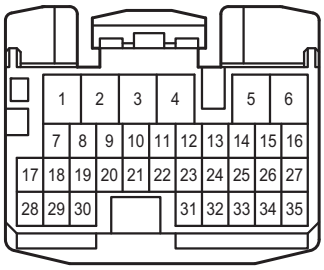


90980-12529

G188
White

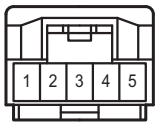


90980-11909

G189
Black

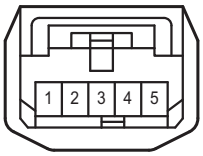

90980-12954

G193
White

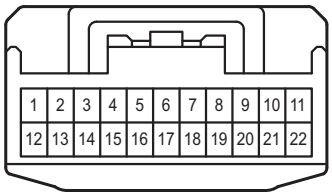

90980-12372

J6
White



90980-12226

K6
White




90980-12226

L5
White



90980-12226

M5
White

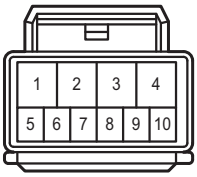

90980-12226

P1
Gray



90980-11162

P2
Gray



90980-11162

P3
Gray



90980-11162

P4
Gray



90980-11162

Q8
Black




90980-10871

Q9
White



90980-10871

Q23
White

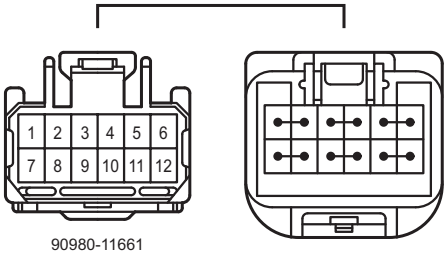

90980-11661

R7
Black



90980-10871

R8
White




90980-10871

R9
Black




90980-10871

R17
Blue

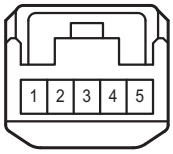


90980-12366

R29
Blue

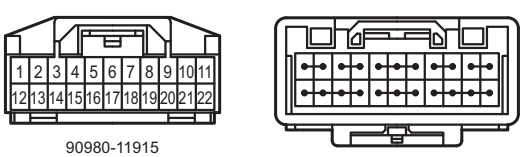


90980-11915

R30
Blue

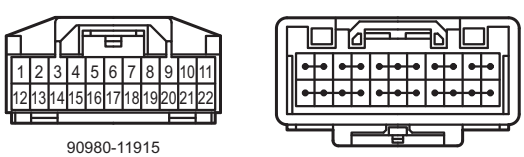


90980-11915

R31
White

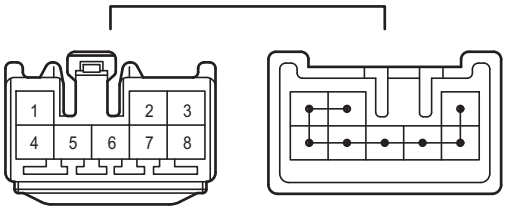


90980-11686


W1
Gray

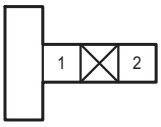


W3
Gray

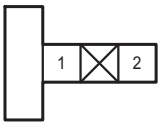

W5
Gray




W7
White

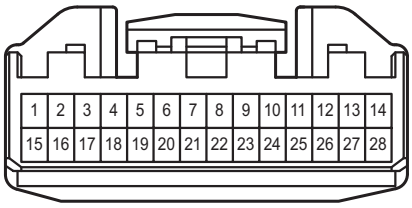


90980-12555

W8
White

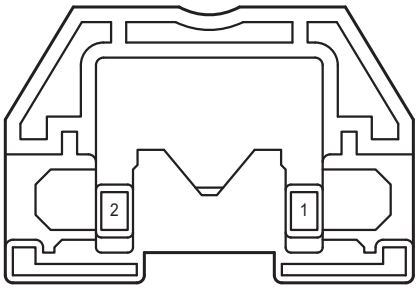


90980-12322

W9
White

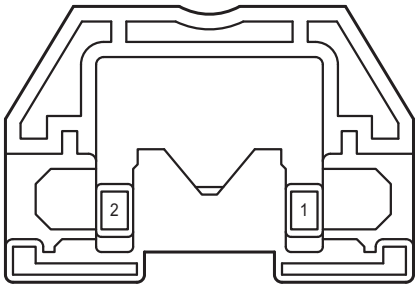


90980-12322


W10
Gray




W11
Gray




W12
Gray




W13
Gray




W15
Gray



W16
Gray



X2
White

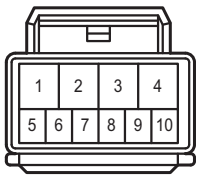

90980-12226

j1
White



90980-11918

j2
White



90980-11148

j3
White



90980-11918

k1
White



90980-11918

k2
White



90980-11148

k3
White



90980-11918

m3
White



90980-11918

m4
White



90980-11918

m5
White



90980-11918

m6
White



90980-11918

m7
White




90980-11148

m8
White




90980-11148

2 A
White

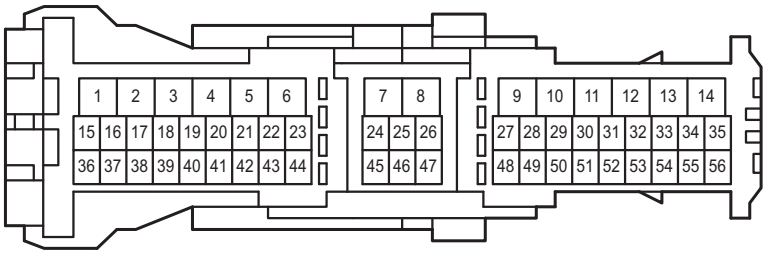


90980-12822

2 D
White

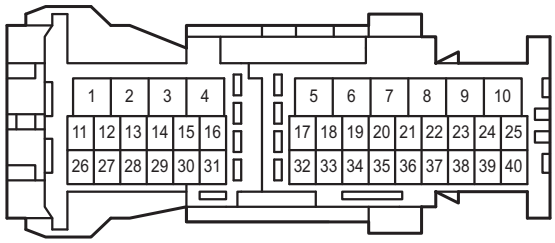


90980-12818

2 F
White

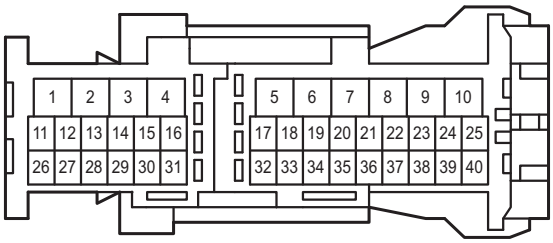


90980-12794

2 H
White

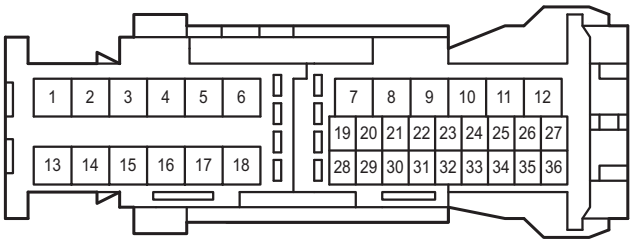


90980-12825

2 I
White

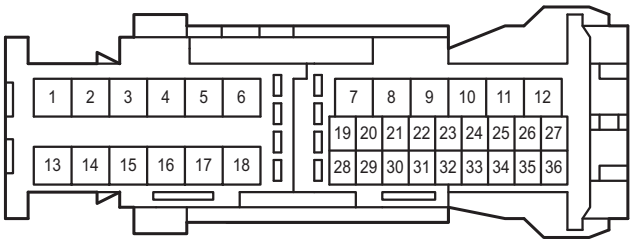


90980-12825

3 A
White

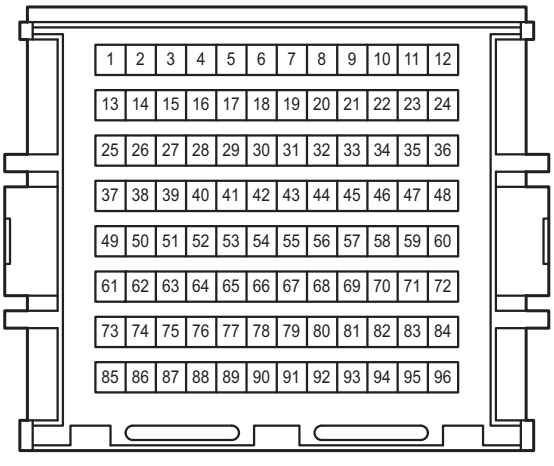


82890-12030

3 B
White

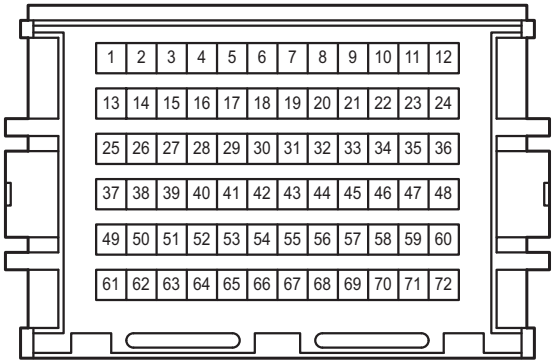


82890-42010

3 C
White

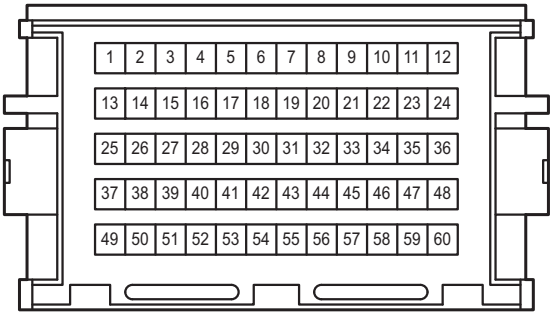


82890-12020

4 A
White

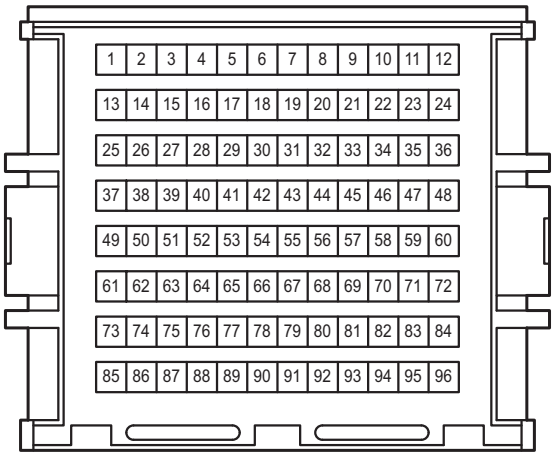


82890-12030

4 B
White

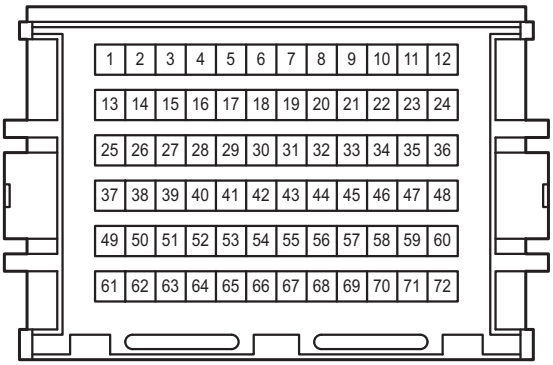

82890-42010


4 C
White

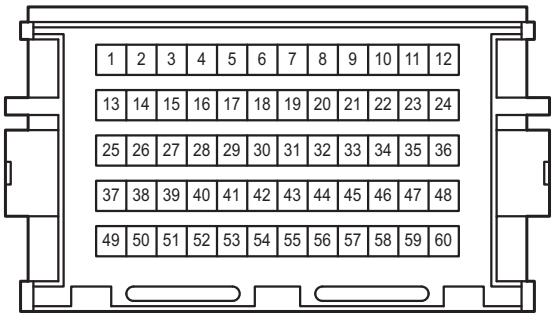


82890-12020

CG2

White

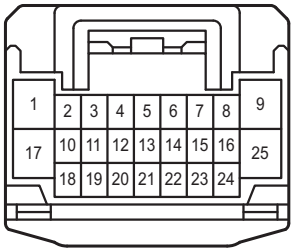


90980-12414

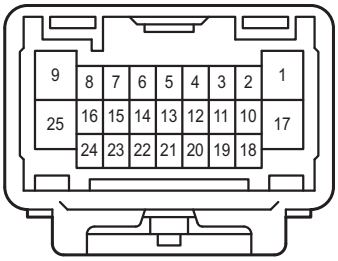


90980-12413

CG3

White

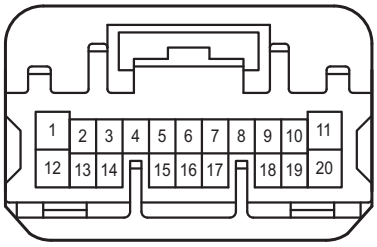


90980-12741

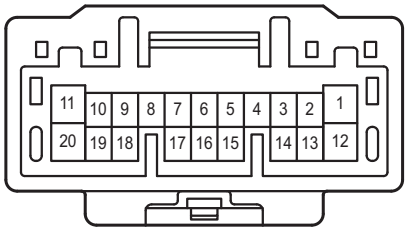


90980-12740

GA1

White

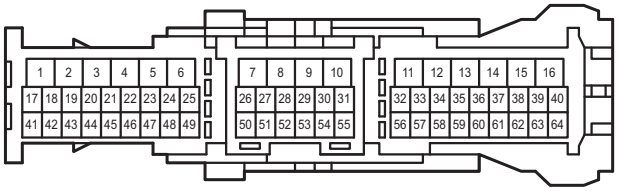


90980-12774

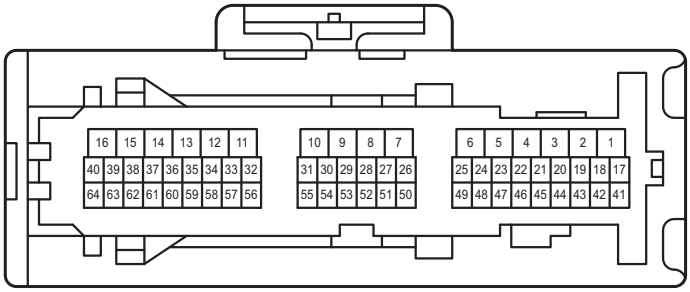


90980-12798

GA6

White

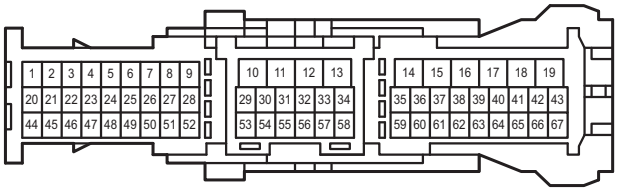


90980-12783

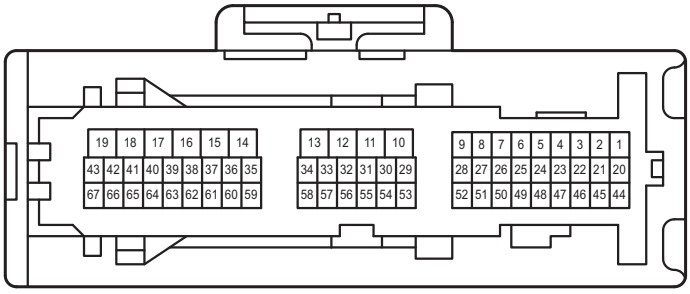


90980-12800

GQ1

White

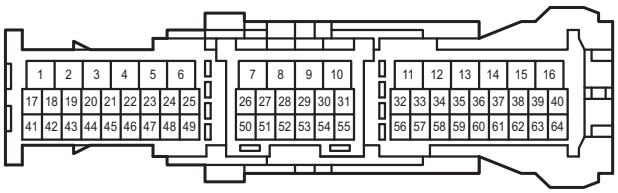


90980-12774

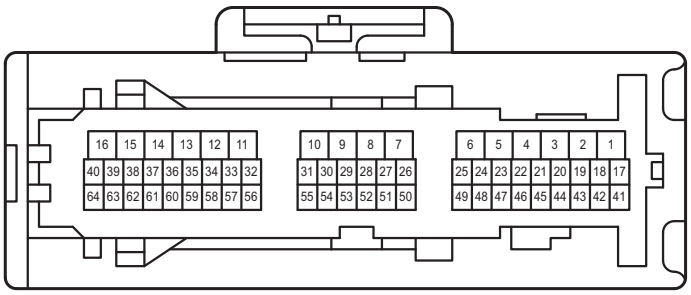


90980-12798

GR1

White

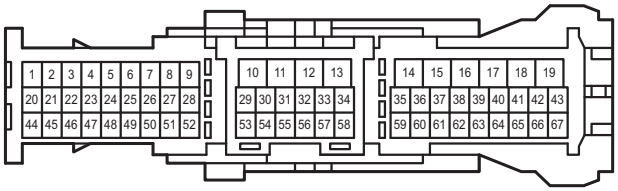


90980-12783

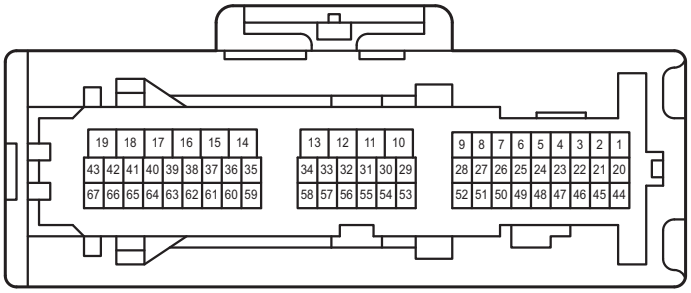


90980-12800

GR2

Gray

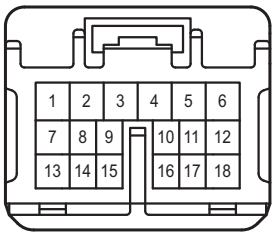


90980-12745

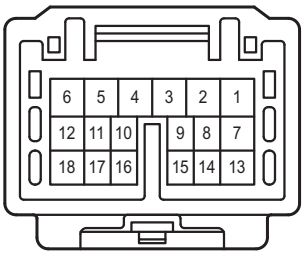


90980-12744

JG2

White

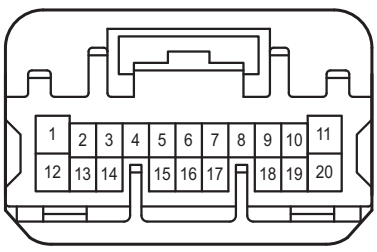

90980-12741

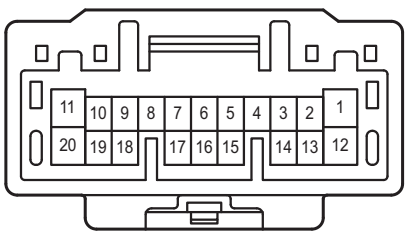


90980-12740

Jj1

White




90980-12368

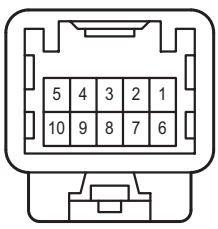


90980-12367

KG2

White

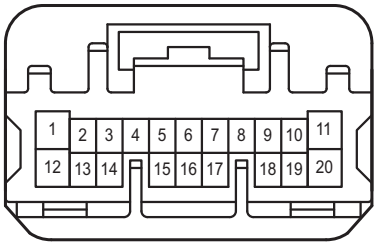


90980-12741

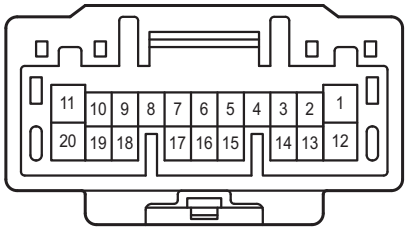


90980-12740

Kk1

White

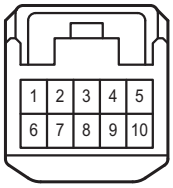


90980-12368

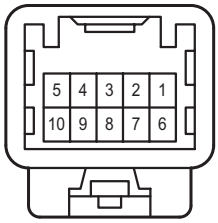


90980-12367

LQ1

White

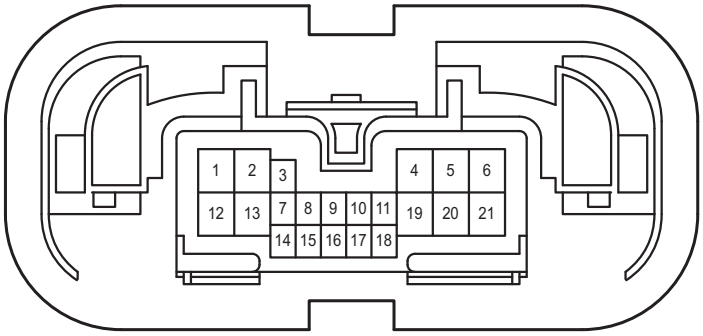

90980-12671

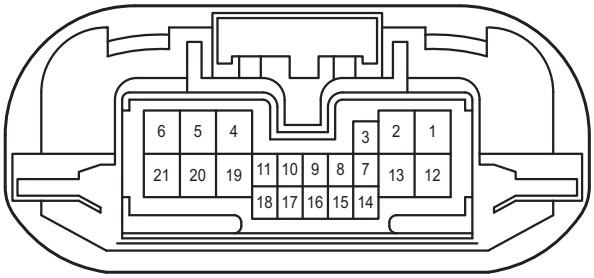


90980-12670

Lm1

White




90980-12368

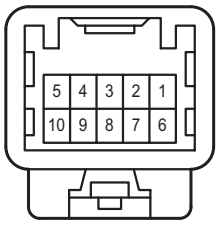


90980-12367

MR1

White

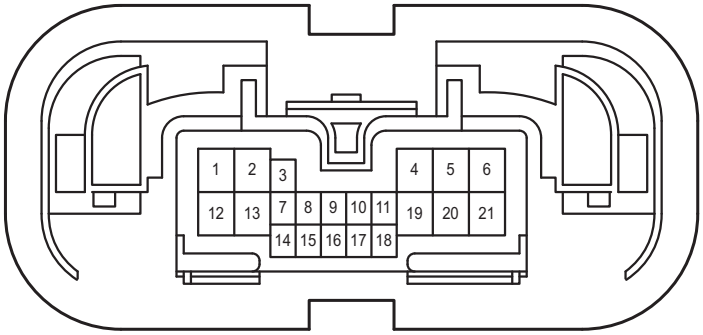


90980-12671

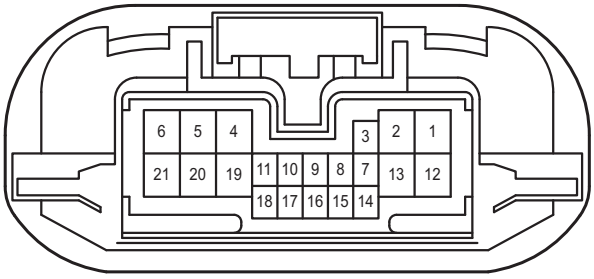


90980-12670

Mm1

White

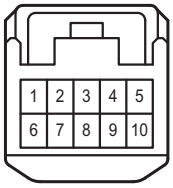

90980-12368

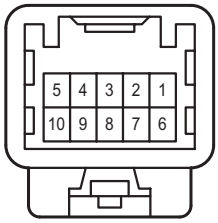

90980-12367

QP1

Gray



90980-11075



90980-11073

RP1

Gray




90980-11075




90980-11073

WG1

White

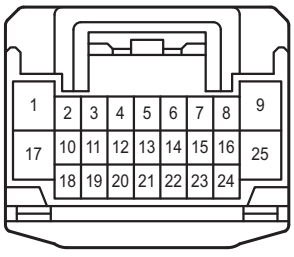


90980-12414

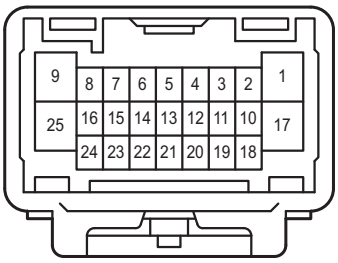


90980-12413

WG2


White

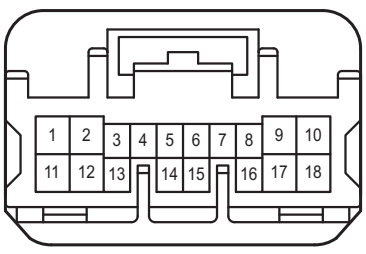

90980-12739

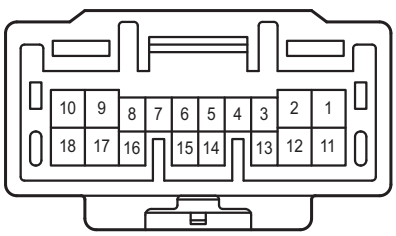

90980-12738

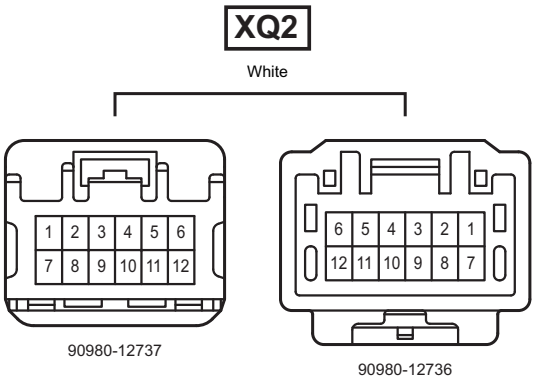
XQ2
White
1 2 3 4 5 6
7 8 9 10 11 12
6 5 4 3 2 1
12 11 10 9 8 7
90980-12737
90980-12736