


(BAT)
30A (*6)
ST
40A (*5)
ST
(BAT)
7.5A
AM1
G2
Ignition or Starter Switch Assembly
ACC
IG1
ST1
IG2
ST2
AM1
AM2
SB
GA8
ST Relay
A115
Junction Connector
A70
Junction Connector
DA3
AC2
CA1
B-W
(*2,*4)
B-R
(*3,*5)
Battery
C95(B),D4(E),D5(F),D6(G),
C158(H),D8(I),D9(J),D10(K),D11(L)
Starter Assembly
M
ST
(LHD M/T)
(RHD M/T)
A1

*1 :1GR-FE
*2 :2TR-FE
*3 :1KD-FTV
*4 :1GD-FTV
*5 :5L-E
*6 :Except 5L-E
*7 :Cold Area Spec.
*8 :Except Cold Area Spec.
*9 :Before Aug. 2020 Production
*10 :From Aug. 2020 Production

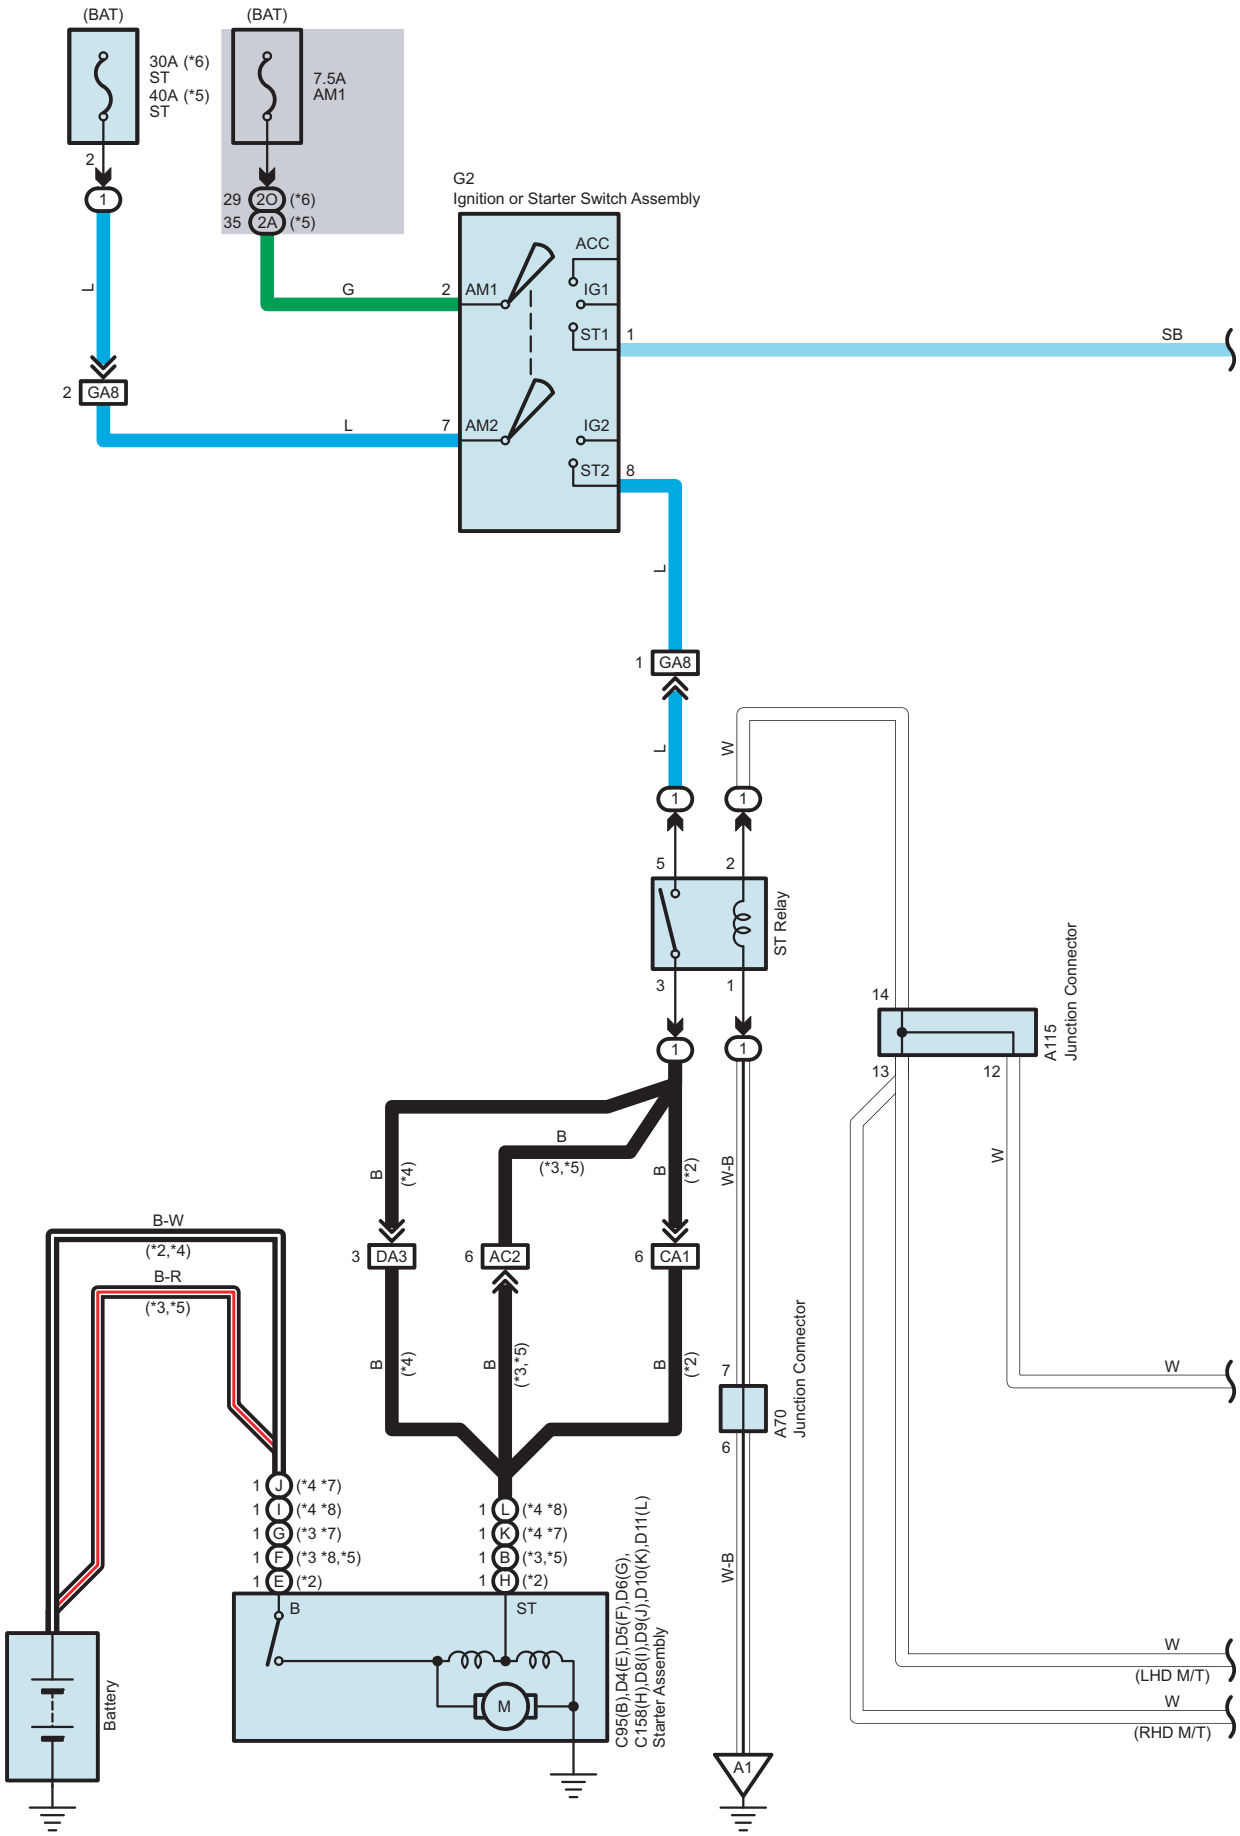

A40
Black

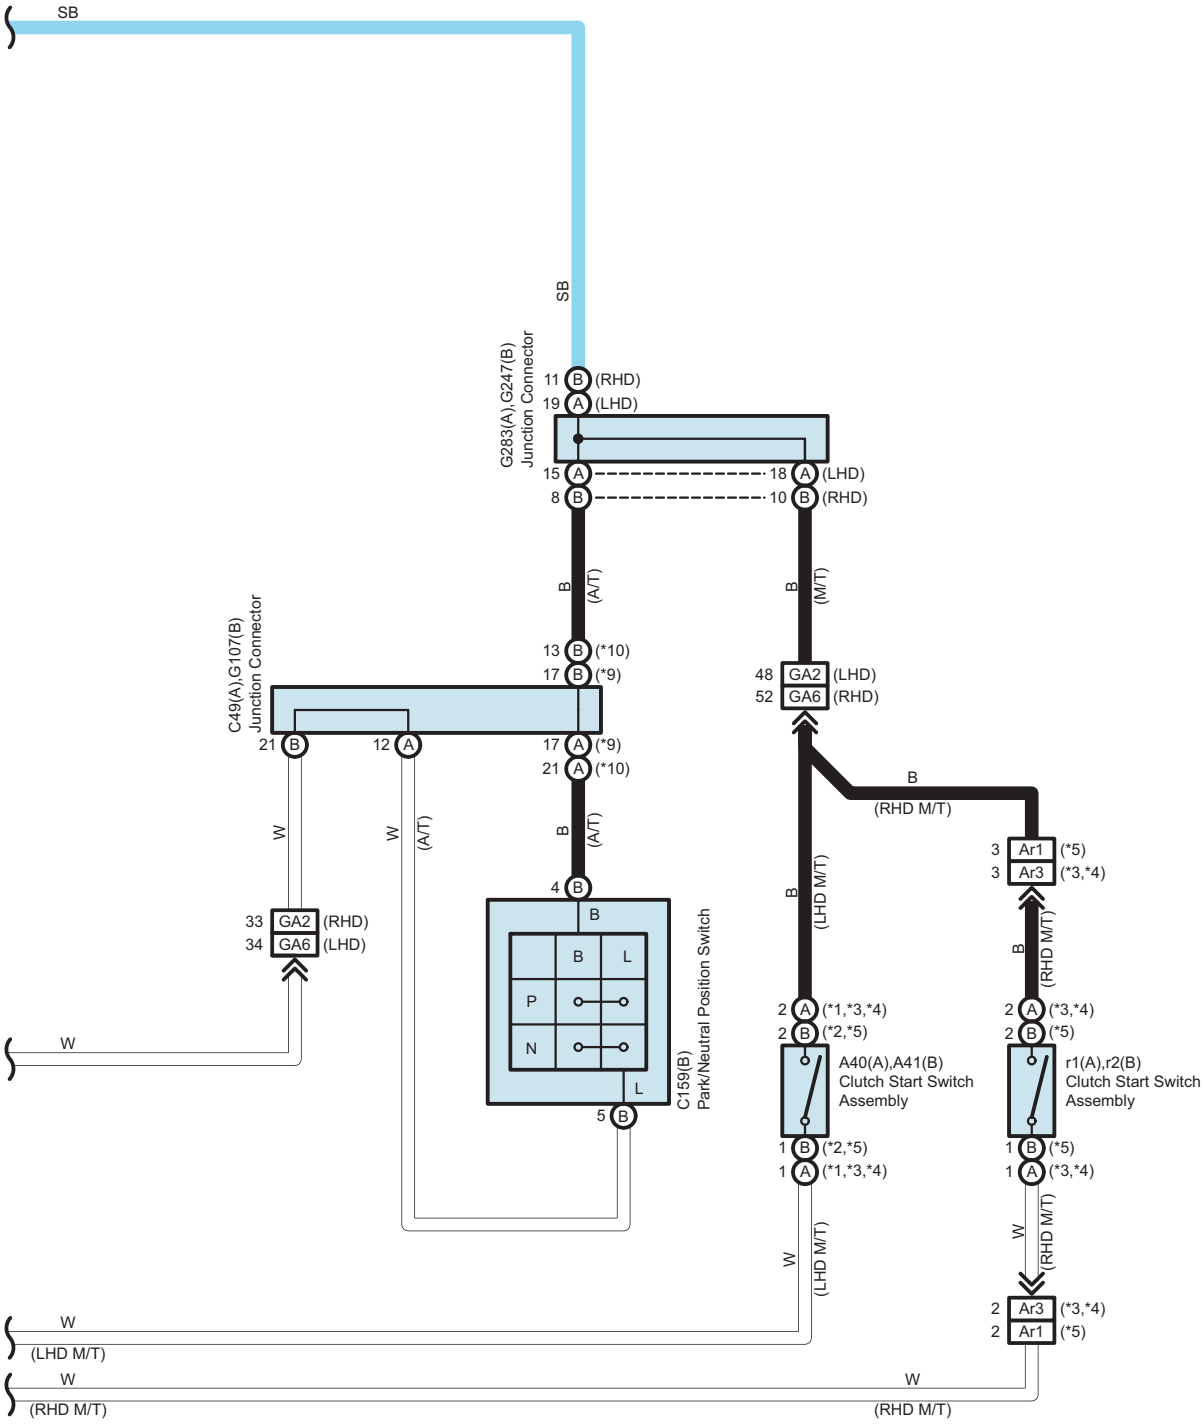


90980-10825

A41
White




90980-10825

A70
White

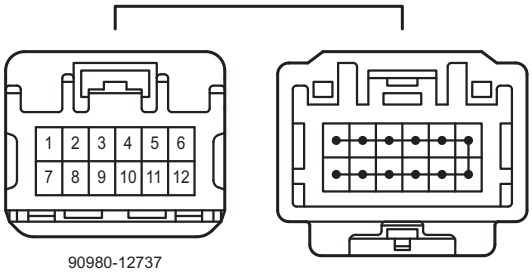


90980-12737

A115
Gray

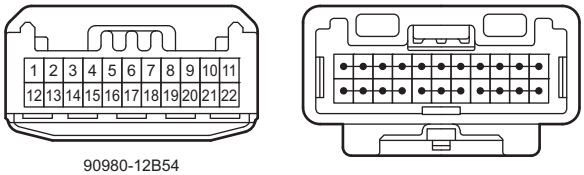

90980-12B54

C49
Blue

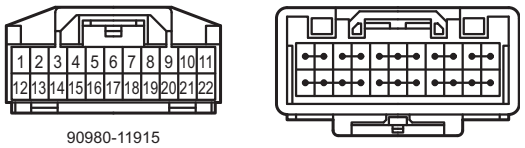

90980-11915

C95
Black




90980-11184

C158
Black




90980-12941

C159
Gray

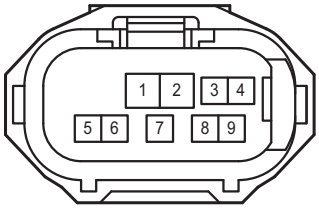


90980-12A23

D4



D5




D6



D8



D9



D10
Black




90980-11184

D11
Black




90980-12941

G2
White

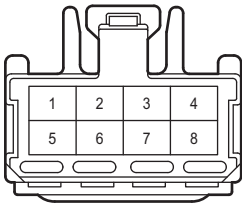


90980-11615

G107
Blue

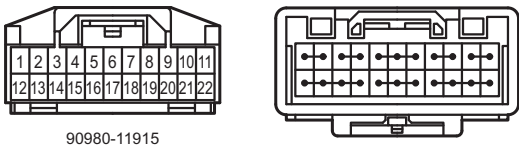


90980-11915

G247
Gray

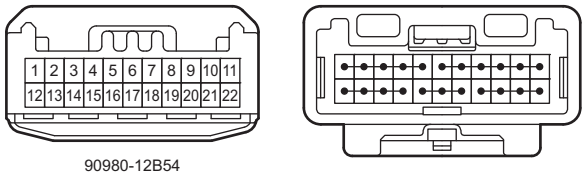

90980-12B54

G283
Blue

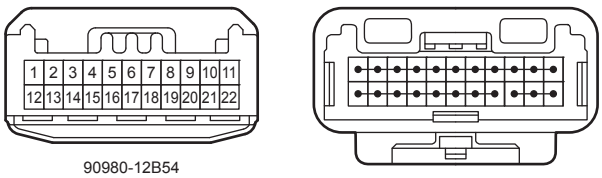

90980-12B54

r1
Black




90980-10825

r2
White




90980-10825

2A
White

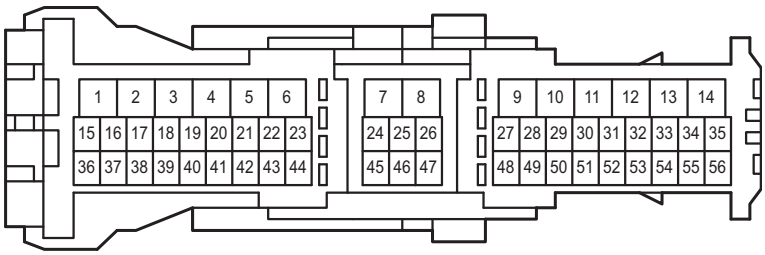

90980-12822

2O
White

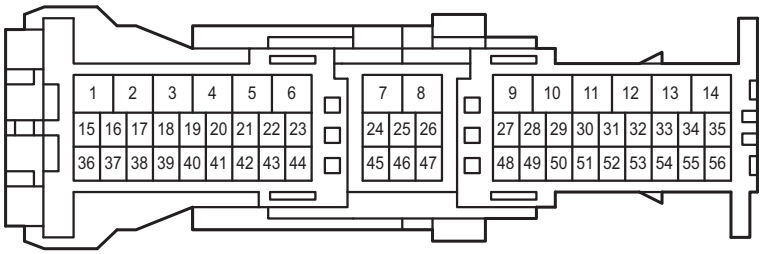

90980-12943

AC2
Dark Gray




90980-11242




90980-11241

Ar1
White

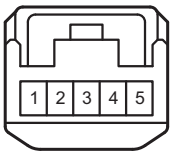


90980-12366

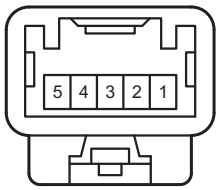


90980-12365

Ar3
Gray

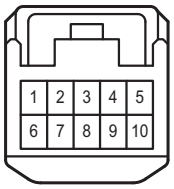


90980-12368

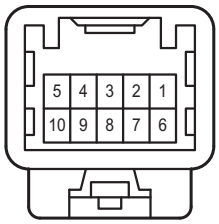


90980-12367

CA1
Black

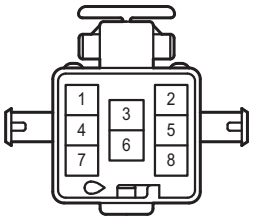

90980-11461

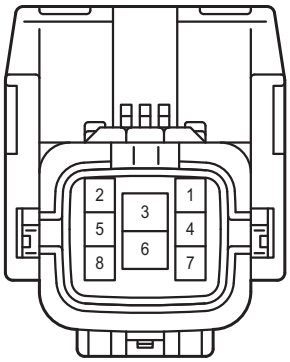

90980-11460

DA3
Black




90980-10990




90980-10989

GA2
White

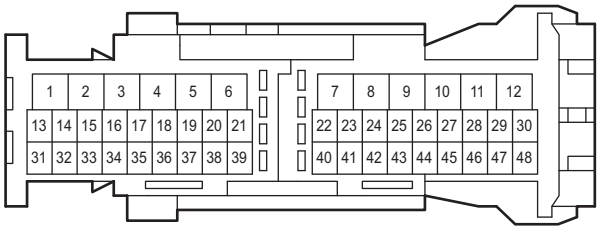


90980-12779

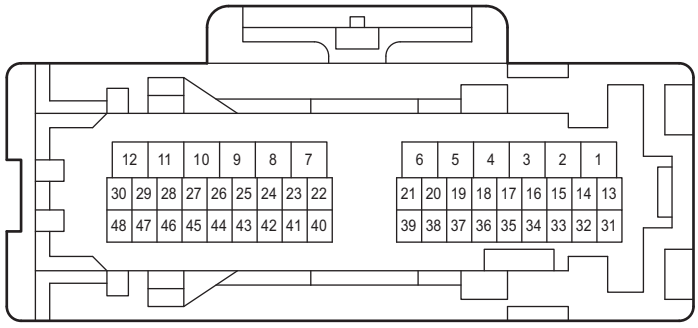


90980-12799


GA6
White

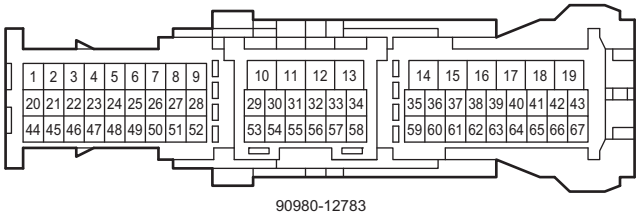

90980-12783

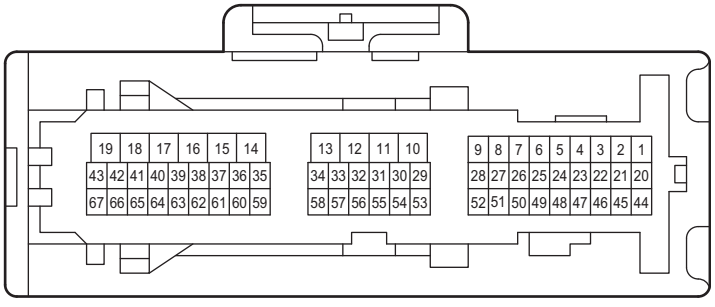

90980-12800

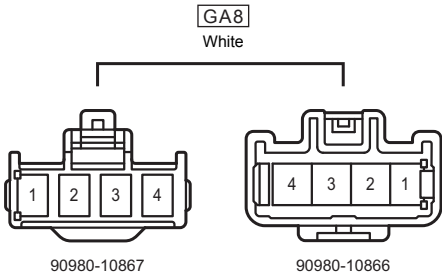
GA8
White
1
2
3
4
4
3
2
1
90980-10867
90980-10866