





50A AIR SUS
50A HTR
20A DEICER
50A PTC HTR NO.1
50A PTC HTR NO.2
50A PTC HTR NO.3
20A S/HTR RR
15A TI&TE
10A STOP
30A DEF
15A MIR HTR
30A HWD NO.1
30A HWD NO.2
30A HWD NO.3
30A HWD NO.4
SHORT PIN
15A NOx PM
120A ALT (*2)
140A ALT (*1,*3,*4)
1D
6A
6B
B-W (*1,*2,*4)
B (*1,*2,*4)
B-W (*3)
250A FL
70A FL
Battery
Battery
L (*5)
B-R (*6)
B (*1,*2,*4)

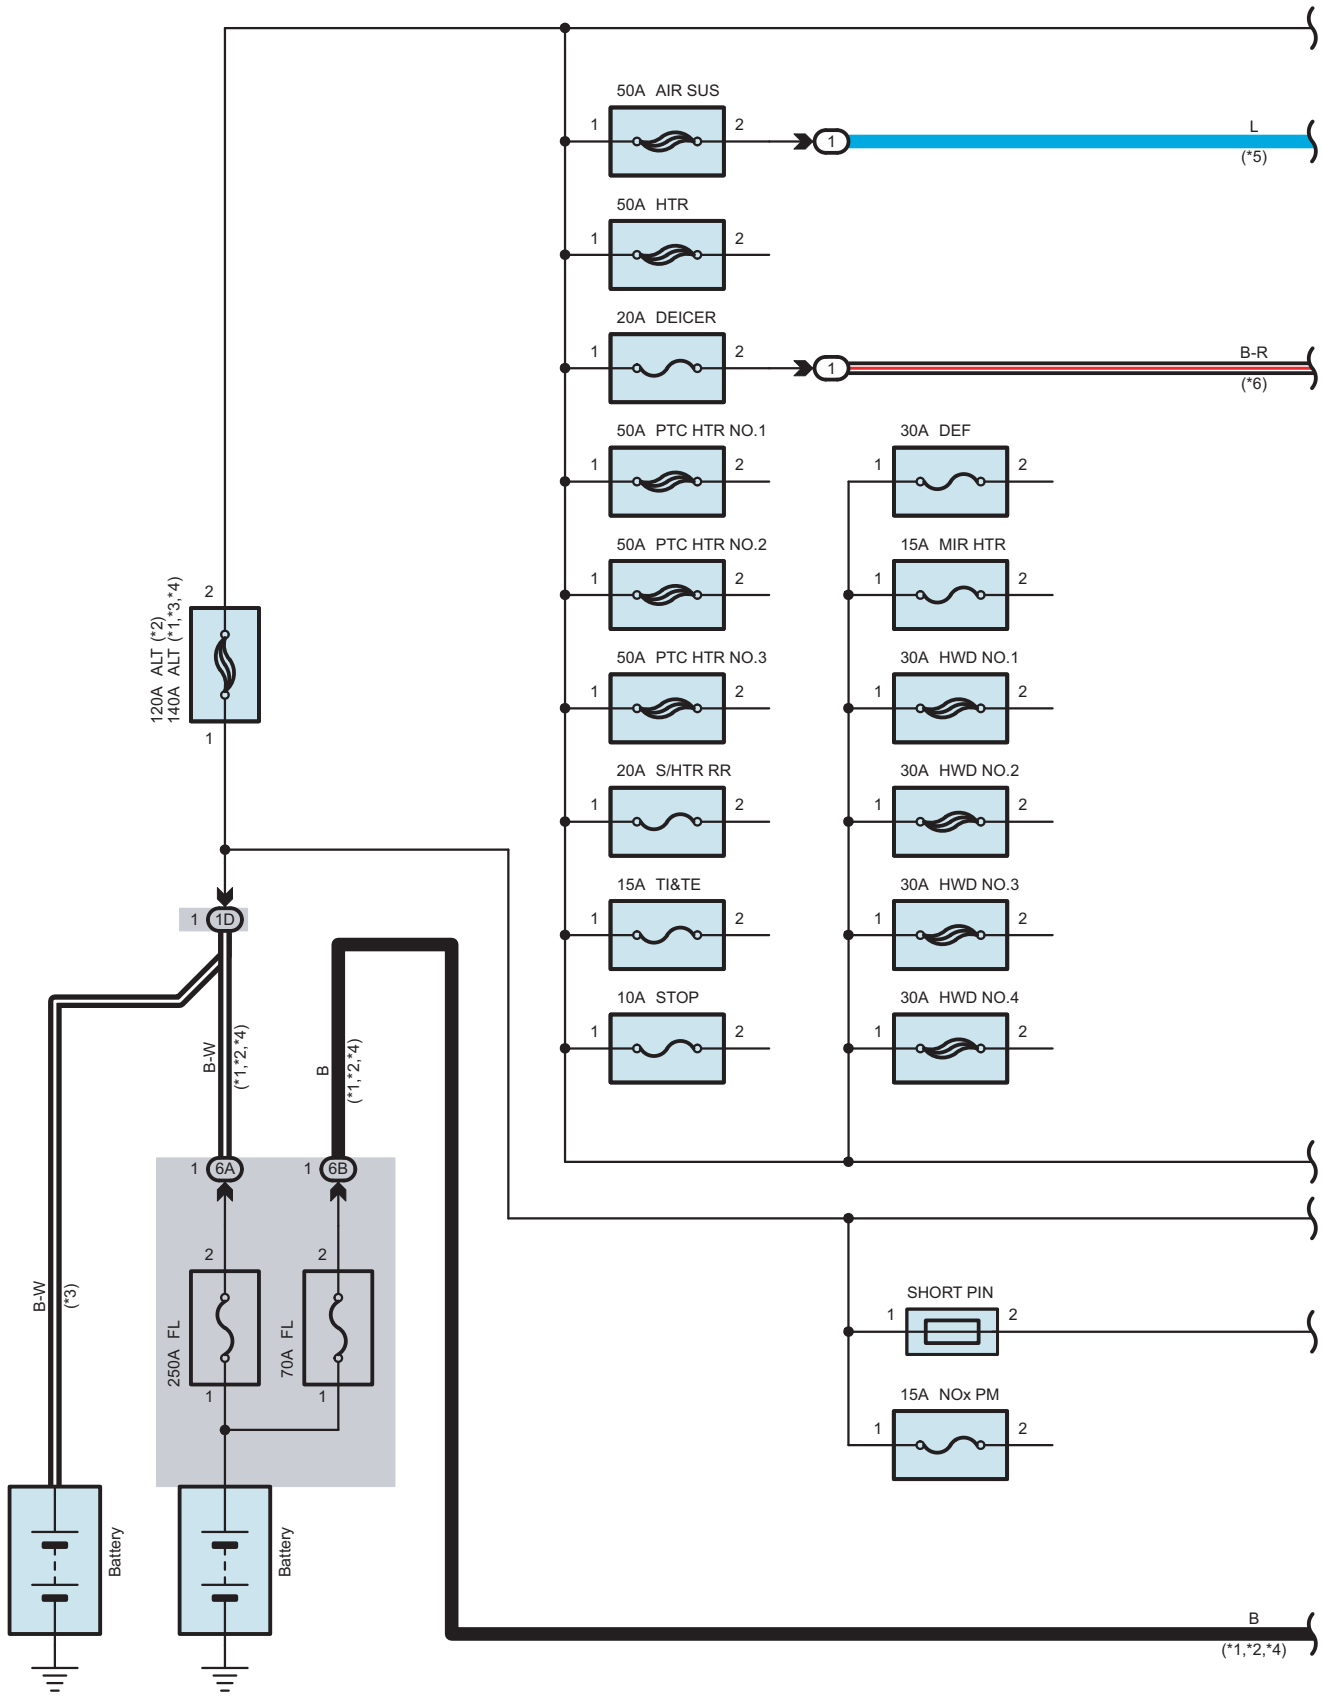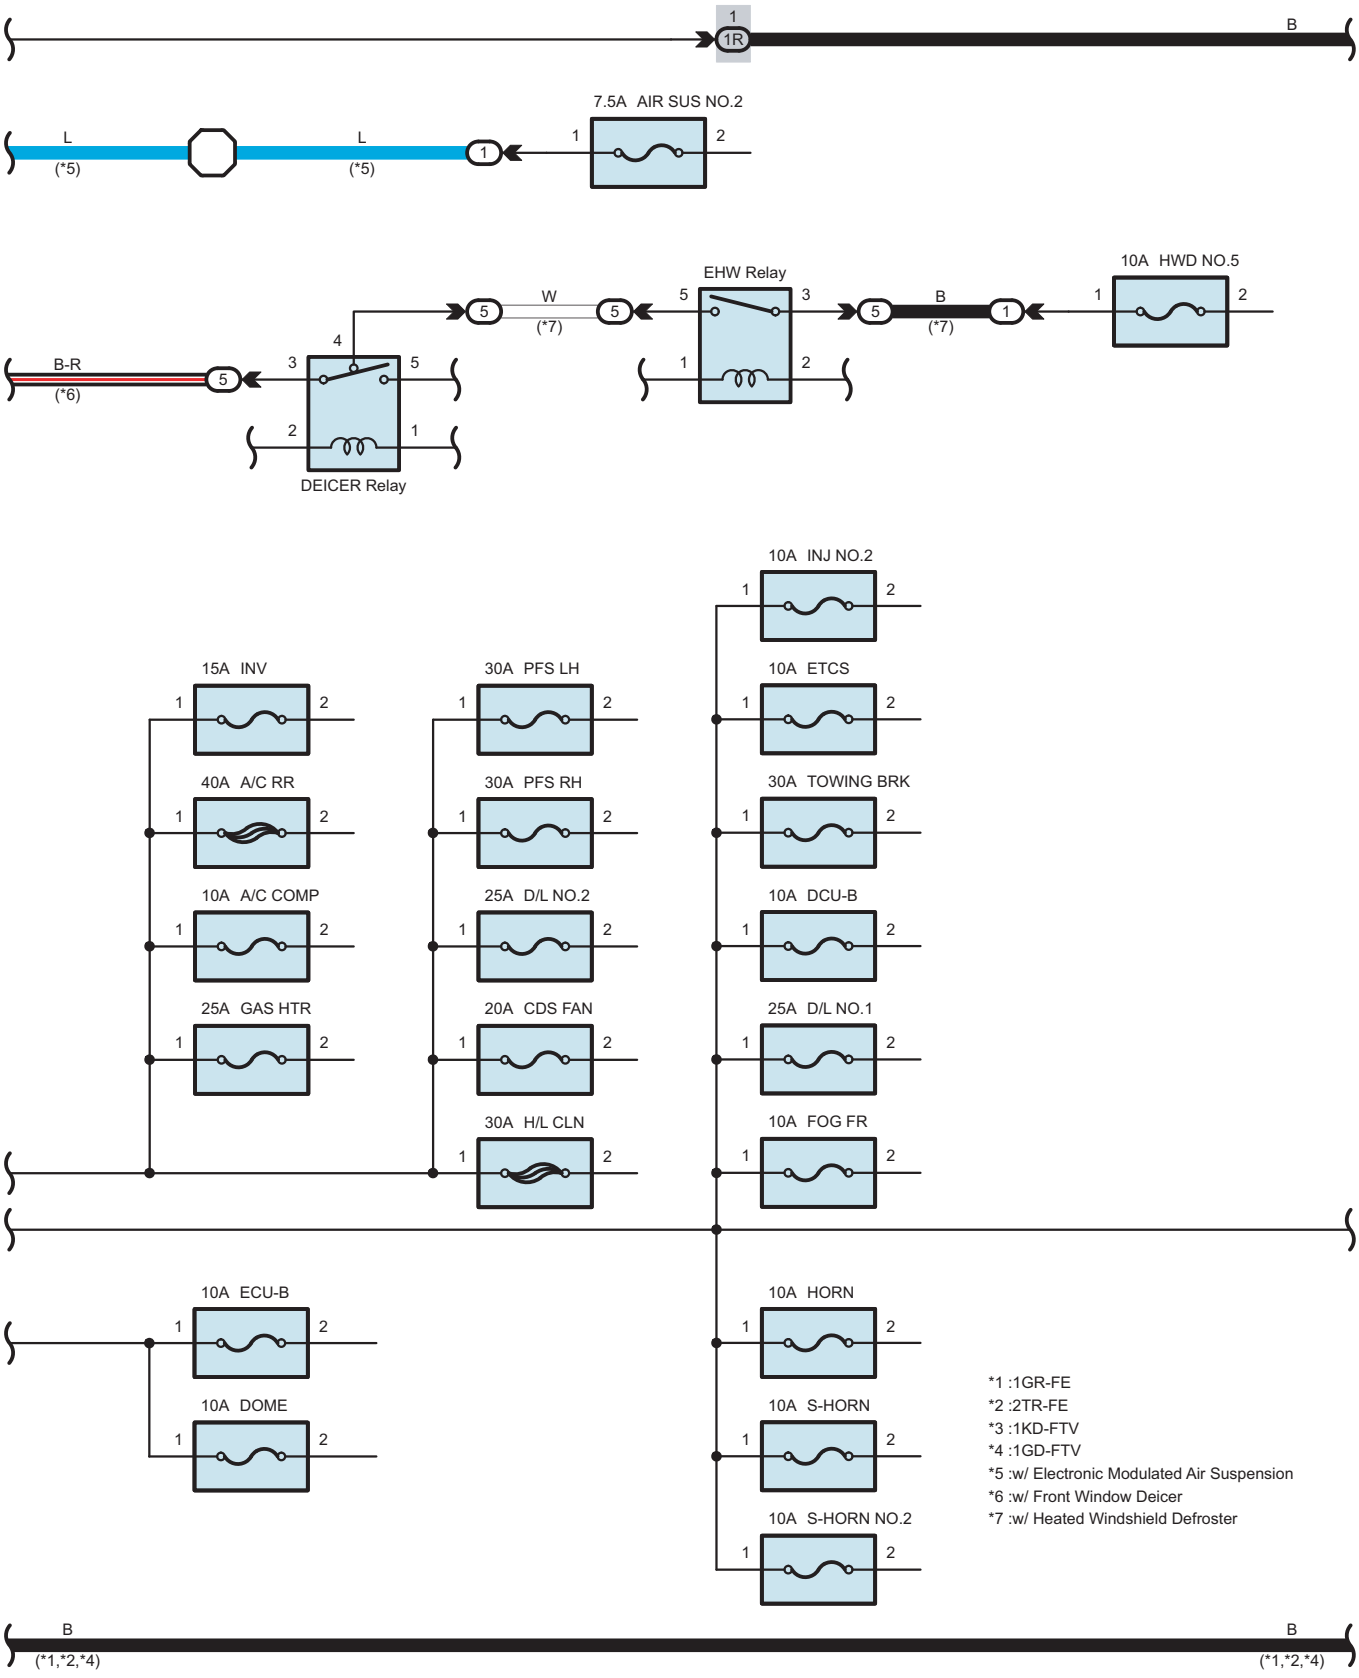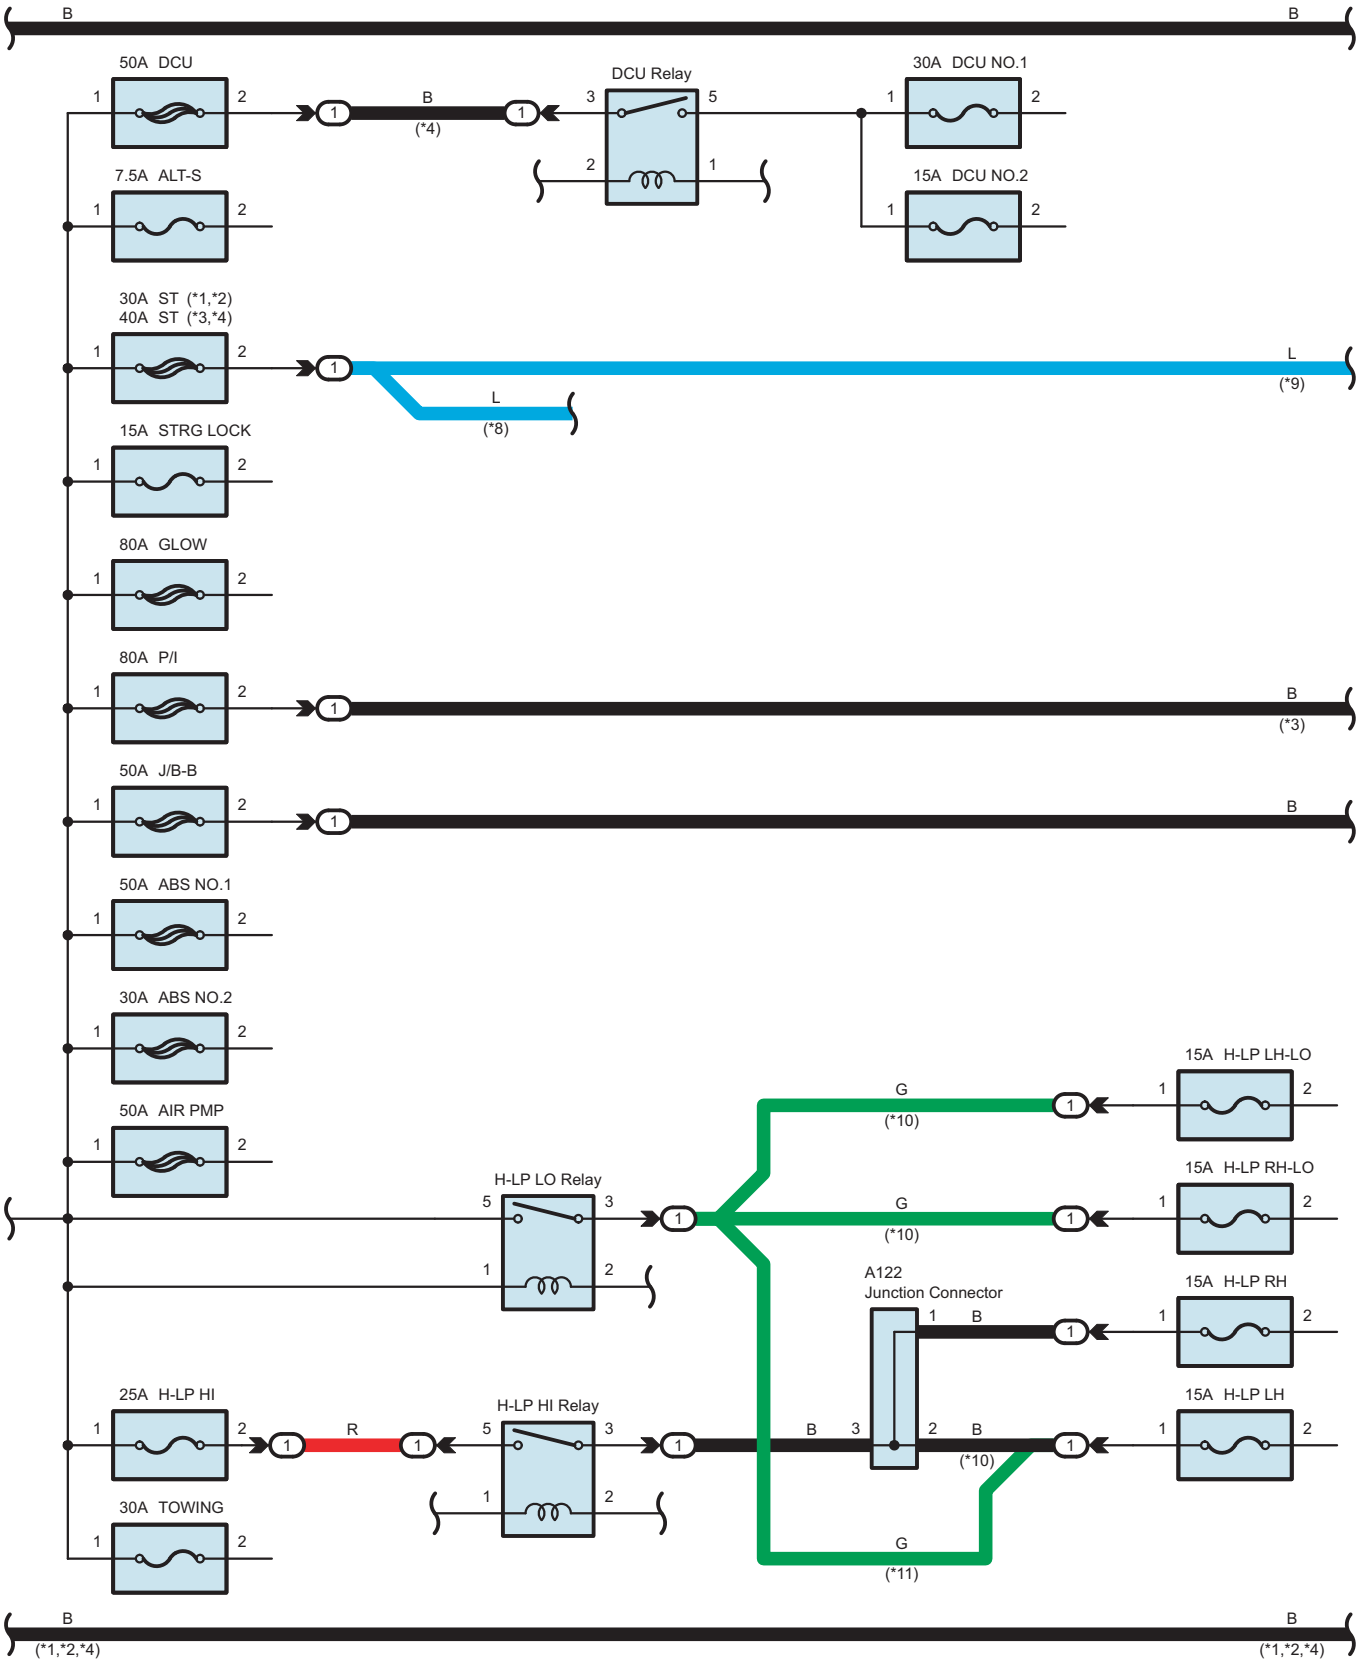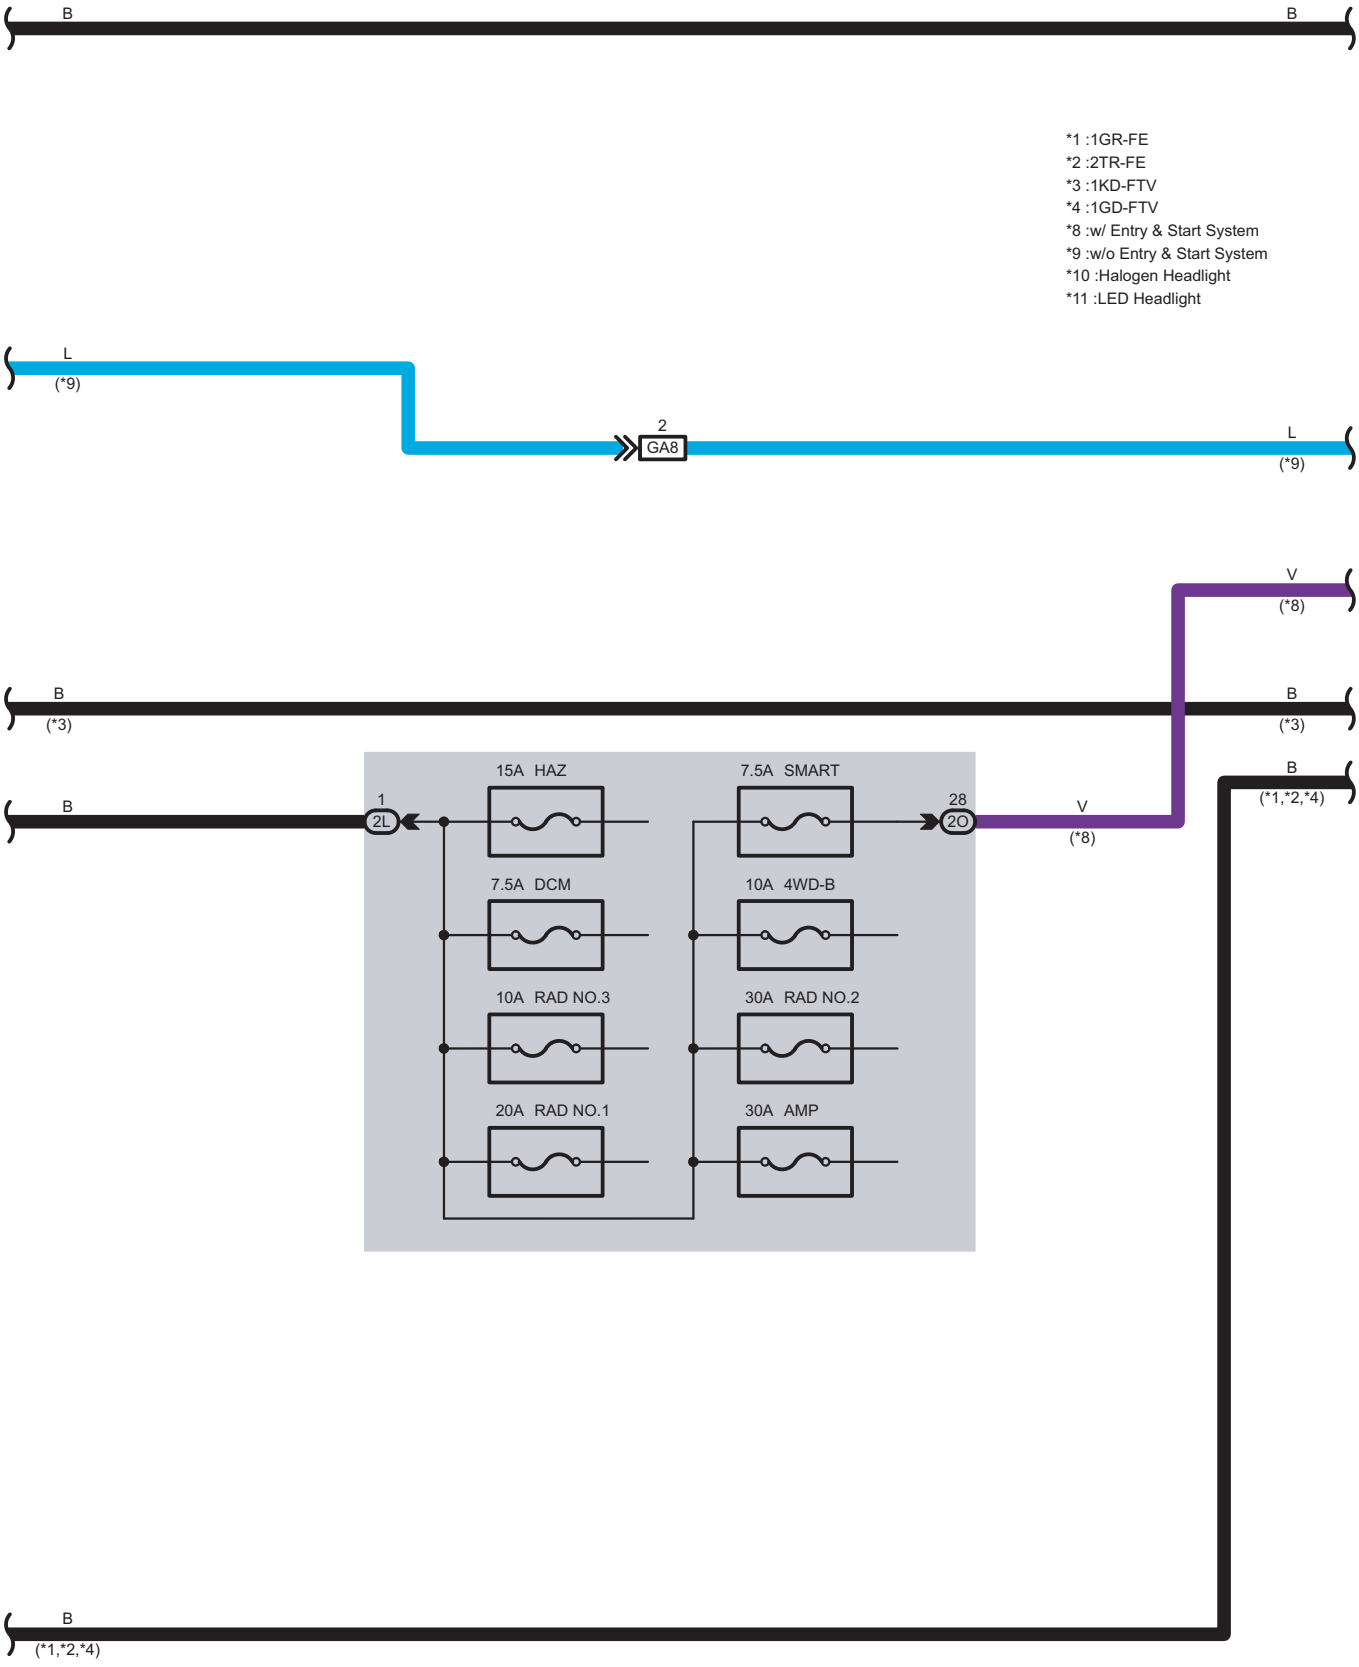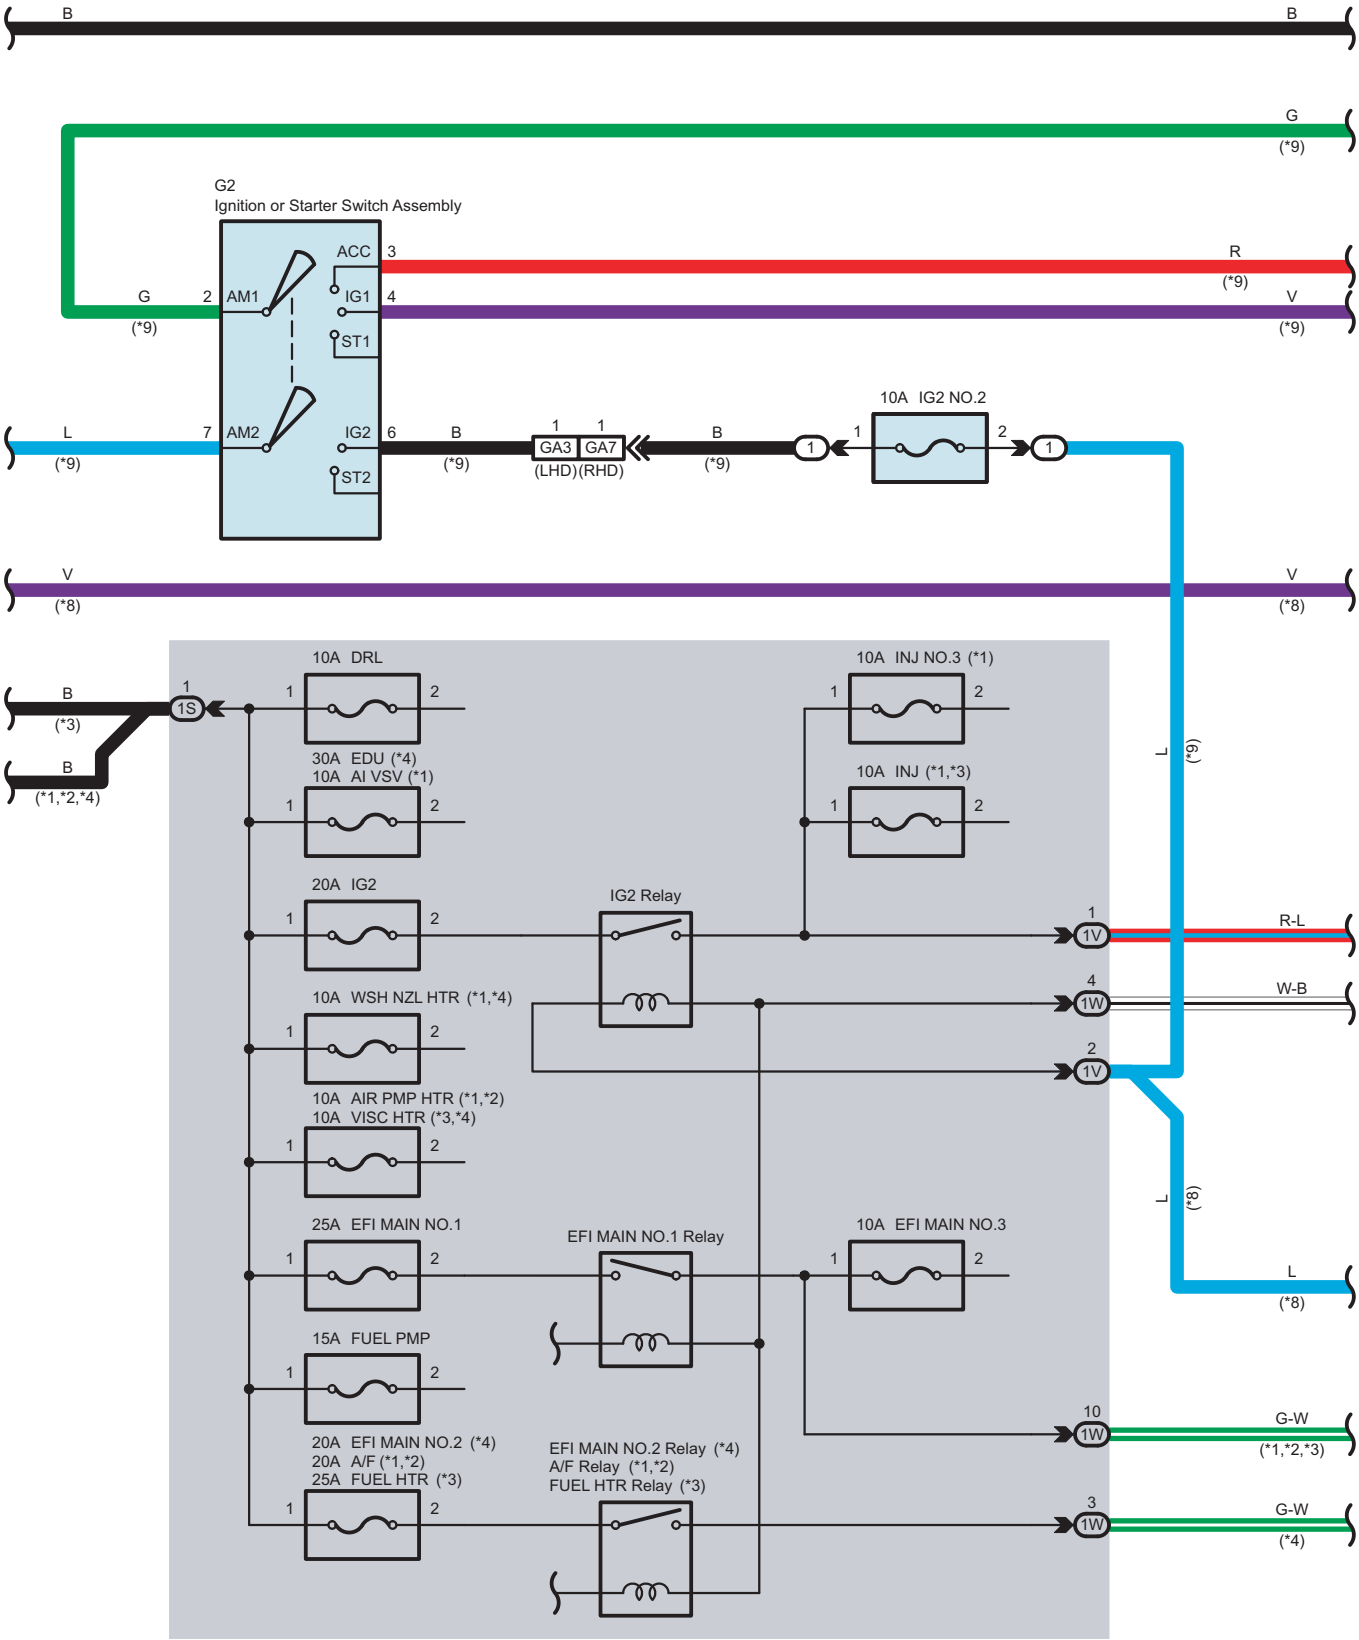


*1 :1GR-FE
*2 :2TR-FE
*3 :1KD-FTV
*4 :1GD-FTV
*5 :w/ Electronic Modulated Air Suspension
*6 :w/ Front Window Deicer
*7 :w/ Heated Windshield Defroster



B
B
50A DCU
B
(*4)
DCU Relay
30A DCU NO.1
15A DCU NO.2
7.5A ALT-S
30A ST (*1,*2)
40A ST (*3,*4)
L
(*9)
L
(*8)
15A STRG LOCK
80A GLOW
80A P/I
B
(*3)
50A J/B-B
B
50A ABS NO.1
30A ABS NO.2
50A AIR PMP
H-LP LO Relay
15A H-LP LH-LO
G
(*10)
15A H-LP RH-LO
G
(*10)
A122
Junction Connector
15A H-LP RH
B
25A H-LP HI
R
H-LP HI Relay
B
B
(*10)
15A H-LP LH
30A TOWING
G
(*11)
B
(*1,*2,*4)
B
(*1,*2,*4)


B
B
*1 :1GR-FE
*2 :2TR-FE
*3 :1KD-FTV
*4 :1GD-FTV
*8 :w/ Entry & Start System
*9 :w/o Entry & Start System
*10 :Halogen Headlight
*11 :LED Headlight
L
(*9)
2
GA8
L
(*9)
V
(*8)
B
(*3)
B
(*3)
B
B
(*1,*2,*4)
1
2L
15A HAZ
7.5A SMART
28
2O
V
(*8)
7.5A DCM
10A 4WD-B
10A RAD NO.3
30A RAD NO.2
20A RAD NO.1
30A AMP
B
(*1,*2,*4)



B
B
G
(*9)
G2
Ignition or Starter Switch Assembly
ACC
3
R
(*9)
G
(*9)
2
AM1
IG1
4
V
(*9)
ST1
L
(*9)
7
AM2
IG2
6
B
(*9)
1
1
GA3
GA7
(LHD)(RHD)
B
(*9)
1
1
10A IG2 NO.2
2
1
ST2
V
(*8)
V
(*8)
10A DRL
10A INJ NO.3 (*1)
B
(*3)
1
1S
B
(*1,*2,*4)
30A EDU (*4)
10A AI VSV (*1)
10A INJ (*1,*3)
L
(*9)
20A IG2
IG2 Relay
1
1V
R-L
10A WSH NZL HTR (*1,*4)
4
1W
W-B
2
1V
10A AIR PMP HTR (*1,*2)
10A VISC HTR (*3,*4)
L
(*8)
25A EFI MAIN NO.1
EFI MAIN NO.1 Relay
10A EFI MAIN NO.3
L
(*8)
15A FUEL PMP
10
1W
G-W
(*1,*2,*3)
20A EFI MAIN NO.2 (*4)
20A A/F (*1,*2)
25A FUEL HTR (*3)
EFI MAIN NO.2 Relay (*4)
A/F Relay (*1,*2)
FUEL HTR Relay (*3)
3
1W
G-W
(*4)

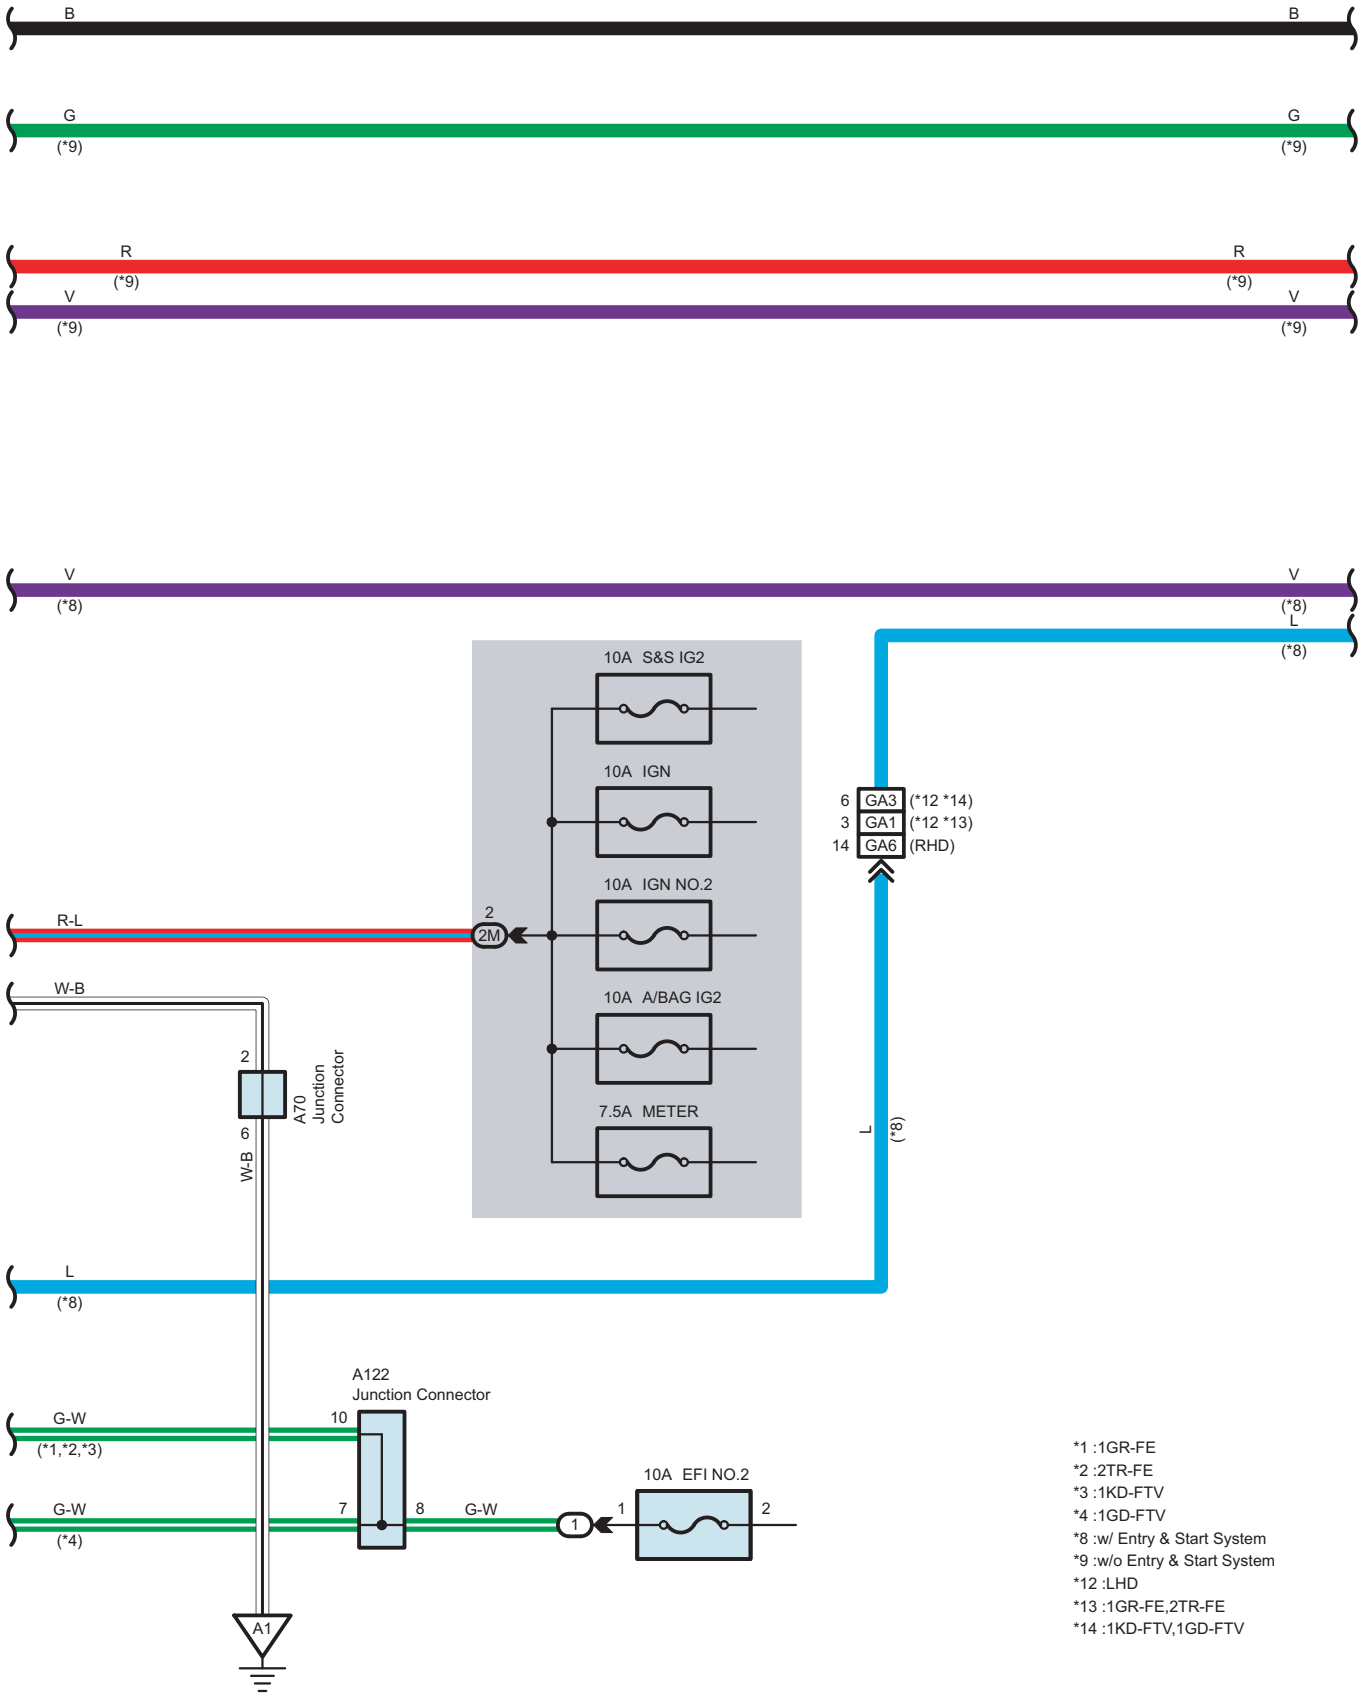


*1 :1GR-FE
*2 :2TR-FE
*3 :1KD-FTV
*4 :1GD-FTV
*8 :w/ Entry & Start System
*9 :w/o Entry & Start System
*12 :LHD
*13 :1GR-FE,2TR-FE
*14 :1KD-FTV,1GD-FTV

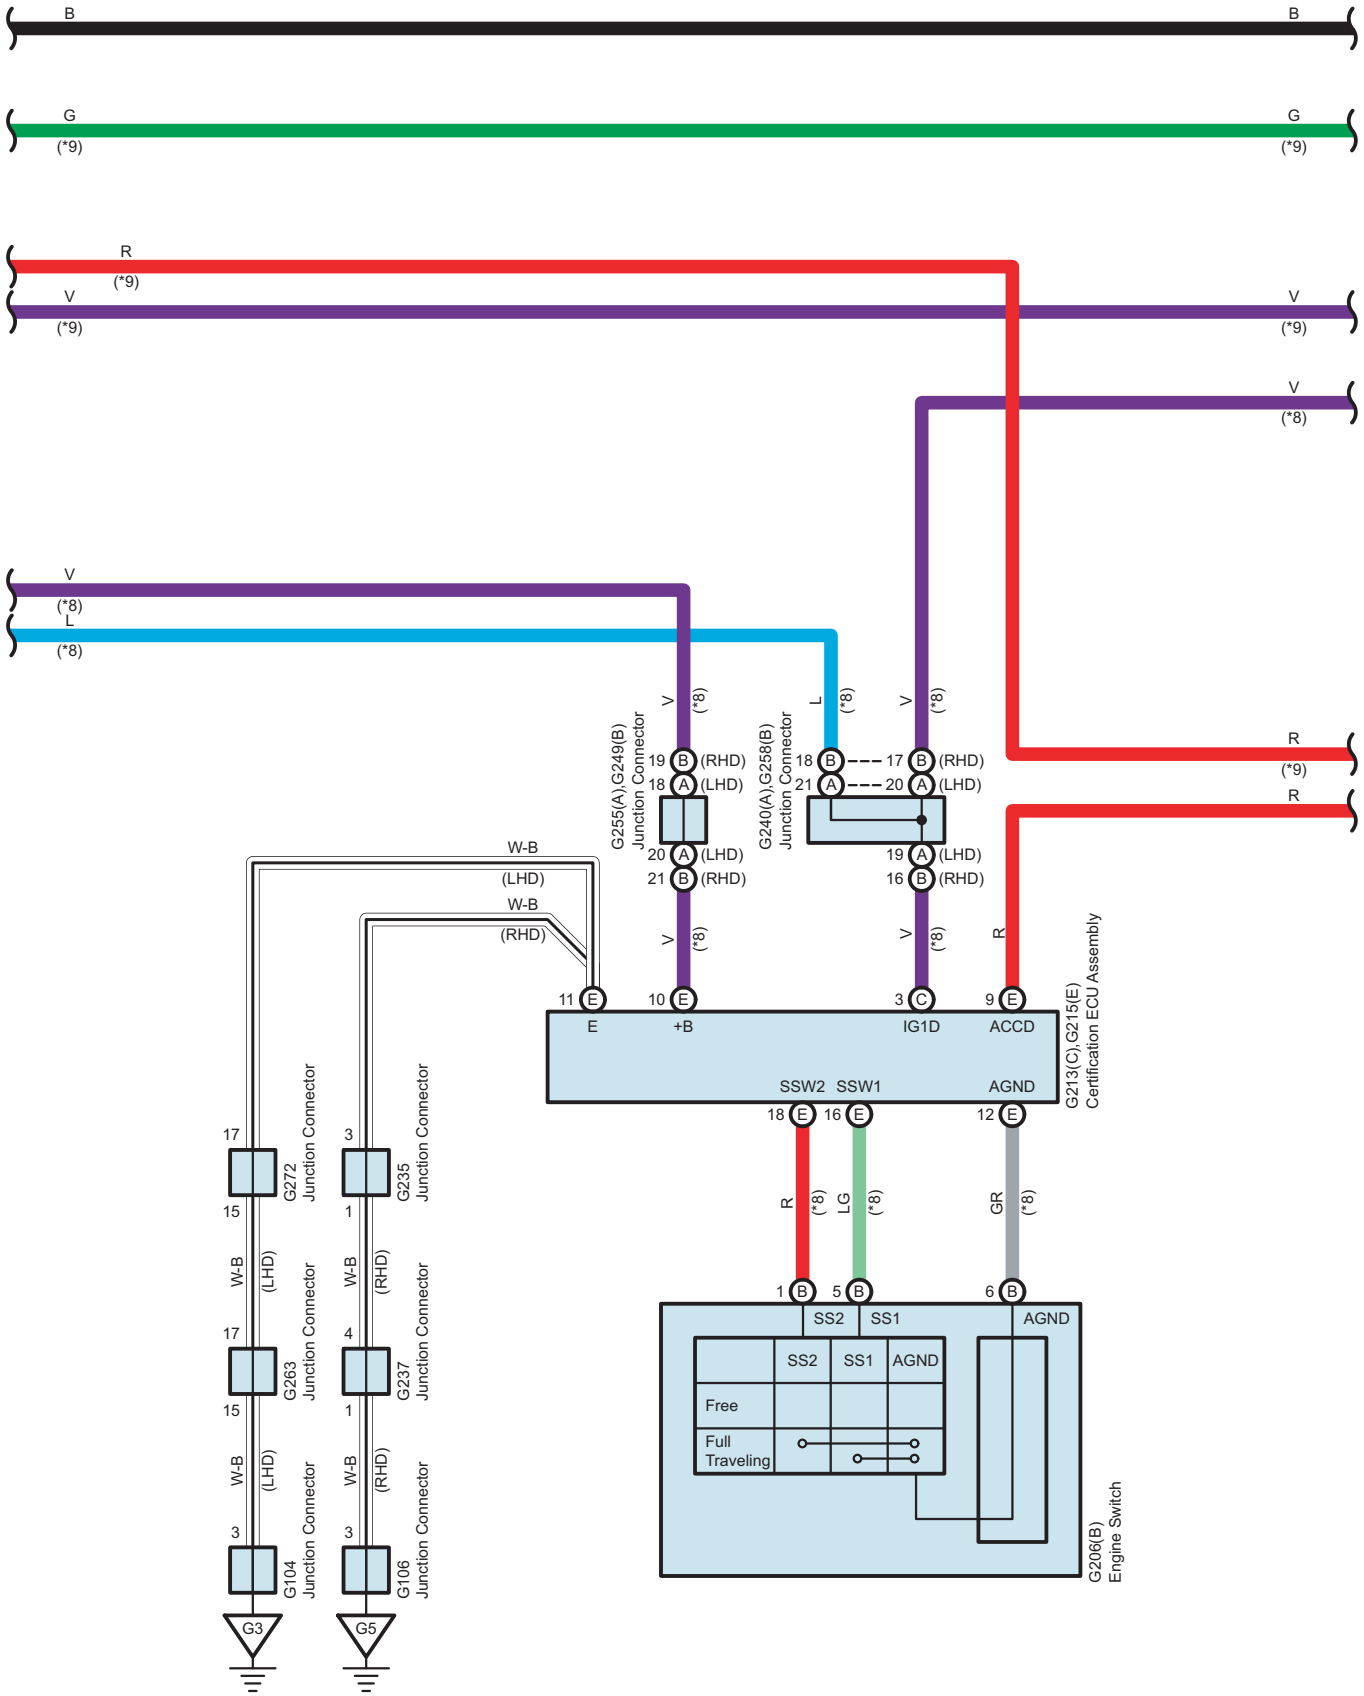
B
B
G
(*9)
G
(*9)
R
(*9)
V
(*9)
V
(*9)
V
(*8)
V
(*8)
L
(*8)
R
(*9)
R
W-B
(LHD)
W-B
(RHD)
G255(A),G249(B) Junction Connector
G240(A),G258(B) Junction Connector
19 B (RHD)
18 A (LHD)
20 A (LHD)
21 B (RHD)
18 B (RHD)
21 A (LHD)
17 B (RHD)
20 A (LHD)
19 A (LHD)
16 B (RHD)
11 E
10 E
3 C
9 E
E
+B
IG1D
ACCD
SSW2
SSW1
AGND
18 E
16 E
12 E
G213(C),G215(E) Certification ECU Assembly
R (*8)
LG (*8)
GR (*8)
1 B
5 B
6 B
SS2
SS1
AGND
Free
Full Traveling
G206(B) Engine Switch
17
15
G272 Junction Connector
3
1
G235 Junction Connector
17
15
G263 Junction Connector
4
1
G237 Junction Connector
3
3
G104 Junction Connector
G106 Junction Connector
G3
G5


*8 :w/ Entry & Start System
*9 :w/o Entry & Start System

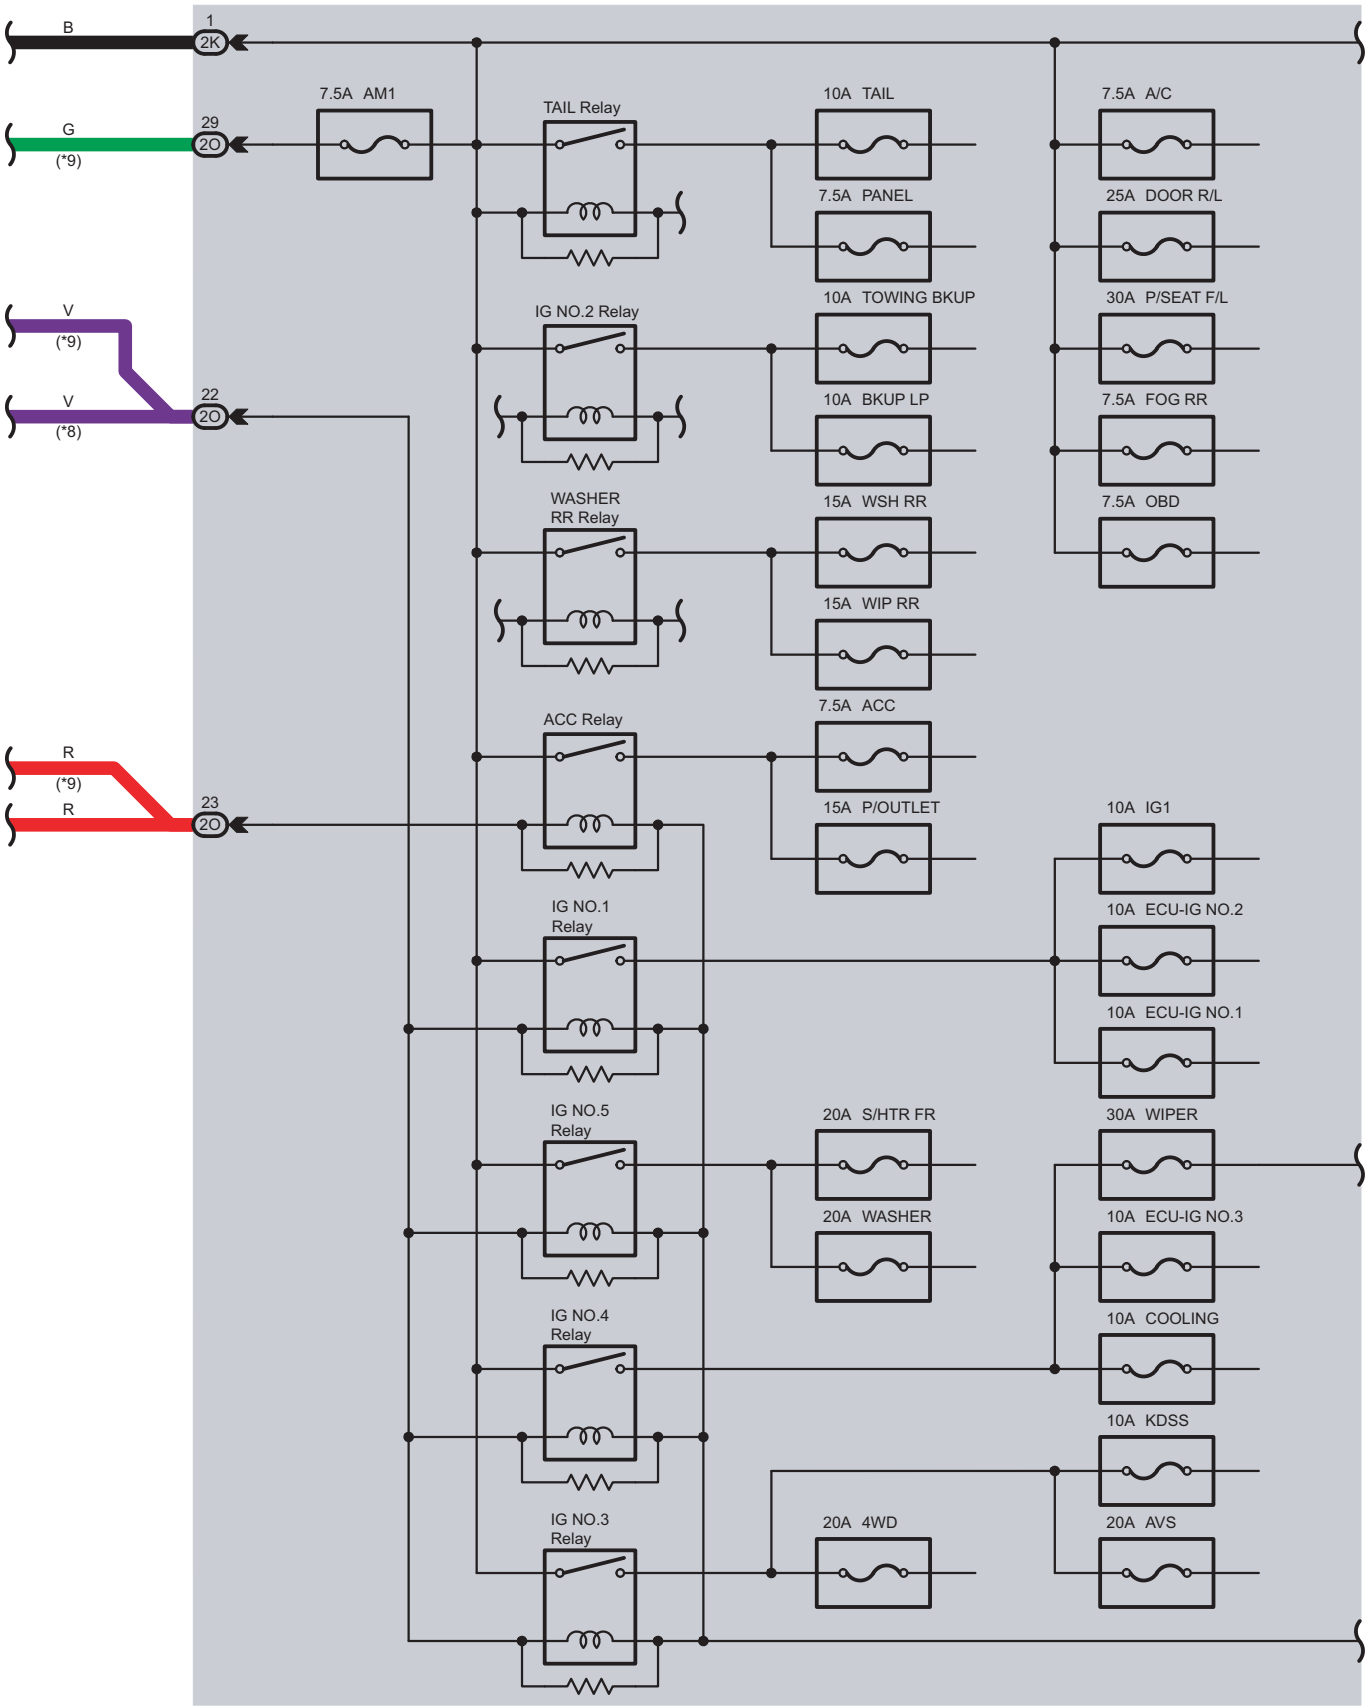

*12 :LHD
*15 :RHD
*16 :Headlight Dimmer Switch Assembly LH Side Type
*17 :Headlight Dimmer Switch Assembly RH Side Type
*18 :w/ Auto Wiper
*19 :w/o Auto Wiper

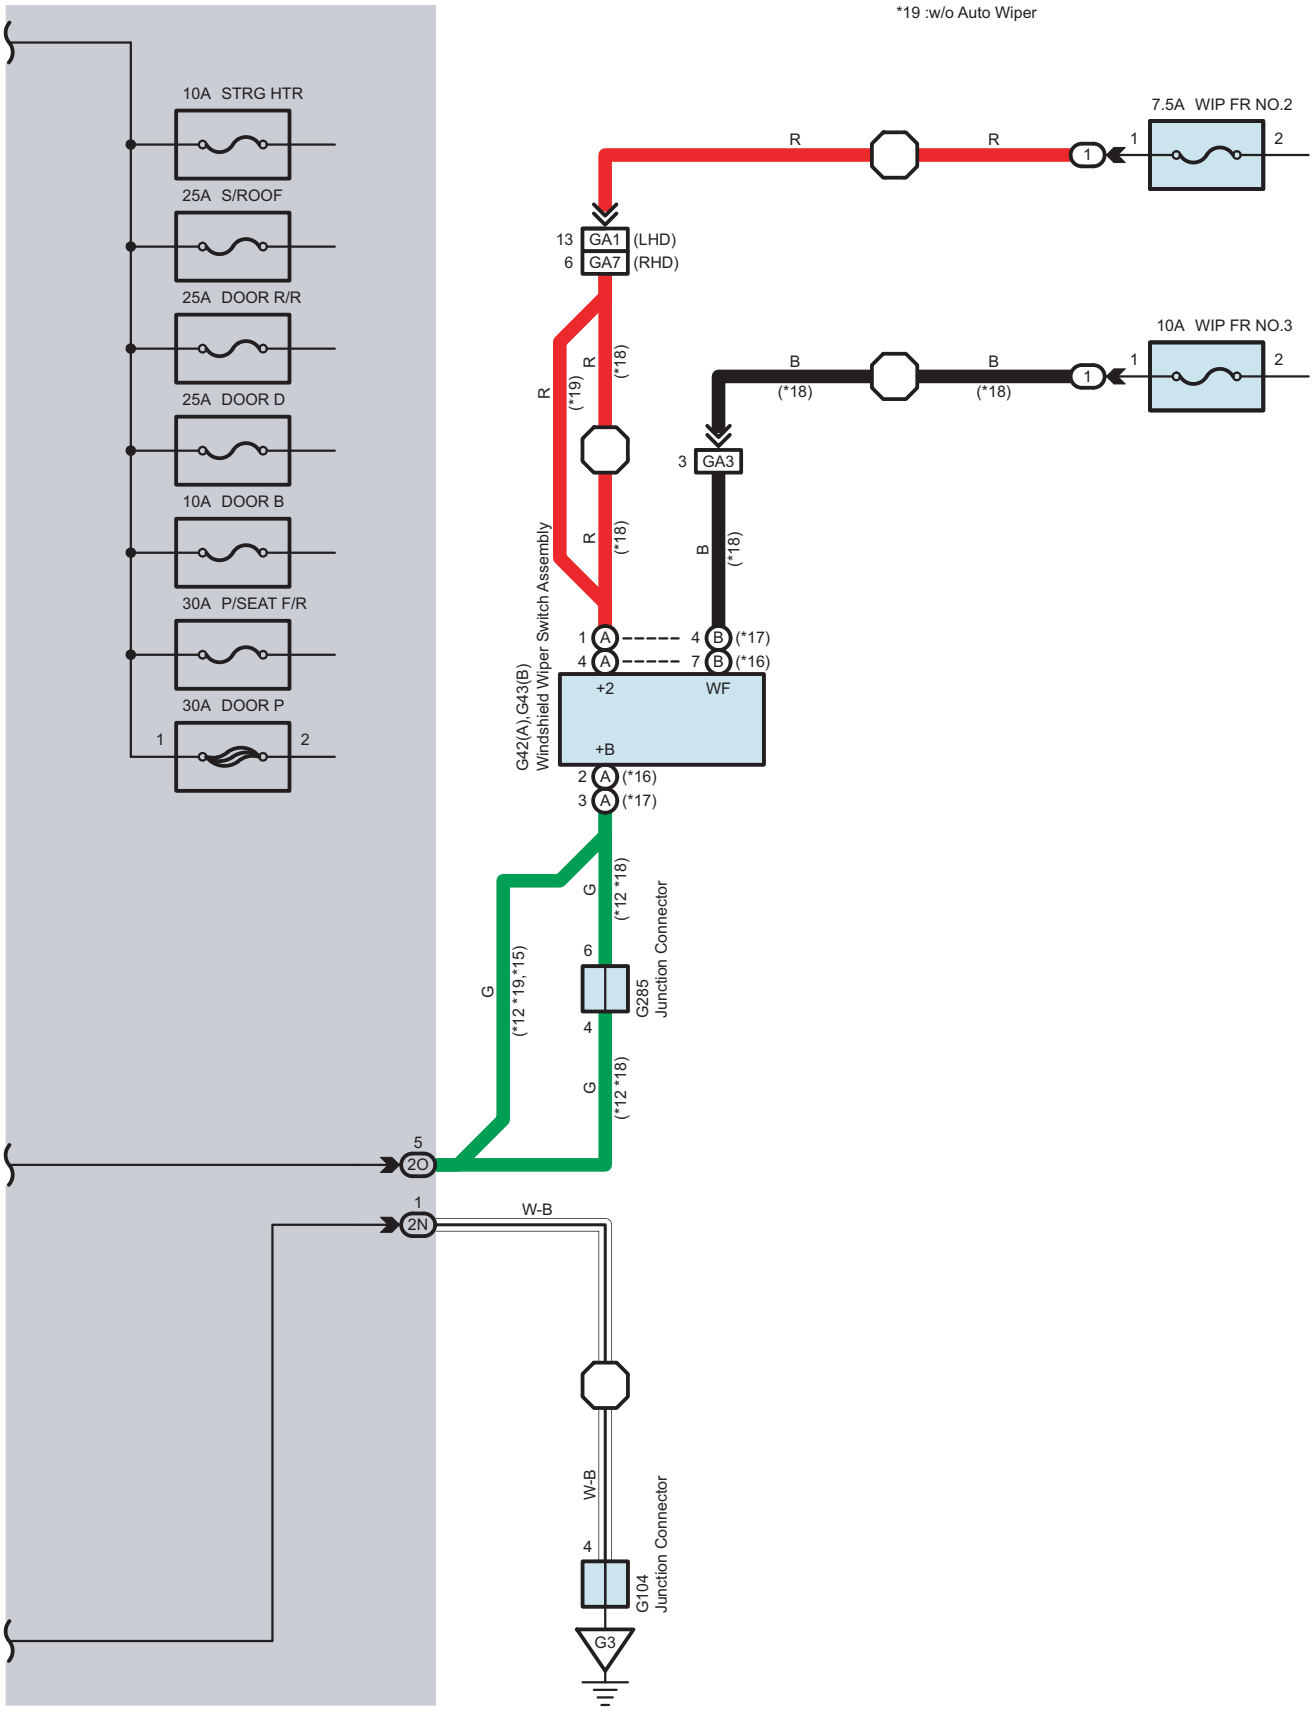


A70
White

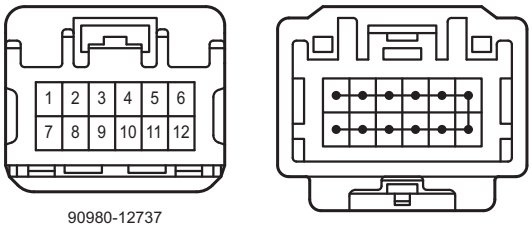


90980-12737

A122
Black

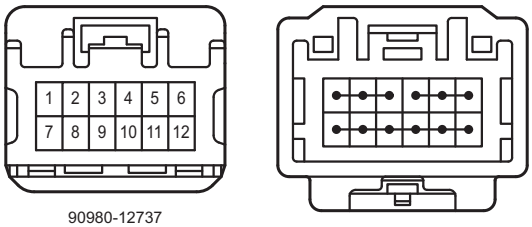

90980-12737

G2
White

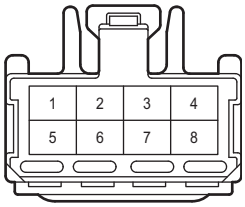


90980-11615

G42
White




90980-12359

G43
White

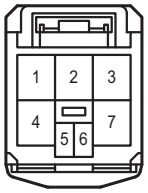


90980-12358

G104
White (Before Aug. 2017 Production) / Gray (From Aug. 2017 Production)

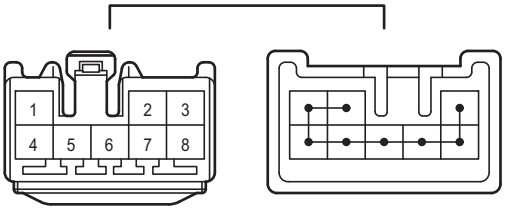


90980-11686

G106
White (Before Aug. 2017 Production) / Gray (From Aug. 2017 Production)

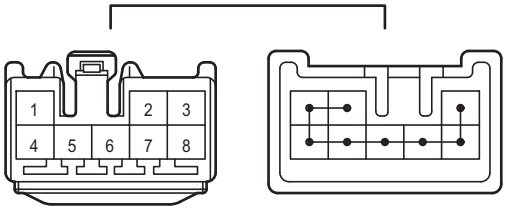


90980-11686

G206
Black

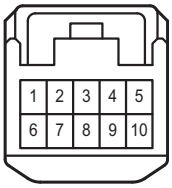


90980-12368

G213
White

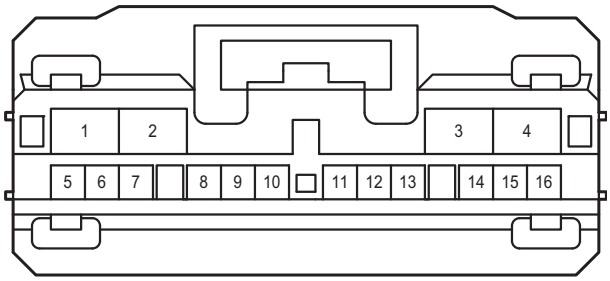


90980-12763

G215
Black

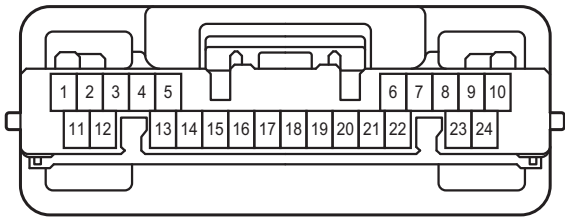


90980-12A42

G235
Gray

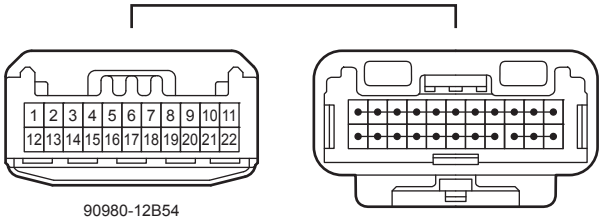


90980-12B54

G237
Blue

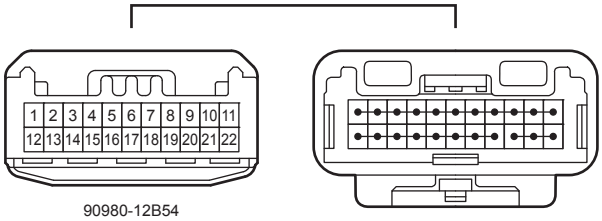


90980-12B54

G240
White

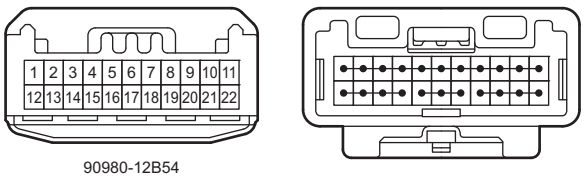


90980-12B54

G249
Blue

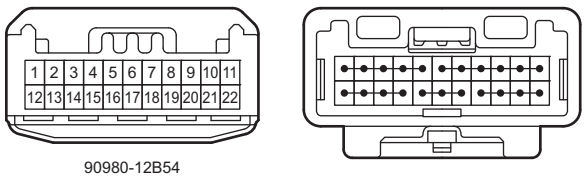


90980-12B54

G255
Blue

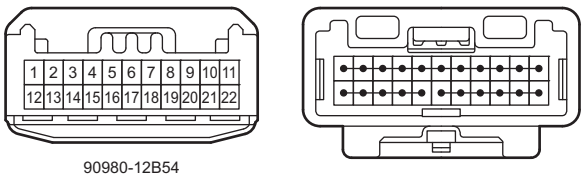


90980-12B54

G258
Gray

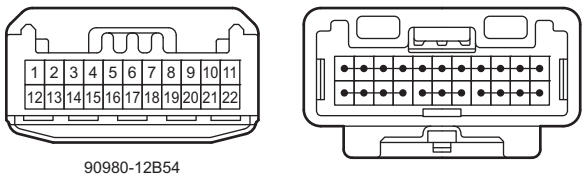


90980-12B54

G263
Blue

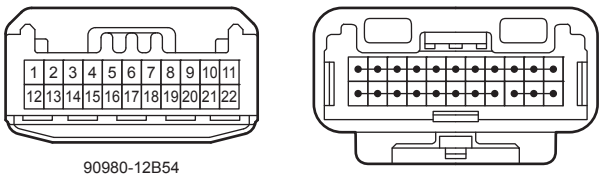


90980-12B54

G272
Gray

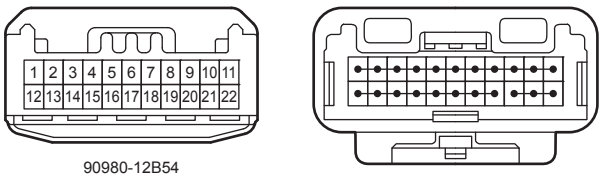


90980-12B54

G285
Black

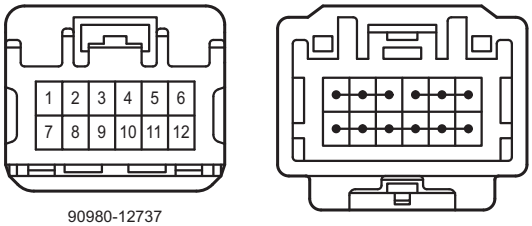


90980-12737


1D



1R



1S
Black




82660-30C00

1V
Black




90980-12A54

1W
White

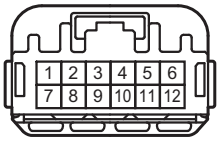

90980-12A91

2K
White (Before Aug. 2017 Production) / Gray (From Aug. 2017 Production)

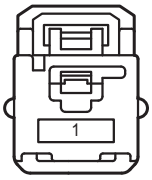


90980-12756

2L
White




90980-10995

2M
White

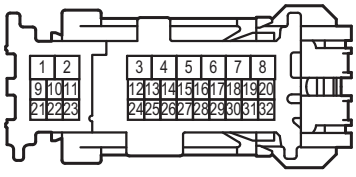


90980-12A47

2N
White

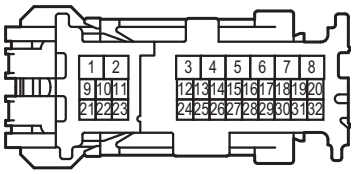

90980-12A48

2O
White

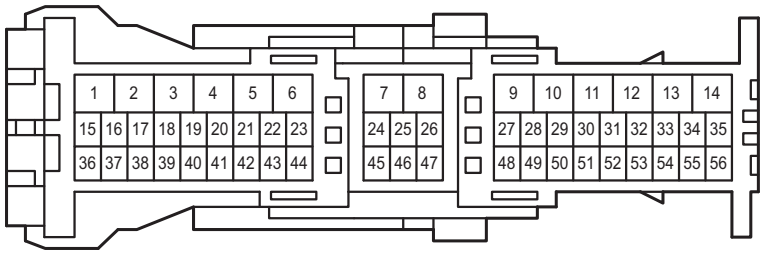

90980-12943


6A




6B



GA1
White

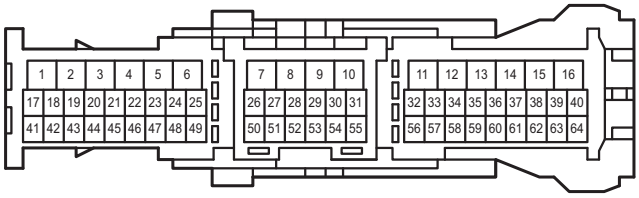


90980-12774

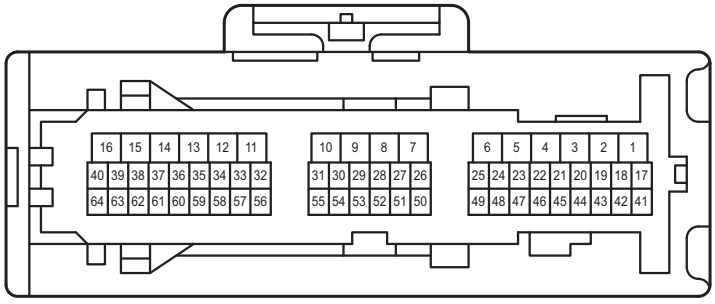


90980-12798

GA3
Black

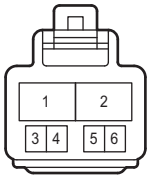


90980-10910

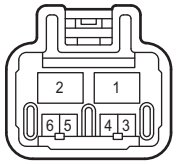


90980-10909


GA6
White

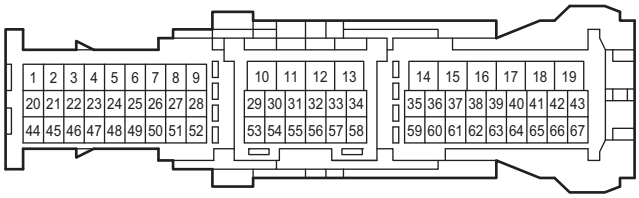

90980-12783

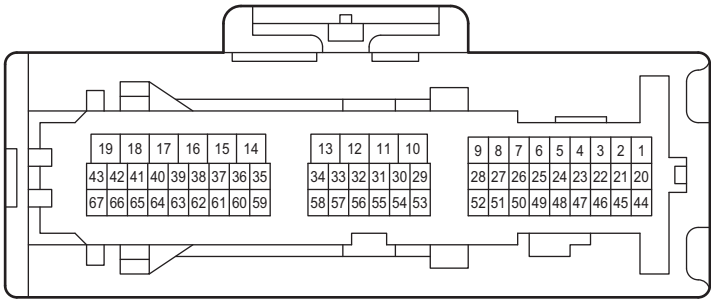

90980-12800

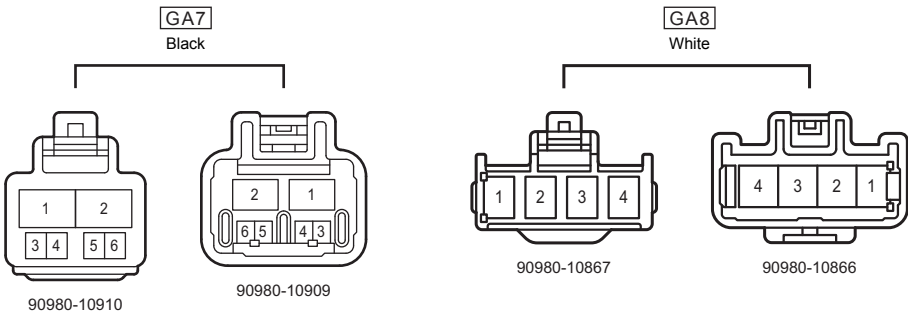
GA7
Black
1
2
3
4
5
6
90980-10910
2
1
6
5
4
3
90980-10909
GA8
White
1
2
3
4
90980-10867
4
3
2
1
90980-10866