





(BAT)
10A
ECU-B
2
1
L
7
A118
Junction
Connector
9
L
37
GA1
L
7
G273
Junction
Connector
1
L
20
G247
Junction
Connector
19
L
36
GQ1
L
3
Qa1
P
12
B
SYSB
(BAT)
30A
P/SEAT F/R
1
2P
B
1
Qa1
W
7
A
+B
a4(A),a5(B)
Front Position Control ECU and Switch Assembly RH
(Front Power Seat Switch RH)
SGND
RCL-
SSRR
RCL+
SSRL
LFT+
LFT-
SSRS
SLD+
SLD-
1 B
11 A
11 B
9 A
4 B
10 A
12 A
5 B
3 A
4 A
LG
V
P
P
V
G
G
L
GR
8 ea4
9 ea4
2 ea4
LG
V
P
4
2
1
2 C
1 C
4 C
2 A
1 A
4 A
BR
Reclining Motor
e1
Separate Type Front Seat Back Assembly RH
a1(A),a2(B),a3(C)
Separate Type Front Seat Cushion Spring Assembly RH
Lifter Motor
Slide Motor
3
BR
3 ea4
BR
3 C
BR
3 A
BR
11
12
a20
Junction Connector
9
8
7
a19
Junction Connector
BR


W-B
SB
1 A GND2
6 A +B2
a4(A),a5(B)
Front Position Control ECU and Switch Assembly RH
(Front Power Seat Switch RH)
SSFV
FRV-
FRV+
GND
CANP
CANN
3 B
5 A
8 A
2 A
8 B
7 B
R
R
B
2 B
1 B
4 B
Front Vertical Motor
3 B
BR
BR
a1(A),a2(B),a3(C)
Separate Type Front Seat Cushion Spring Assembly RH
W-B
8
a20
Junction Connector
9
W-B
5 Qa1
W-B
Q1
L
16 Qa1
L
26 GQ1
L
W
17 Qa1
W
27 GQ1
W
5 A 2 A
Front
Rear
Lumbar
a6(A)
Front Power Seat Switch Assembly RH
3 A
1 A
L
V
11 ea4
5 ea4
L
V
2
Lumbar
M
1
e2
Separate Type Front Seat Back Assembly RH
L
W


(IG)
(ACC)
10A
ECU-IG
NO.2
7.5A
ACC
G216(D),G217(E),G218(F)
Main Body ECU
ACC
IG
BECU
CANP
CANN
GND1
FRCY
30
32
31
9 D
10 D
11
27 F
1 2N
23 2M
22 2M
(BAT)
10A
ECU-B
2
1
L
(*5)
P
(*4 *6, *4 *9)
P
(*4 *7 *8)
3 AB2
P
(*4 *7 *8)
4
15
2
13
G288
Junction Connector
W-B
G266
Junction Connector
12
13
B
B
37 GQ1
B
8 A
7 A
Q23(A)
Junction Connector
B
1
Q8
Front Door Courtesy
Light Switch Assembly RH
A118
Junction Connector
7
8
10
L
L
(*4 *7 *8)
L
(*4 *6, *4 *9)
L
(*5)
4 AB2
L
(*4 *7 *8)
A104(A),B16(B),A131(C)
Door Control Battery
12 C (*9)
12 B (*7 *8)
3 A (*6)
EDOR
BECU
4 A (*6)
11 B (*7 *8)
11 C (*9)
L
W
W-B
4
G104
Junction Connector
G3



*1 :1GR-FE
*2 :1KD-FTV
*3 :1GD-FTV
*4 :w/ Door Control Battery
*5 :w/o Door Control Battery
*6 :Before Apr. 2021 Production
*7 :From Apr. 2021 Production
*8 :Before Jun. 2021 Production
*9 :From Jun. 2021 Production
G216(D),G217(E),G218(F)
Main Body ECU
M1
M2
MM
CANH
CANL
13 E
14 E
16 E
14 F
13 F
SB
V
LG
L
W
15 JG2
16 JG2
17 JG2
9
19
G286
Junction Connector
1
11
3 B
4 B
2 B
MMRY
SET
E
J10(B)
Seat Memory Switch
GR
1 B
W-B
1
11
G290
Junction Connector
3
13
10
20
P
LG
7 JG3
7 E
8 E
17 m
28 m (*3)
35 R
36 R (*2)
31 F
25 F (*1)
G215(E)
Certification ECU Assembly
G56(F),G184(m),G58(R)
ECM
6
G104
Junction Connector
G3

A104
Gray

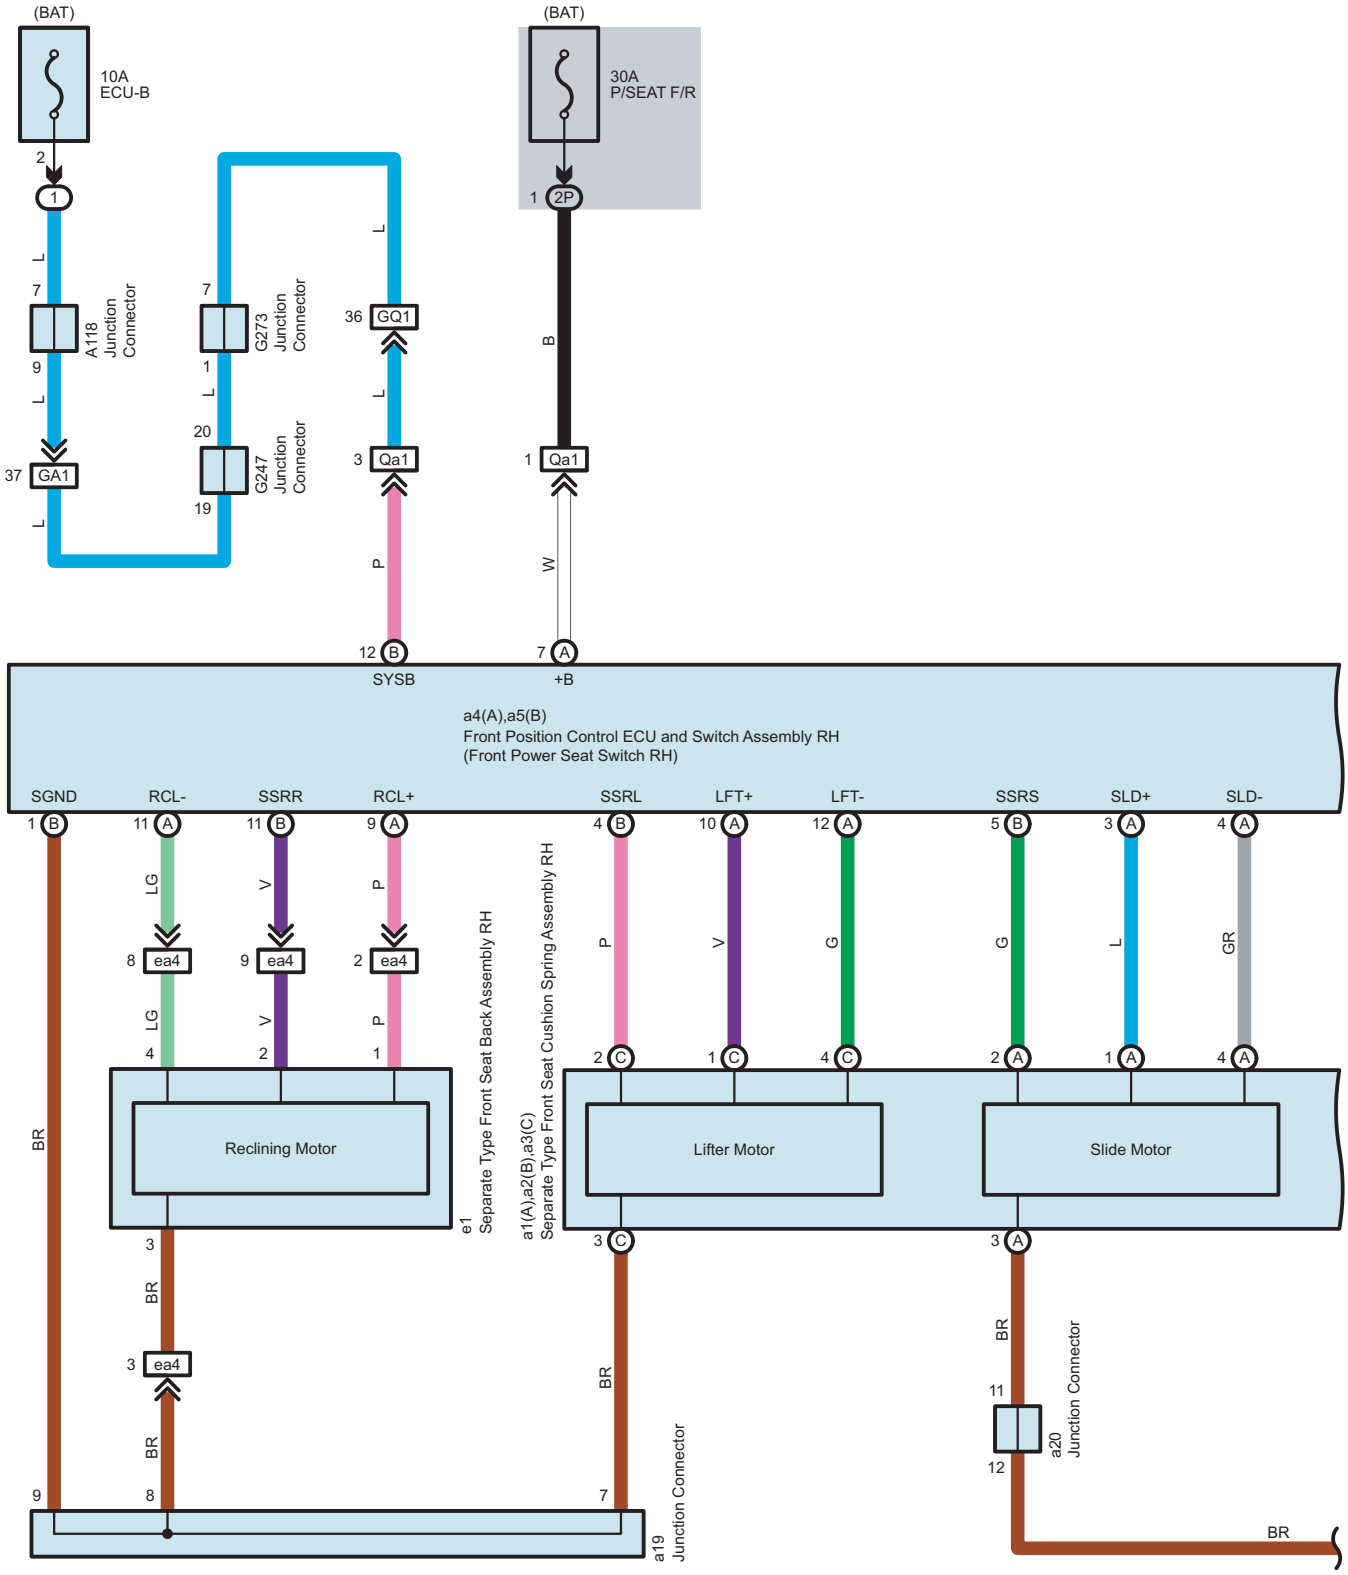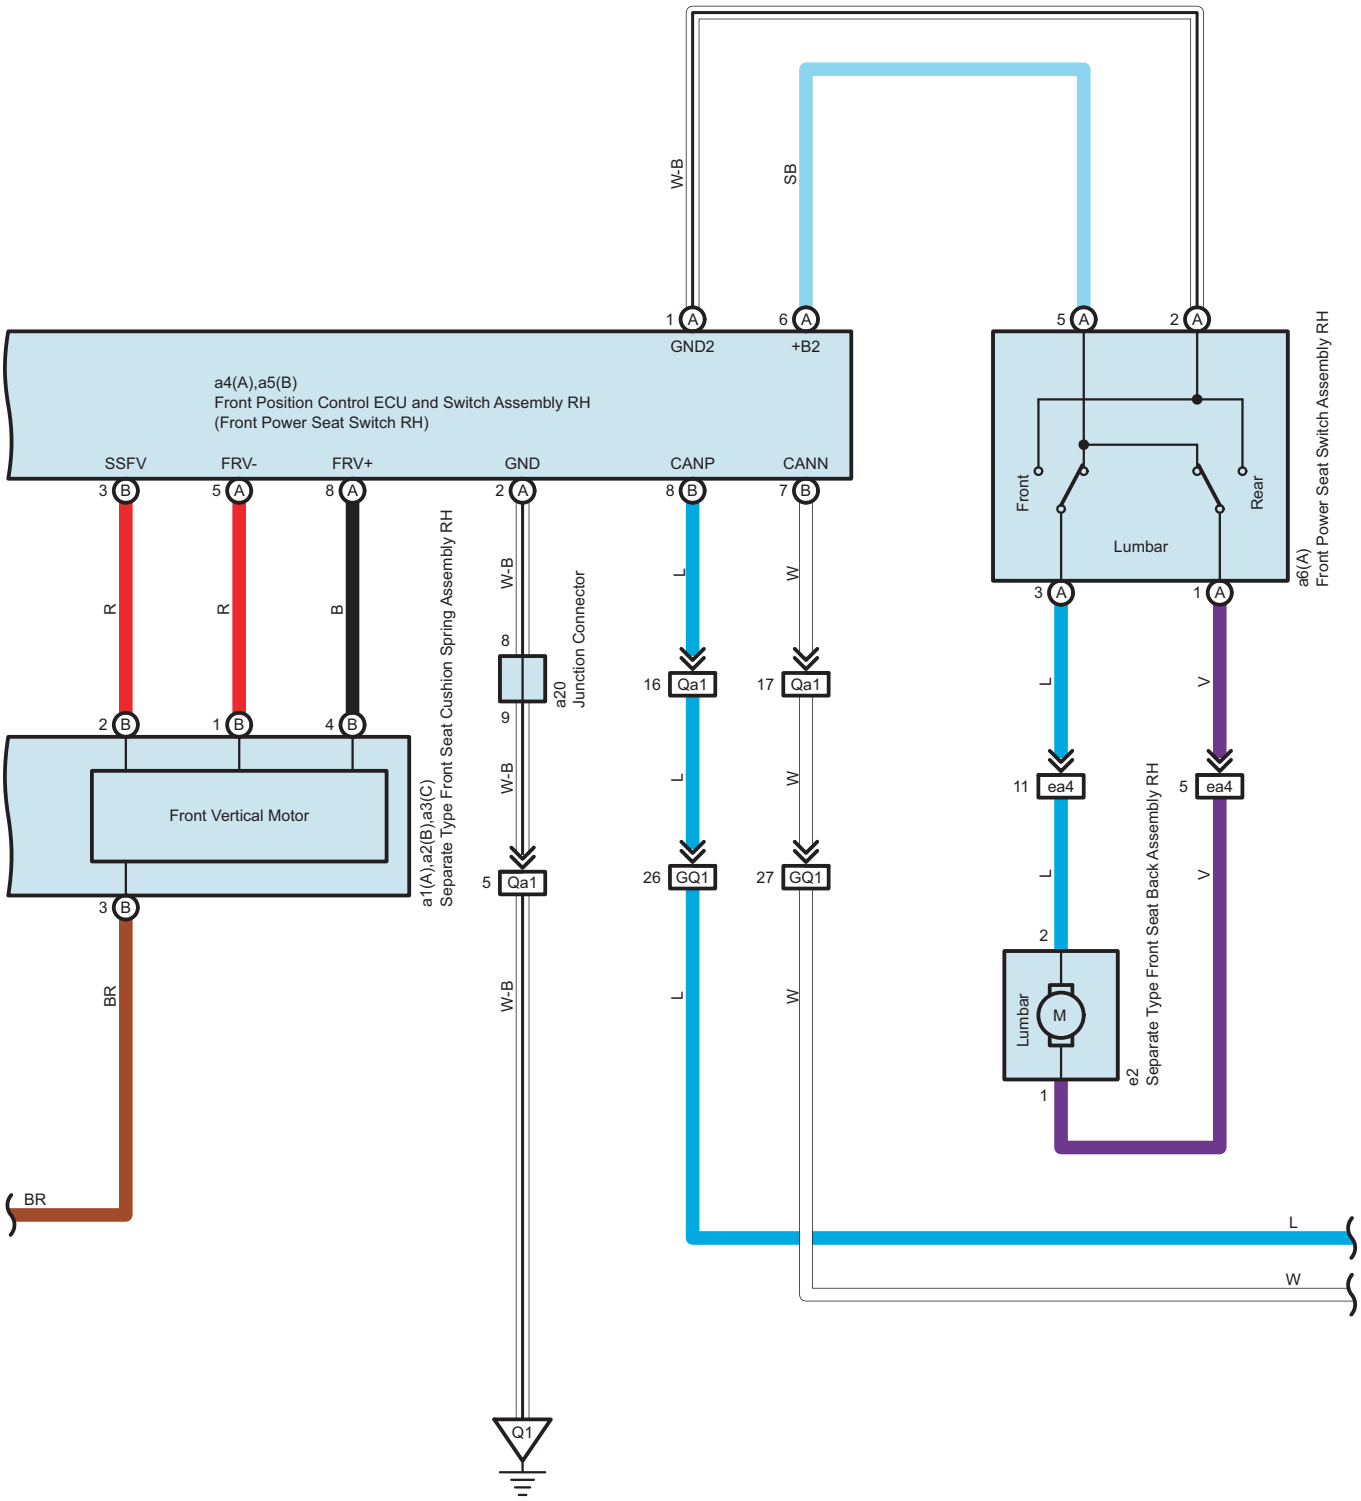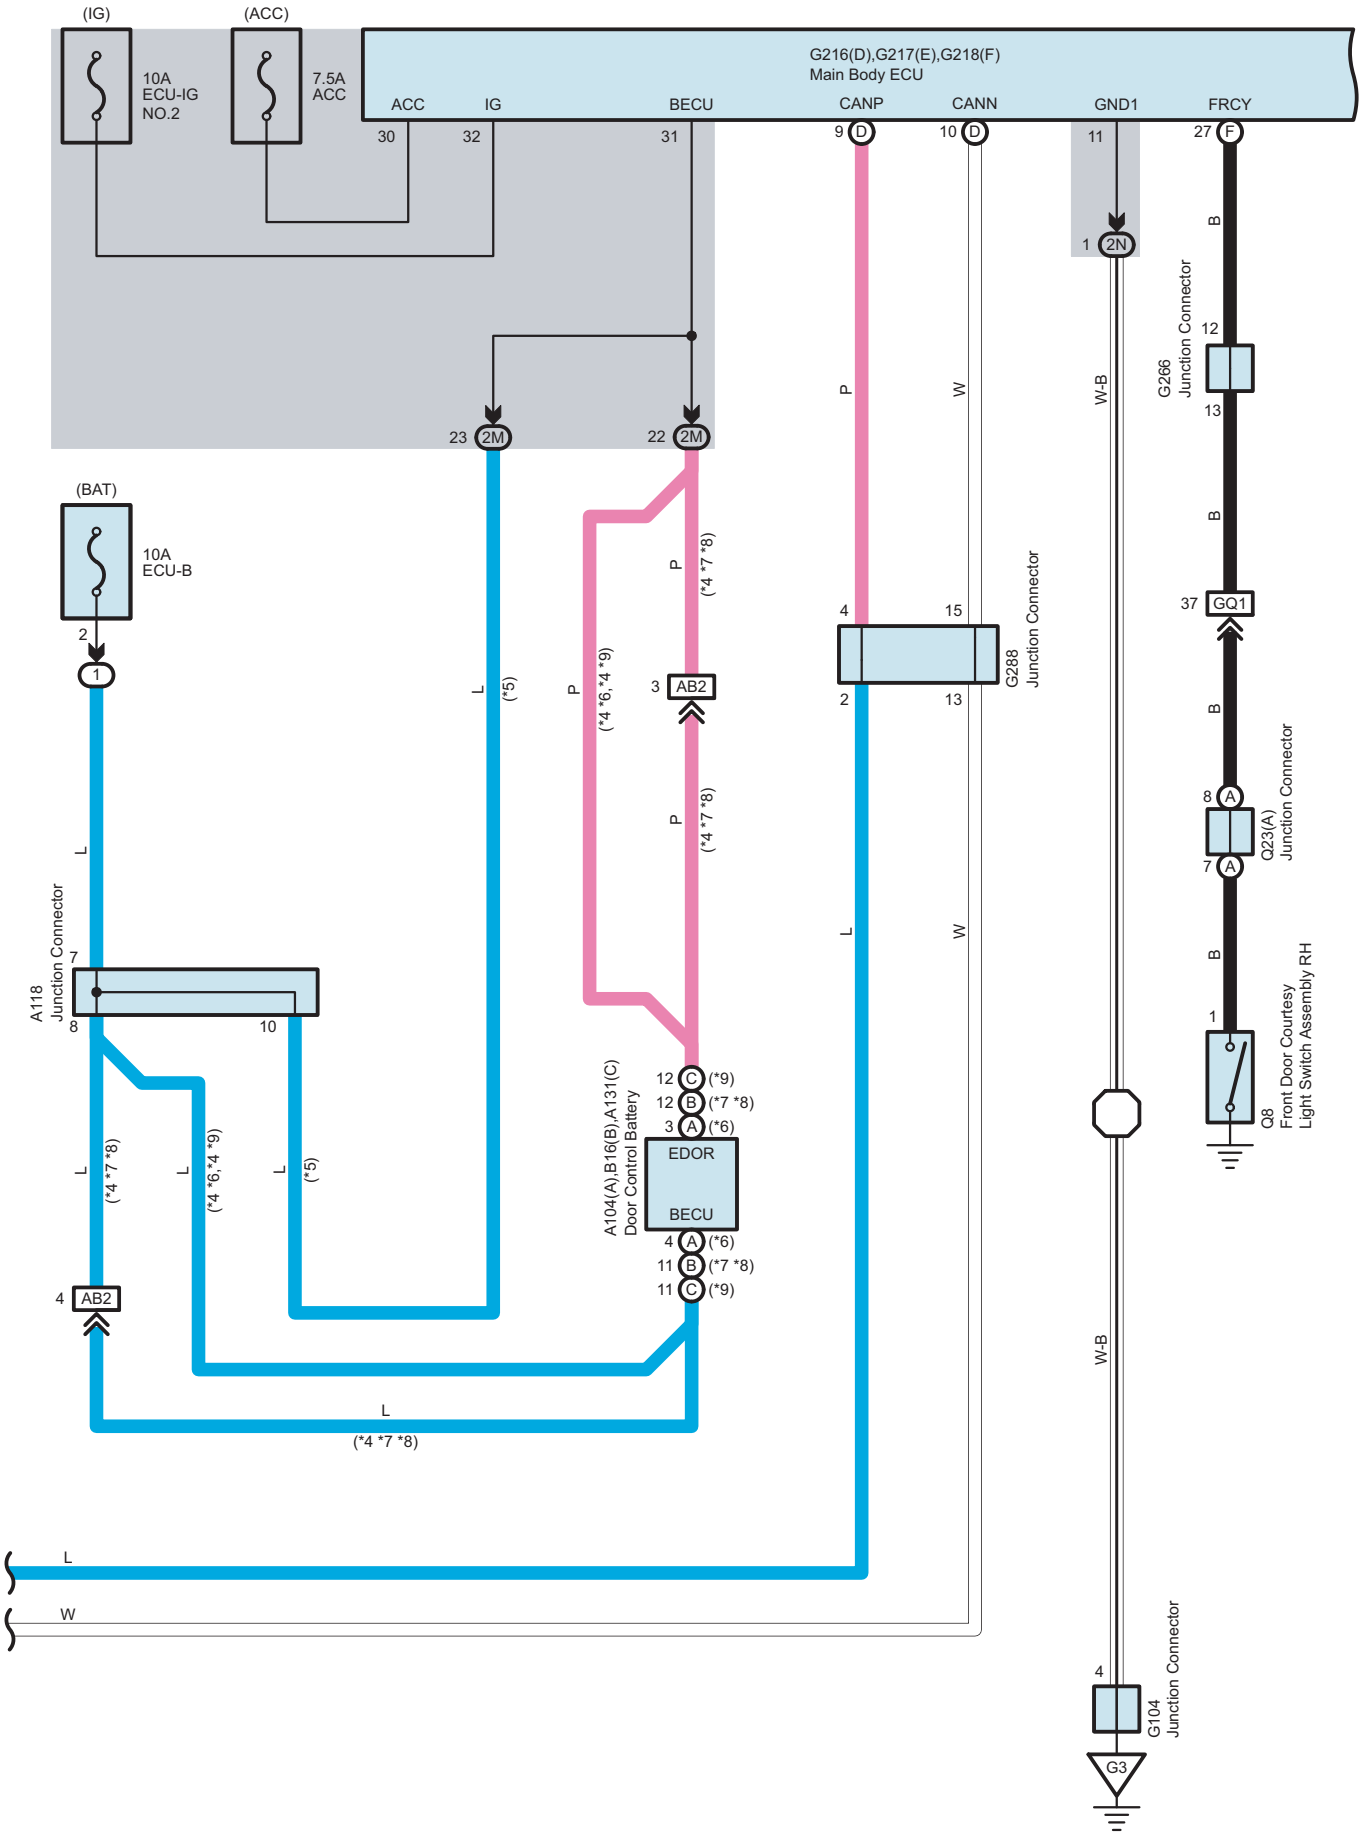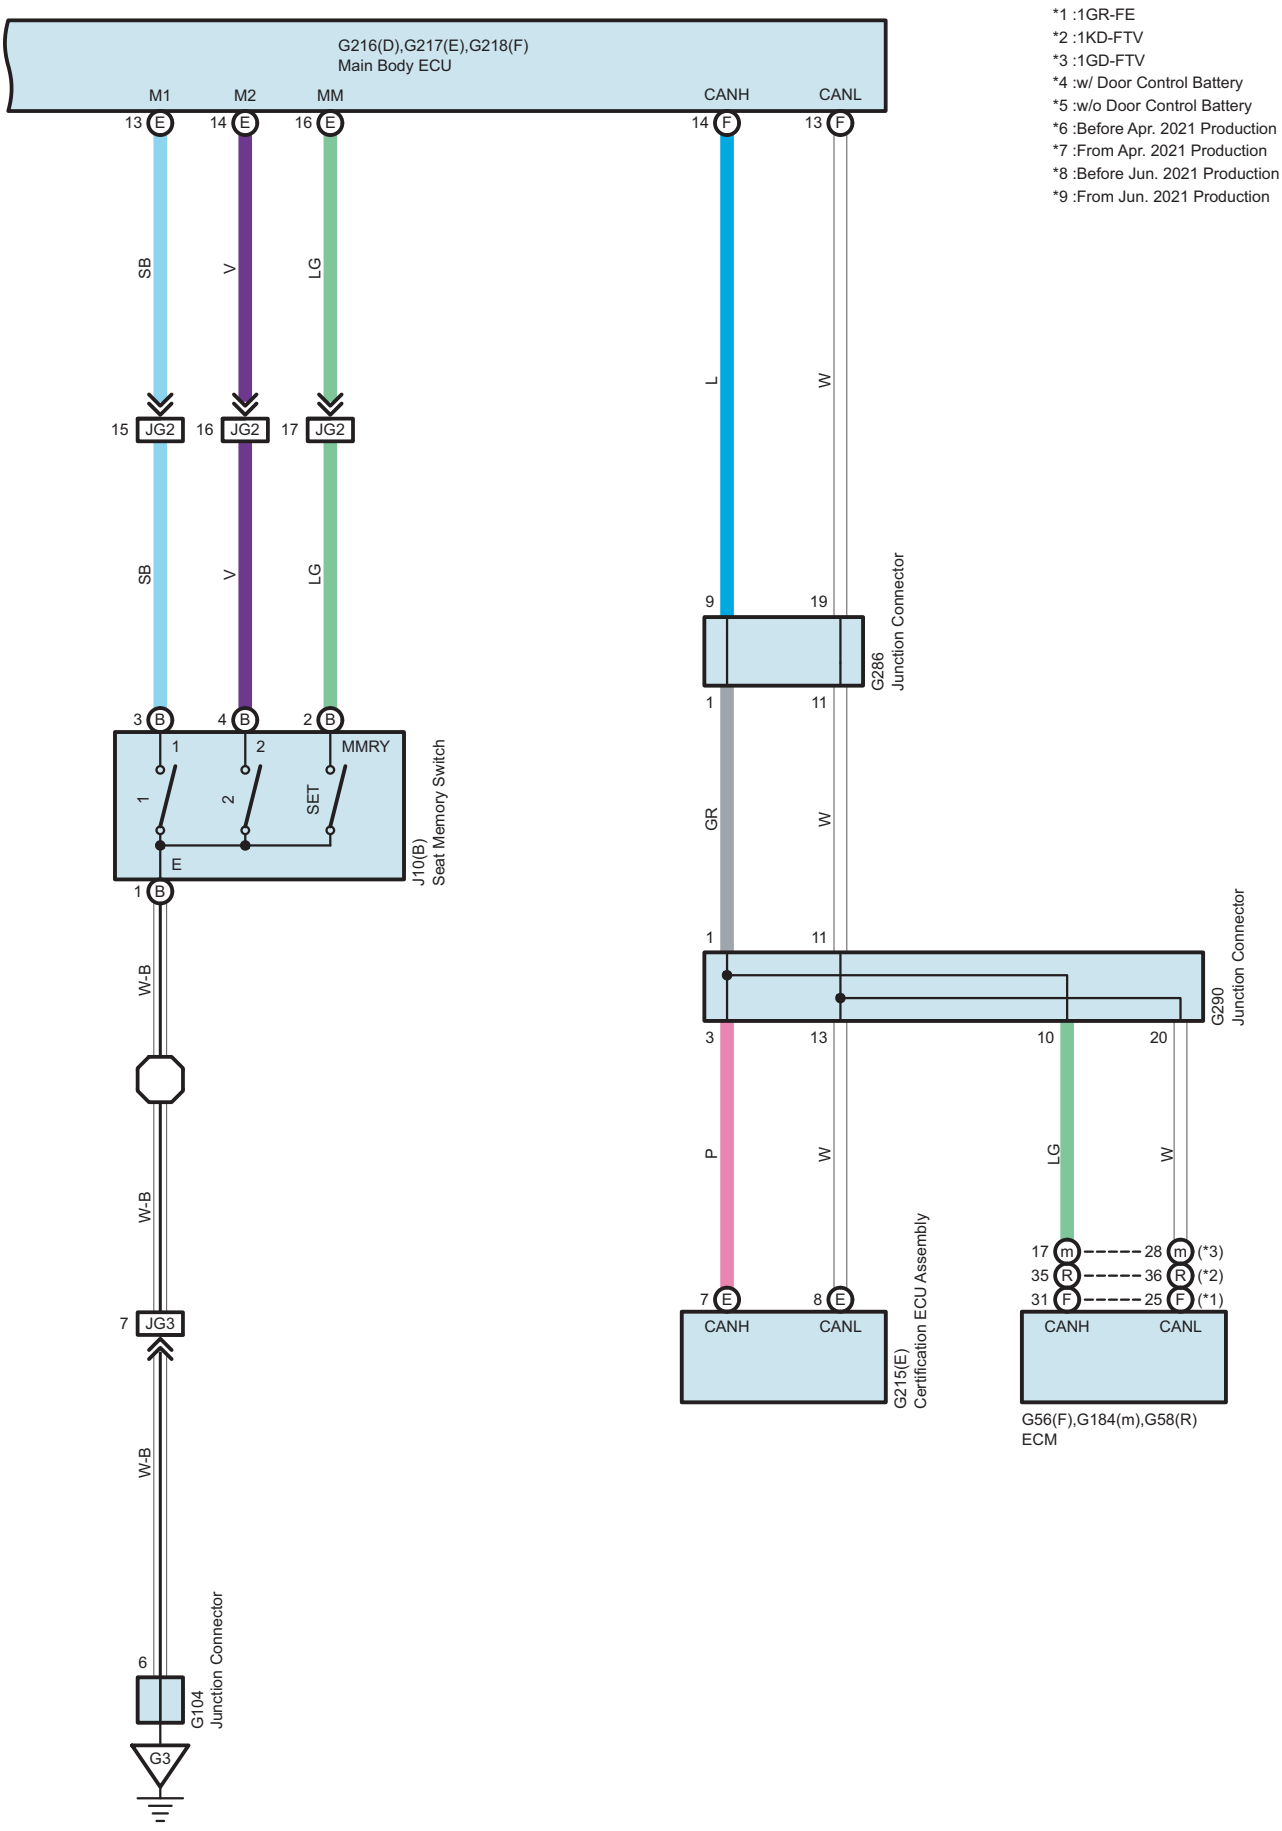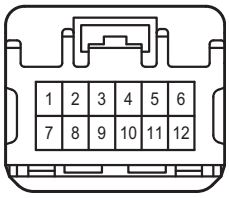


90980-12737

A118
Gray

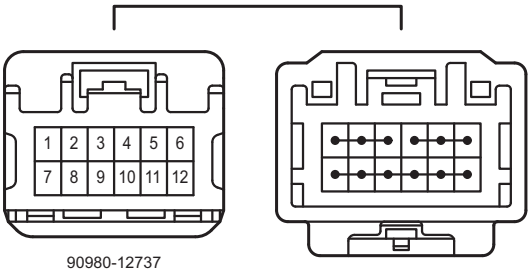


90980-12737

A131
White

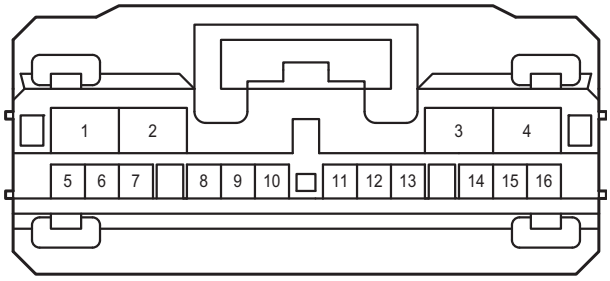


90980-12763

B16
White

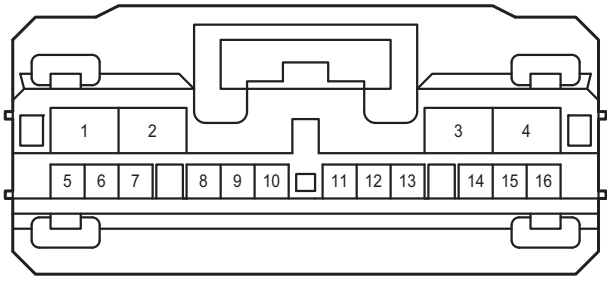


90980-12763

G56
White

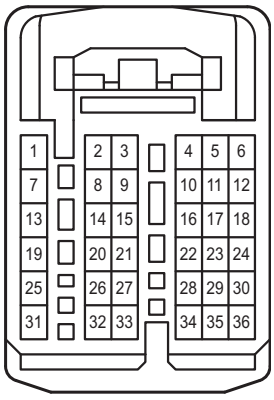


82824-26120

G58
White

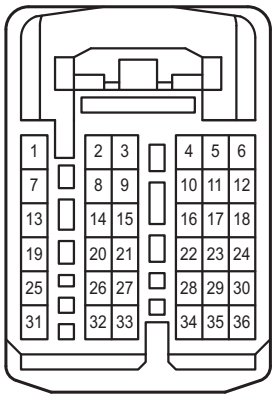


82824-26120

G104
White (Before Aug. 2017 Production) / Gray (From Aug. 2017 Production)

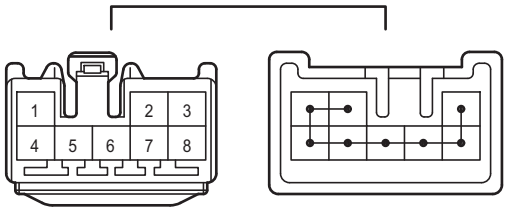


90980-11686

G184
White

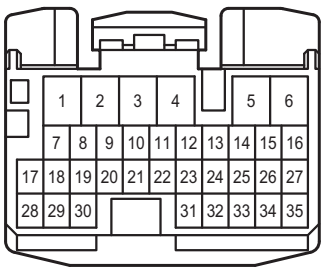


90980-12529

G215
Black

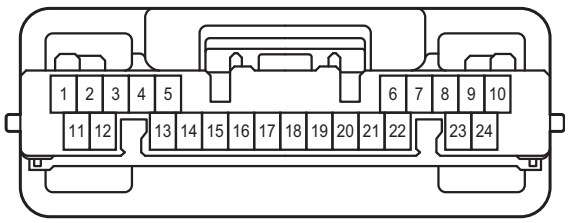


90980-12A42

G216
White

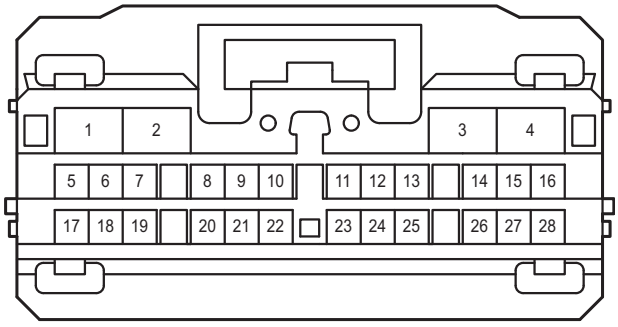


90980-12908

G217
White

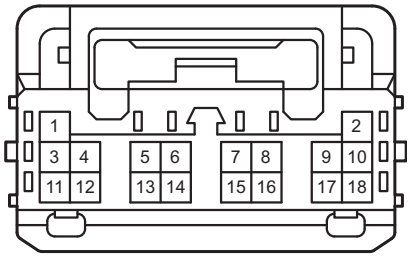


82824-33350

G218
White

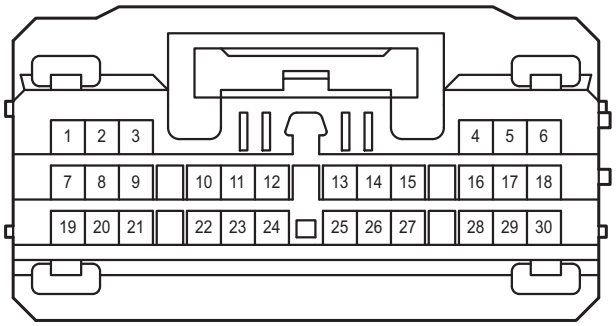


90980-12909

G247
Gray

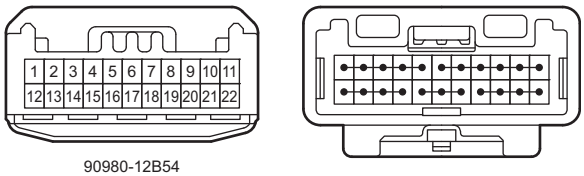


90980-12B54

G266
Blue

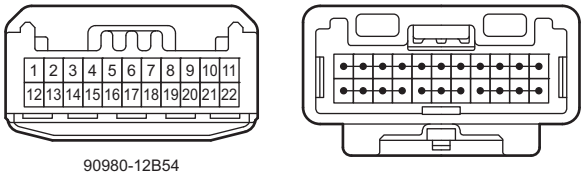


90980-12B54

G273
Blue

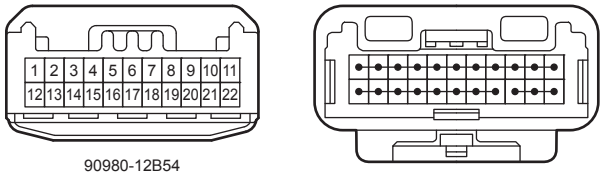


90980-12B54

G286
White

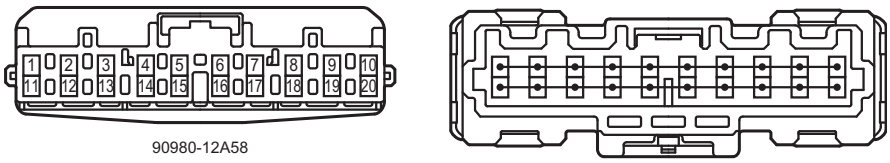


90980-12A58

G288
White

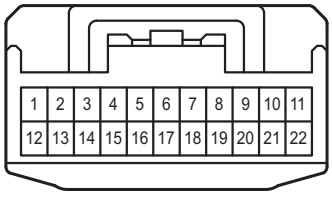

90980-12372

G290
White

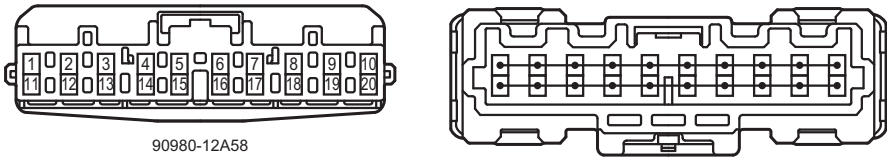

90980-12A58

J10
White (Before Aug. 2017 Production) / Blue (From Aug. 2017 Production)




90980-11950

Q8
Black




90980-10871

Q23
White

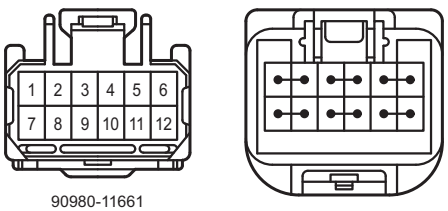


90980-11661

a1
Blue (Before Aug. 2017 Production) / White (From Aug. 2017 Production)

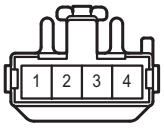


90980-12335

a2
White (Before Aug. 2017 Production) / Blue (From Aug. 2017 Production)

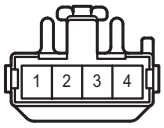


90980-12335

a3
Blue

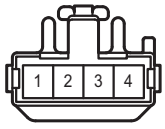

90980-12335

a4
Black

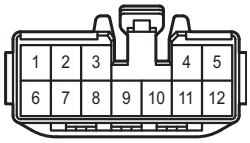


90980-11782

a5
White




90980-12552

a6
White




90980-10933

a19
Black

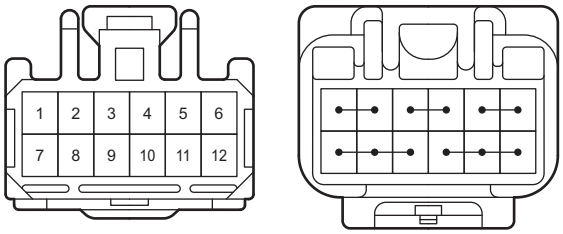


90980-11661

a20
White

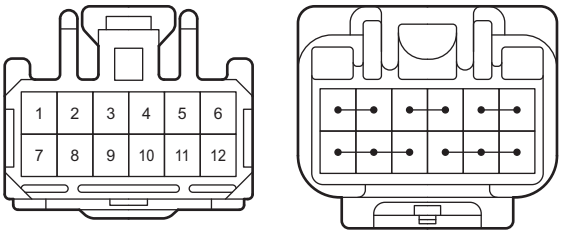


90980-11661

e1
White

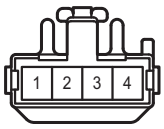


90980-12335

e2
Blue




90980-12341

2M
White

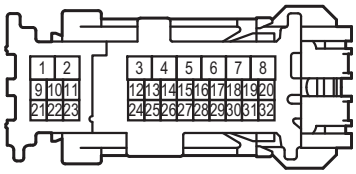


90980-12A47

2N
White

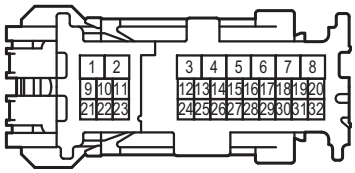


90980-12A48

2P
White

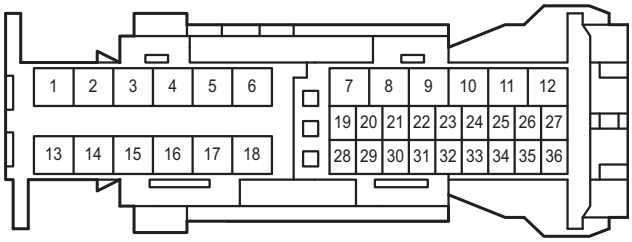

90980-12944


AB2
Gray

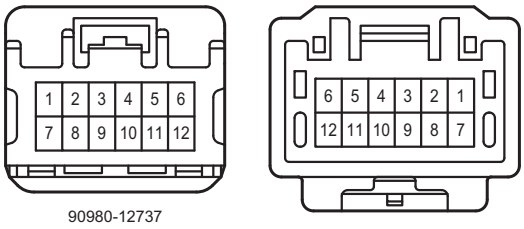

90980-12737

90980-12736


GA1
White

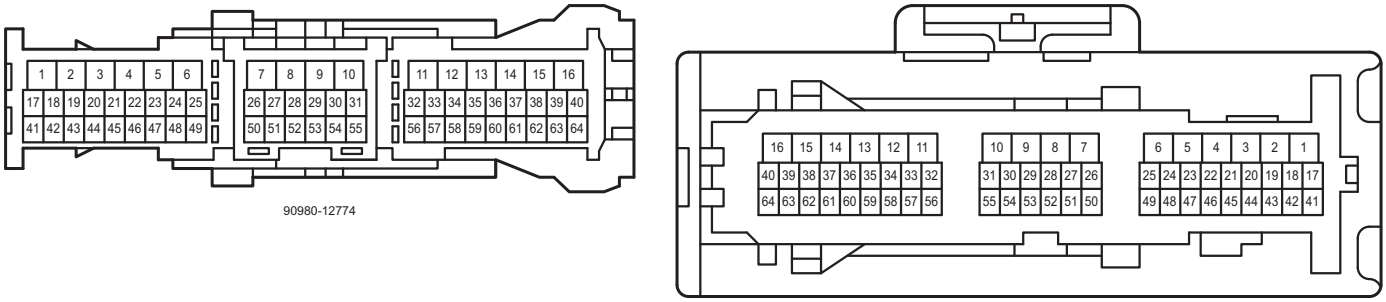

90980-12774

90980-12798


GQ1
White

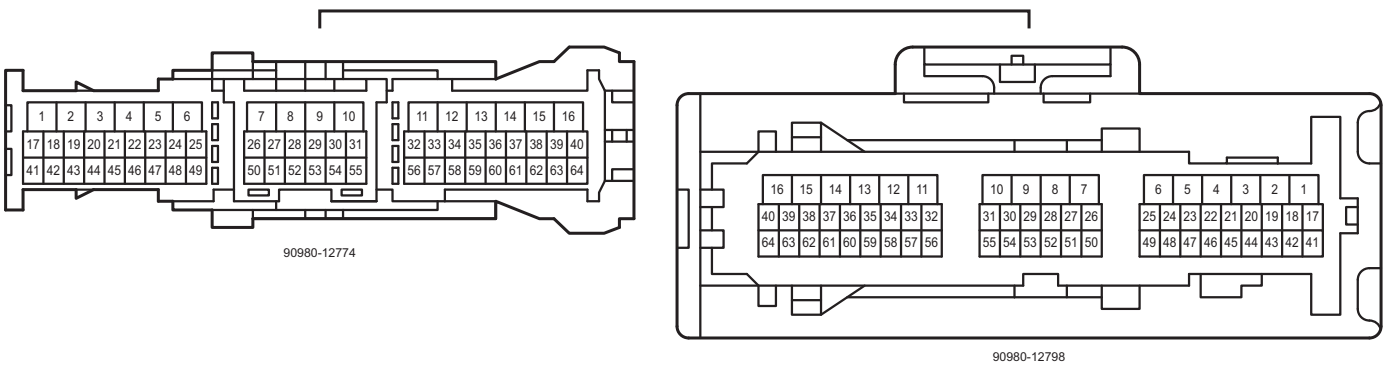

90980-12774

90980-12798


JG2
White

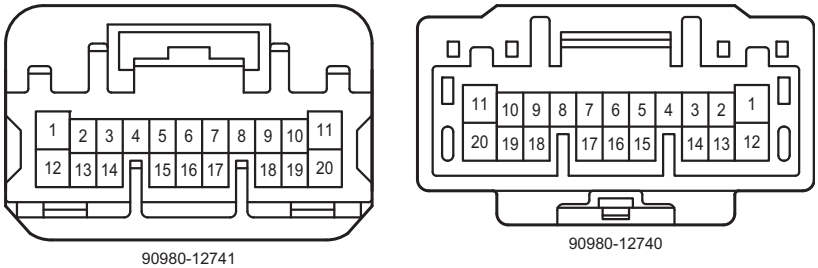


90980-12741

90980-12740

JG3
Black

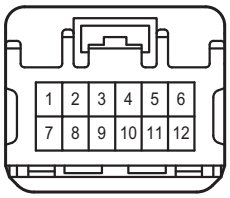


90980-12737

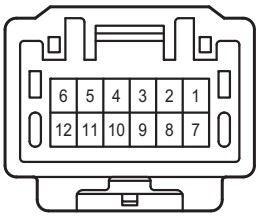


90980-12736

Qa1
White

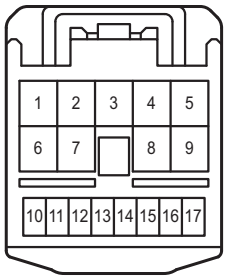


90980-12374

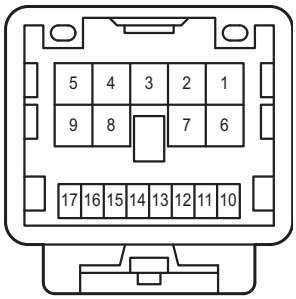


90980-12373

ea4
White

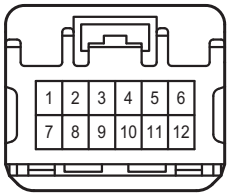

90980-12737

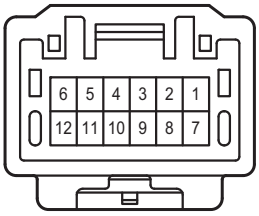

90980-12736