





(BAT)
10A
STOP
(IG)
10A
ECU-IG
NO.1
(BAT)
50A
ABS NO.1
(BAT)
30A
ABS NO.2
A59
Diode (Stop Light)
A116
Junction Connector
A115
Junction Connector
A99(C)
Stop Light Switch Assembly
IC1
FET1
GND
L
ACC
OUT
A6(C)
Brake Actuator Assembly
STP
STPO
STP2
GND1
GND2
IG1
BM
+BS
G244
Junction Connector
G263
Junction Connector
G104
Junction Connector
A68
Junction Connector
GA1
G3
A2


*1 :5-Door
*2 :3-Door

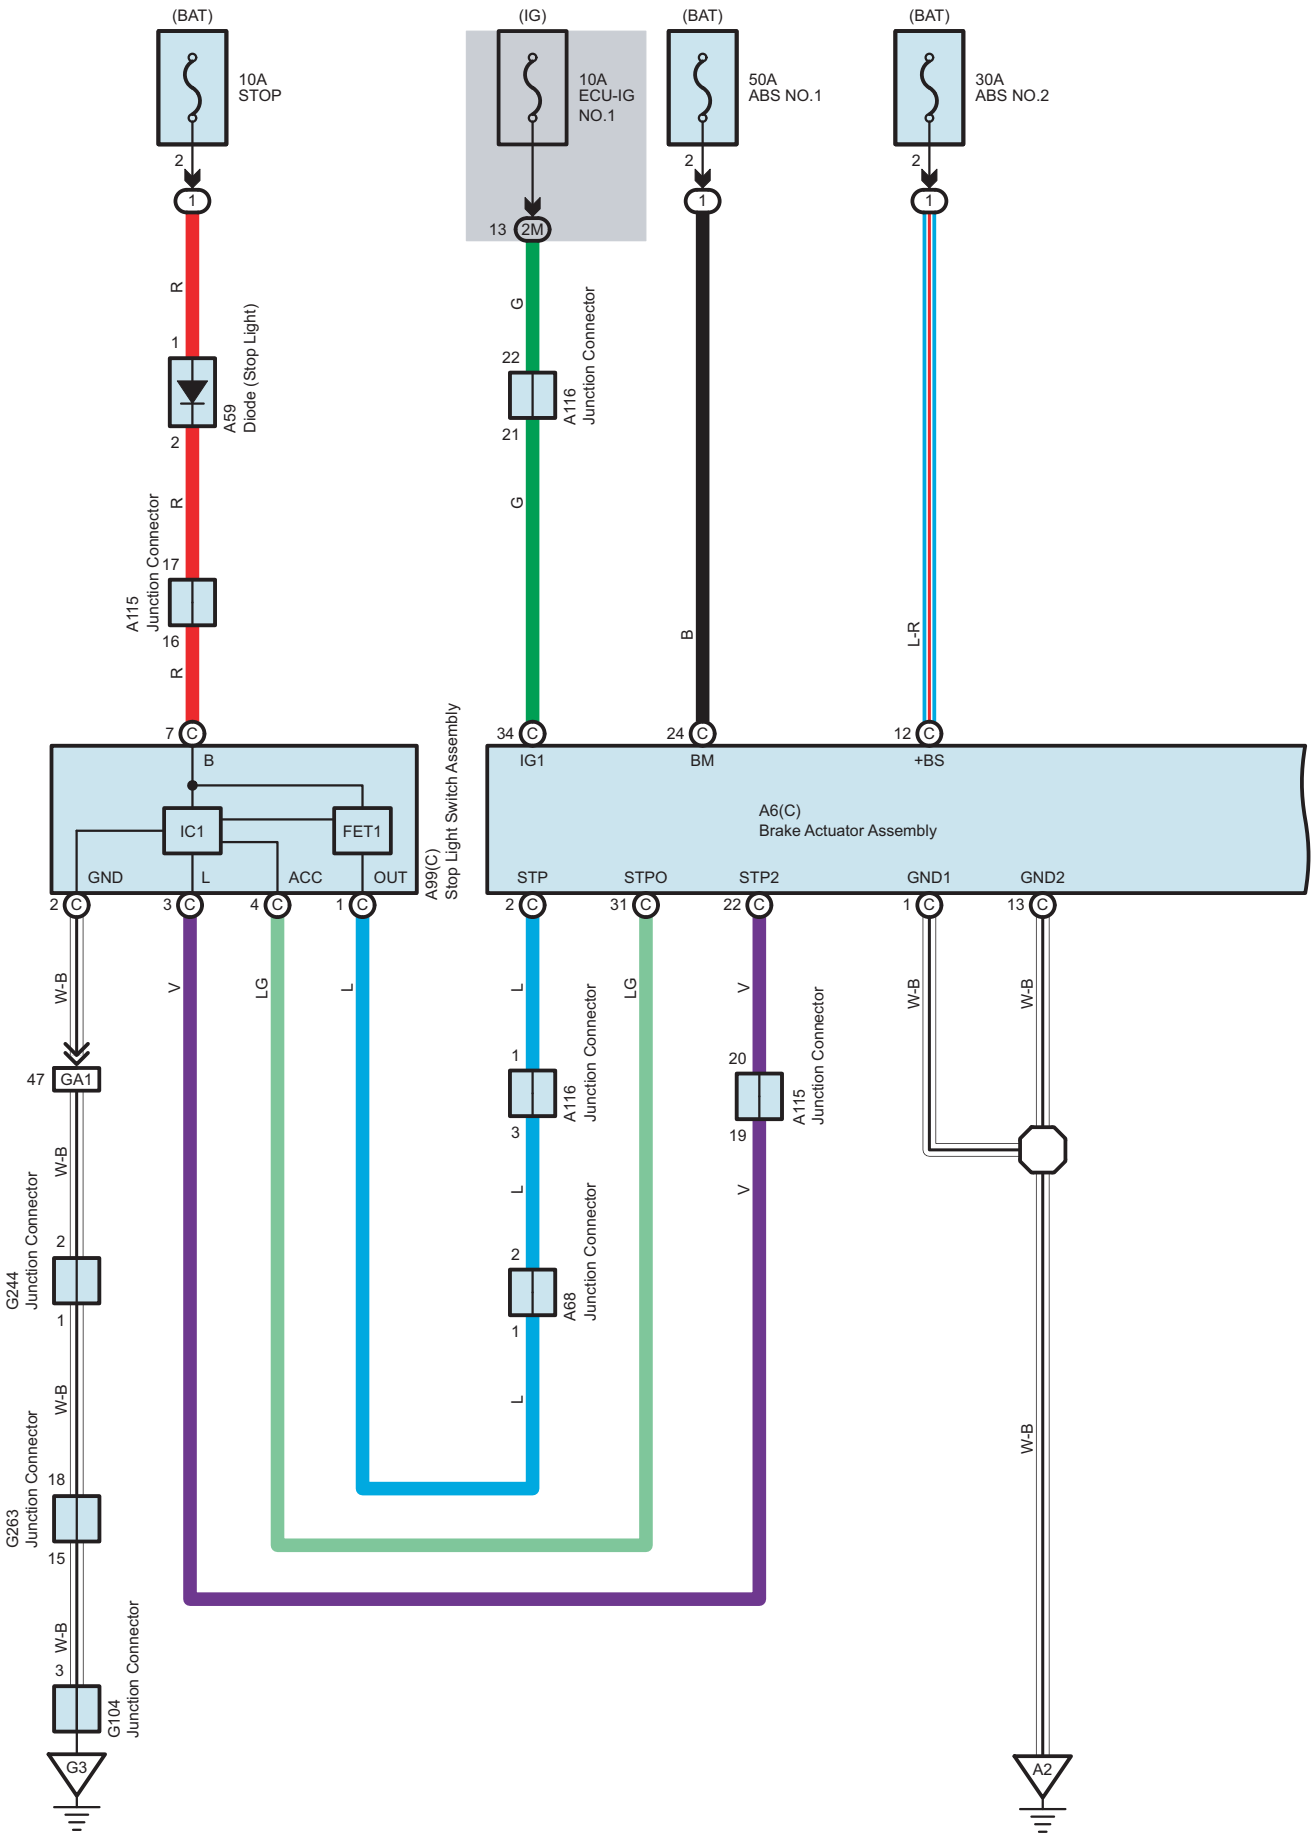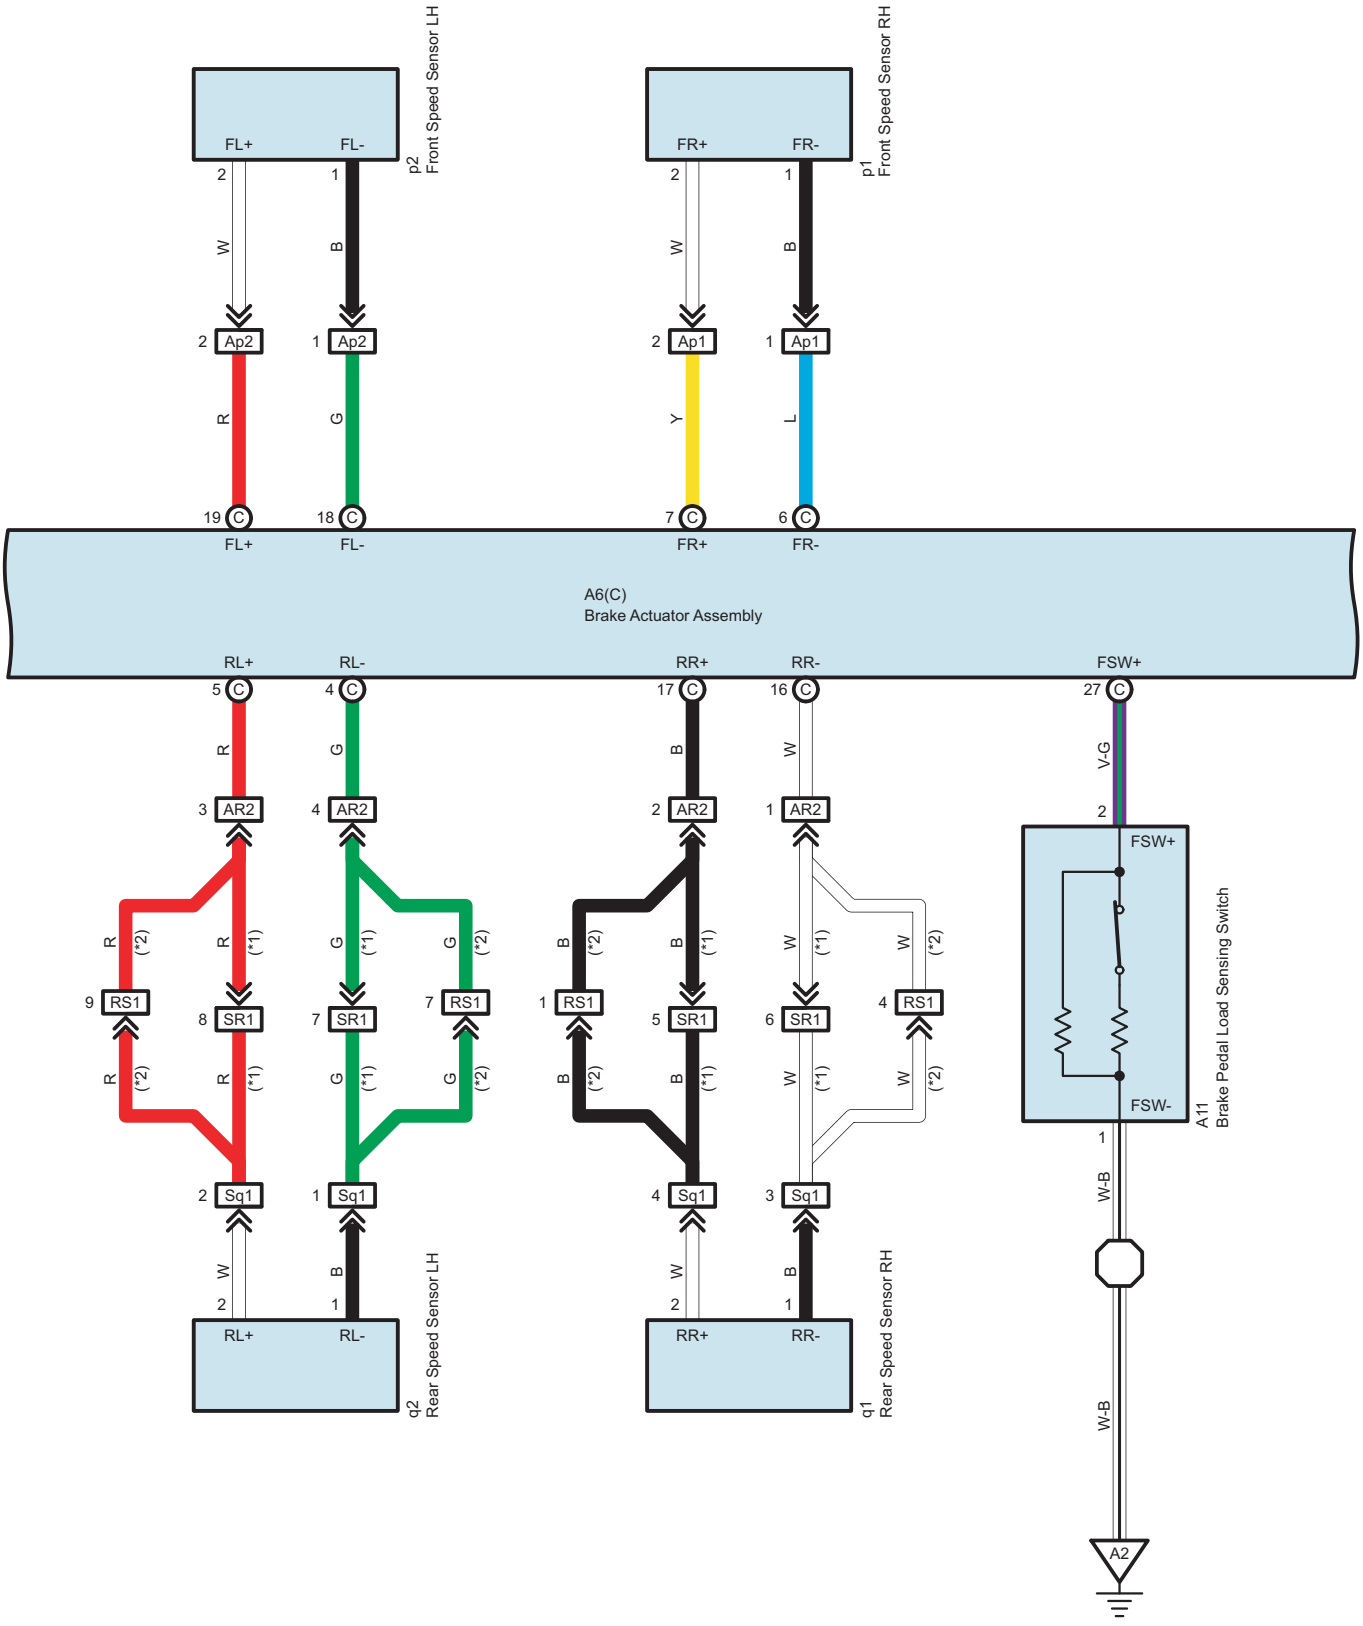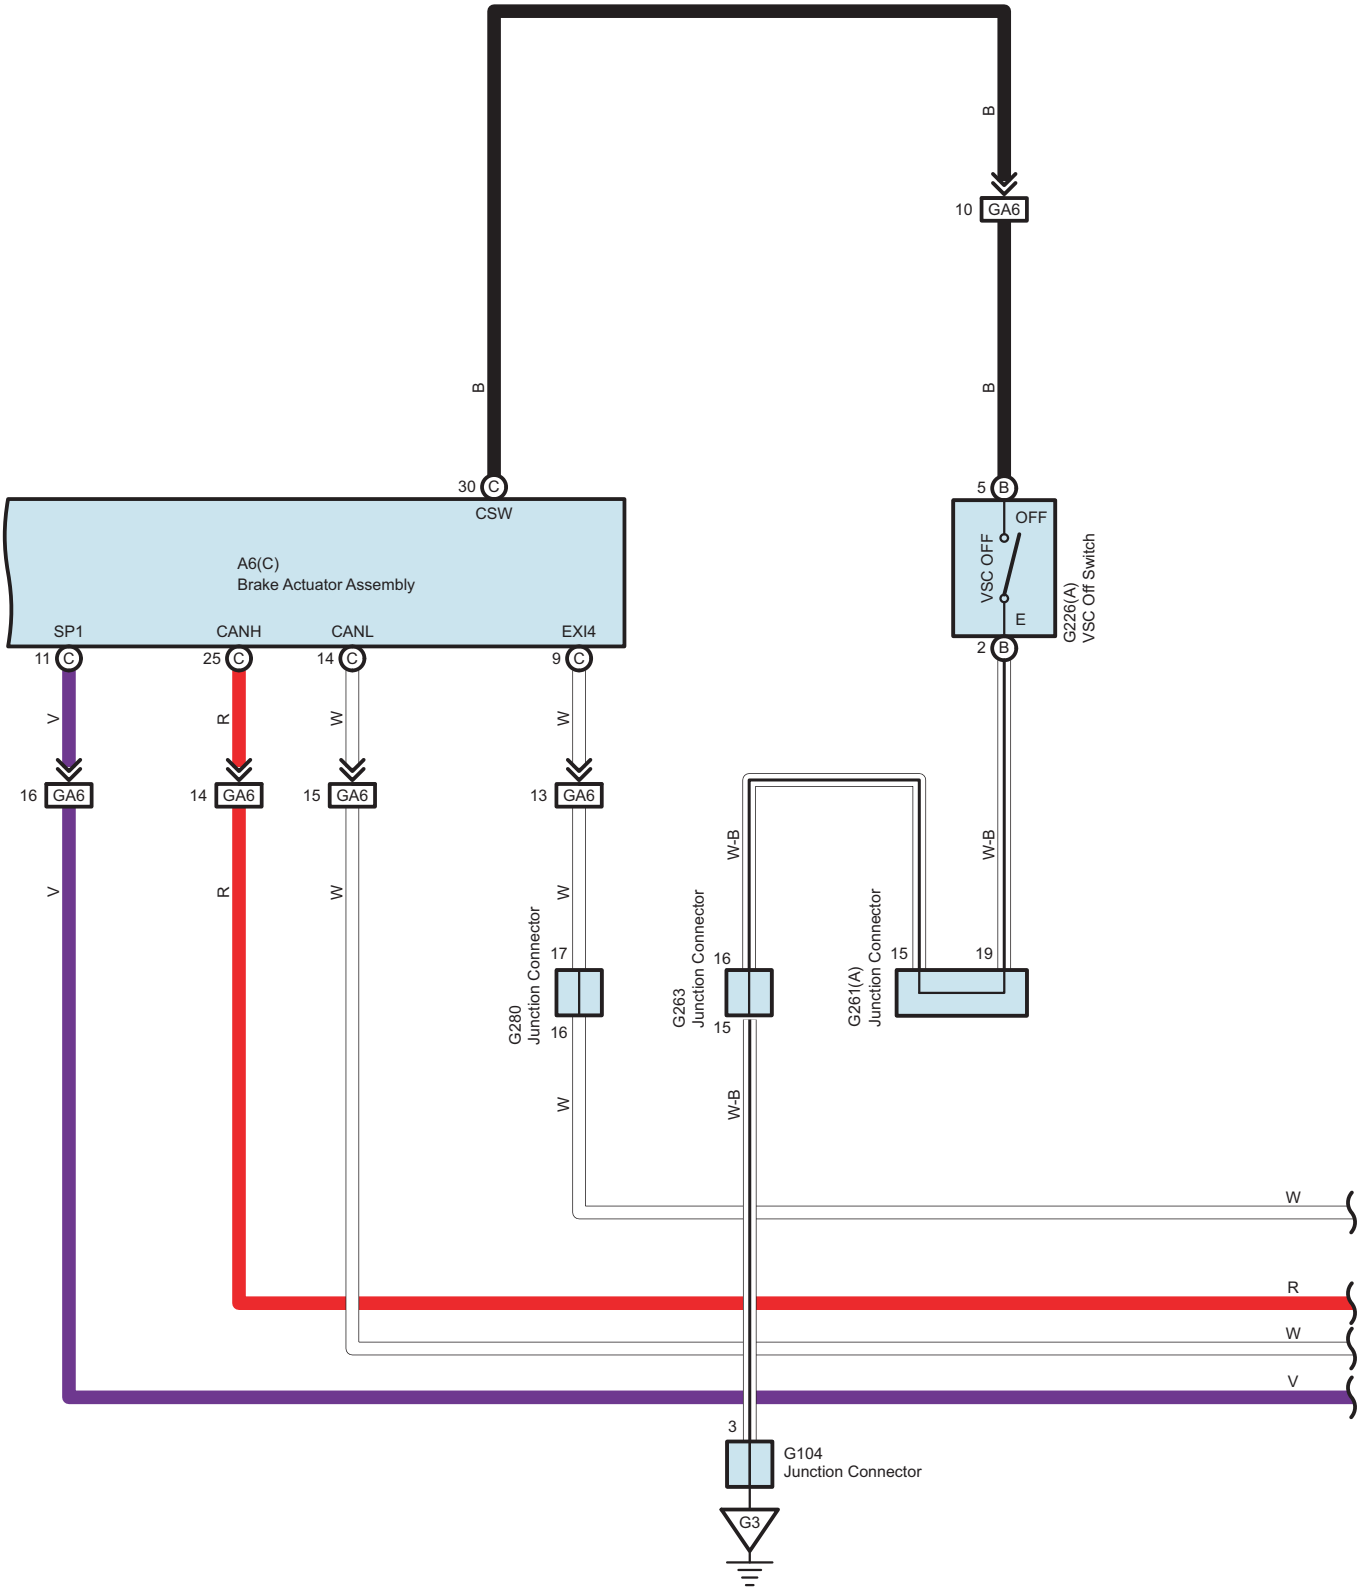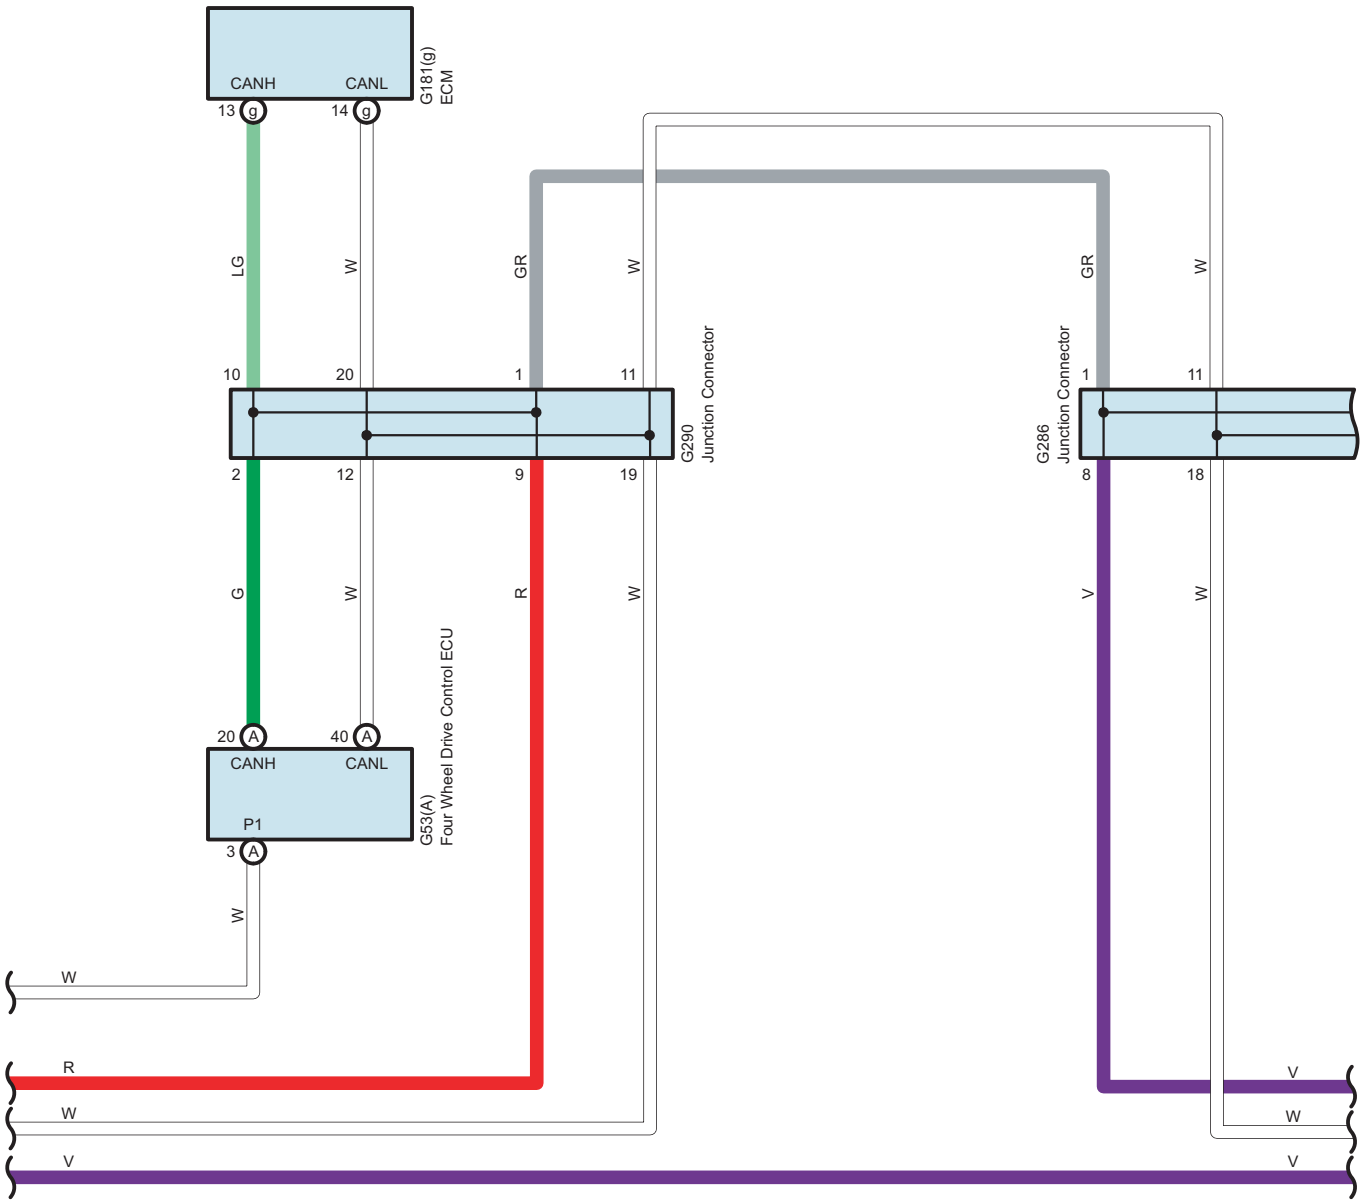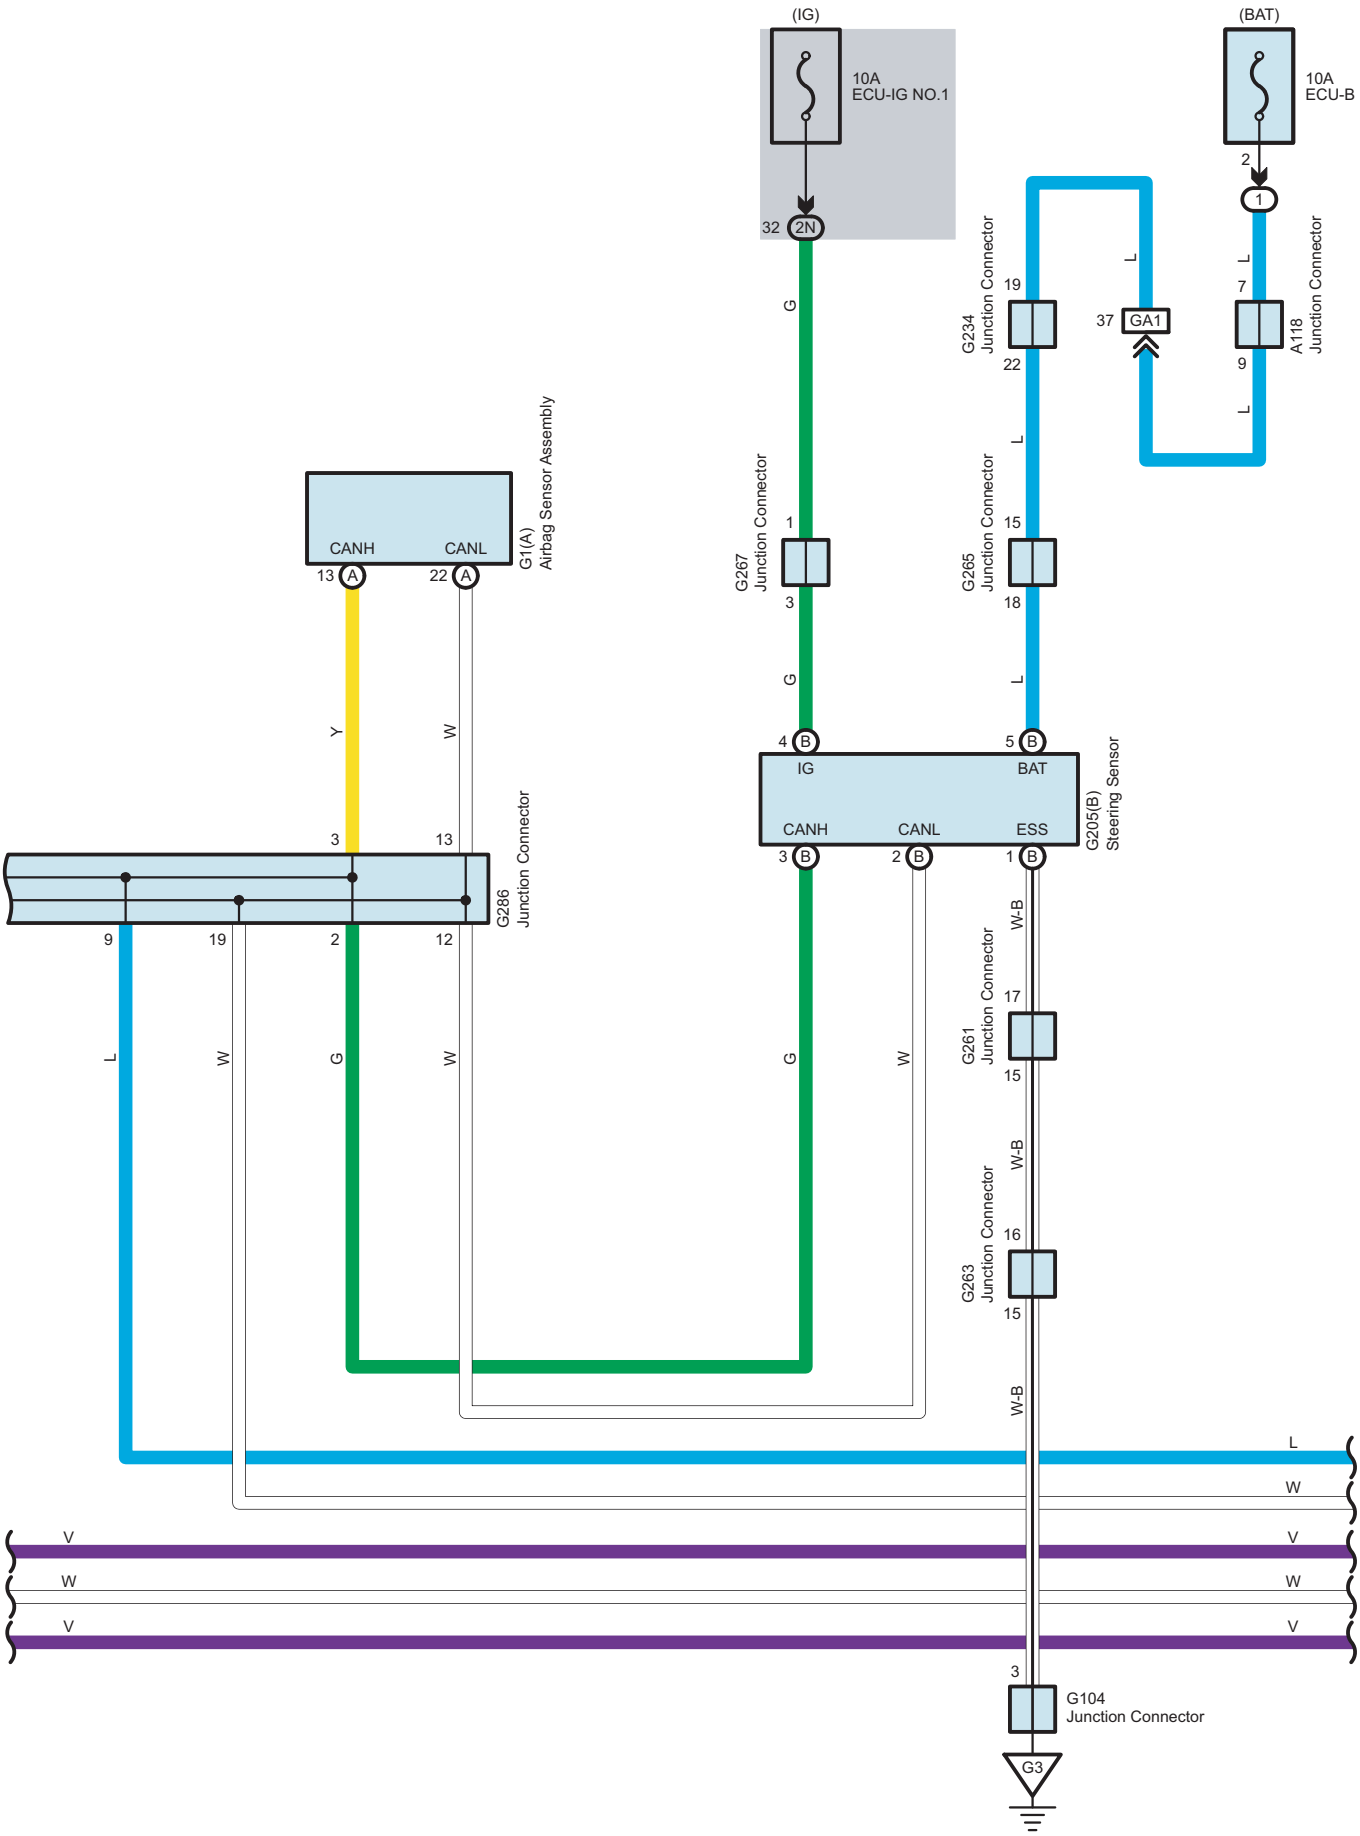



B
10 GA6
B
B
30 C
CSW
5 B
OFF
VSC OFF
E
G226(A)
VSC Off Switch
2 B
A6(C)
Brake Actuator Assembly
SP1
CANH
CANL
EXI4
11 C
25 C
14 C
9 C
V
R
W
W
16 GA6
14 GA6
15 GA6
13 GA6
V
R
W
W
W-B
W-B
G280
Junction Connector
17
16
W
G263
Junction Connector
16
15
W-B
G261(A)
Junction Connector
15
19
W
R
W
V
3
G104
Junction Connector
G3



CANH
CANL
G181(g)
ECM
13 g
14 g
LG
W
GR
W
GR
W
10
20
1
11
1
11
G290
Junction Connector
G286
Junction Connector
2
12
9
19
8
18
G
W
R
W
V
W
20 A
40 A
CANH
CANL
P1
3 A
G53(A)
Four Wheel Drive Control ECU
W
W
R
W
V
V
W
V


(IG)
10A
ECU-IG NO.1
32 2N
(BAT)
10A
ECU-B
2
1
G234 Junction Connector
19
22
37 GA1
A118 Junction Connector
7
9
G267 Junction Connector
1
3
G265 Junction Connector
15
18
G1(A) Airbag Sensor Assembly
CANH
CANL
13 A
22 A
4 B
IG
5 B
BAT
CANH
CANL
ESS
3 B
2 B
1 B
G205(B) Steering Sensor
G286 Junction Connector
3
13
9
19
2
12
G261 Junction Connector
17
15
G263 Junction Connector
16
15
3
G104 Junction Connector
G3
L
W
G
Y
V
W-B

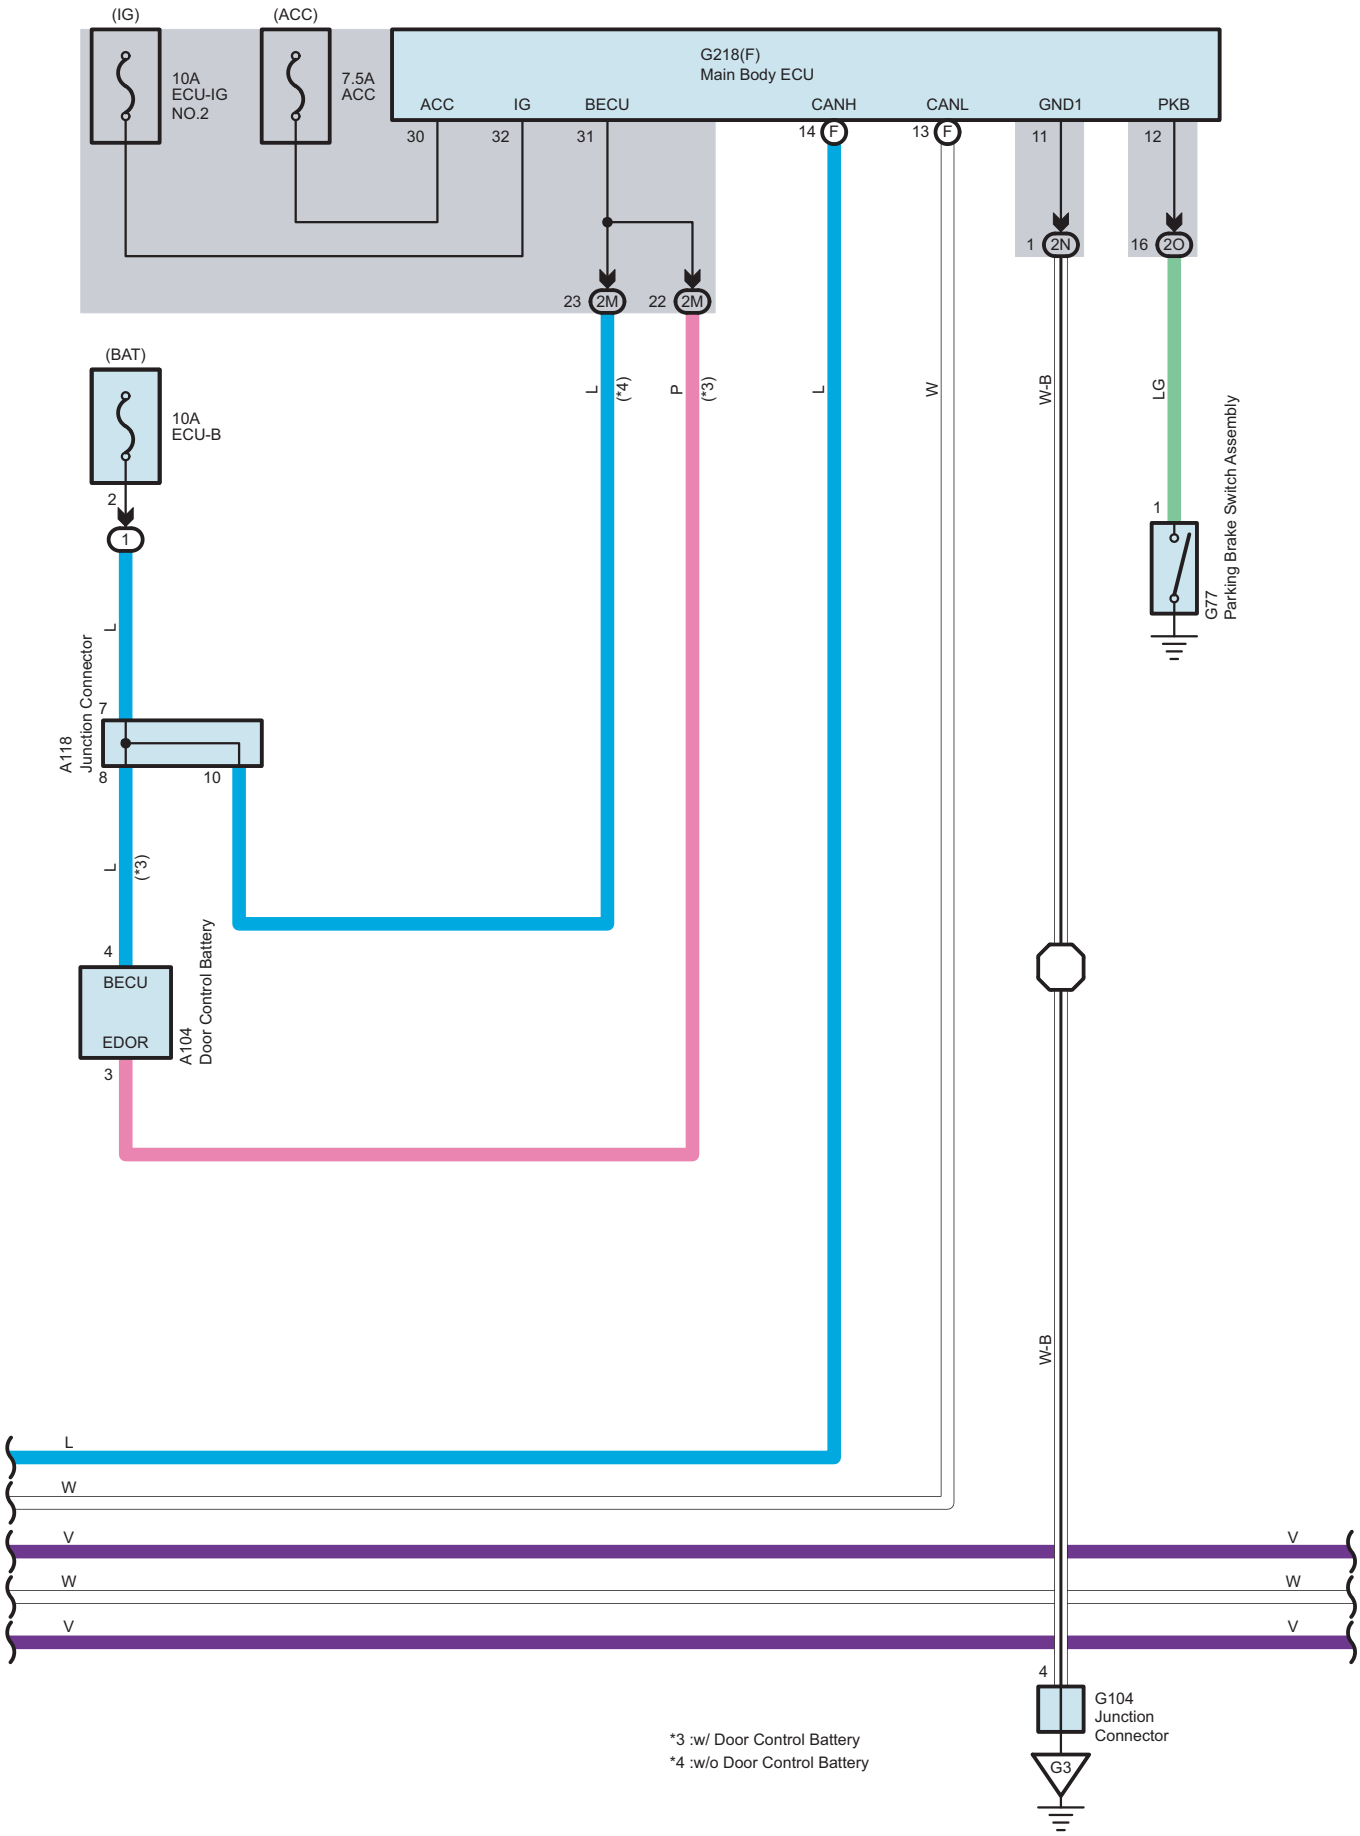
(IG)
(ACC)
10A
ECU-IG
NO.2
7.5A
ACC
G218(F)
Main Body ECU
ACC
IG
BECU
CANH
CANL
GND1
PKB
30
32
31
14 F
13 F
11
12
1 2N
16 2O
23 2M
22 2M
(BAT)
10A
ECU-B
2
1
L
(*4)
P
(*3)
L
W
W-B
LG
1
G77
Parking Brake Switch Assembly
A118
Junction Connector
7
8
10
L
(*3)
4
BECU
EDOR
3
A104
Door Control Battery
L
W
V
W
V
V
W
V
W-B
4
G104
Junction
Connector
G3
*3 :w/ Door Control Battery
*4 :w/o Door Control Battery

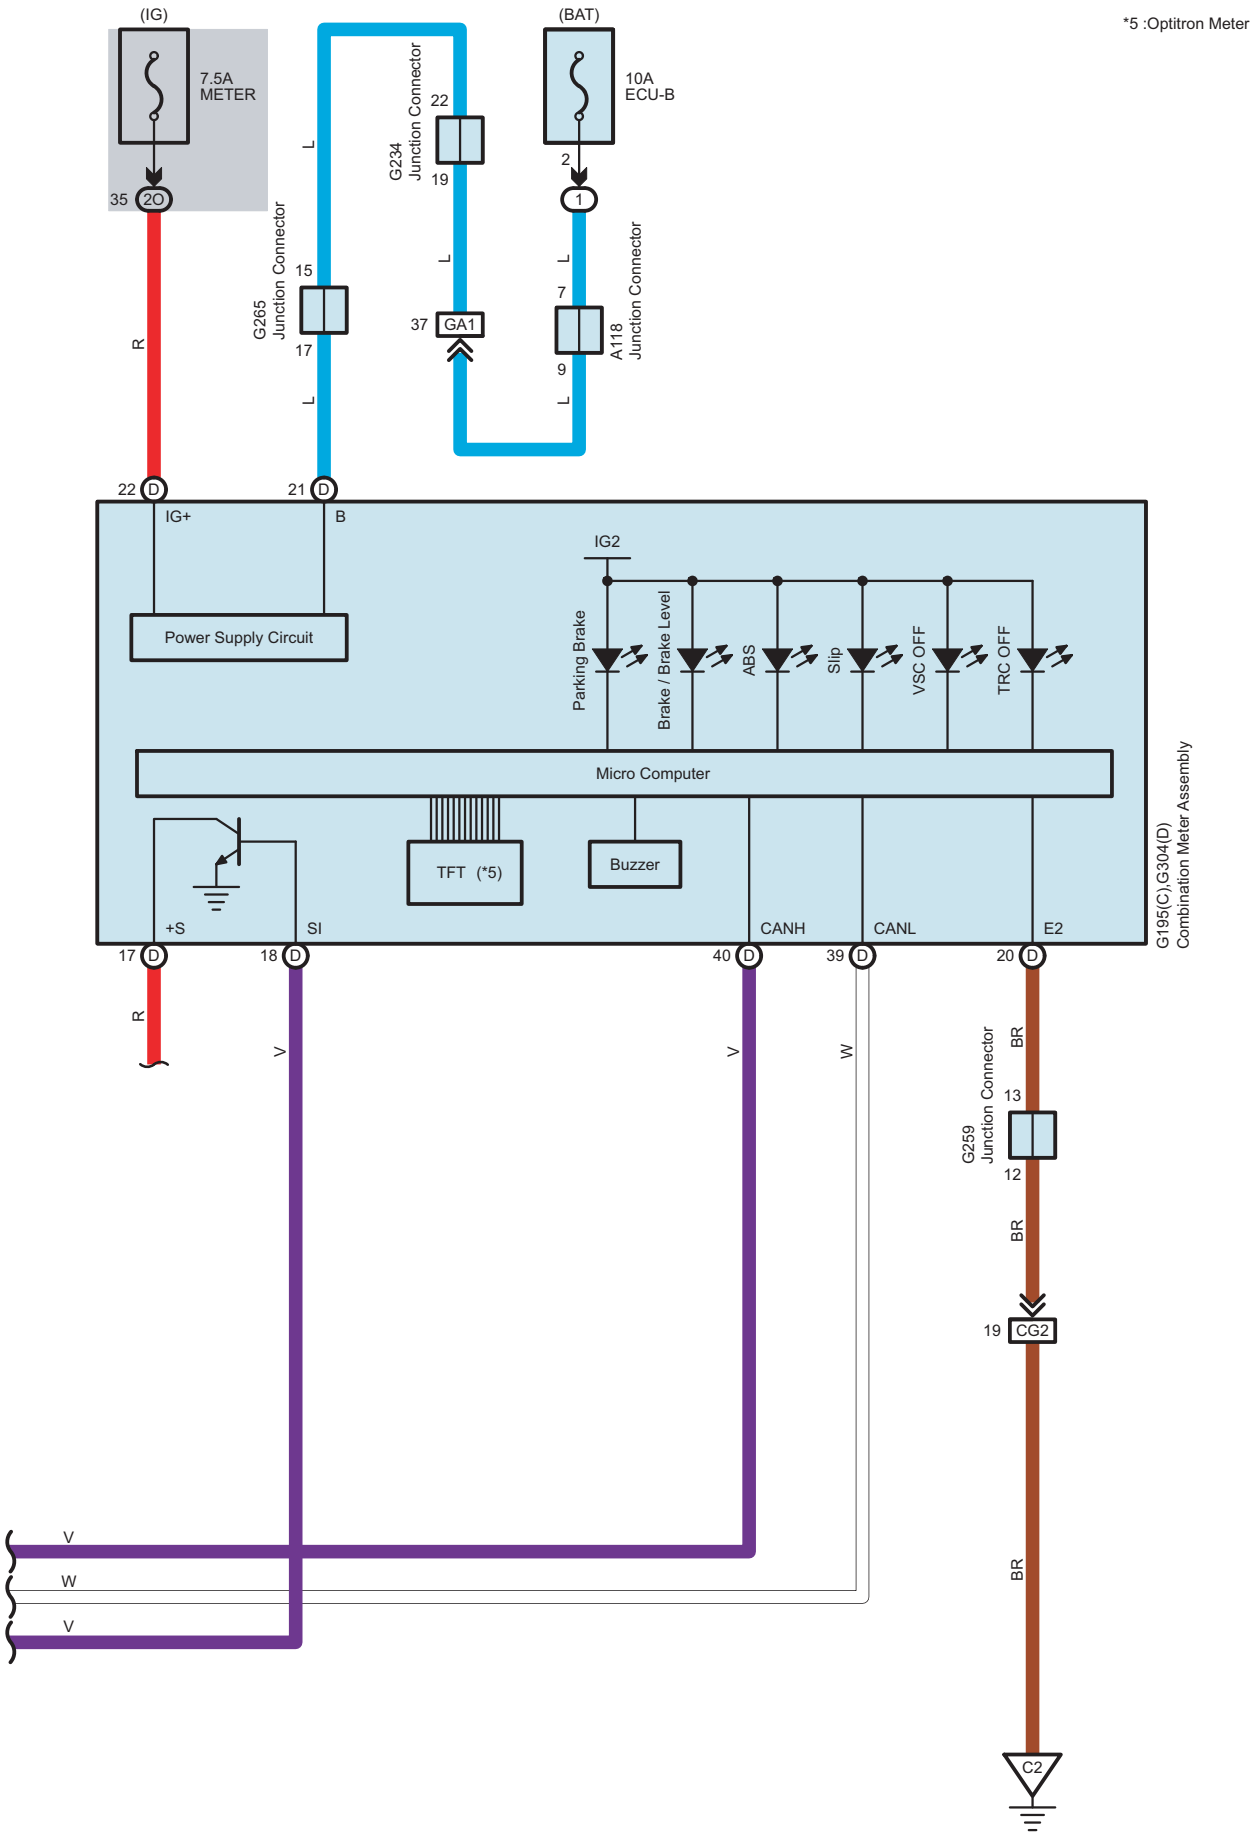

*5 :Optitron Meter
(IG)
7.5A
METER
35
2O
R
G265
Junction Connector
15
17
L
G234
Junction Connector
22
19
37
GA1
(BAT)
10A
ECU-B
2
1
7
9
A118
Junction Connector
22
D
21
D
IG+
B
Power Supply Circuit
IG2
Parking Brake
Brake / Brake Level
ABS
Slip
VSC OFF
TRC OFF
Micro Computer
TFT (*5)
Buzzer
+S
SI
CANH
CANL
E2
17
D
18
D
40
D
39
D
20
D
V
W
BR
G259
Junction Connector
13
12
19
CG2
C2
G195(C),G304(D)
Combination Meter Assembly

A6
Black

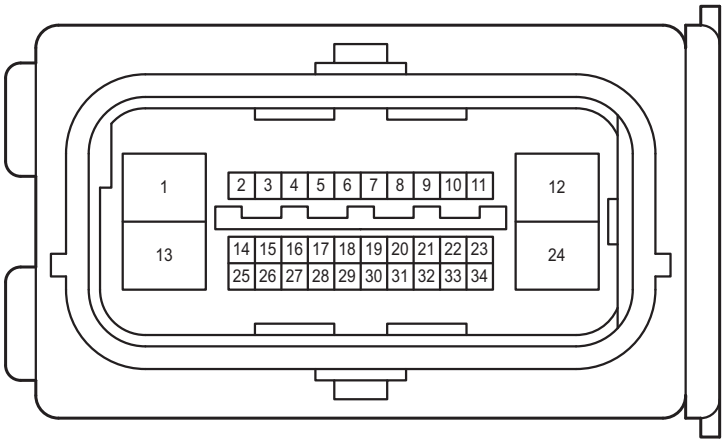

90980-12686

A11
Blue

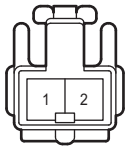


90980-10860

A59
Black




90980-10962

A68
Dark Gray

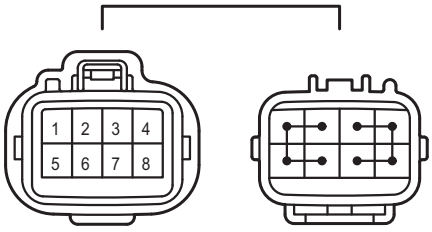


90980-10891

A99
Black

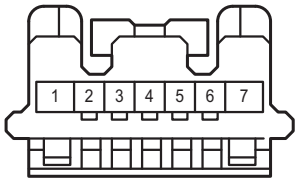


90980-12092

A104
Gray

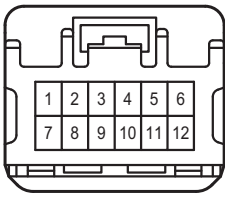


90980-12737

A115
Gray

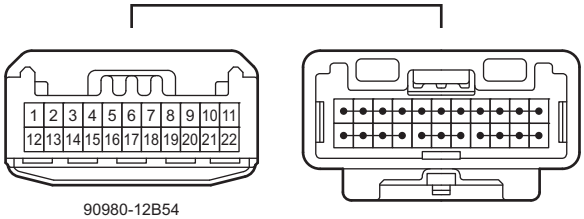


90980-12B54

A116
White

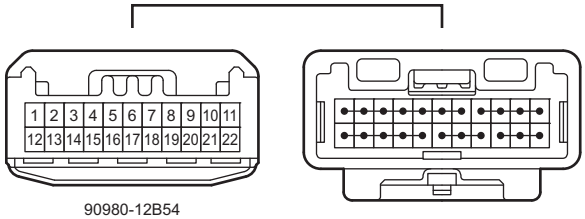


90980-12B54

A118
Gray

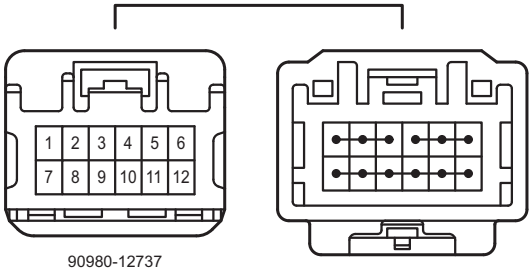


90980-12737

G1
Yellow

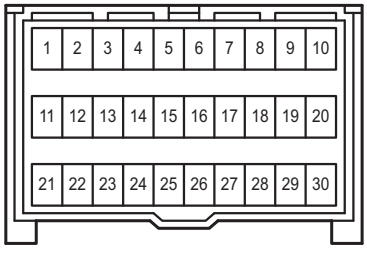

90980-12391

G53
Black

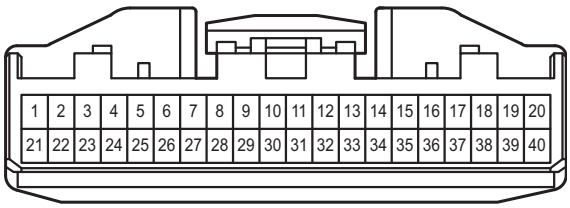


90980-12557

G77
White




90980-10871

G104
White (Before Aug. 2017 Production) / Gray (From Aug. 2017 Production)

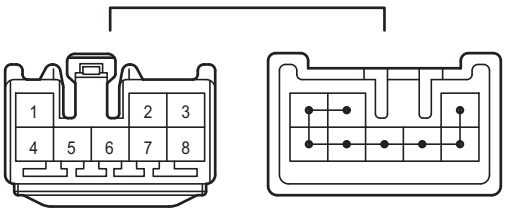


90980-11686

G181
White

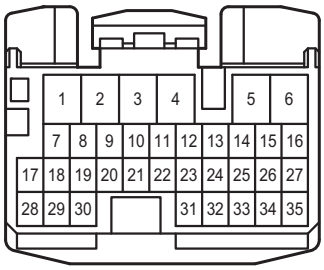


90980-12529

G205
Black

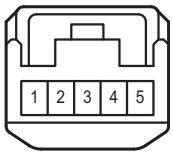


90980-12366

G218
White

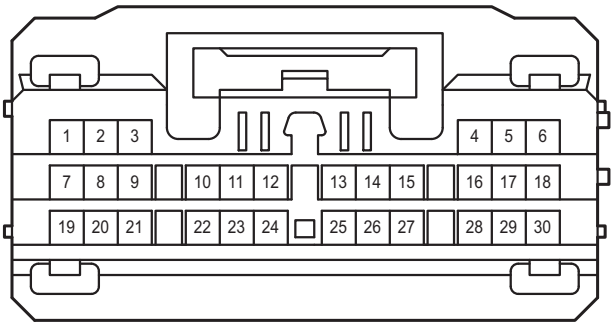


90980-12909

G226
Blue

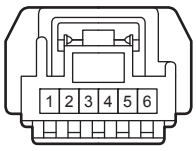


90980-12C74

G234
Blue

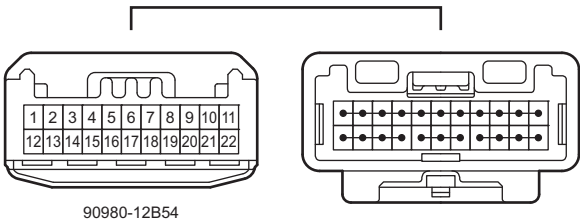


90980-12B54

G244
White

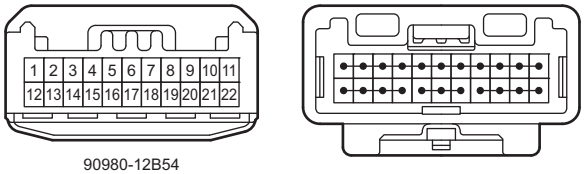


90980-12B54

G259
Blue

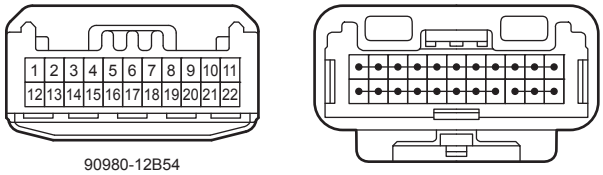


90980-12B54

G261
White

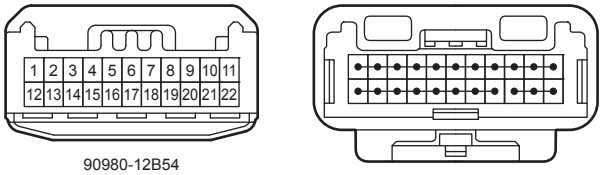


90980-12B54

G263
Blue

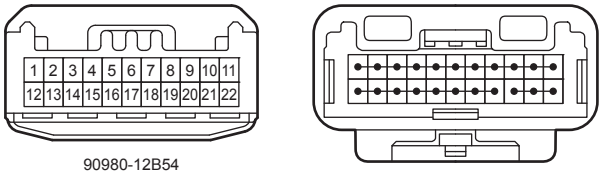


90980-12B54

G265
White

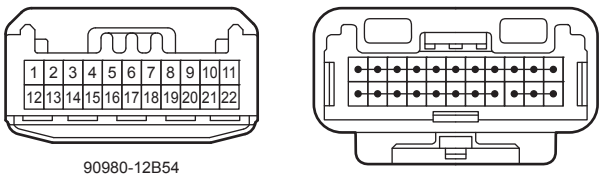


90980-12B54

G267
Blue

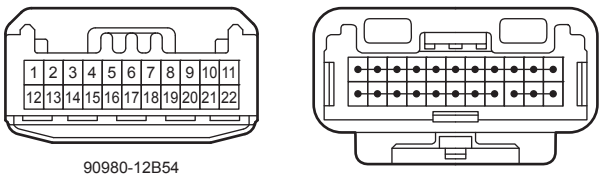


90980-12B54

G280
Blue

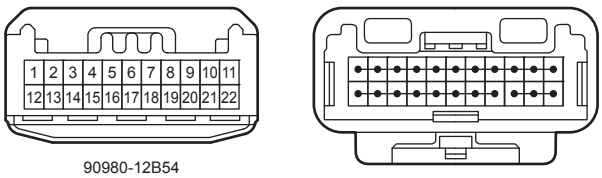


90980-12B54

G286
White

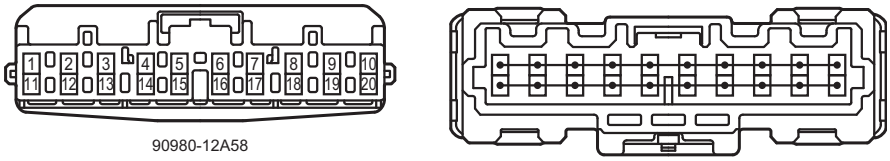


90980-12A58

G290
White

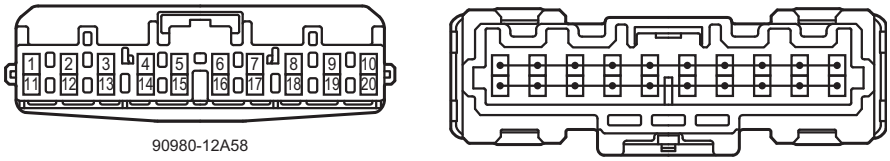

90980-12A58

G304
White

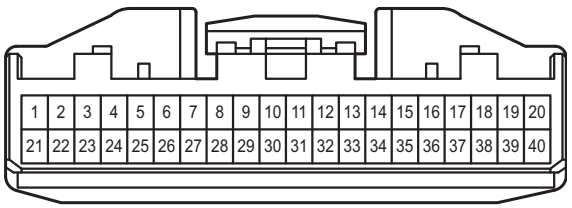


90980-12557

p1
Black




90980-11900

p2
Black

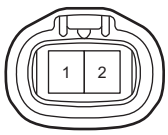


90980-11900

q1
Black

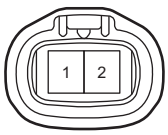


90980-11900

q2
Black

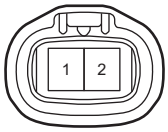


90980-11900

2M
White

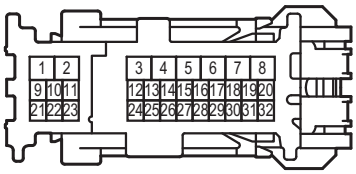


90980-12A47

2N
White

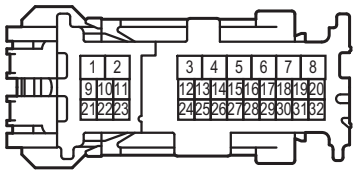


90980-12A48

2O
White

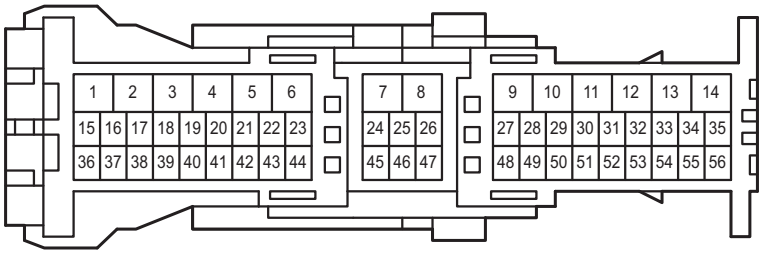


90980-12943

AR2
Gray

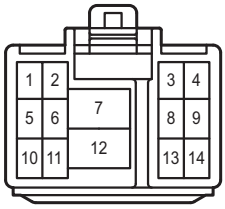


90980-10813

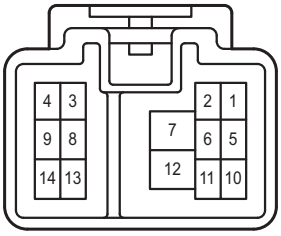

90980-10812


Ap1
Gray

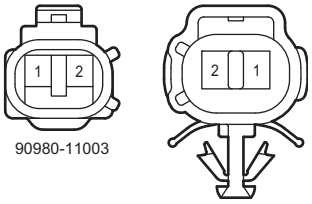

90980-11003

90980-11002


Ap2
Gray

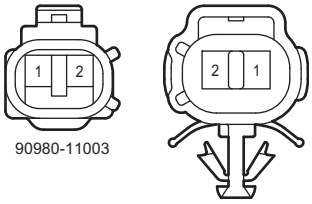


90980-11003

90980-11002

CG2
White

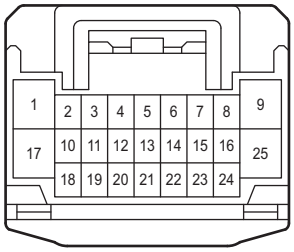


90980-12414

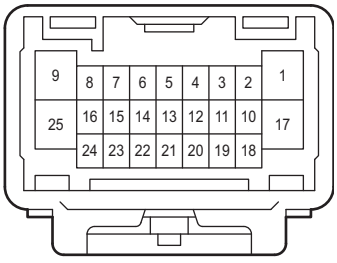


90980-12413

GA1
White

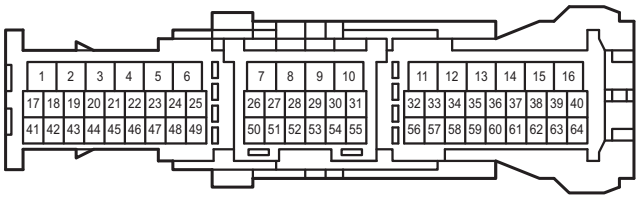


90980-12774

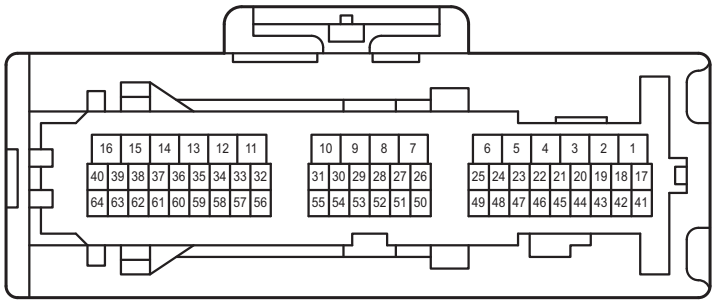


90980-12798

GA6
White

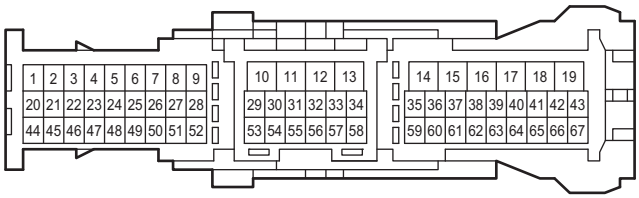


90980-12783

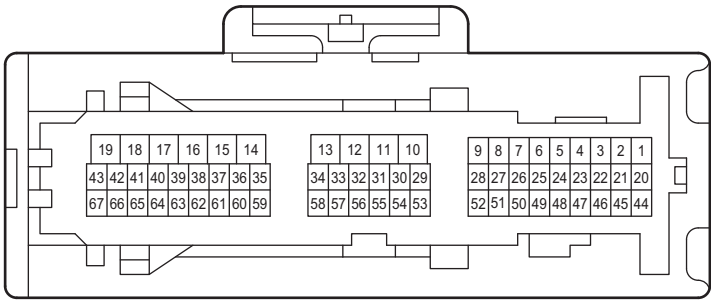


90980-12800

RS1
Black

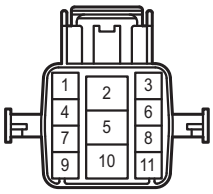


90980-11612

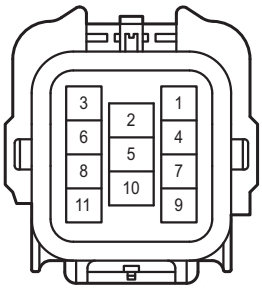


90980-11609

SR1
White

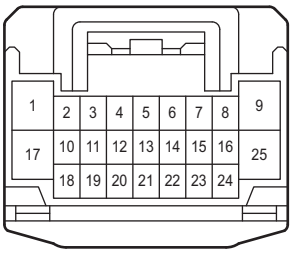

90980-12414

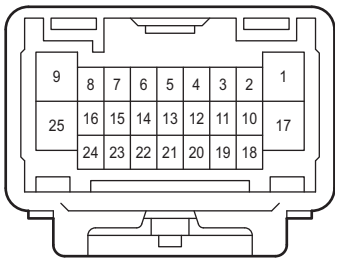

90980-12413

Sq1
White



90980-10942



90980-10941