




Cruise Control (1KD-FTV) (Before Jun. 2015 Production), Dynamic Radar Cruise Control (1KD-FTV) (Before Jun. 2015 Production),
Engine Control (1KD-FTV) (Before Jun. 2015 Production), ECT and A/T Indicator (1KD-FTV) (Before Jun. 2015 Production)

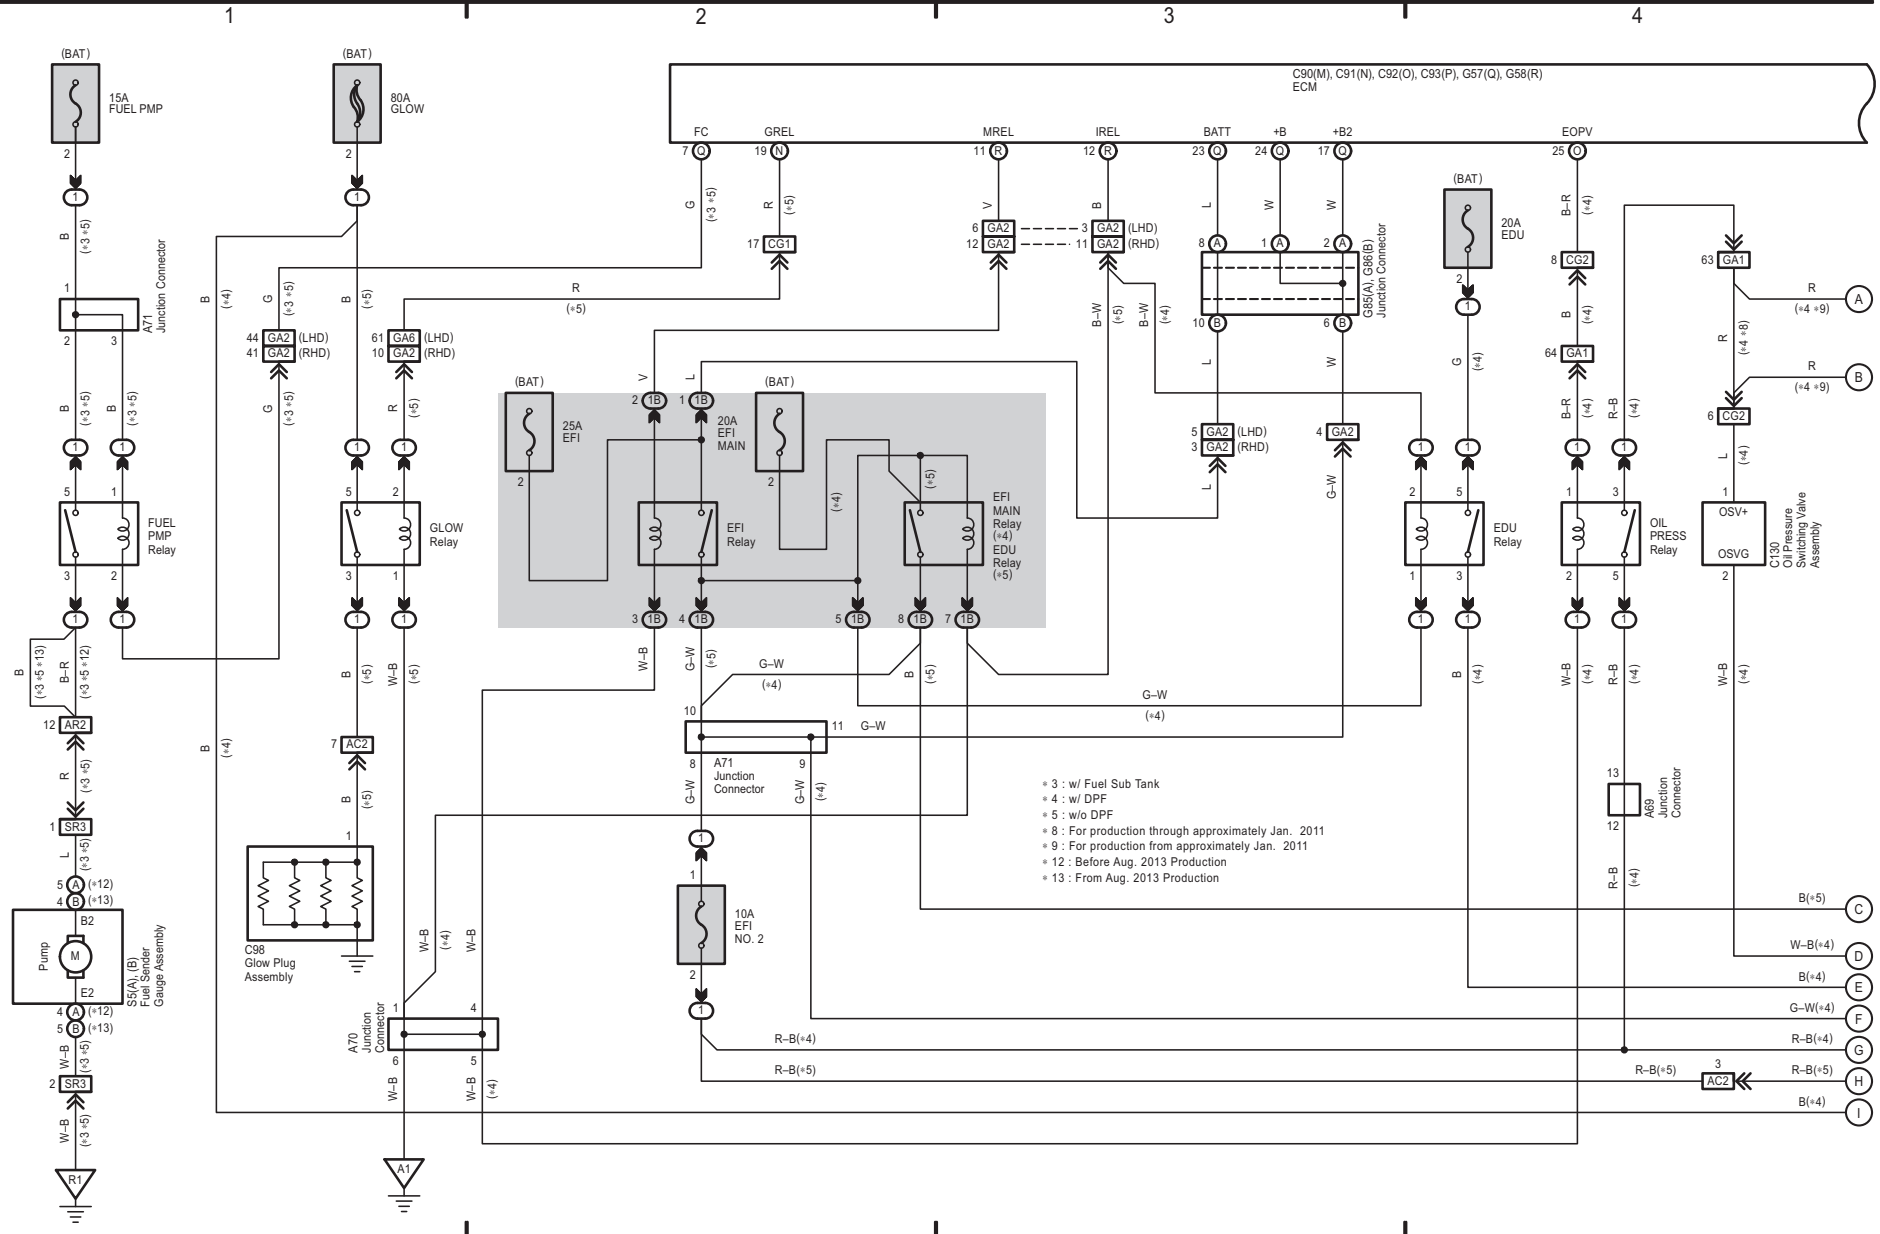


Cruise Control (1KD-FTV) (Before Jun. 2015 Production), Dynamic Radar Cruise Control (1KD-FTV) (Before Jun. 2015 Production),
Engine Control (1KD-FTV) (Before Jun. 2015 Production), ECT and A/T Indicator (1KD-FTV) (Before Jun. 2015 Production)

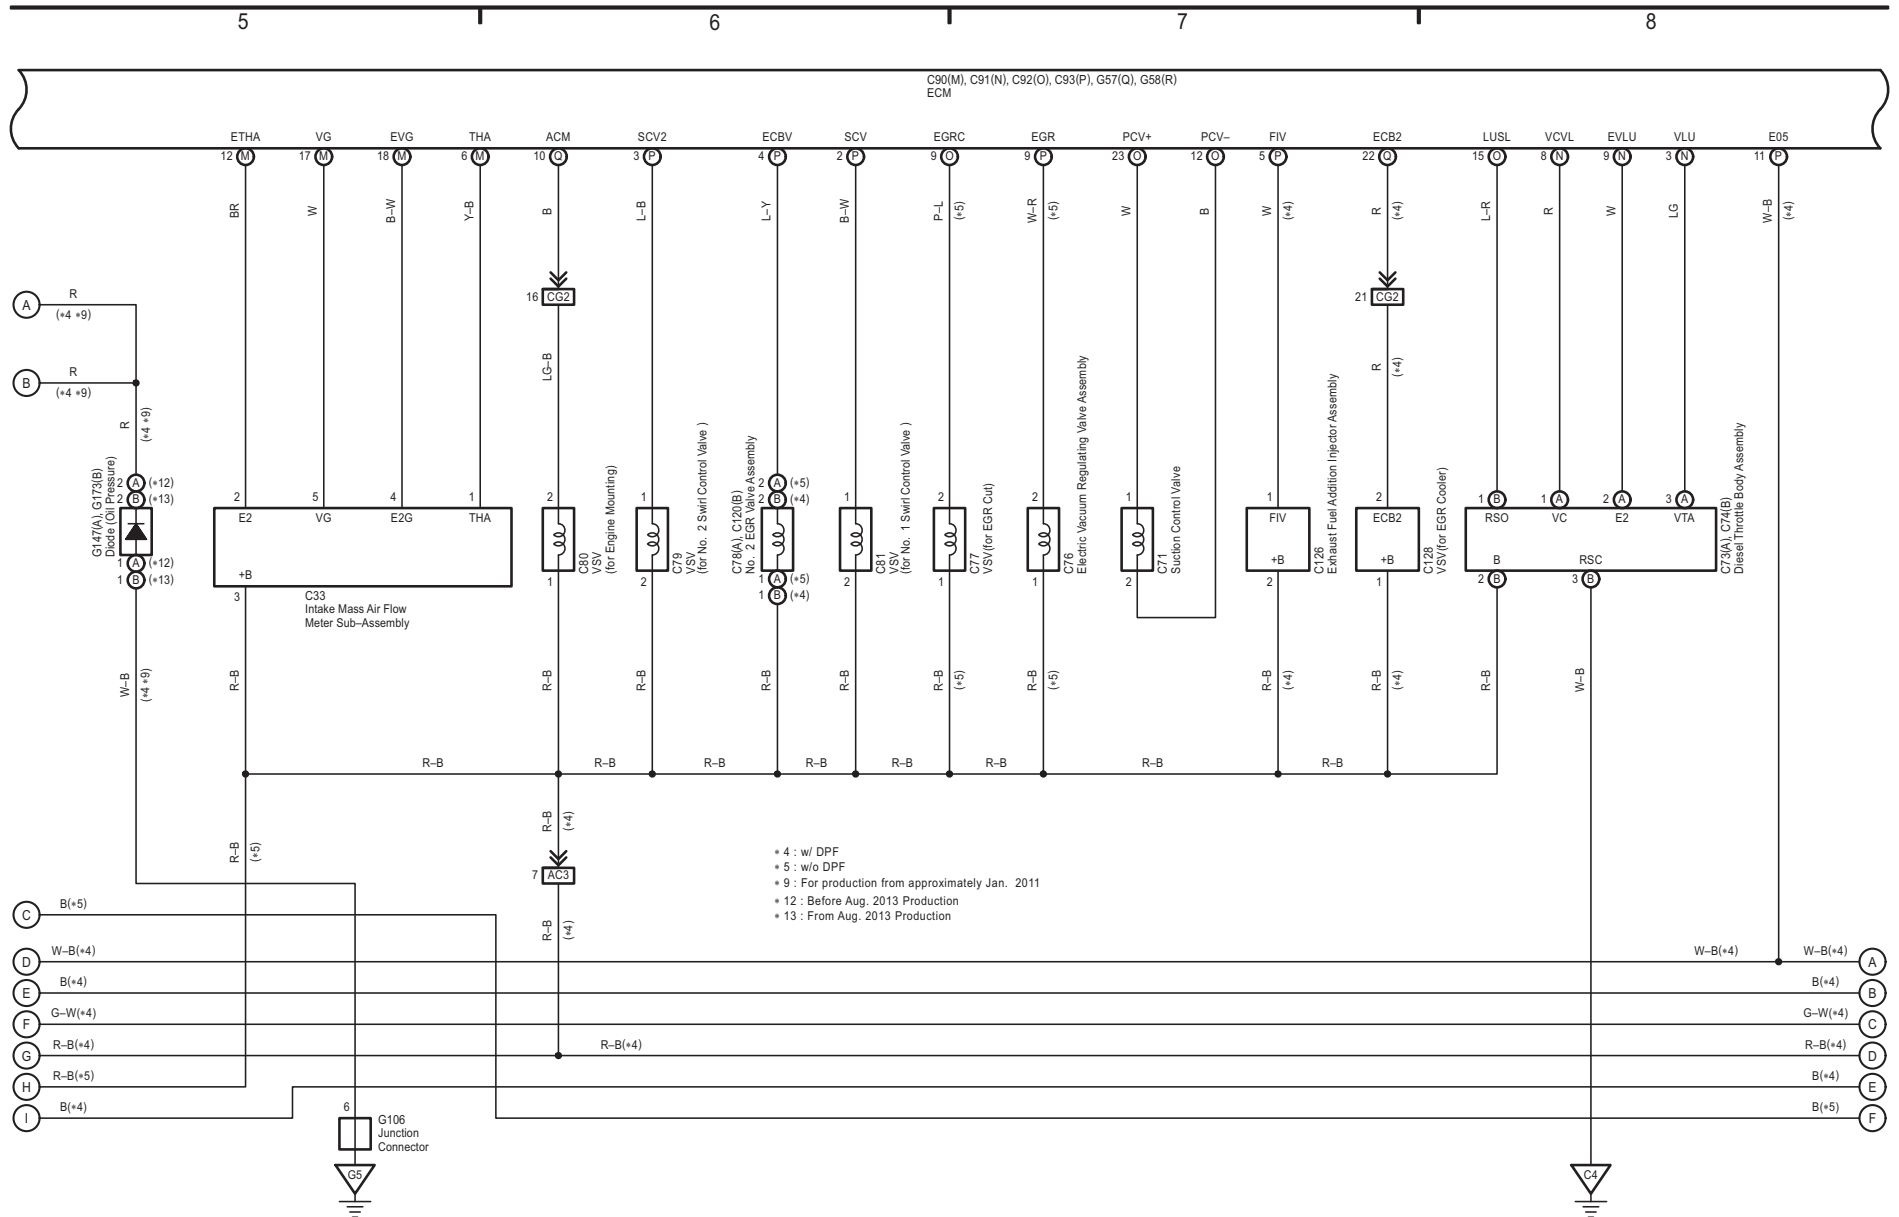

Cruise Control (1KD-FTV) (Before Jun. 2015 Production), Dynamic Radar Cruise Control (1KD-FTV) (Before Jun. 2015 Production),
Engine Control (1KD-FTV) (Before Jun. 2015 Production), ECT and A/T Indicator (1KD-FTV) (Before Jun. 2015 Production)

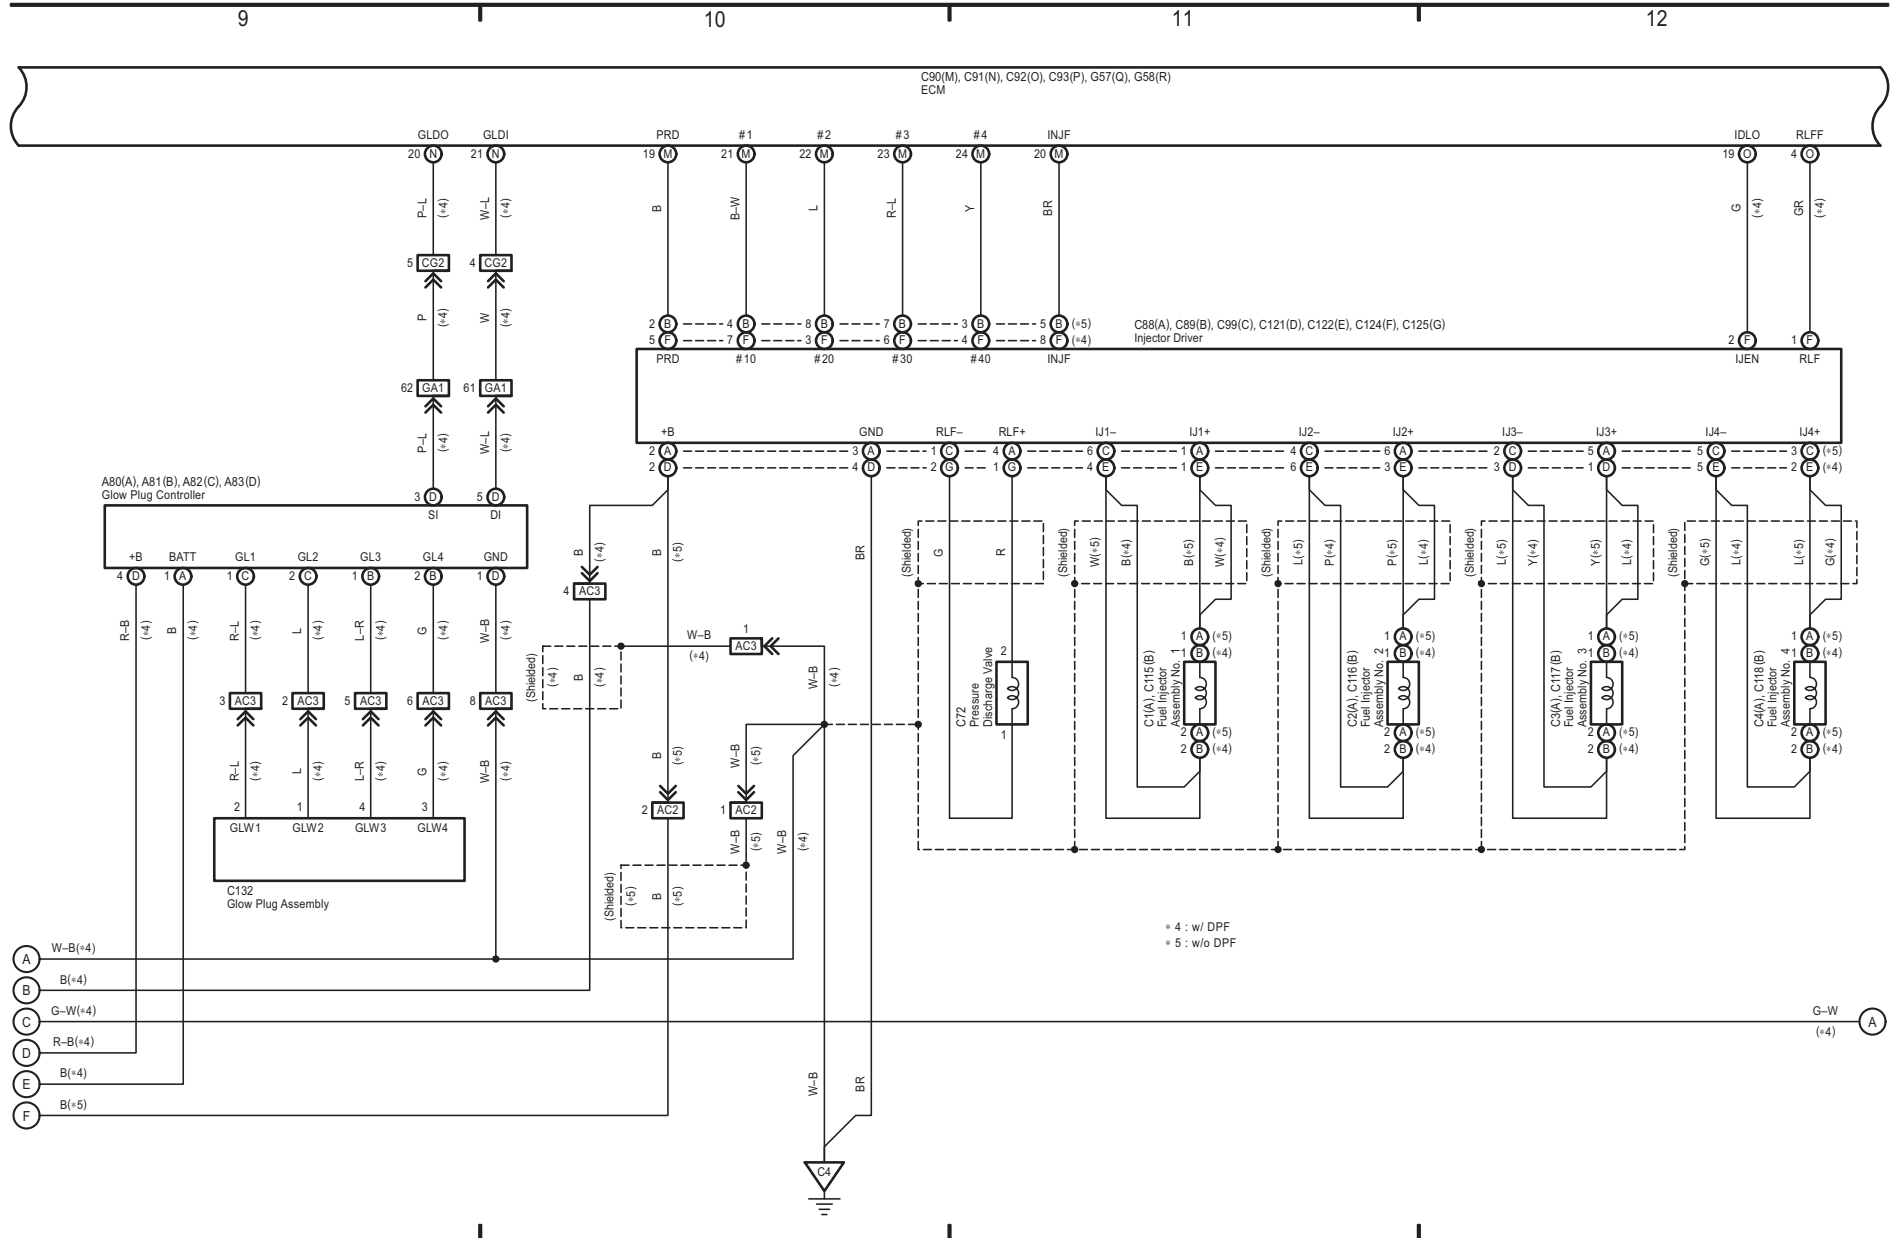


Cruise Control (1KD-FTV) (Before Jun. 2015 Production), Dynamic Radar Cruise Control (1KD-FTV) (Before Jun. 2015 Production),
Engine Control (1KD-FTV) (Before Jun. 2015 Production), ECT and A/T Indicator (1KD-FTV) (Before Jun. 2015 Production)

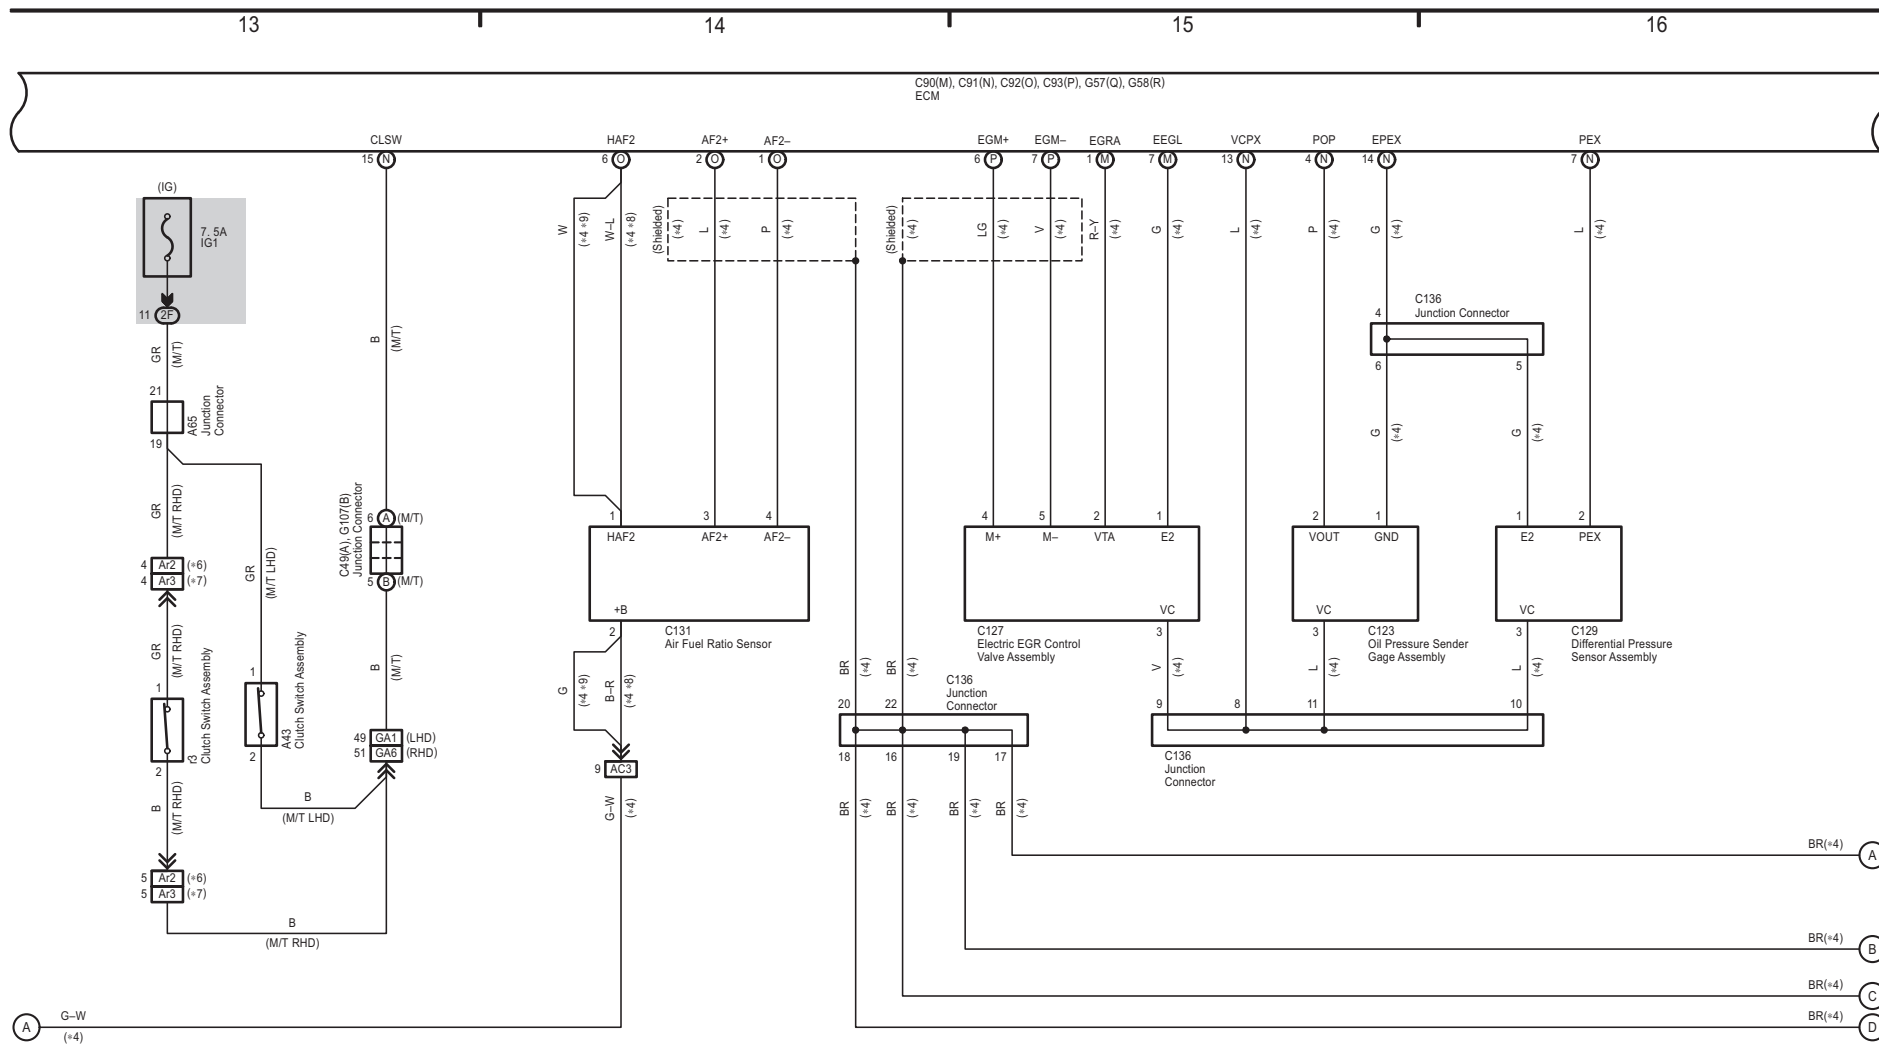

* 4 : w/ DPF
* 6 : Before Oct. 2010 Production
* 7 : From Oct. 2010 Production
* 8 : For production through approximately Jan. 2011
* 9 : For production from approximately Jan. 2011


Cruise Control (1KD-FTV) (Before Jun. 2015 Production), Dynamic Radar Cruise Control (1KD-FTV) (Before Jun. 2015 Production),
Engine Control (1KD-FTV) (Before Jun. 2015 Production), ECT and A/T Indicator (1KD-FTV) (Before Jun. 2015 Production)

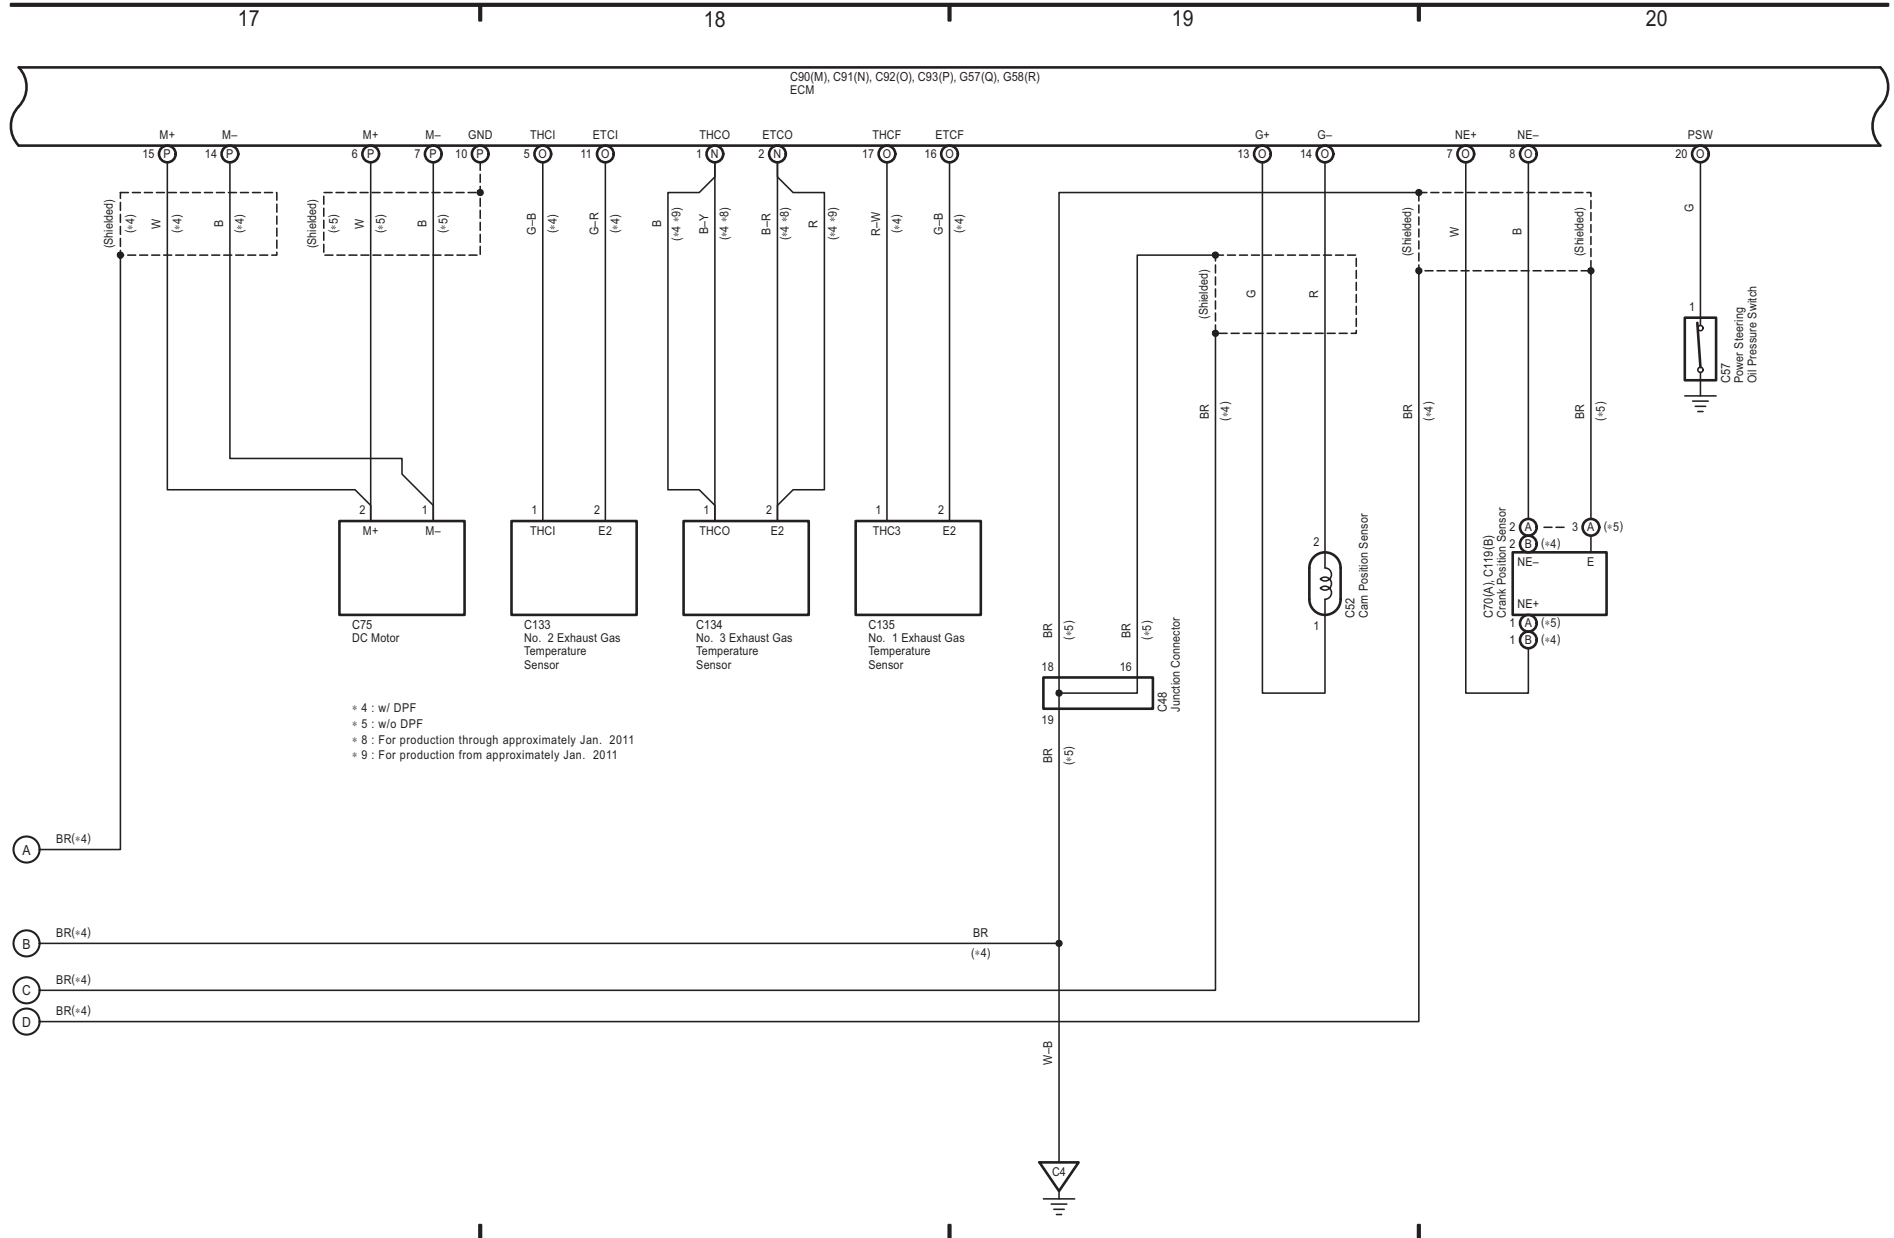

15 LAND CRUISER / LAND CRUISER PRADO (Cont'd)

(Cont. next page)


Cruise Control (1KD-FTV) (Before Jun. 2015 Production), Dynamic Radar Cruise Control (1KD-FTV) (Before Jun. 2015 Production),
Engine Control (1KD-FTV) (Before Jun. 2015 Production), ECT and A/T Indicator (1KD-FTV) (Before Jun. 2015 Production)

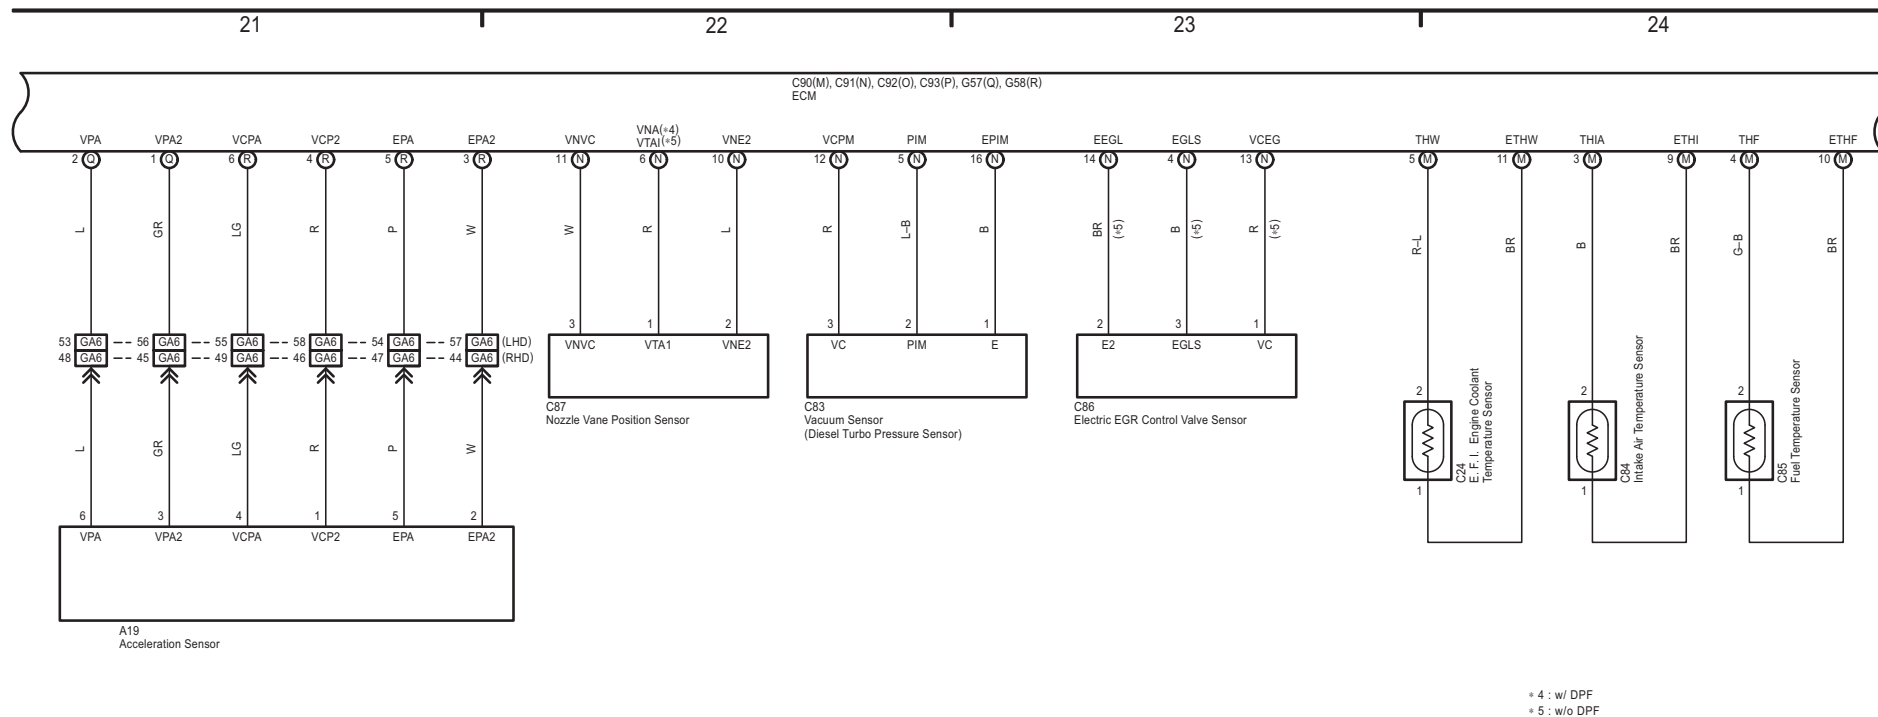


LAND CRUISER / LAND CRUISER PRADO (EM27T3E)




Cruise Control (1KD-FTV) (Before Jun. 2015 Production), Dynamic Radar Cruise Control (1KD-FTV) (Before Jun. 2015 Production),
Engine Control (1KD-FTV) (Before Jun. 2015 Production), ECT and A/T Indicator (1KD-FTV) (Before Jun. 2015 Production)

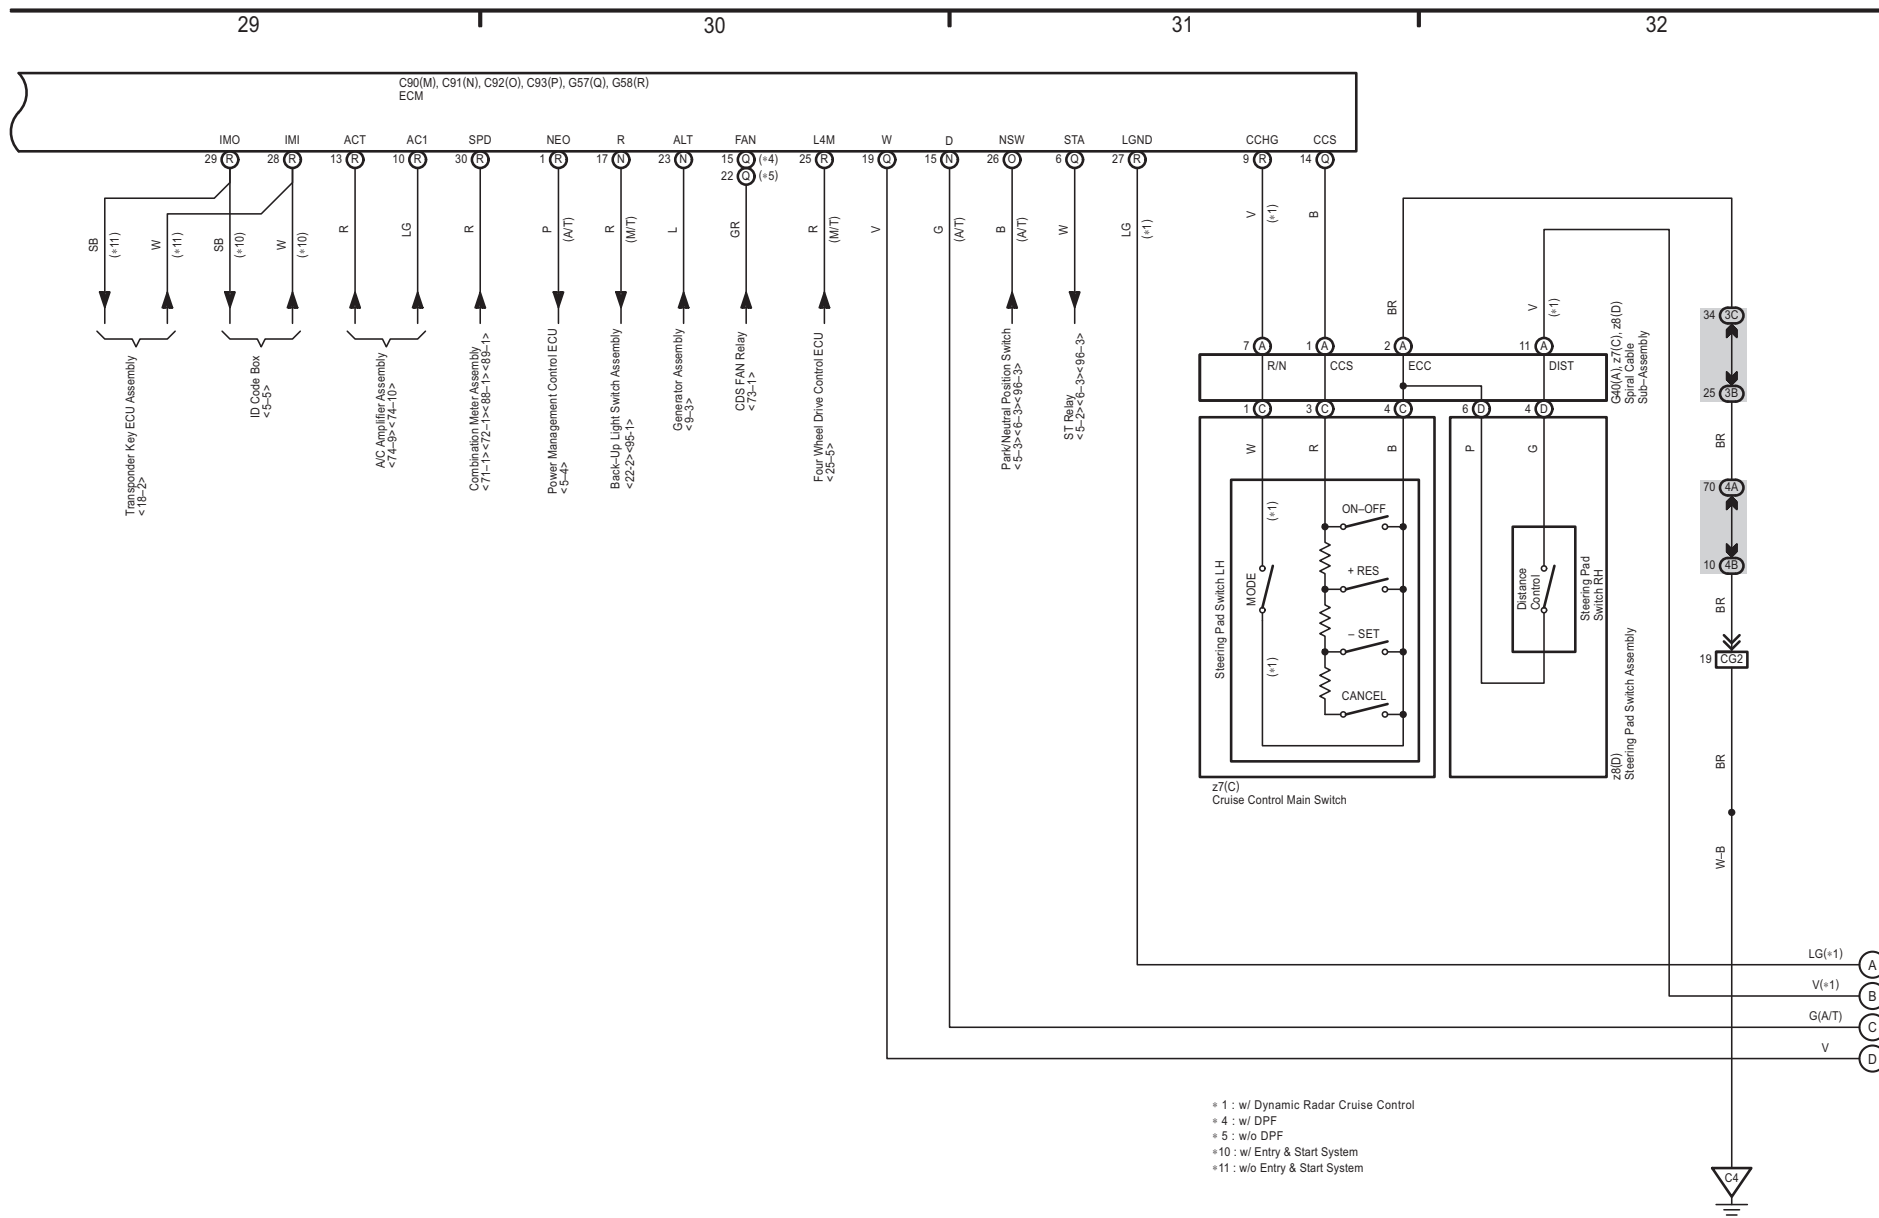


Cruise Control (1KD-FTV) (Before Jun. 2015 Production), Dynamic Radar Cruise Control (1KD-FTV) (Before Jun. 2015 Production),
Engine Control (1KD-FTV) (Before Jun. 2015 Production), ECT and A/T Indicator (1KD-FTV) (Before Jun. 2015 Production)

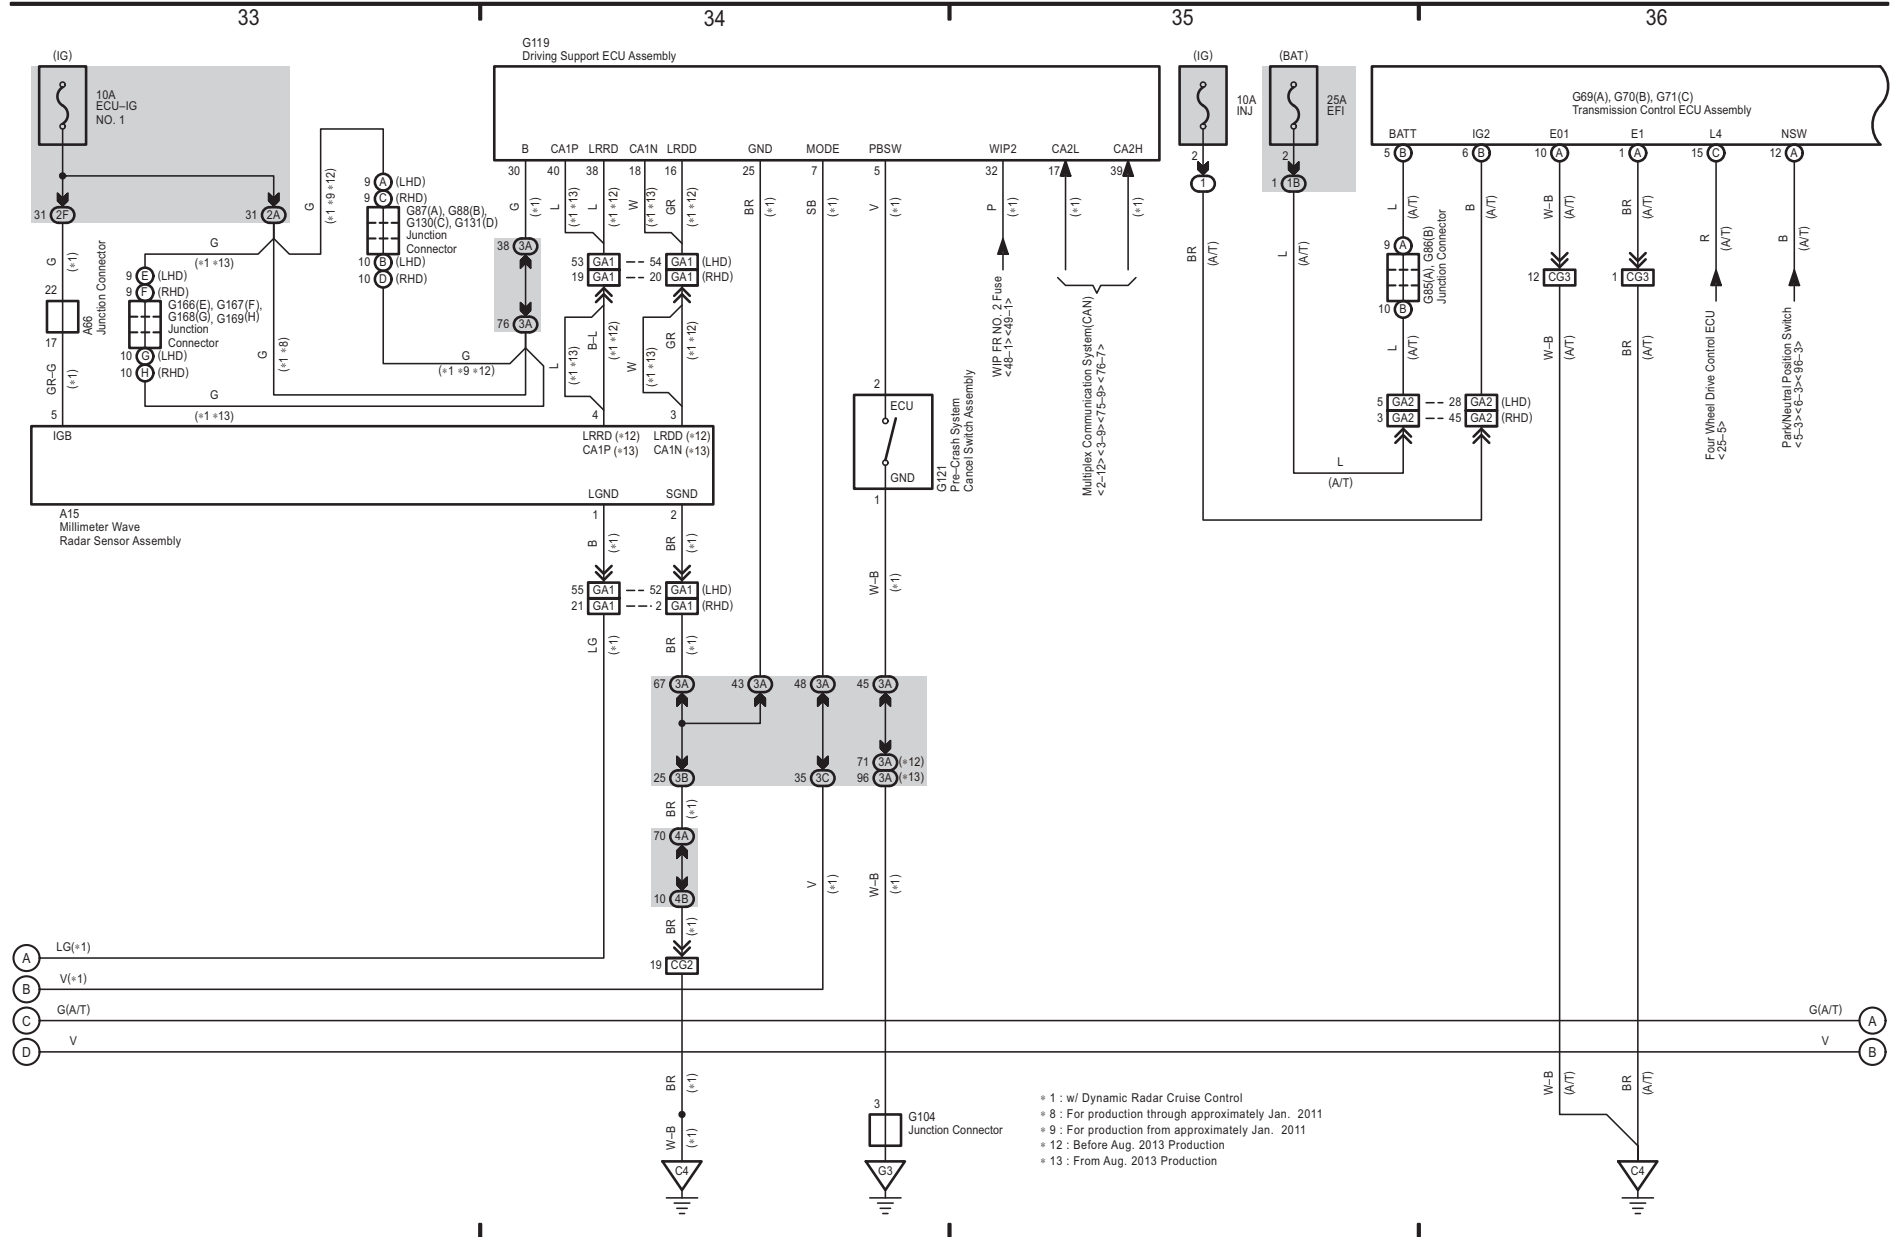

Cruise Control (1KD-FTV) (Before Jun. 2015 Production), Dynamic Radar Cruise Control (1KD-FTV) (Before Jun. 2015 Production),
Engine Control (1KD-FTV) (Before Jun. 2015 Production), ECT and A/T Indicator (1KD-FTV) (Before Jun. 2015 Production)

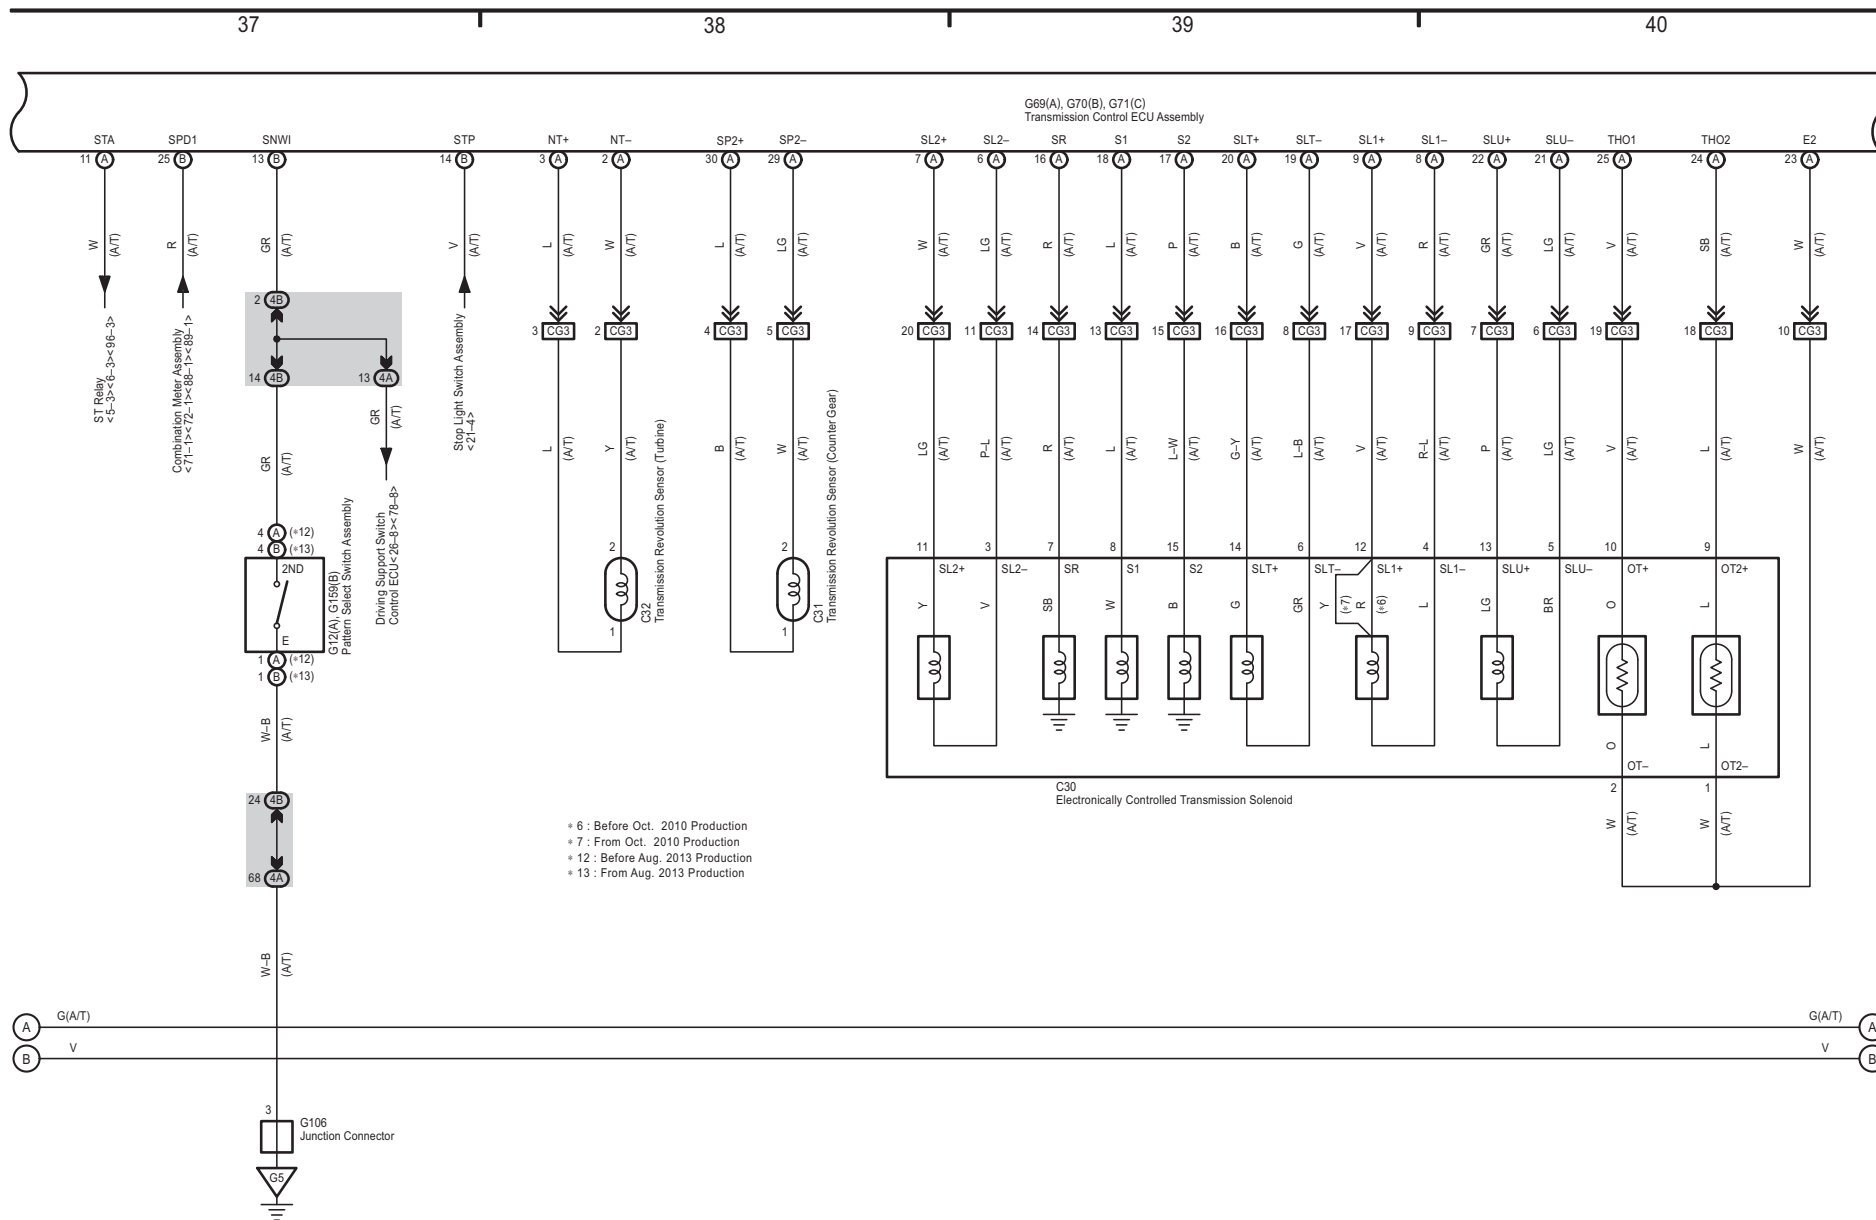

Cruise Control (1KD-FTV) (Before Jun. 2015 Production), Dynamic Radar Cruise Control (1KD-FTV) (Before Jun. 2015 Production),
Engine Control (1KD-FTV) (Before Jun. 2015 Production), ECT and A/T Indicator (1KD-FTV) (Before Jun. 2015 Production)

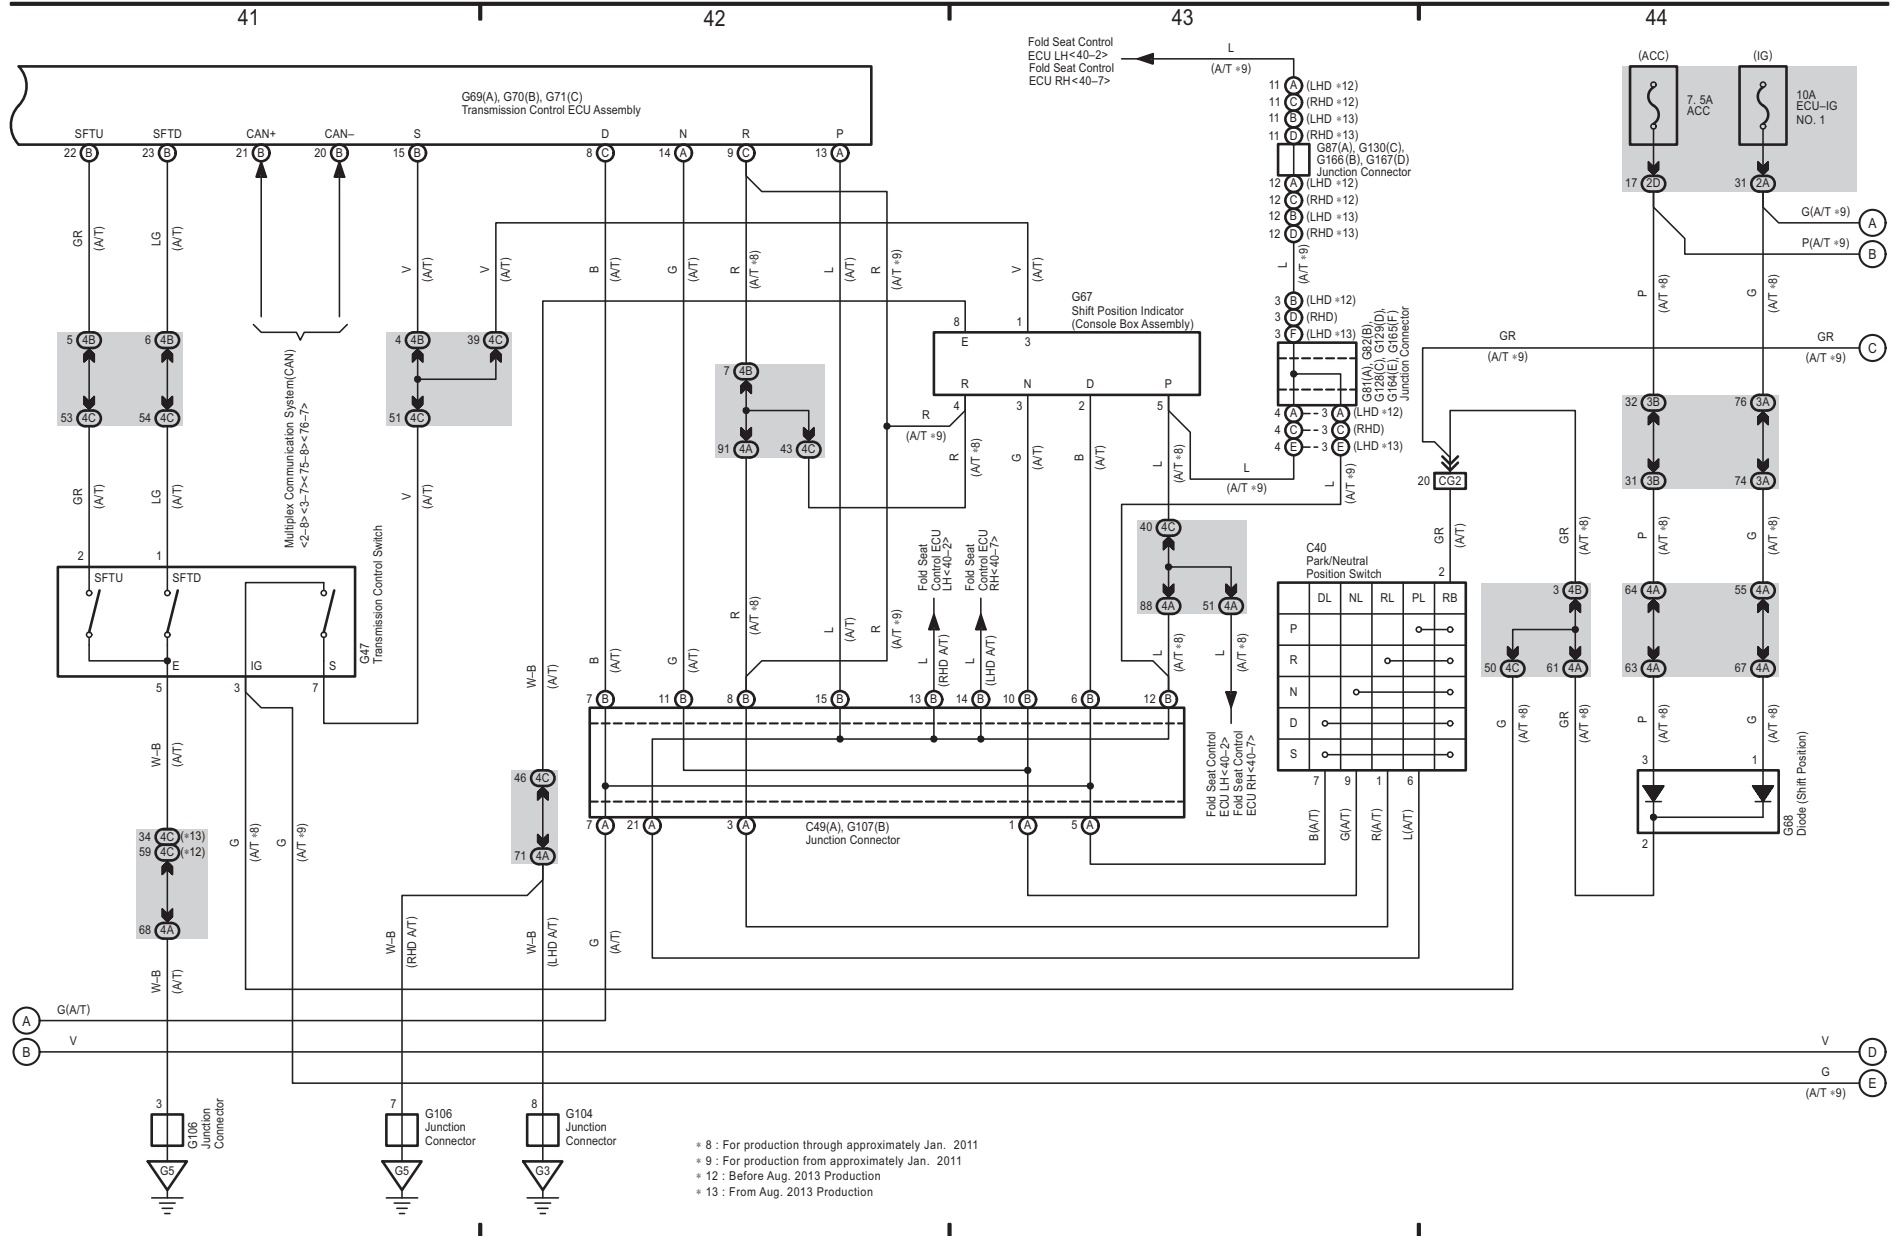

LAND CRUISER / LAND CRUISER PRADO (EM27T3E)

45

46

47

48

• 2 : Optitron Meter
 • 6 : Before Oct. 2010 Production
 • 7 : From Oct. 2010 Production
 • 9 : For production from approximately Jan. 2011
 • 12 : Before Aug. 2013 Production
 • 13 : From Aug. 2013 Production
 • 14 : Except Optitron Meter

G(A/T +9)
 P(A/T +9)
 GR
 (A/T +9)

7 (A) (LHD +12)
 7 (B) (RHD +12)
 7 (C) (LHD +13)
 7 (D) (RHD +13)

8 (A) (LHD +12)
 8 (B) (RHD +12)
 8 (C) (LHD +13)
 8 (D) (RHD +13)

G87(A), G130(C),
 G166(B), G167(D)
 Junction Connector

2 (A) (LHD +12)
 2 (B) (RHD +12)
 2 (C) (LHD +13)
 2 (D) (RHD +13)

G81(A), G82(B),
 G128(C), G129(D),
 G164(E), G165(F)
 Junction Connector

2 (A) (LHD +12)
 2 (B) (RHD +12)
 2 (C) (LHD +13)
 2 (D) (RHD +13)

G (A/T +9)
 GR (A/T +9)

V
 G
 (A/T +9)

Check Engine
 2nd STRT
 Shift Indicator Down
 Shift Indicator Up
 Cruise
 Auto Cruise
 Glow
 SET
 Master (+2)

IG2
 ECU-B +B
 IG+

Power Supply Circuit
 LCD (+12, +13 +14)
 TFT (+2 +13)
 Buzzer

Micro Computer

CHK
 V

21 (A) BR
 55 (3A) BR
 25 (3B) BR
 70 (4A) BR
 10 (4B) BR
 19 CG2
 W-B
 C4
 GS

G92(A), G43(B)
 Junction Connector

1 (A) W-B (+12)
 5 (A) (+6)
 6 (A) (+6)
 6 (B) (+7)

W-B (+12)
 W-B (+12)
 W-B (+12)

8 (A) (LHD)
 8 (B) (RHD)
 8 (C) (LHD)
 8 (D) (RHD)
 7 (A) (LHD)
 7 (B) (RHD)
 7 (C) (LHD)
 7 (D) (RHD)

G91(A), G92(B),
 G93(C), G128(D)
 Junction Connector

8 (A) (LHD)
 8 (B) (RHD)
 8 (C) (LHD)
 8 (D) (RHD)
 7 (A) (LHD)
 7 (B) (RHD)
 7 (C) (LHD)
 7 (D) (RHD)

G106
 Junction Connector

7 (A) (LHD)
 7 (B) (RHD)
 7 (C) (LHD)
 7 (D) (RHD)

G61A, G71B
 Combination Meter Assembly