
RADIATOR UPPER SUPPORT (ASSY)

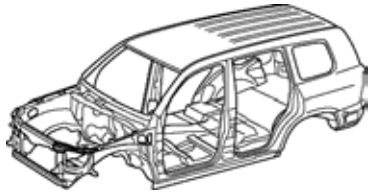


F29201A

Symbol meaning

REMOVAL	: Remove Weld Points
INSTALLATION	: Plug Weld

F29201B

REMOVAL·INSTALLATION

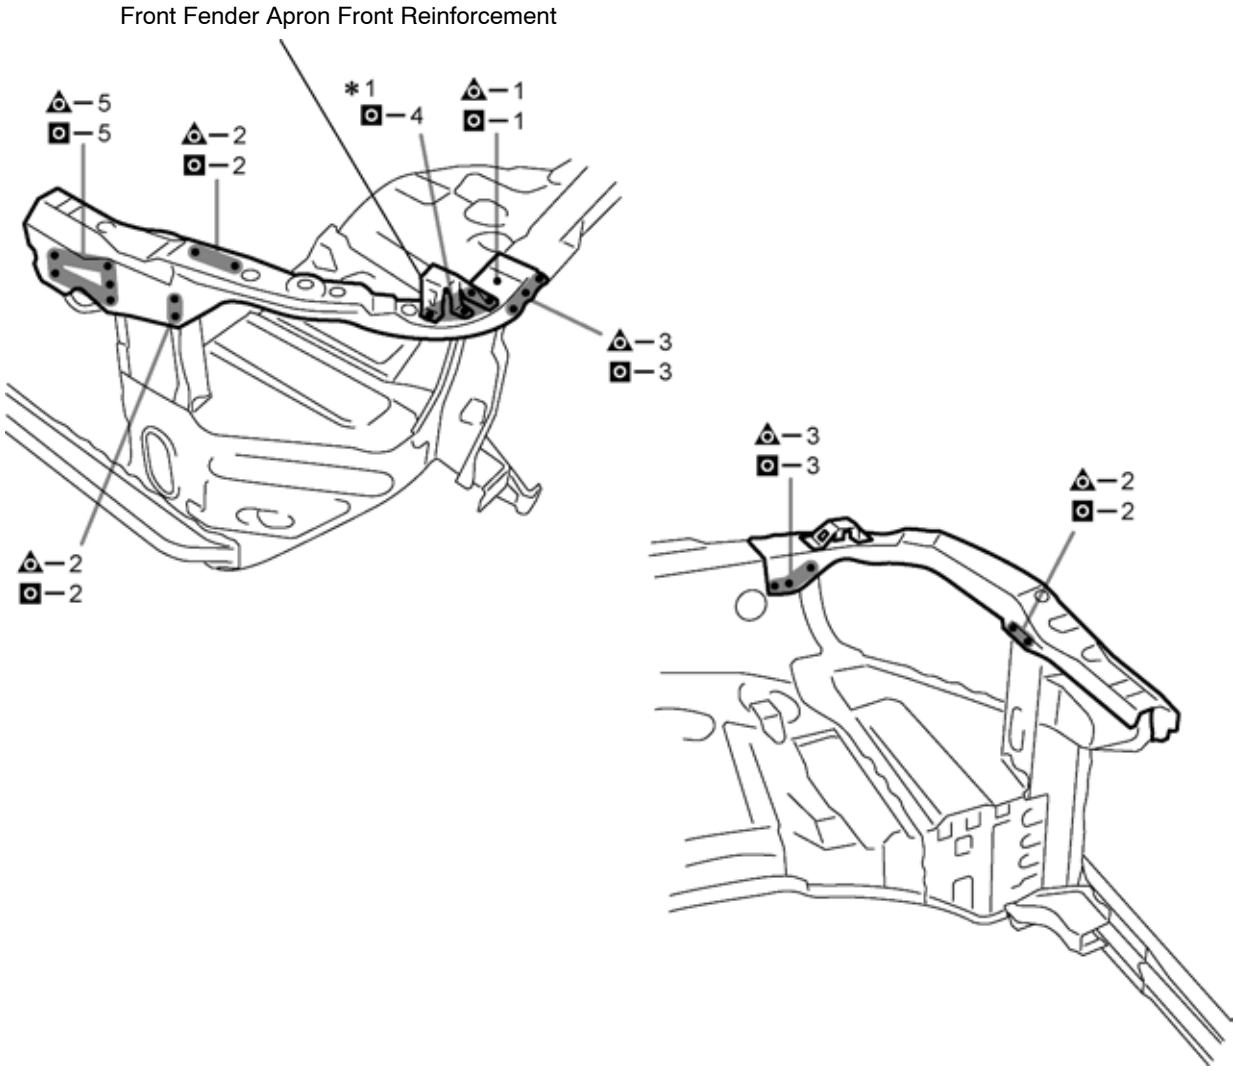

F29201

INSTALLATION POINT

1 Inspect the fitting of the related parts around the new parts before welding. This affects the appearance of the finish.
2 Temporarily install the new parts and measure each part of the new parts in accordance with the body dimension diagram. (See the body dimension diagram)
3 *1 is only for installation.
4 After applying the top coat, apply anti-rust agent to the internal panel portion of the closed section structural weld points.