# ROCKER PANEL NO. 3 REINFORCEMENT (CUT)



F29228A


Symbol meaning

: Remove Weld Points : Cut and Join Location

: Cut Location for Supply Parts

F29228B

**REMOVAL**

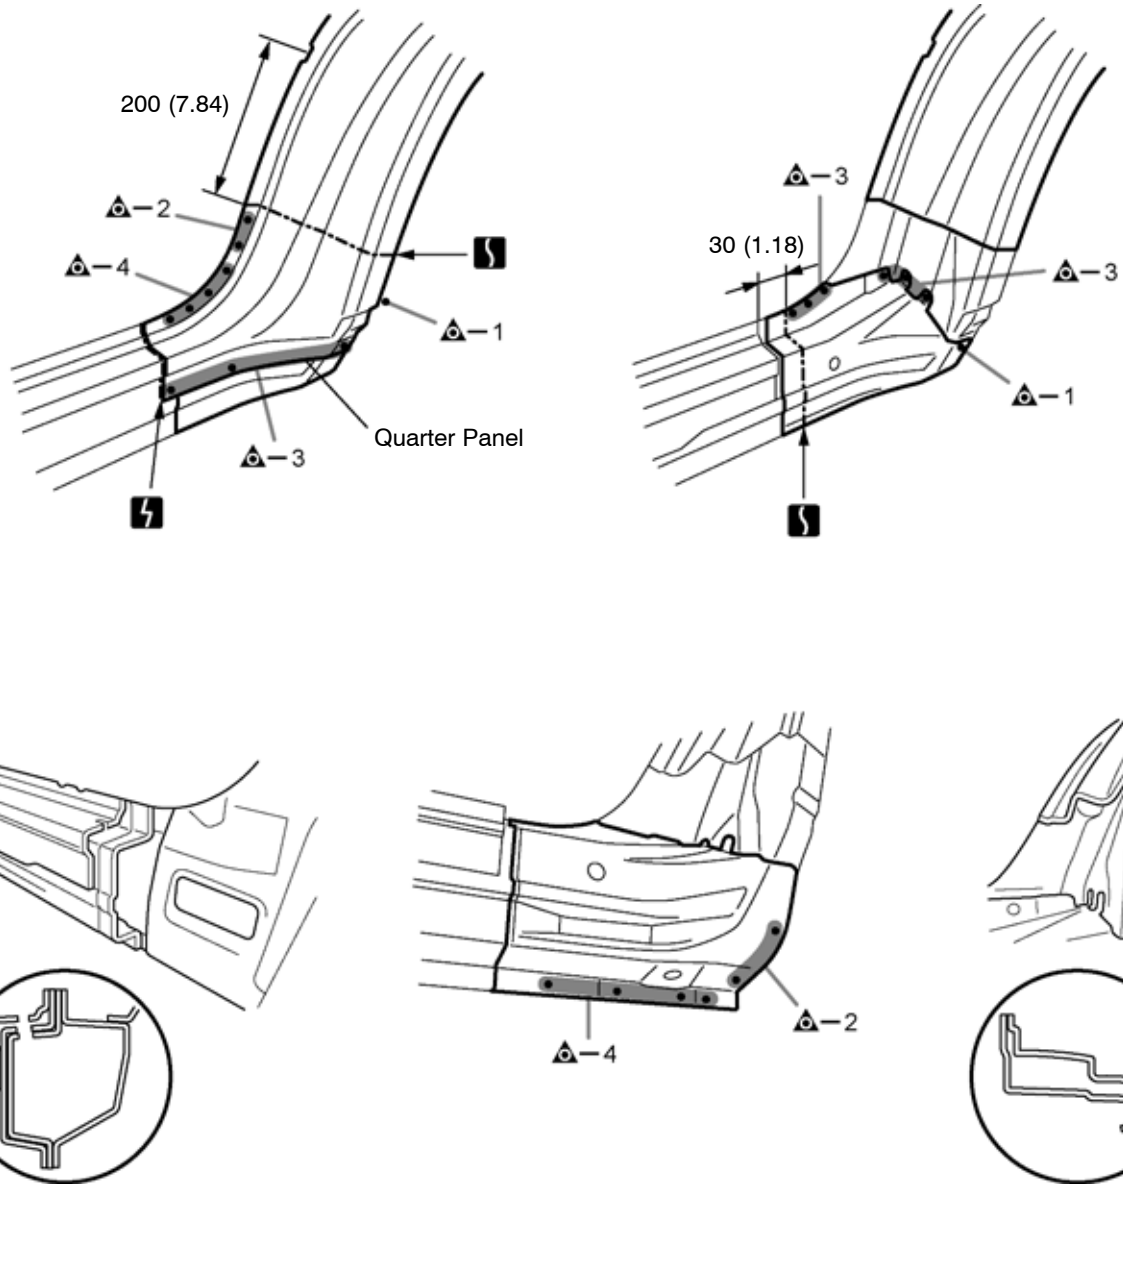


F29228

**REMOVAL POINT**


1 After removing the quarter panel, remove the rocker panel No. 3 reinforcement.

Symbol meaning

: Spot Weld : Plug Weld : Butt Weld : Body Sealer

F29229B

**INSTALLATION**

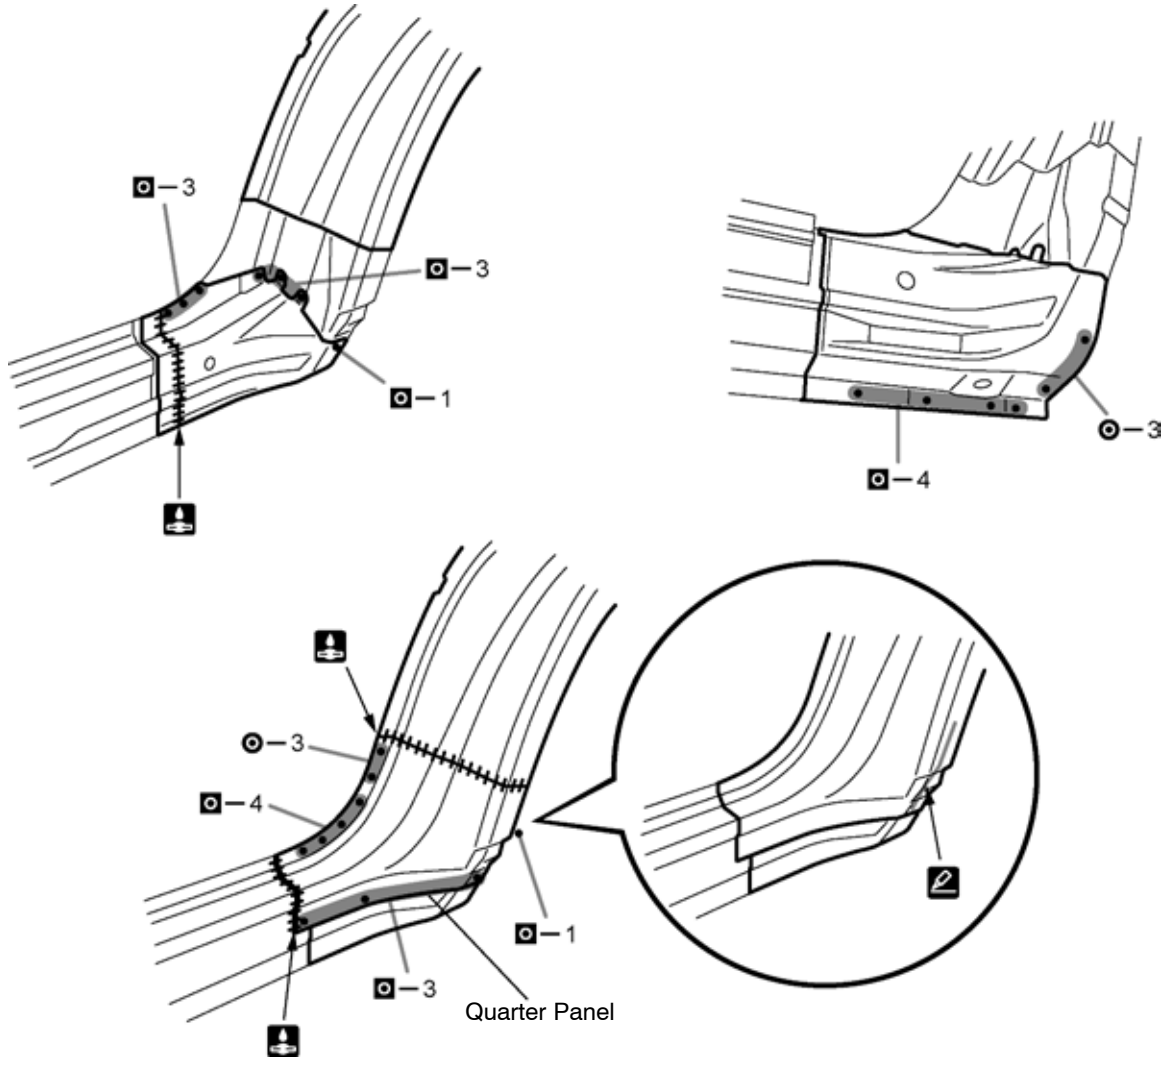


F29229

**INSTALLATION POINT**

1 Inspect the fitting of the related parts around the new parts before welding. This affects the appearance of the finish.
2 Temporarily install the new parts and measure each part of the new parts in accordance with the body dimension diagram. (See the body dimension diagram)
3 Before installing a new part, apply body sealer.
*HINT:*
*Apply sealer in an even, continuous bead.*
4 After welding the rocker panel No. 3 reinforcement to the vehicle side, install the quarter panel.
5 After welding, apply body sealer to the corresponding parts. (See the paint·coating)
6 After applying the top coat, apply anti-rust agent to the internal panel portion of the closed section structural weld points.