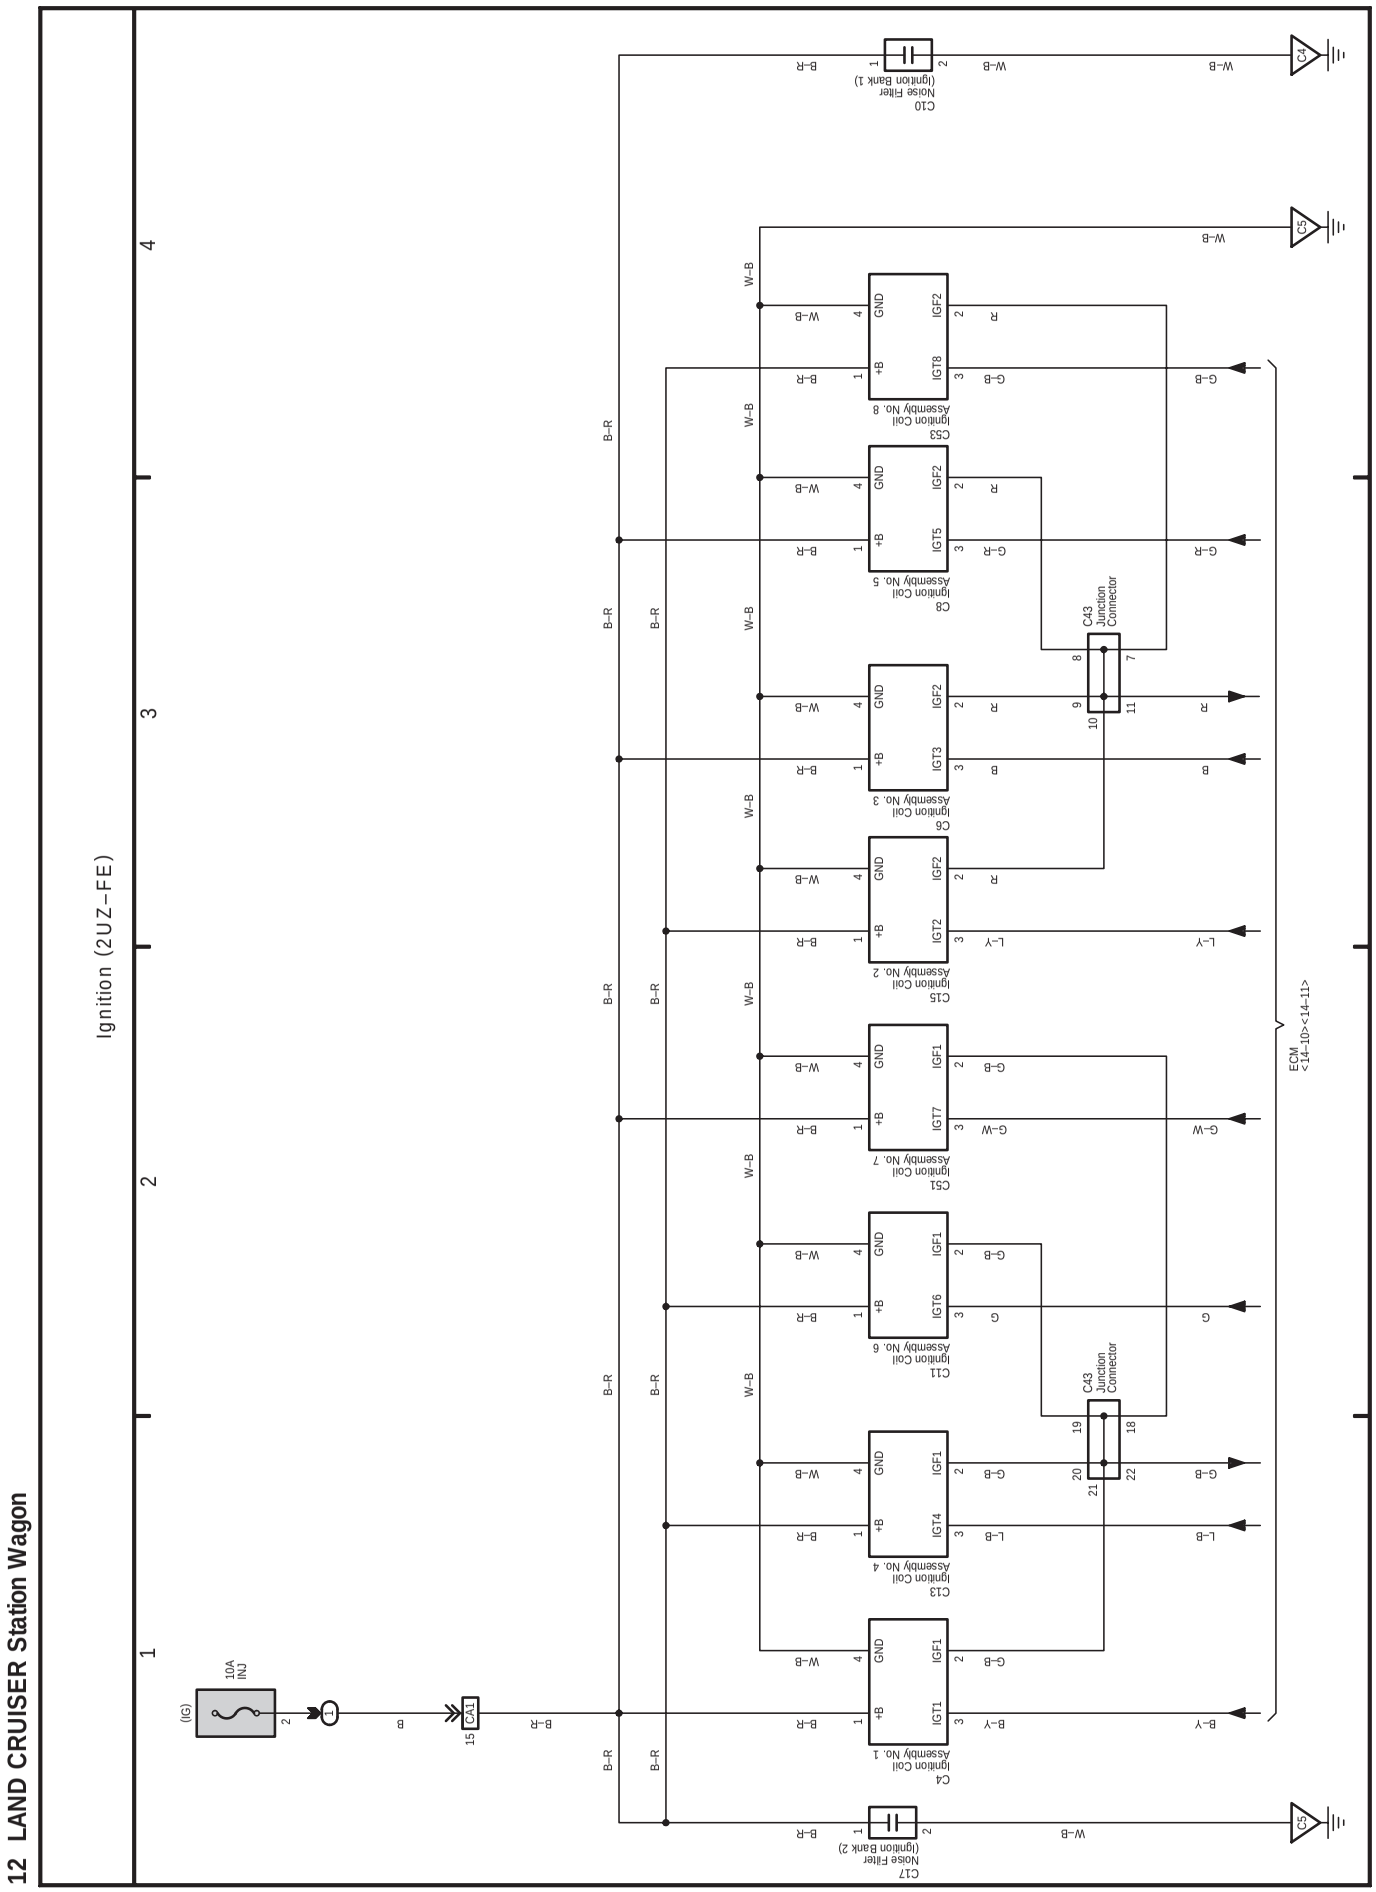

Ignition (2UZ-FE)
12 LAND CRUISER Station Wagon
1
2
3
4
10A
INJ
(IG)
CA1
15
C10
Noise Filter
(Ignition Bank 1)
C17
Noise Filter
(Ignition Bank 2)
C4
Ignition Coil
Assembly No. 1
C13
Ignition Coil
Assembly No. 4
C11
Ignition Coil
Assembly No. 6
C51
Ignition Coil
Assembly No. 7
C15
Ignition Coil
Assembly No. 2
C6
Ignition Coil
Assembly No. 3
C8
Ignition Coil
Assembly No. 5
C53
Ignition Coil
Assembly No. 8
C43
Junction
Connector
C43
Junction
Connector
ECM
<14-10><14-11>
GND
+B
IGF1
IGF2
IGT1
IGT2
IGT3
IGT4
IGT5
IGT6
IGT7
IGT8
C4
C5
B-R
W-B
B-Y
L-Y
L-B
G
G-B
G-R
G-W
R