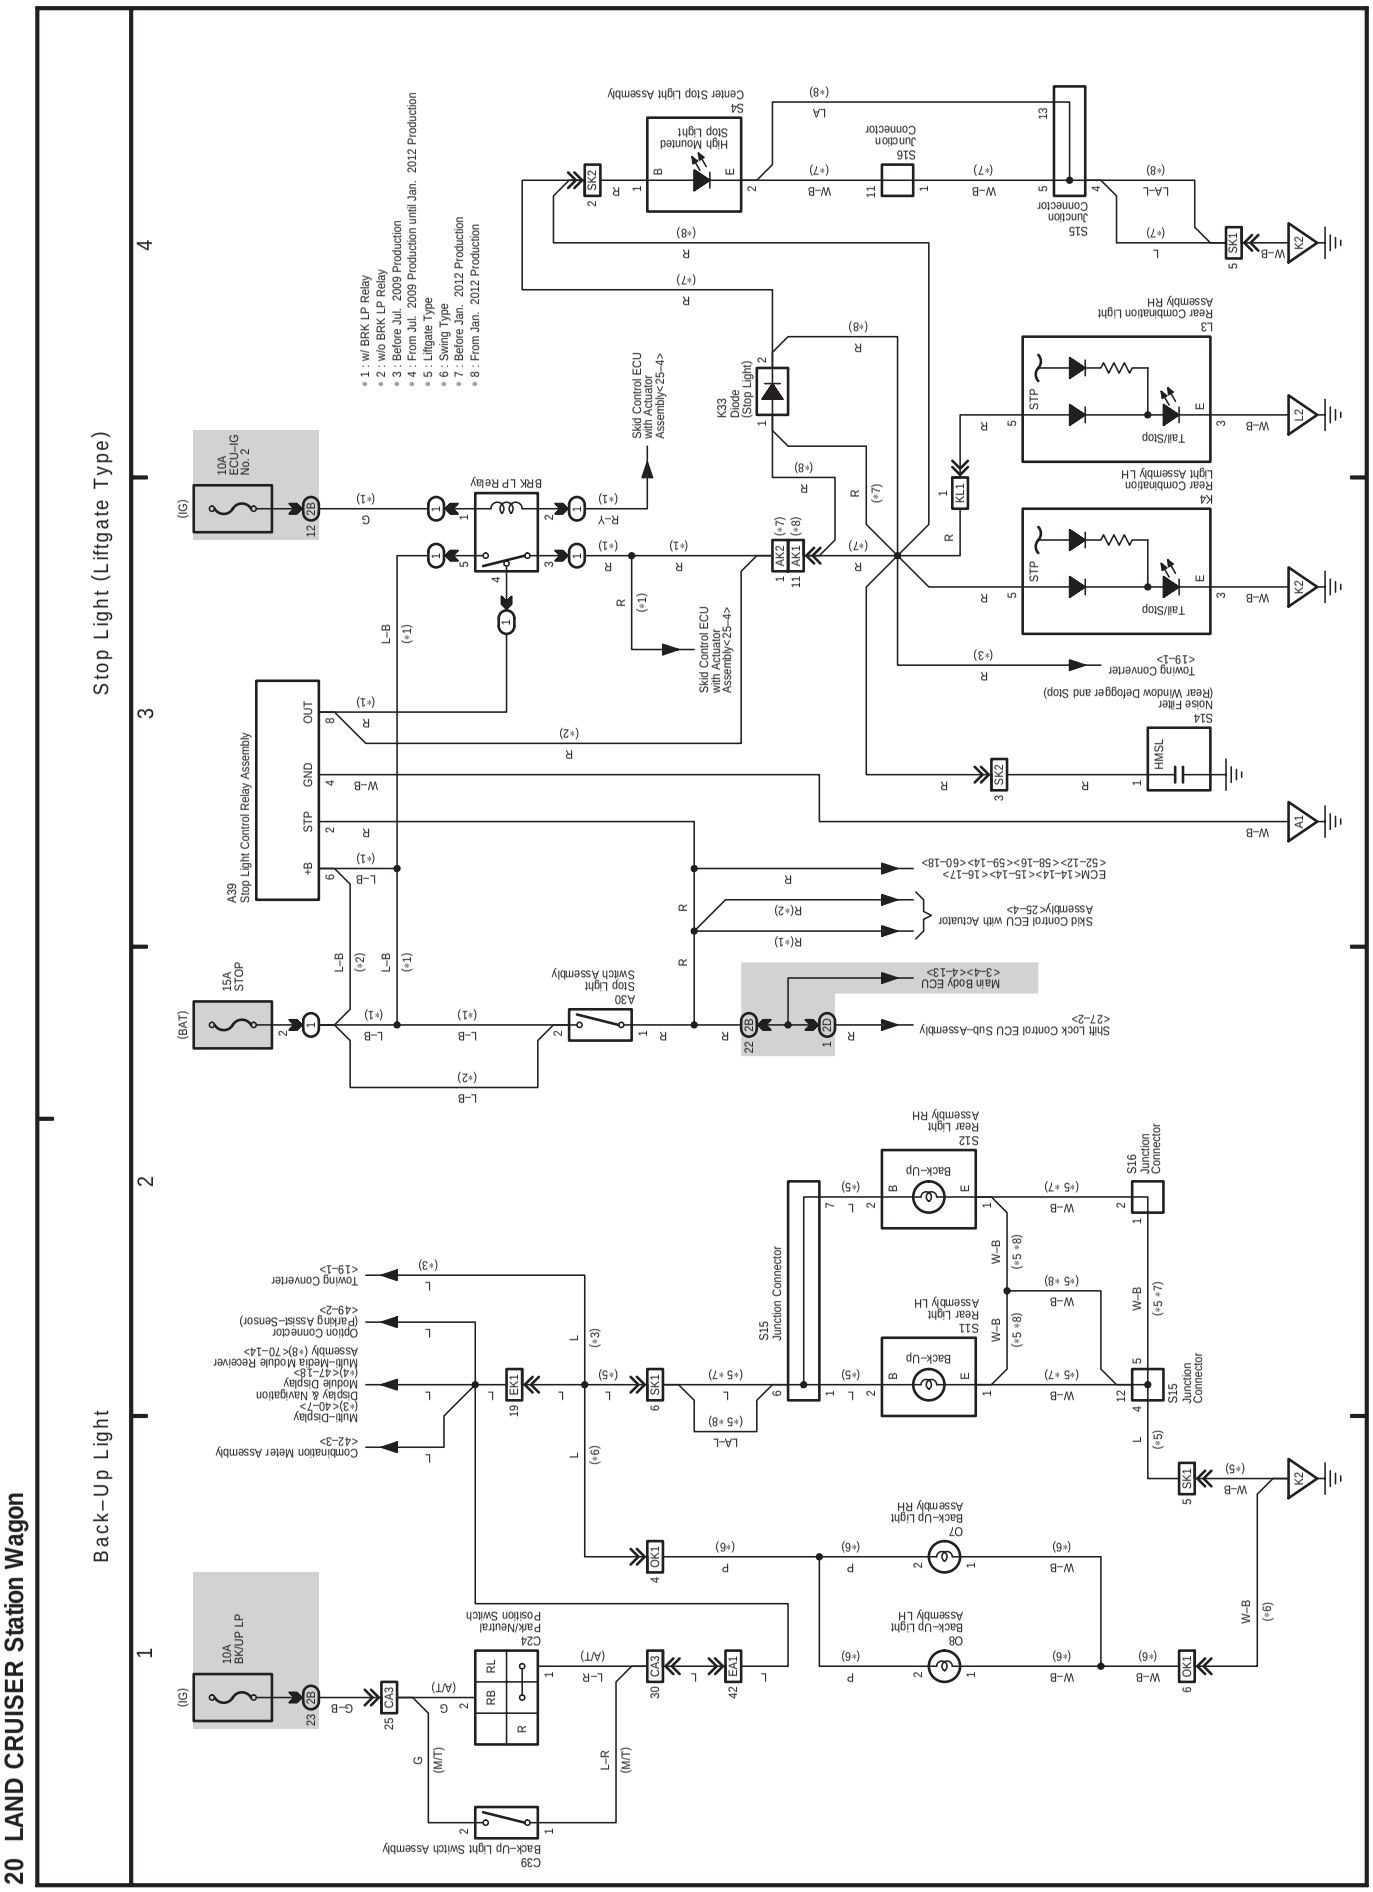

20 LAND CRUISER Station Wagon
Back–Up Light
Stop Light (Liftgate Type)
1
2
3
4
* 1 : w/ BRK LP Relay
* 2 : w/o BRK LP Relay
* 3 : Before Jul. 2009 Production
* 4 : From Jul. 2009 Production until Jan. 2012 Production
* 5 : Liftgate Type
* 6 : Swing Type
* 7 : Before Jan. 2012 Production
* 8 : From Jan. 2012 Production
10A BK/UP LP
10A ECU–IG No. 2
15A STOP
BRK LP Relay
A39 Stop Light Control Relay Assembly
A30 Stop Light Switch Assembly
Skid Control ECU with Actuator Assembly<25–4>
K33 Diode (Stop Light)
Center Stop Light Assembly
High Mounted Stop Light
S4
S15 Junction Connector
S16 Junction Connector
S18 Junction Connector
S14 Noise Filter (Rear Window Defogger and Stop)
HMSL
L3 Rear Combination Light Assembly RH
K4 Rear Combination Light Assembly LH
Tail/Stop
STP
Towing Converter <19–1>
Shift Lock Control ECU Sub–Assembly <27–2>
Main Body ECU <3–4><4–13>
ECM<14–14><15–14><16–17><52–12><58–16><59–14><60–18>
Skid Control ECU with Actuator Assembly<25–4>
S12 Rear Light Assembly RH
S11 Rear Light Assembly LH
Back–Up
Back–Up Light Assembly RH
Back–Up Light Assembly LH
Combination Meter Assembly <42–3>
Multi–Display & Navigation Display Module Display <3><40–7>
Multi–Media Module Receiver Assembly <8><70–14>
Option Connector (Parking Assist–Sensor) <49–2>
Towing Converter <19–1>
C24 Park/Neutral Position Switch
C39 Back–Up Light Switch Assembly
(IG)
(BAT)
(A/T)
(M/T)