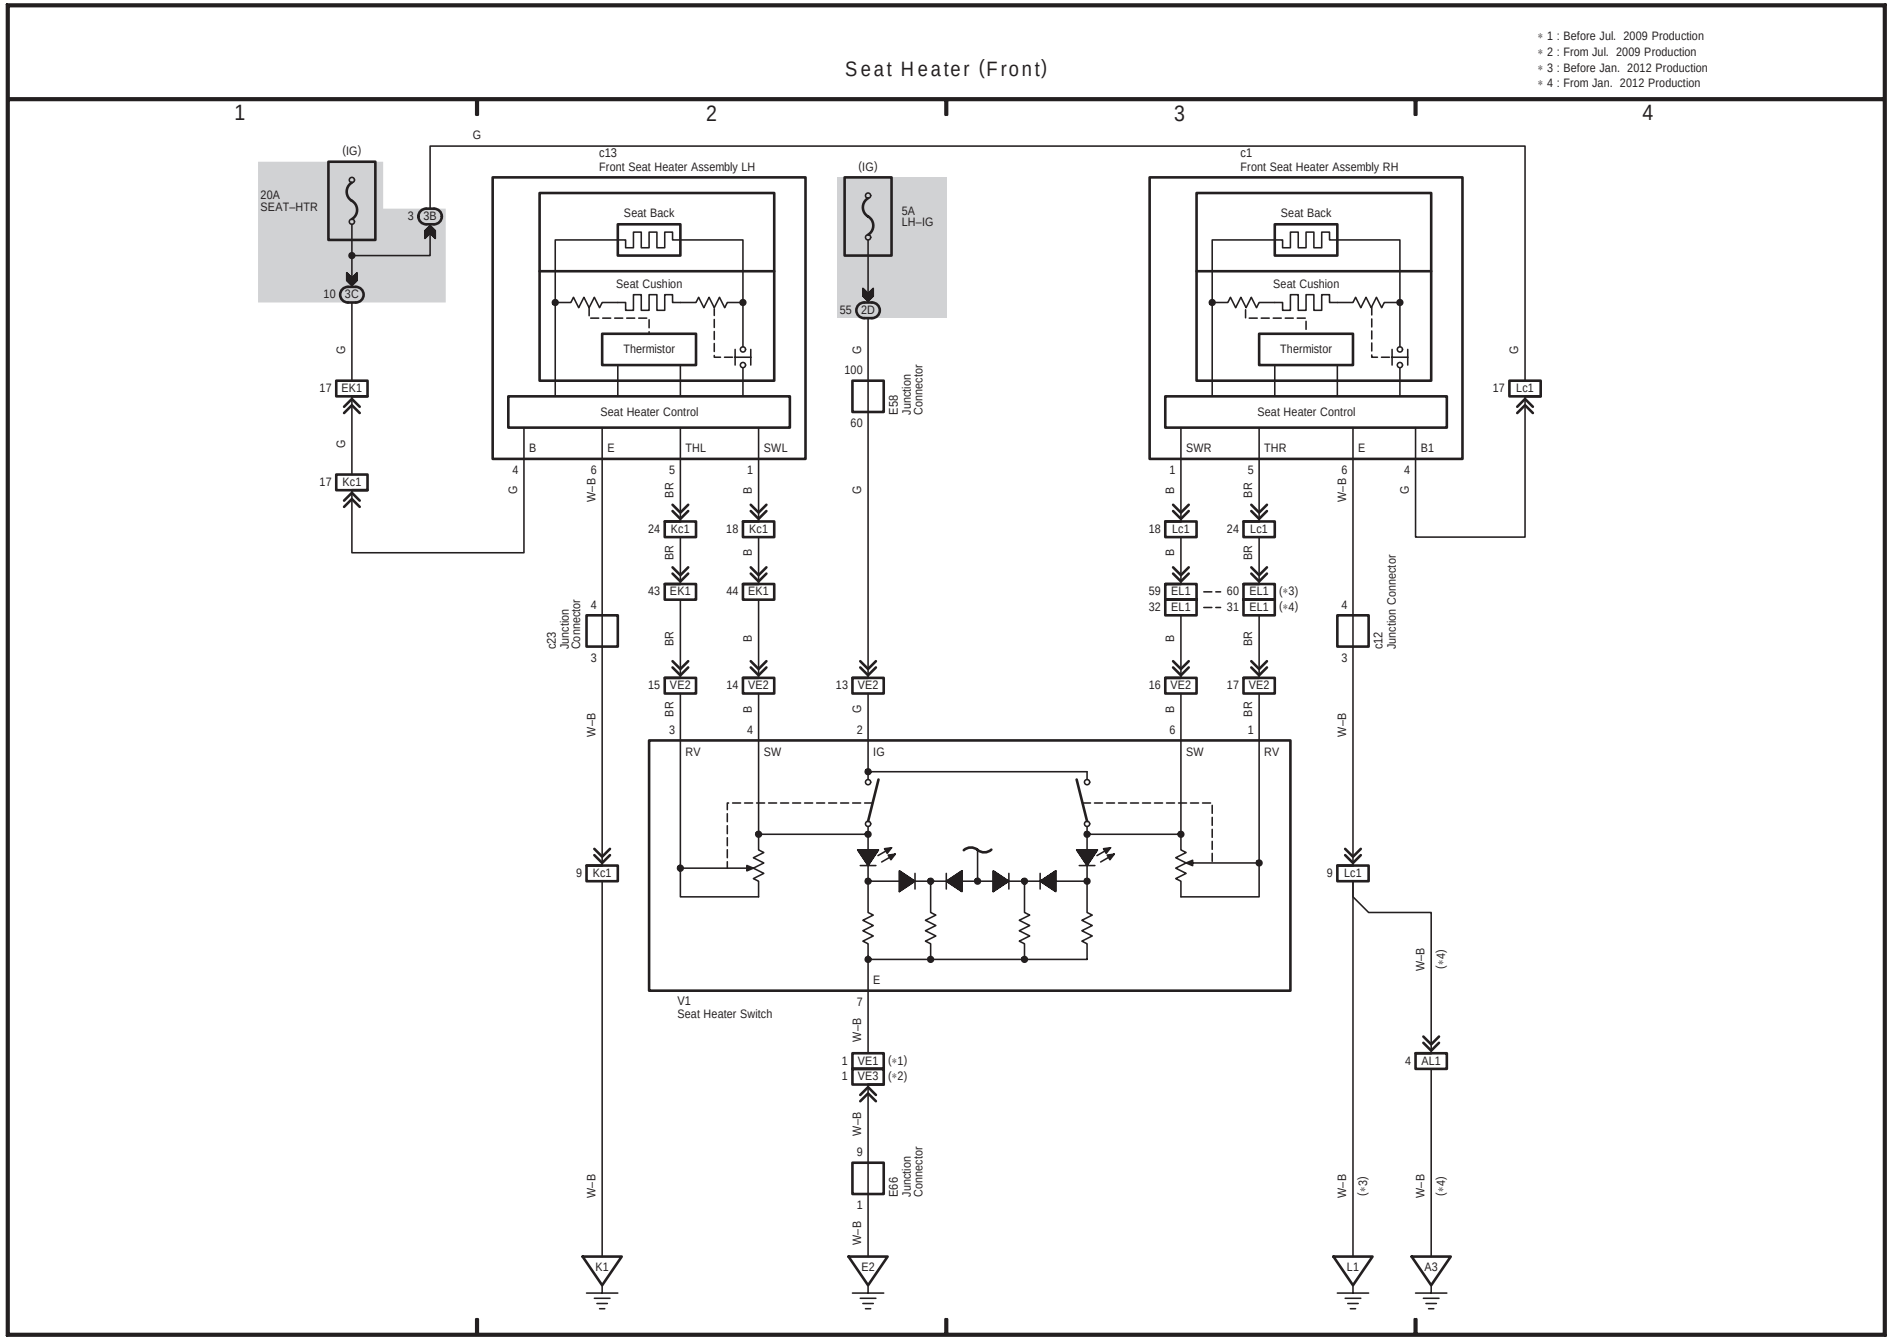

Seat Heater (Front)
* 1 : Before Jul. 2009 Production
* 2 : From Jul. 2009 Production
* 3 : Before Jan. 2012 Production
* 4 : From Jan. 2012 Production
1
2
3
4
(IG)
20A
SEAT–HTR
3B
3
10
3C
G
17
EK1
17
Kc1
c13
Front Seat Heater Assembly LH
Seat Back
Seat Cushion
Thermistor
Seat Heater Control
B
E
THL
SWL
4
6
5
1
W–B
BR
B
24
Kc1
18
Kc1
43
EK1
44
EK1
c23
Junction
Connector
4
3
15
VE2
14
VE2
13
VE2
3
4
2
RV
SW
IG
9
Kc1
W–B
K1
(IG)
5A
LH–IG
55
2D
100
60
E58
Junction
Connector
E56
Junction
Connector
7
1
VE1
(*1)
1
VE3
(*2)
9
1
E2
E
V1
Seat Heater Switch
c1
Front Seat Heater Assembly RH
Seat Back
Seat Cushion
Thermistor
Seat Heater Control
SWR
THR
E
B1
1
5
6
4
18
Lc1
24
Lc1
59
EL1
60
EL1
(*3)
32
EL1
31
EL1
(*4)
16
VE2
17
VE2
6
1
SW
RV
17
Lc1
c12
Junction Connector
4
3
9
Lc1
W–B
(*3)
L1
W–B
(*4)
4
AL1
W–B
(*4)
A3