

(Cont. next page)

Audio System (w/o Stereo Component Amplifier)

∗ 1 : 6 Speaker
∗ 2 : 4 Speaker

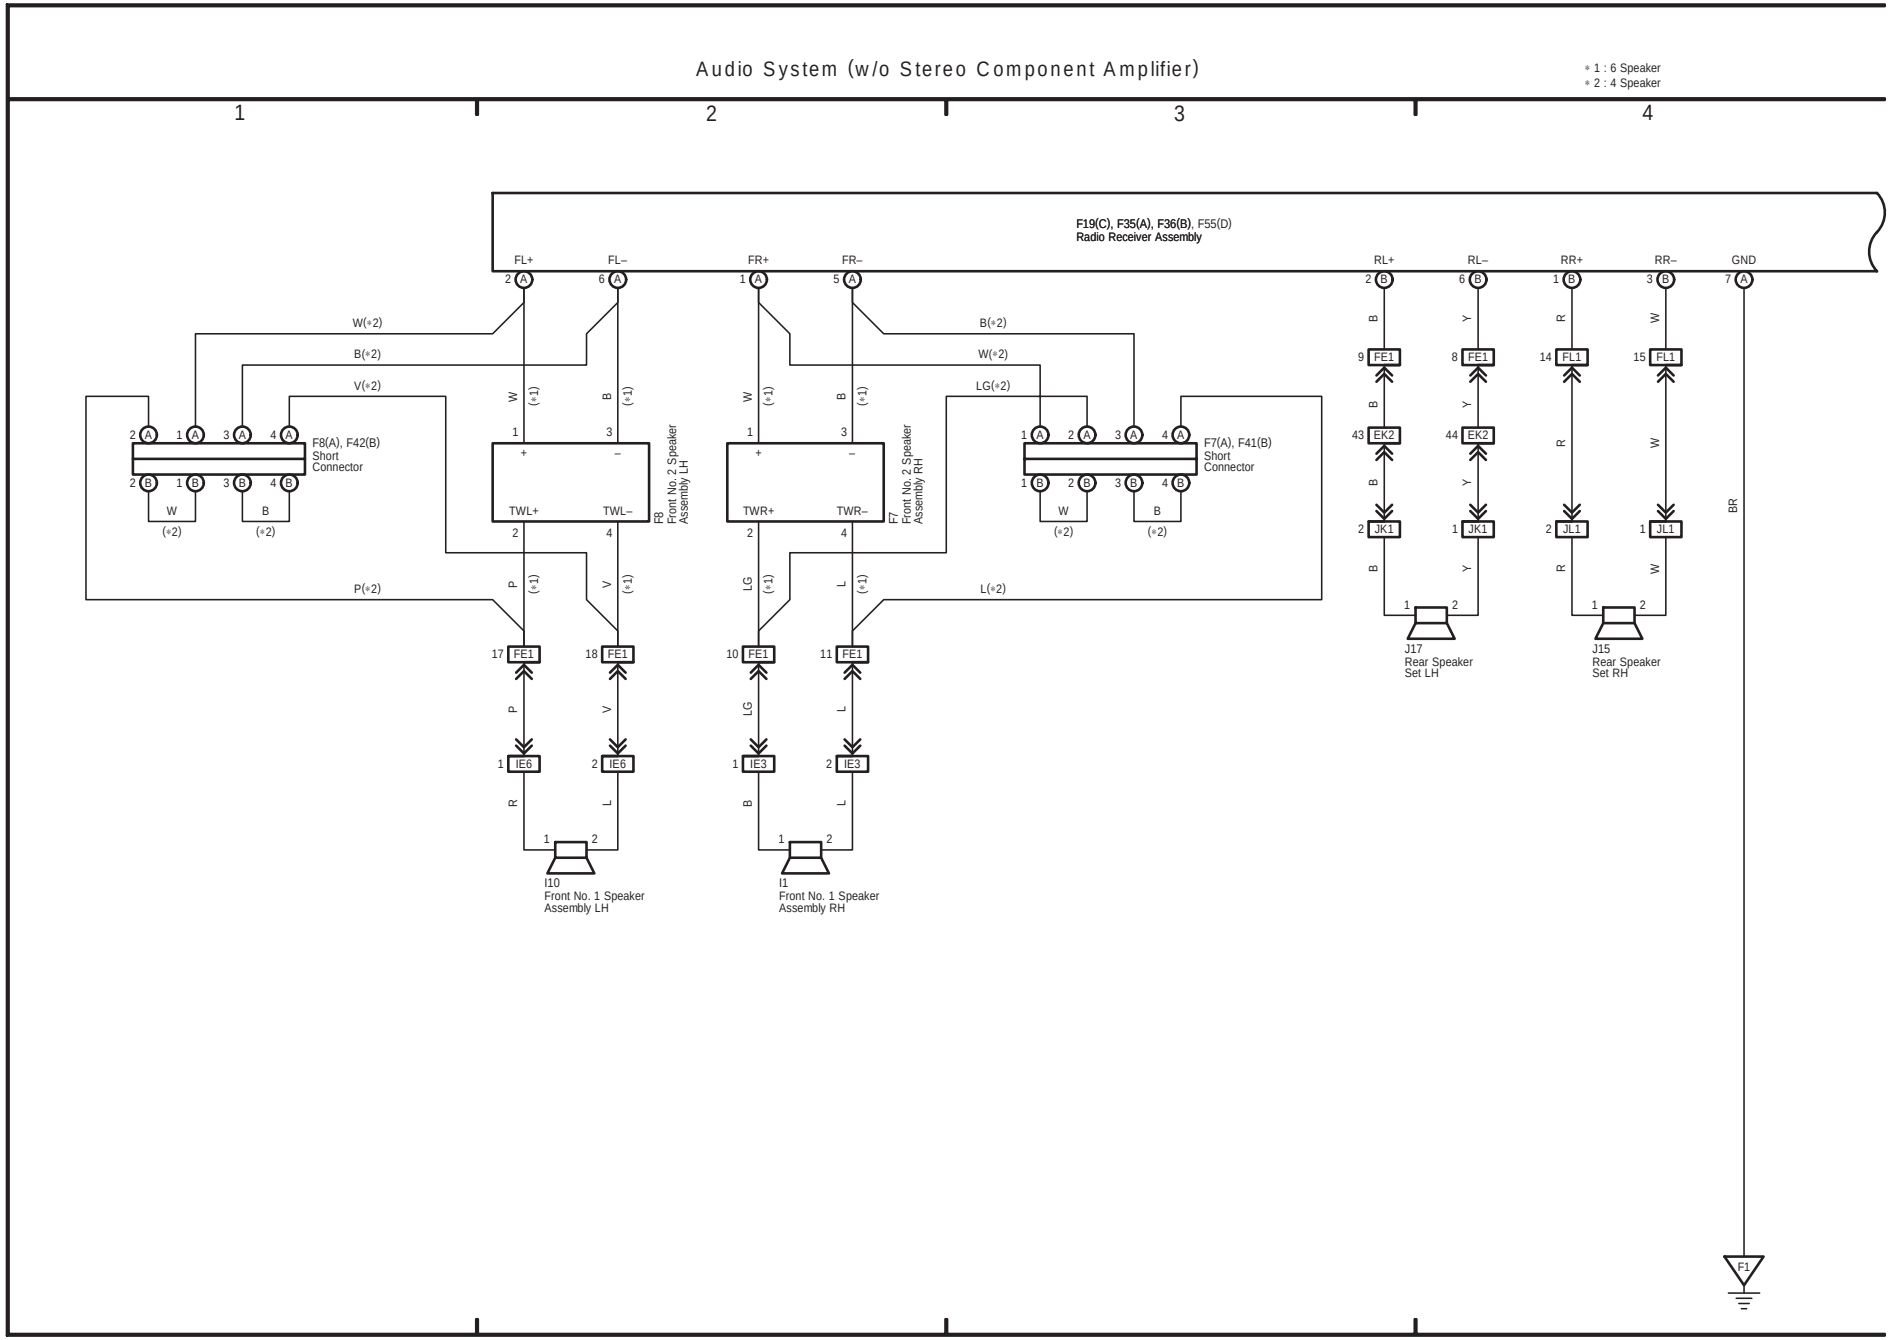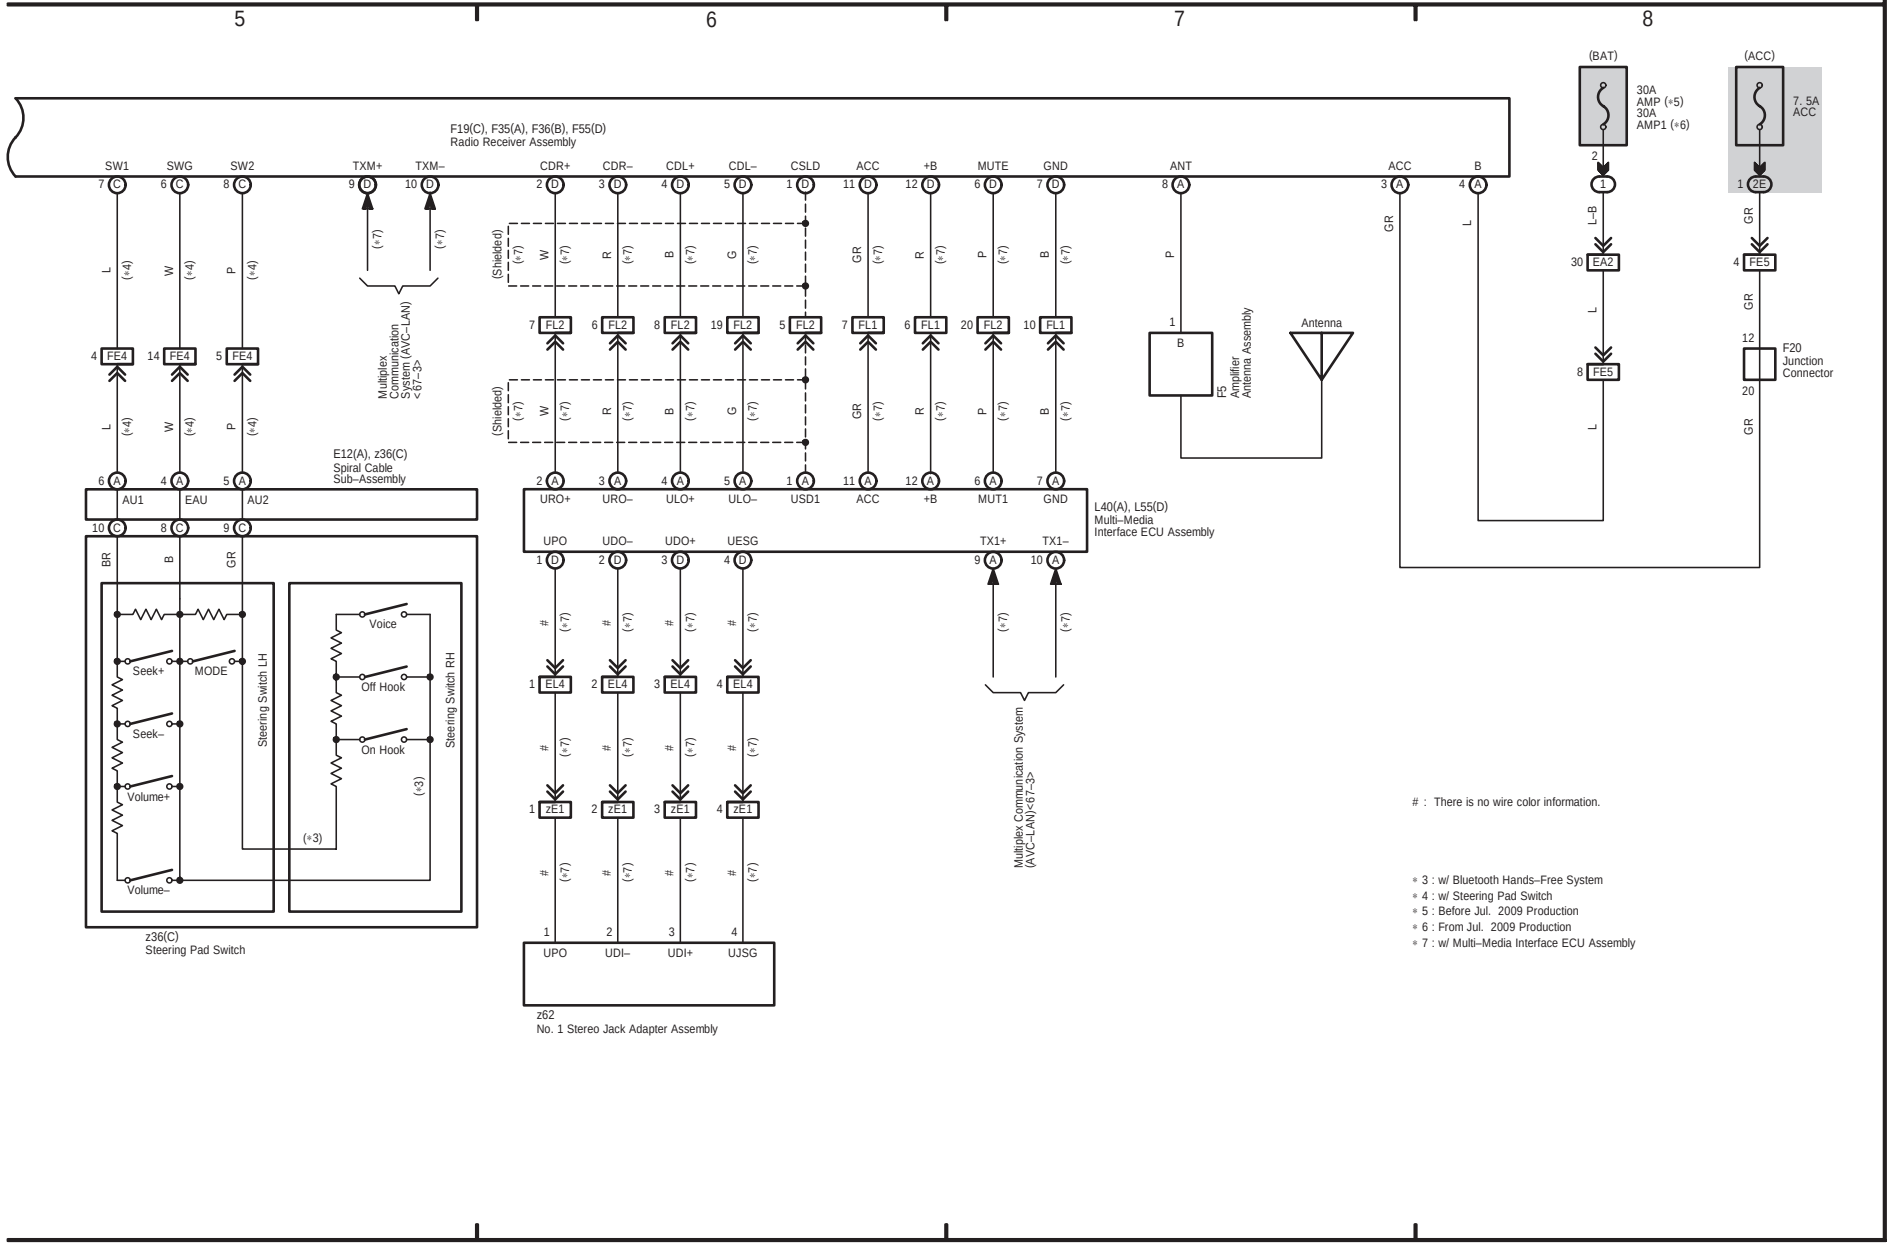


Audio System (w/o Stereo Component Amplifier)
5
6
7
8
F19(C), F35(A), F36(B), F55(D)
Radio Receiver Assembly
SW1
SWG
SW2
TXM+
TXM–
CDR+
CDR–
CDL+
CDL–
CSLD
ACC
+B
MUTE
GND
ANT
ACC
B
(BAT)
(ACC)
30A
AMP (*5)
30A
AMP1 (*6)
7. 5A
ACC
Multiplex
Communication
System (AVC–LAN)
<67–3>
(Shielded)
E12(A), z36(C)
Spiral Cable
Sub–Assembly
AU1
EAU
AU2
URO+
URO–
ULO+
ULO–
USD1
ACC
+B
MUT1
GND
L40(A), L55(D)
Multi–Media
Interface ECU Assembly
UPO
UDO–
UDO+
UESG
TX1+
TX1–
Multiplex Communication System
(AVC–LAN)<67–3>
F5
Amplifier
Antenna Assembly
Antenna
F20
Junction
Connector
Seek+
MODE
Seek–
Volume+
Volume–
Voice
Off Hook
On Hook
Steering Switch LH
Steering Switch RH
(*3)
z36(C)
Steering Pad Switch
UPO
UDI–
UDI+
UJSG
z62
No. 1 Stereo Jack Adapter Assembly
: There is no wire color information.
* 3 : w/ Bluetooth Hands–Free System
* 4 : w/ Steering Pad Switch
* 5 : Before Jul. 2009 Production
* 6 : From Jul. 2009 Production
* 7 : w/ Multi–Media Interface ECU Assembly