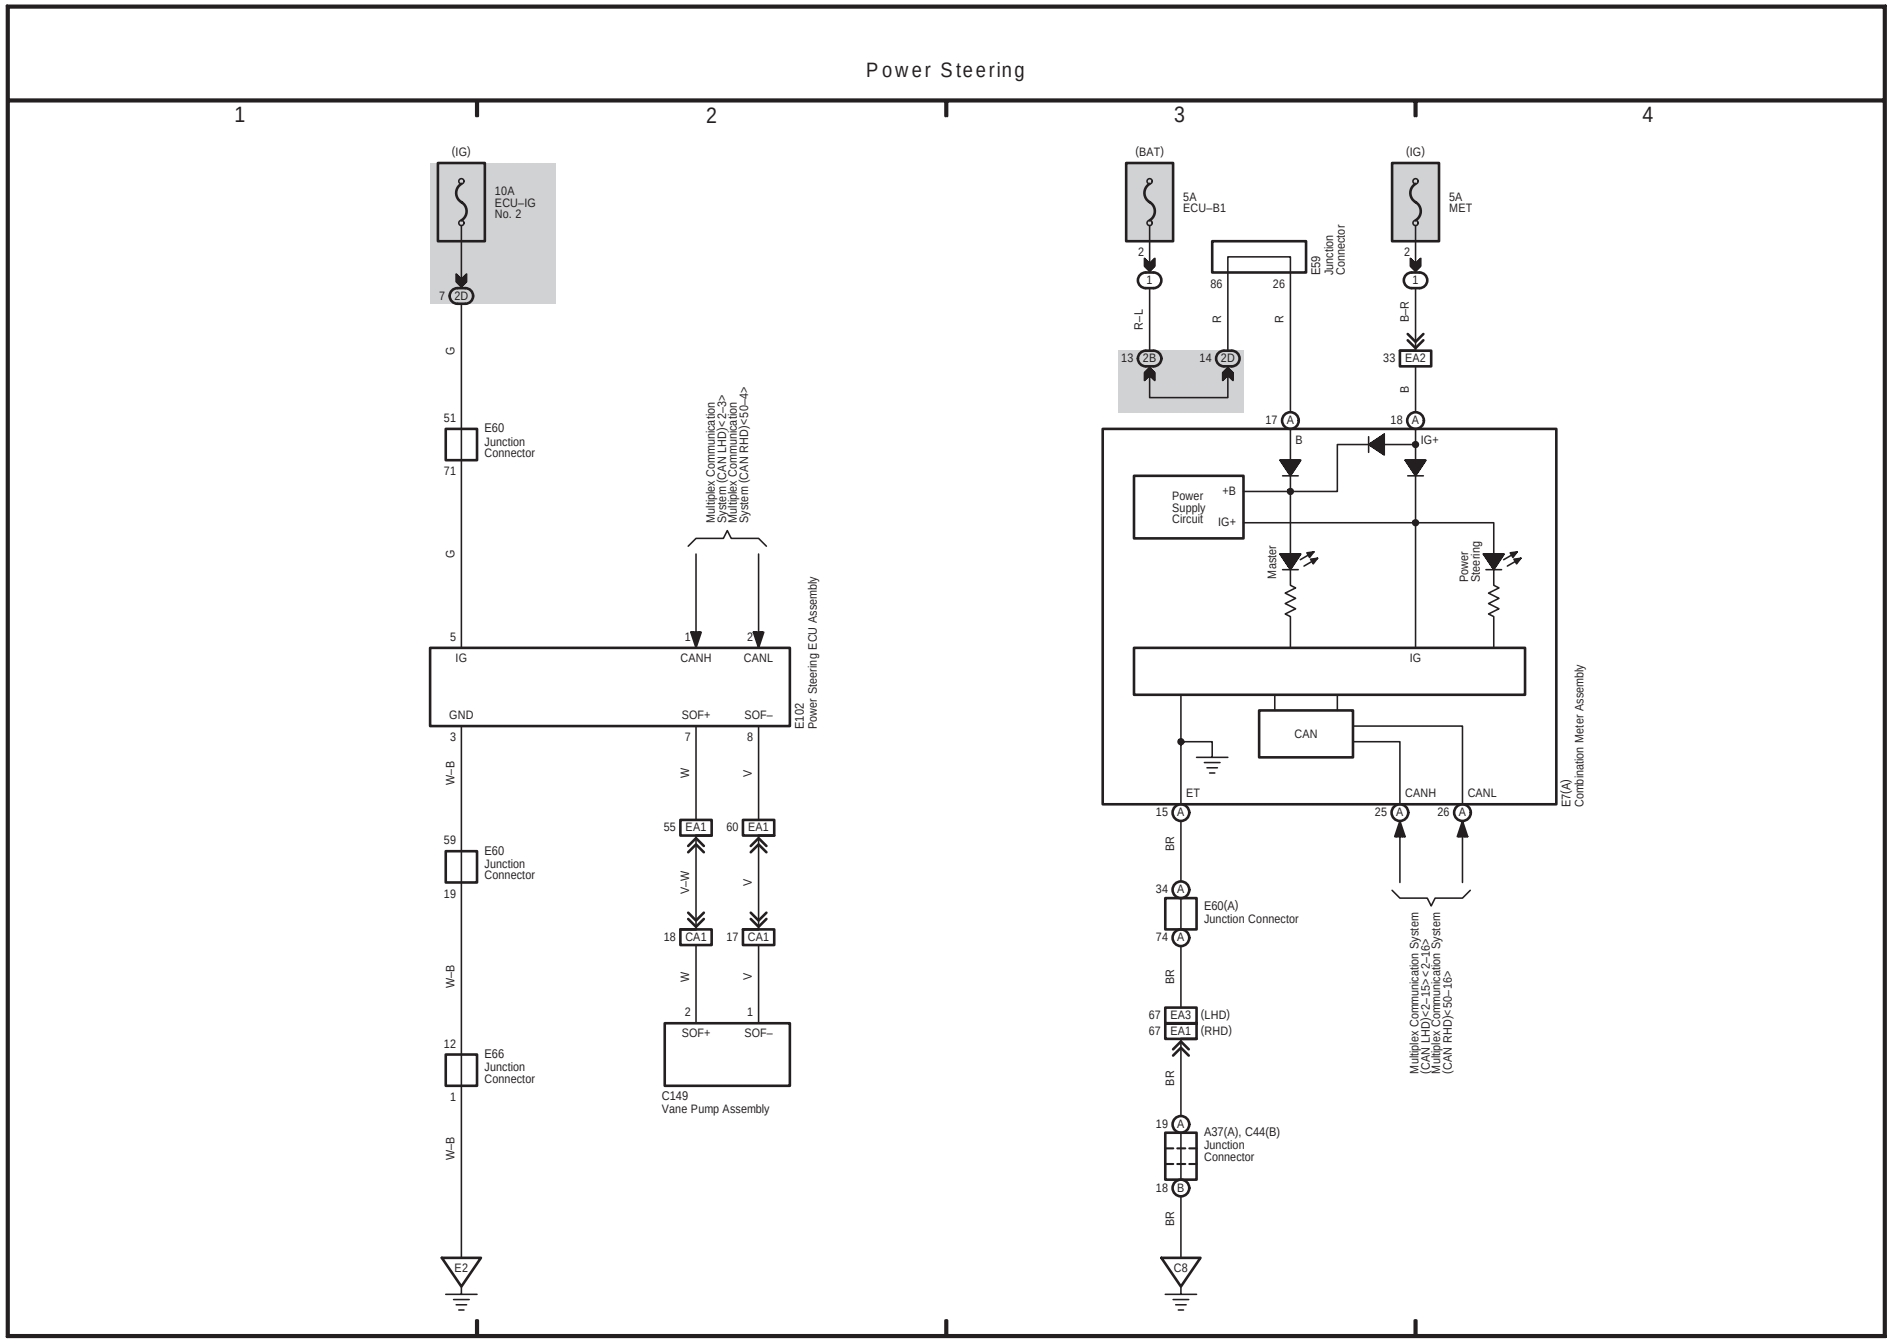

Power Steering
1
2
3
4
(IG)
10A
ECU–IG
No. 2
7 2D
G
51
E60
Junction
Connector
71
G
5
IG
GND
3
W–B
59
E60
Junction
Connector
19
W–B
12
E66
Junction
Connector
1
W–B
E2
Multiplex Communication
System (CAN LHD)<2–3>
Multiplex Communication
System (CAN RHD)<50–4>
1
CANH
2
CANL
E102
Power Steering ECU Assembly
7
W
8
V
55 EA1
60 EA1
V–W
V
18 CA1
17 CA1
W
V
2
1
SOF+
SOF–
C149
Vane Pump Assembly
(BAT)
5A
ECU–B1
2
1
R–L
13 2B
14 2D
E59
Junction
Connector
86
R
26
R
(IG)
5A
MET
2
1
B–R
33 EA2
B
17 A
18 A
B
IG+
Power
Supply
Circuit
+B
IG+
Master
Power
Steering
IG
CAN
ET
CANH
CANL
E7(A)
Combination Meter Assembly
15 A
25 A
26 A
BR
34 A
E60(A)
Junction Connector
74 A
BR
67 EA3 (LHD)
67 EA1 (RHD)
BR
19 A
A37(A), C44(B)
Junction
Connector
18 B
BR
C8
Multiplex Communication System
(CAN LHD)<25–21>
Multiplex Communication System
(CAN RHD)<50–18>