



(BAT)
5A
ECU–B1
2
1
R–L
13
2B
14
2D
R
86
E59
Junction Connector
66
R
4
+B
(IG)
10A
A/C IG
9
2D
G
91
E58
Junction Connector
81
G
1
B
Air Conditioning Amplifier
Cooler Thermistor
Cooler Magnet Valve
2A
Diode
Noise Filter
Cooler Control Switch
M
Cooler Blower Fan
L
COLI
E90
Cooling Box Assembly
6
5
W–B
W
4
E66
Junction Connector
1
33
B
(w/ Rear A/C)
15
C
(w/o Rear A/C)
COOL
E36(B), E81(C)
A/C Amplifier Assembly
W–B
E2


E 36
White

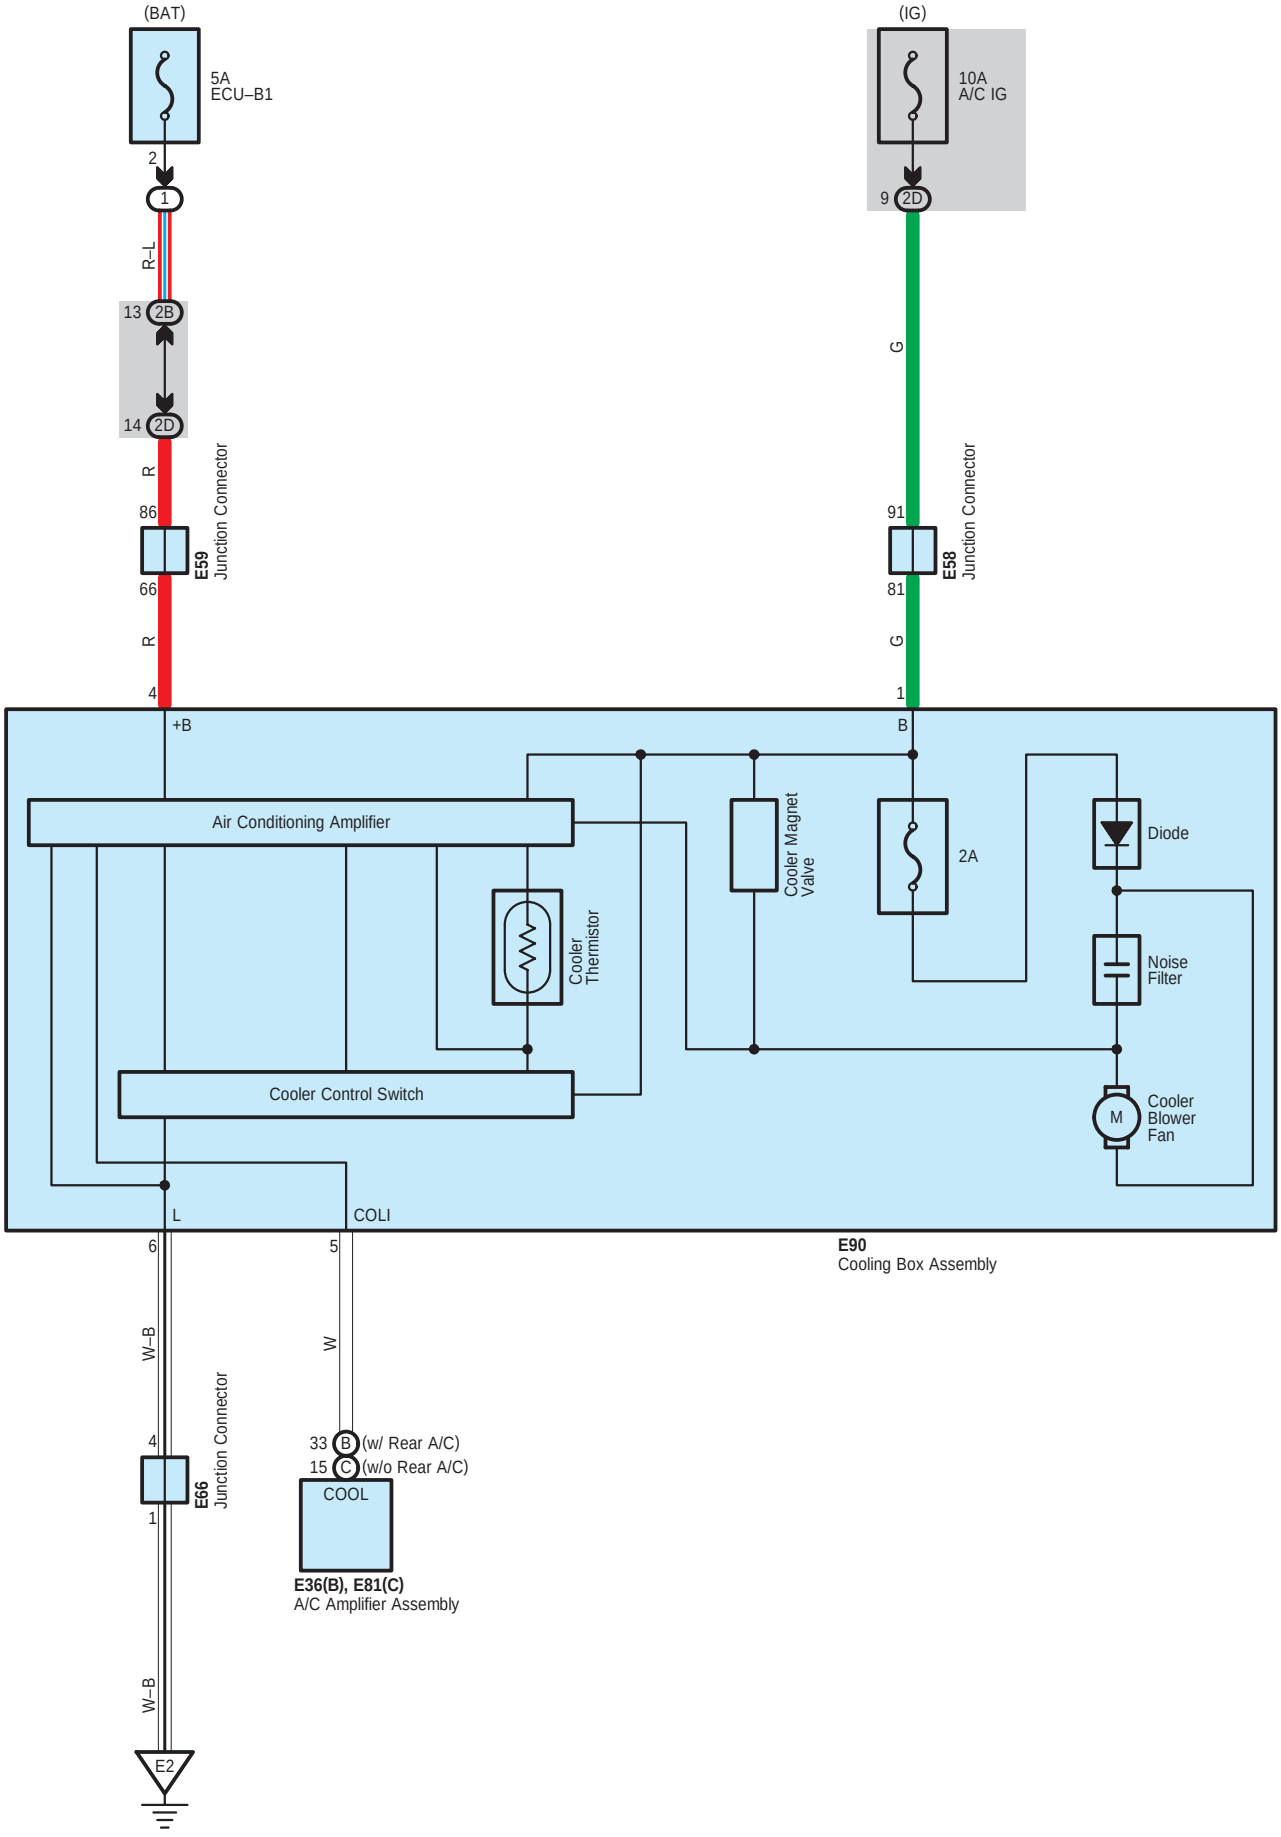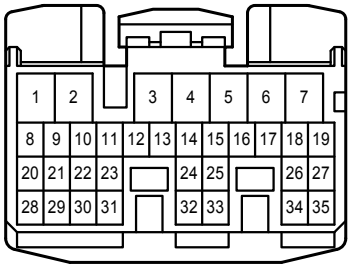


E 58

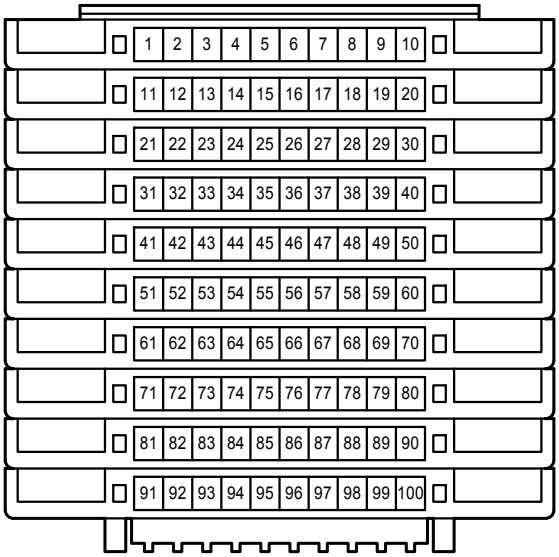


E 59

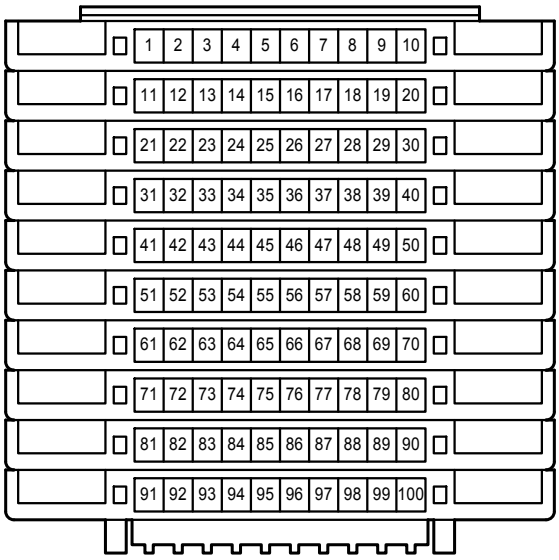


E 66
White

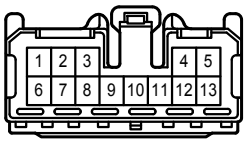


E 81
White

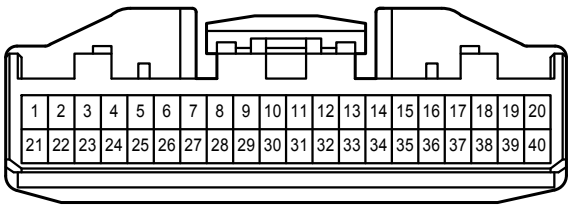

E 90
White



2B
White

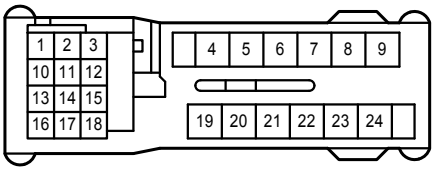

2D
White

