




(BAT)
5A
ECU–B2
2
1
R–W
15 AK2
R
3 Kc1
R
8 B
SYSB
(IG)
5A
ECU–IG
No. 1
10 2C
G
(*3)
2 Kc1
G
(*3)
4 B
IG
c14(A), c15(B)
Front Position Control ECU
and Switch Assembly LH
RCL–
RCL+
LFT–
LFT+
SLD–
SLD+
FRV–
FRV+
10 A
8 A
9 A
7 A
3 A
2 A
4 A
6 A
Y
GR
W
G
P
B
LG
R
1
2
M
c20
Front Power Seat Reclining
Position Motor Assembly LH
c18
Front Power Seat Lift
Position Motor Assembly LH
c17
Front Power Seat Slide
Position Motor Assembly LH
c19
Front Power Seat Vertical
Position Motor Assembly LH

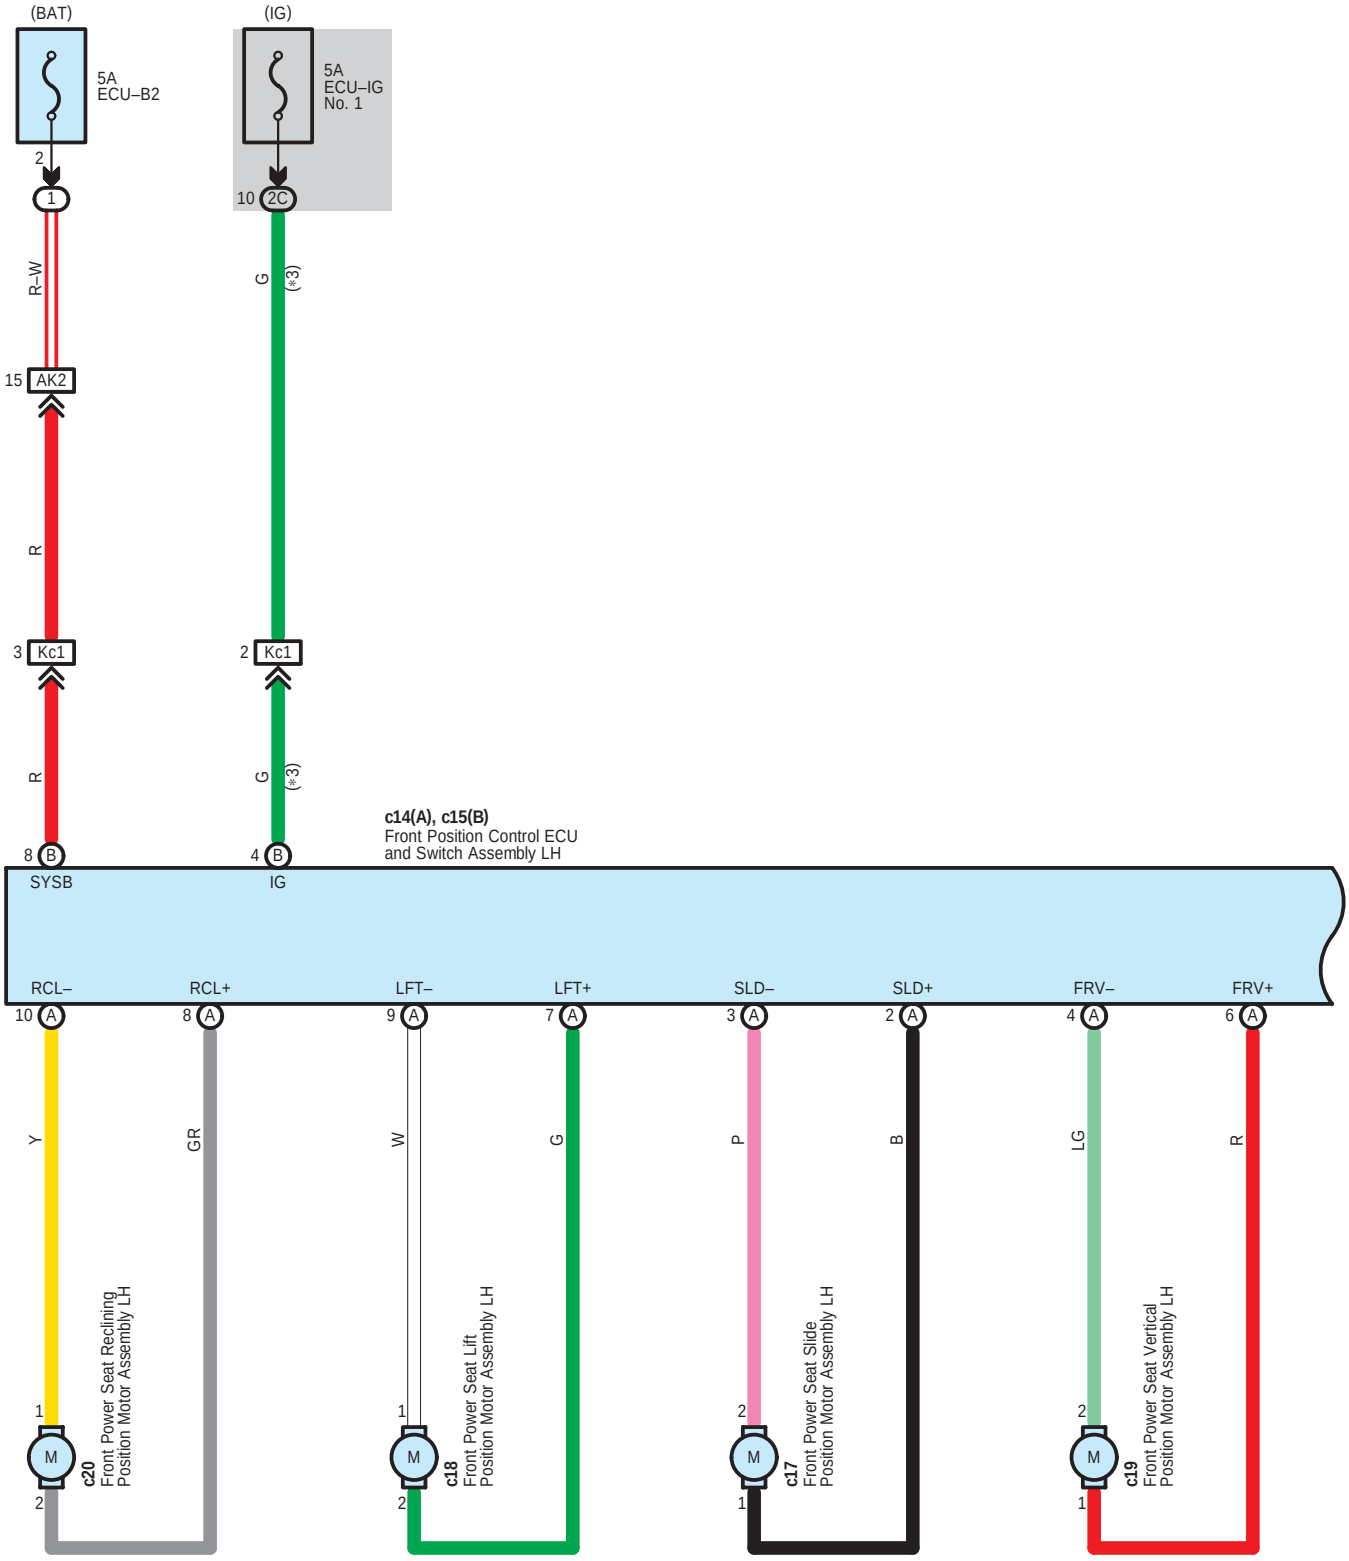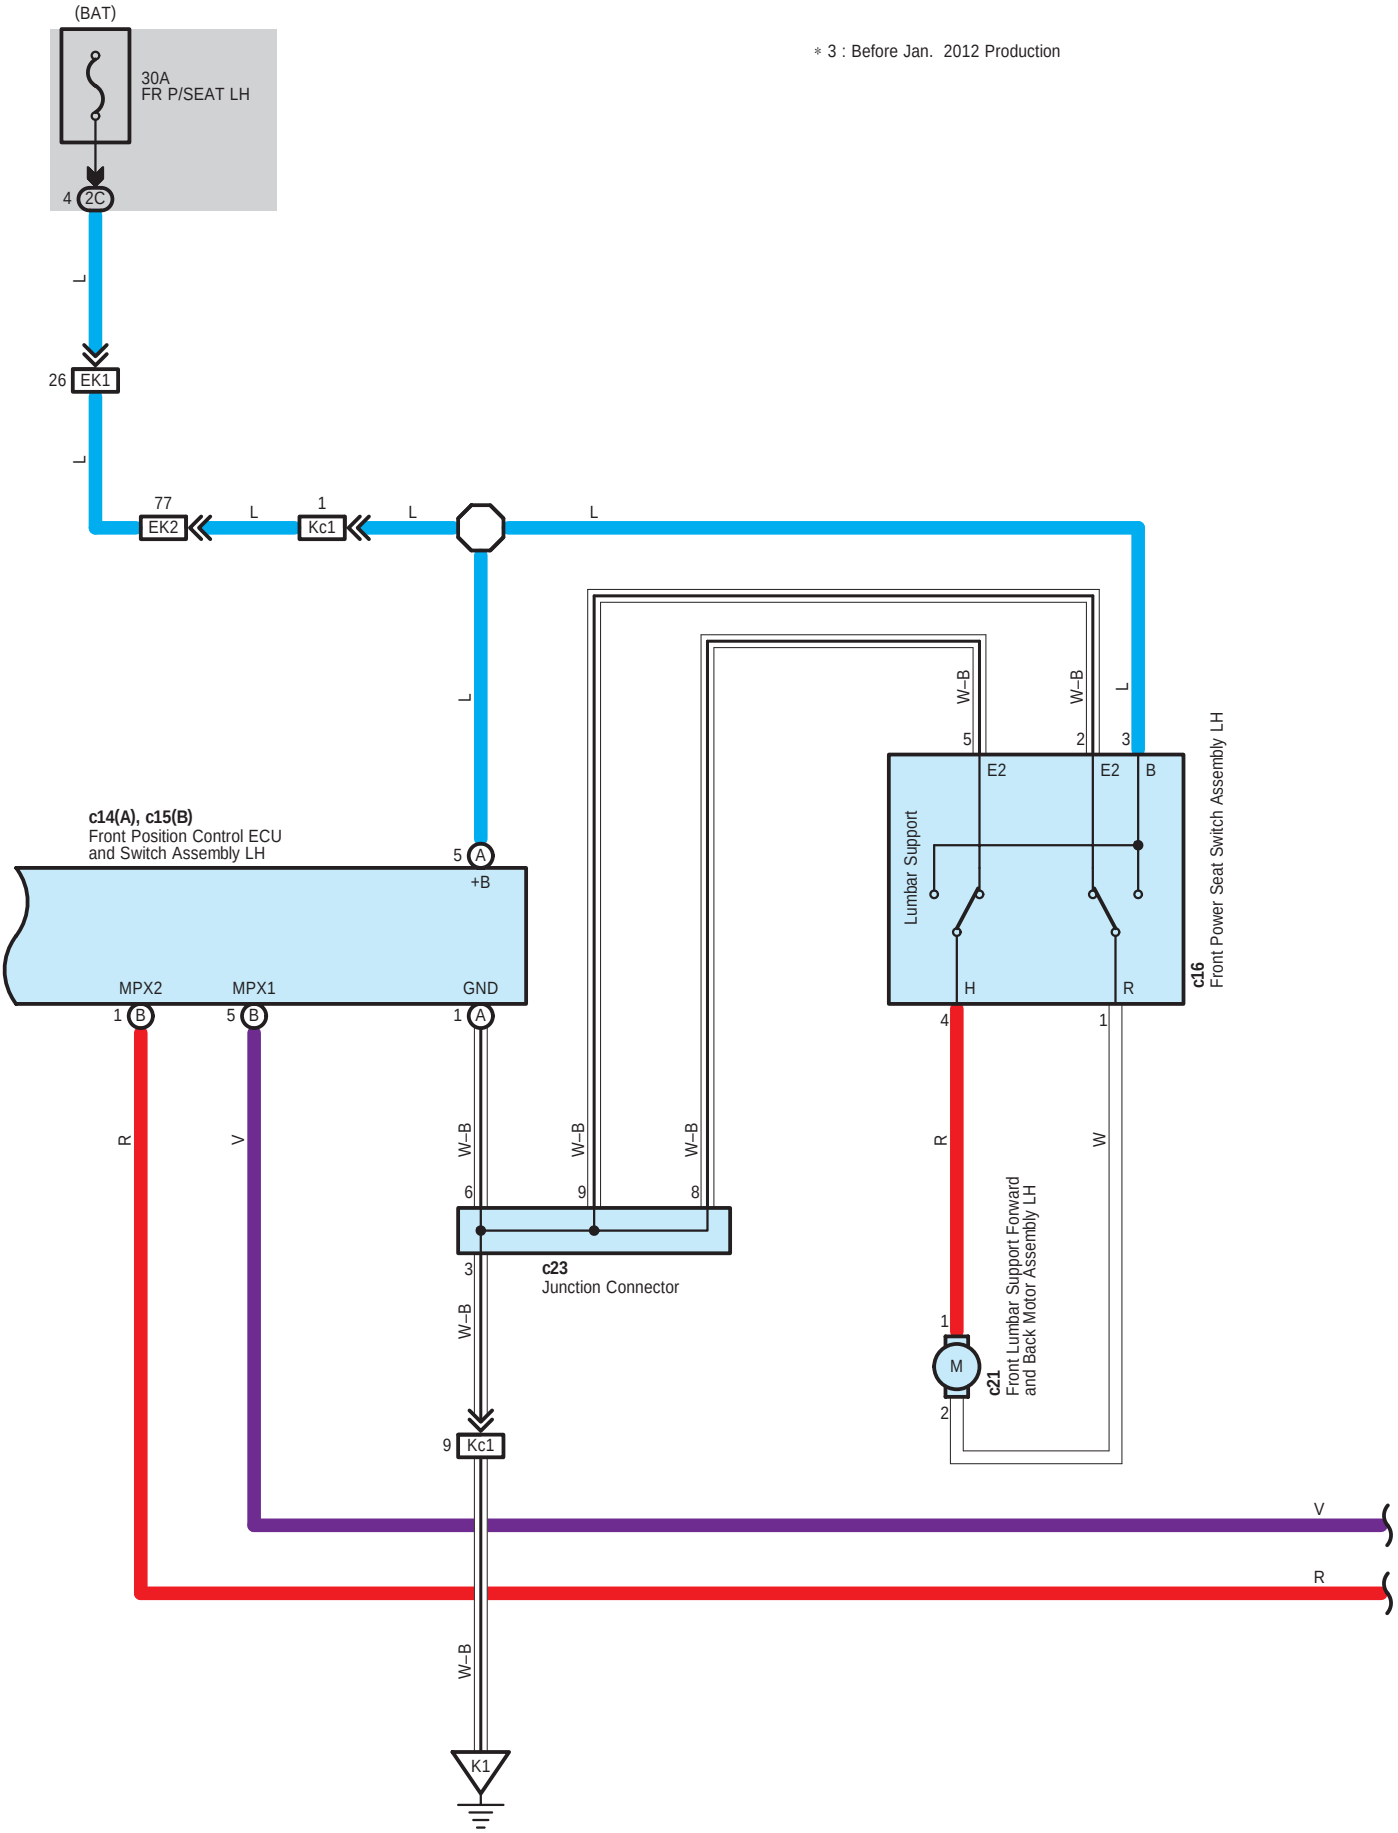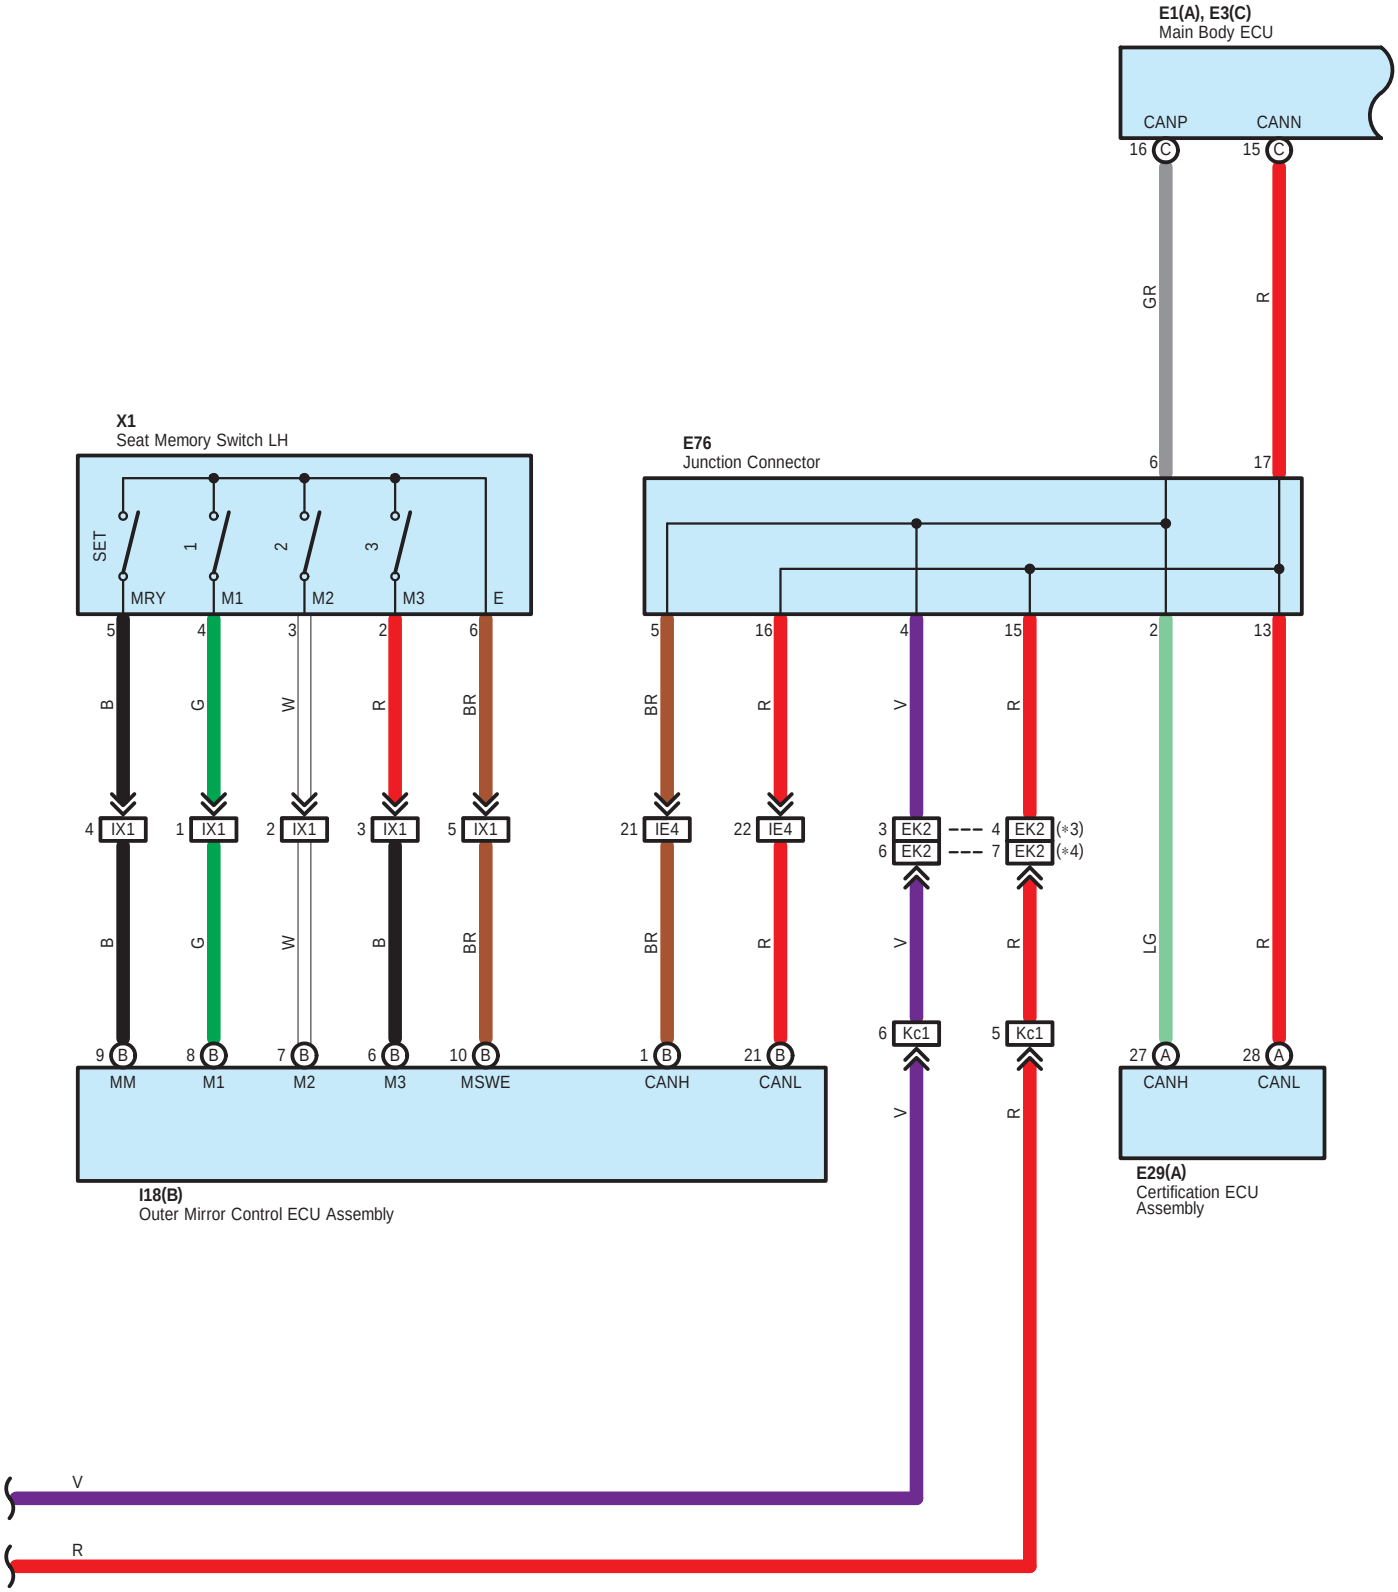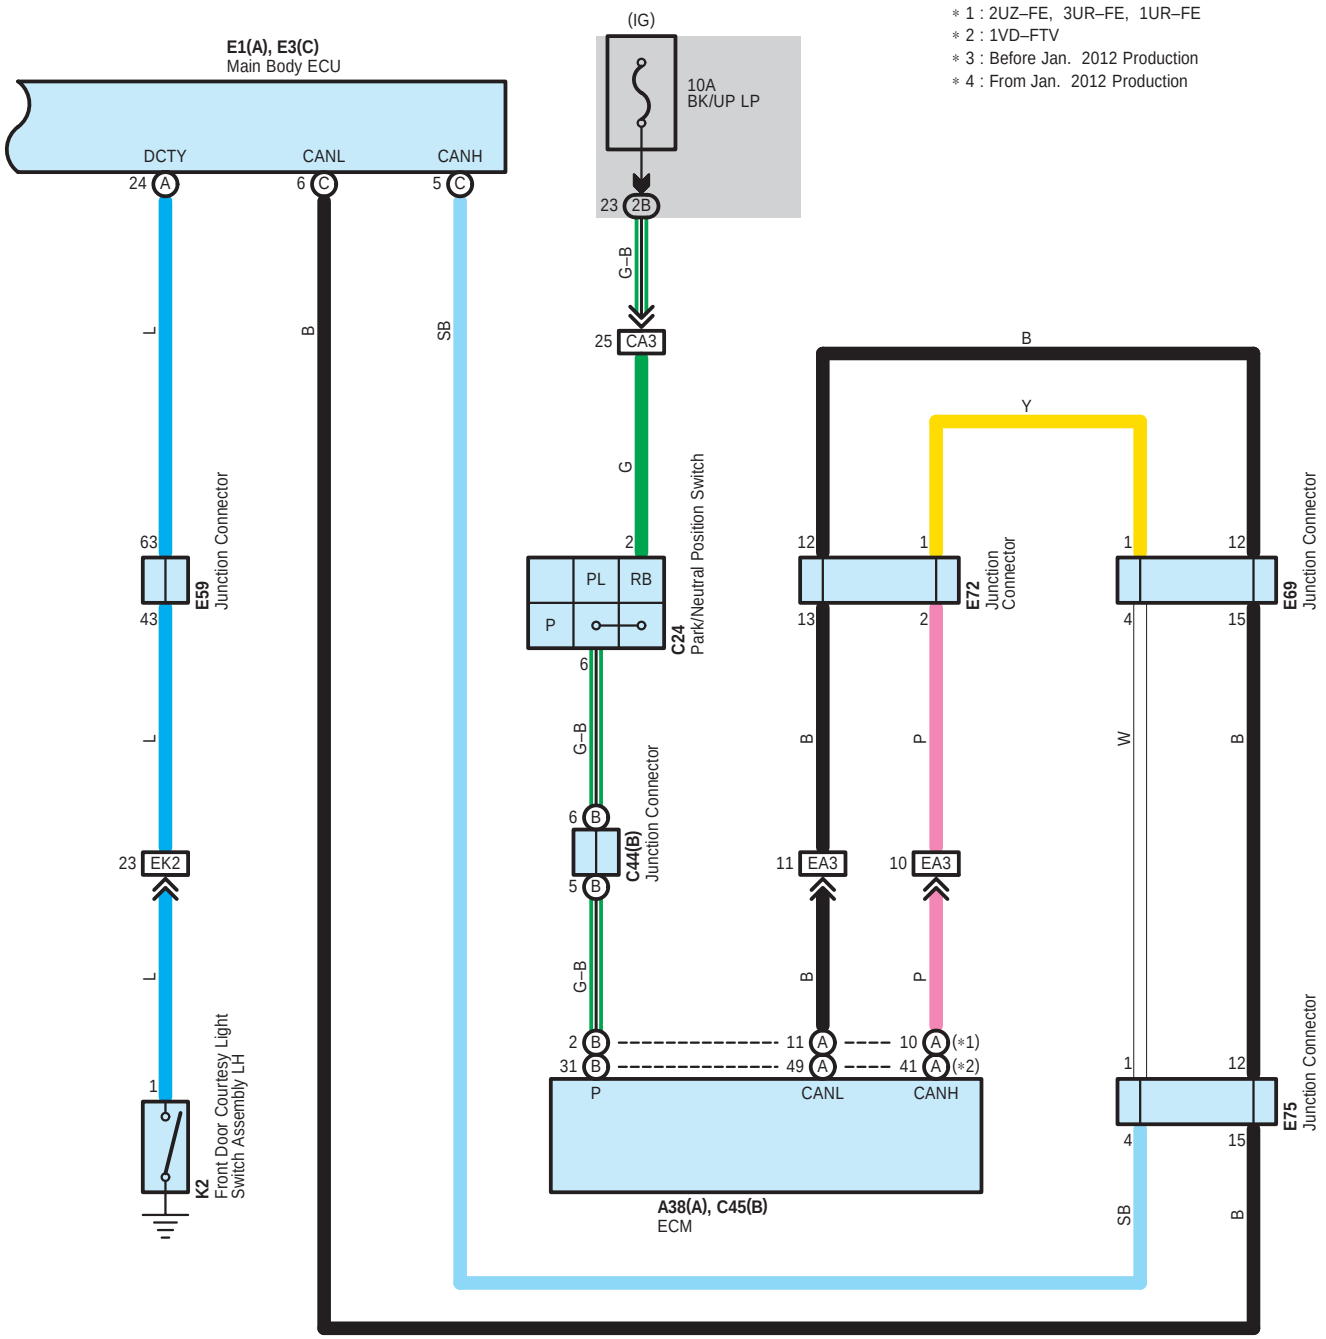


∗ 3 : Before Jan. 2012 Production



E1(A), E3(C)
Main Body ECU
CANP
CANN
16 C
15 C
GR
R
X1
Seat Memory Switch LH
SET
1
2
3
MRY
M1
M2
M3
E
E76
Junction Connector
6
17
5
4
3
2
6
5
16
4
15
2
13
B
G
W
R
BR
BR
R
V
R
LG
R
4 IX1
1 IX1
2 IX1
3 IX1
5 IX1
21 IE4
22 IE4
3 EK2
6 EK2
4 EK2 (*3)
7 EK2 (*4)
6 Kc1
5 Kc1
9 B
8 B
7 B
6 B
10 B
1 B
21 B
27 A
28 A
MM
M1
M2
M3
MSWE
CANH
CANL
CANH
CANL
I18(B)
Outer Mirror Control ECU Assembly
E29(A)
Certification ECU
Assembly
V
R


∗ 1 : 2UZ–FE, 3UR–FE, 1UR–FE
∗ 2 : 1VD–FTV
∗ 3 : Before Jan. 2012 Production
∗ 4 : From Jan. 2012 Production
E1(A), E3(C)
Main Body ECU
DCTY
CANL
CANH
24 A
6 C
5 C
(IG)
10A
BK/UP LP
23 2B
G–B
25 CA3
G
2
PL
RB
P
C24
Park/Neutral Position Switch
6
G–B
6 B
5 B
C44(B)
Junction Connector
G–B
2 B
31 B
P
11 A
49 A
CANL
10 A (∗1)
41 A (∗2)
CANH
A38(A), C45(B)
ECM
L
B
SB
63
43
E59
Junction Connector
L
23 EK2
L
1
K2
Front Door Courtesy Light
Switch Assembly LH
B
Y
12
1
13
2
E72
Junction
Connector
B
P
11 EA3
10 EA3
B
P
1
12
4
15
E69
Junction Connector
W
B
1
12
4
15
E75
Junction Connector
SB
B


A 38
Black

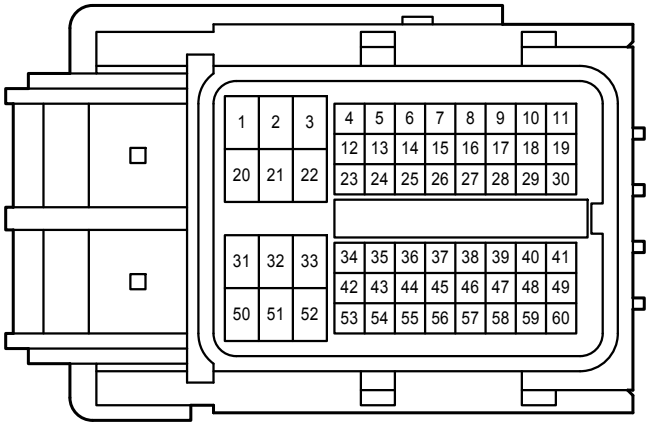


C 24
Gray

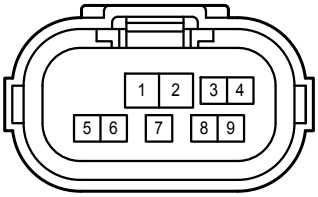


C 44
Blue

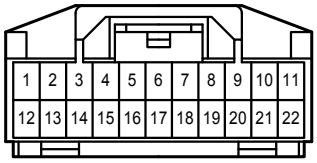


C 45
Black

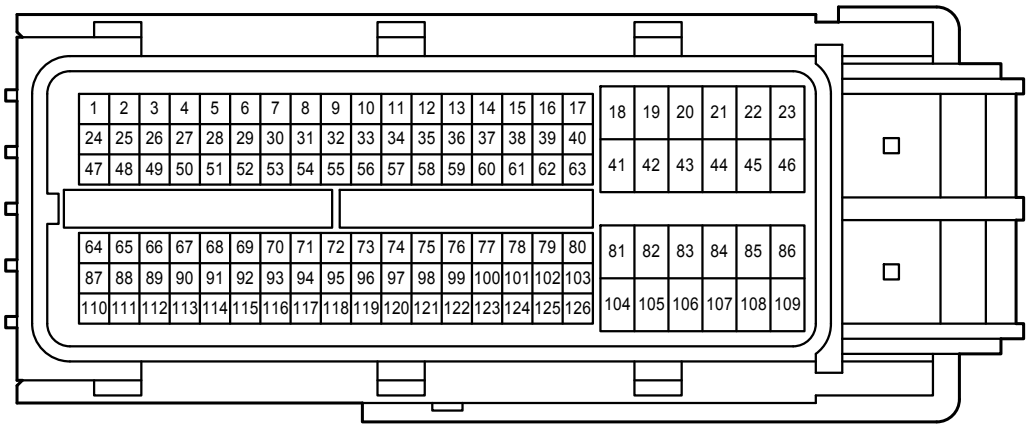


E 1
White

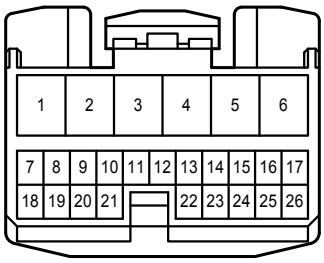


E 3
White

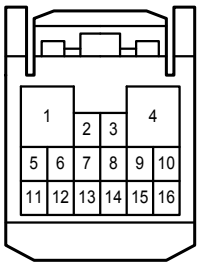


E 29
White

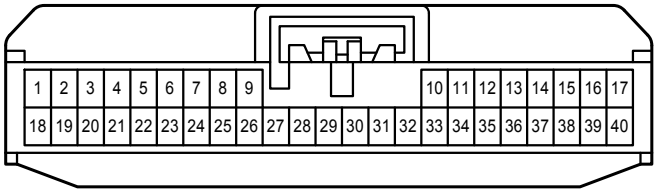


E 59

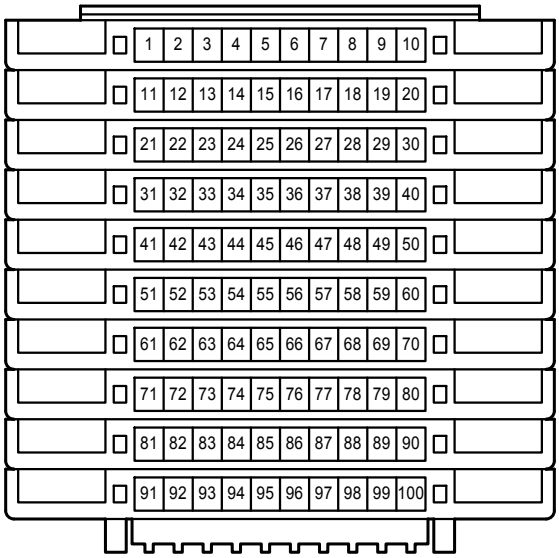


E 69
Gray

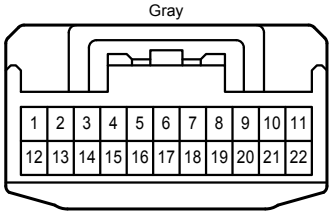


E 72
Gray

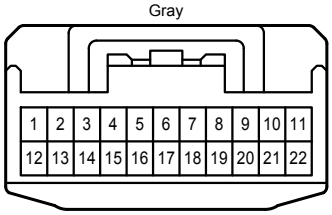


E 75
Gray

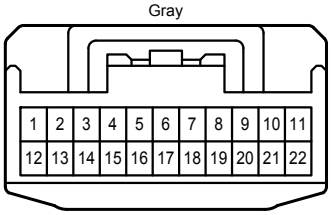

E 76
Gray

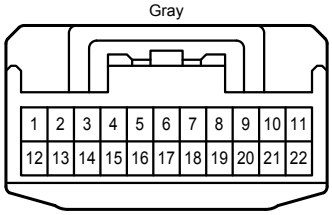


I 18
White

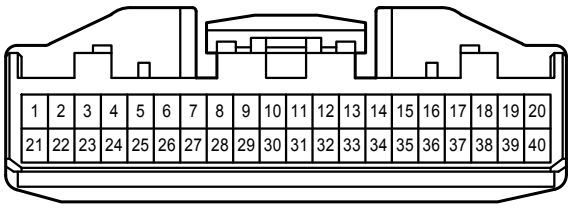


K 2
White




X 1
Black

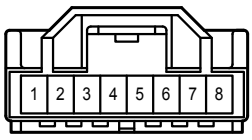


c 14
Gray

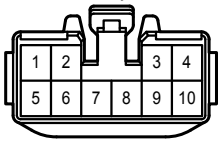


c 15
White

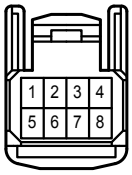


c 16
White

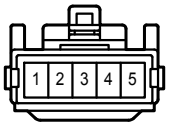


c 17
White




c 18
White




c 19
White




c 20
White




c 21
White




c 23
White




2B
White

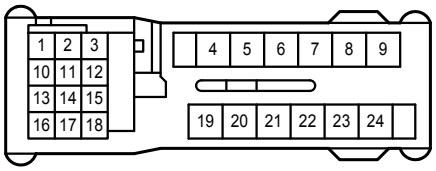


2C
White

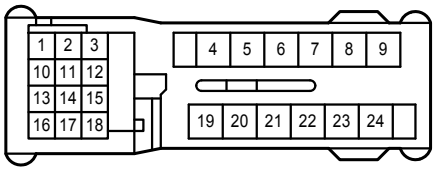

AK2
Gray

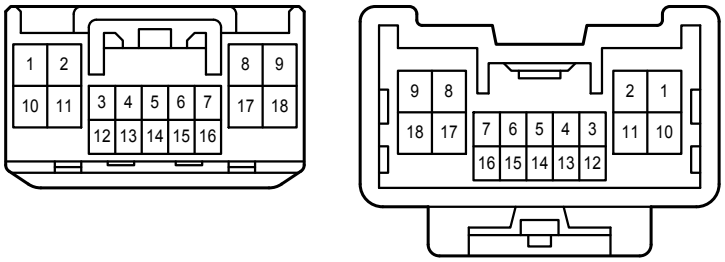


CA3
White

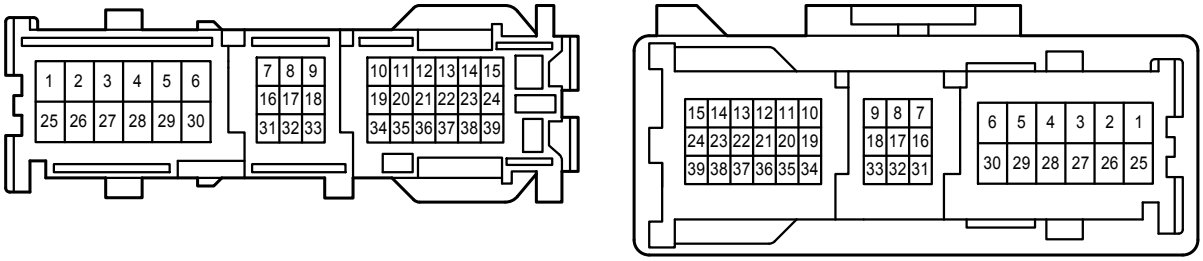

EA3


White

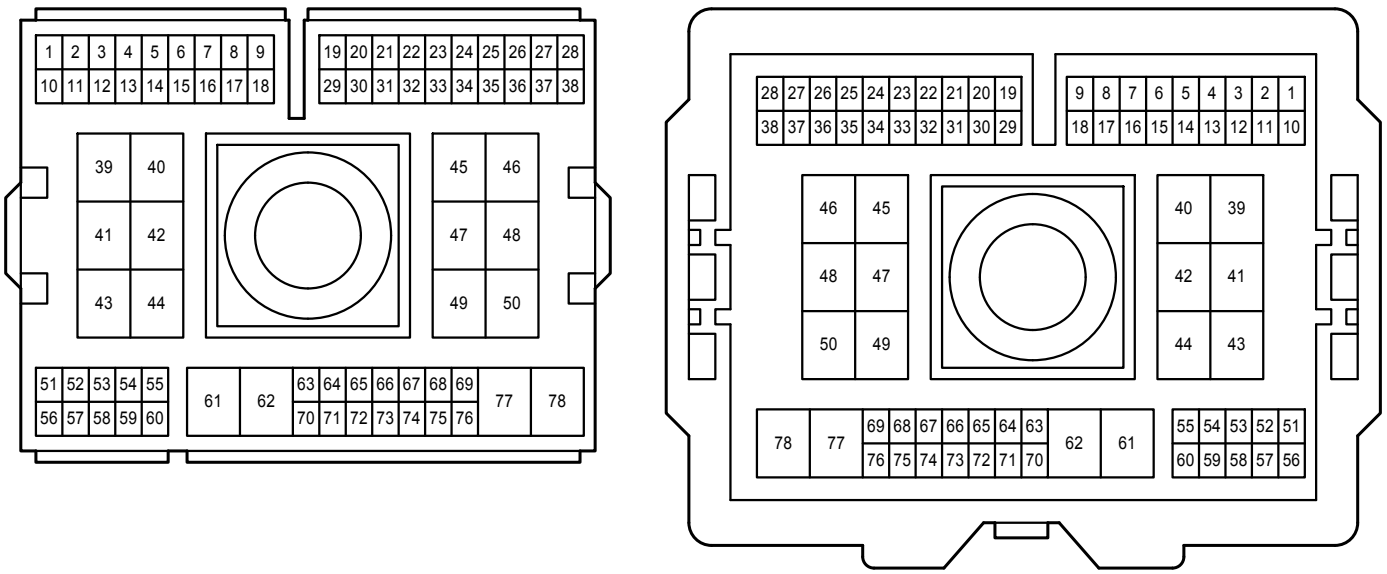


EK1

White


Blue

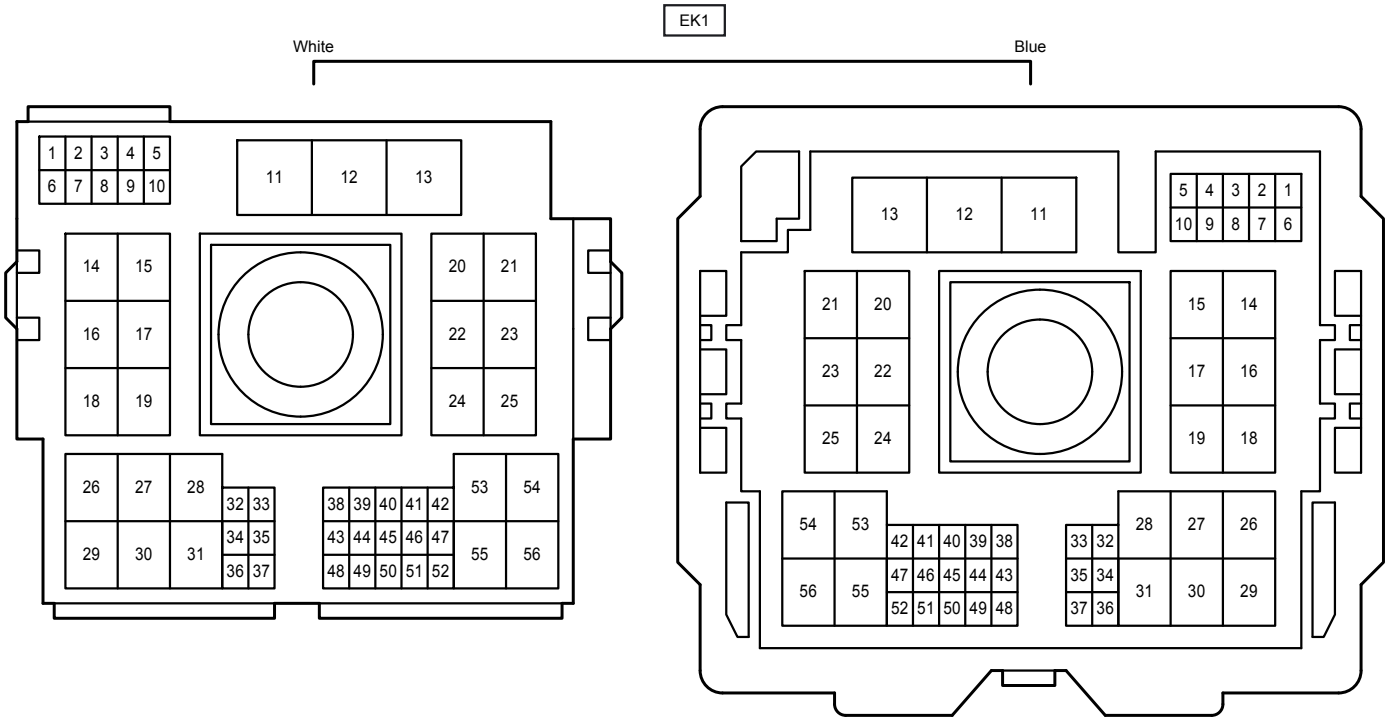


EK2
White

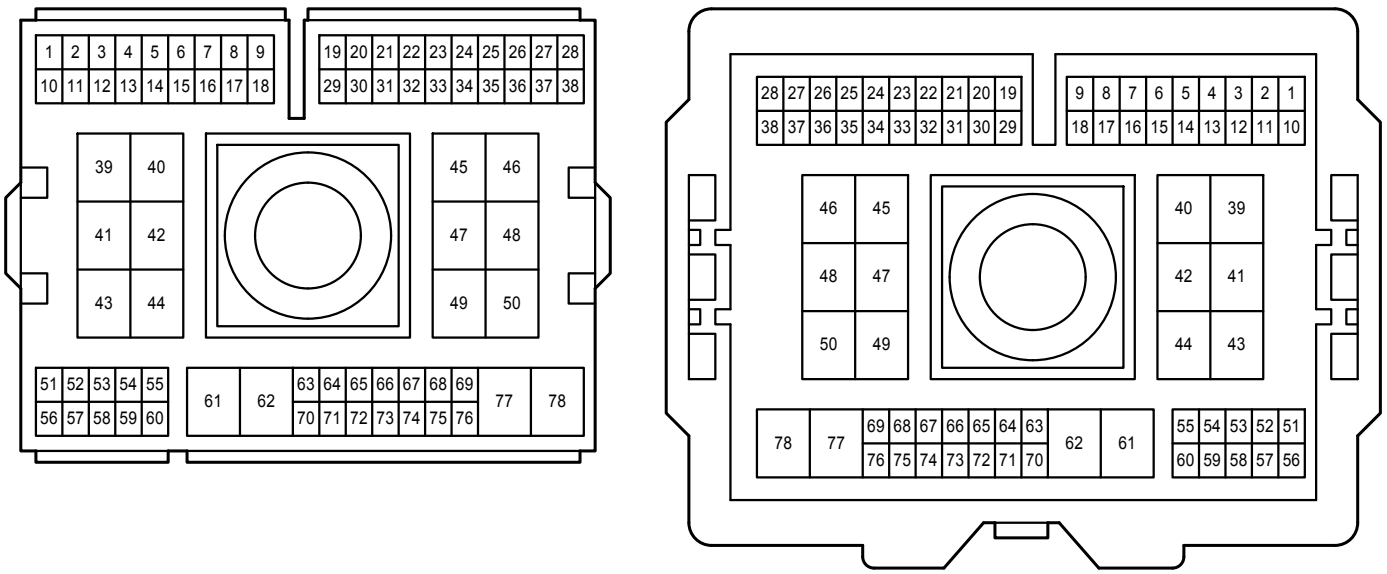

IE4
Gray

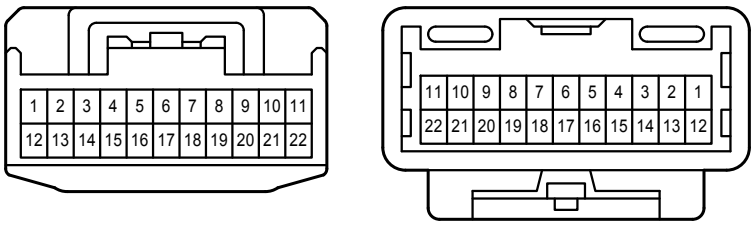

IX1
White

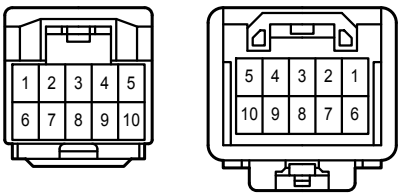

Kc1
White

