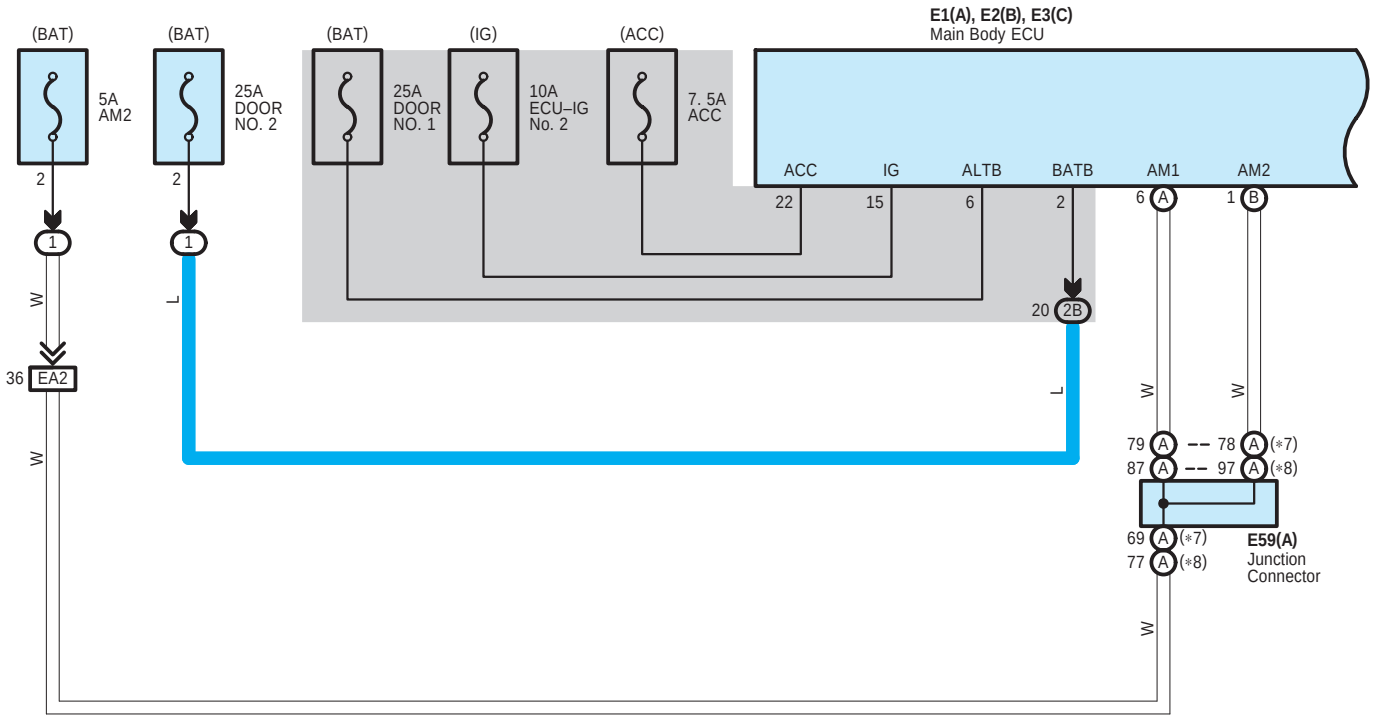
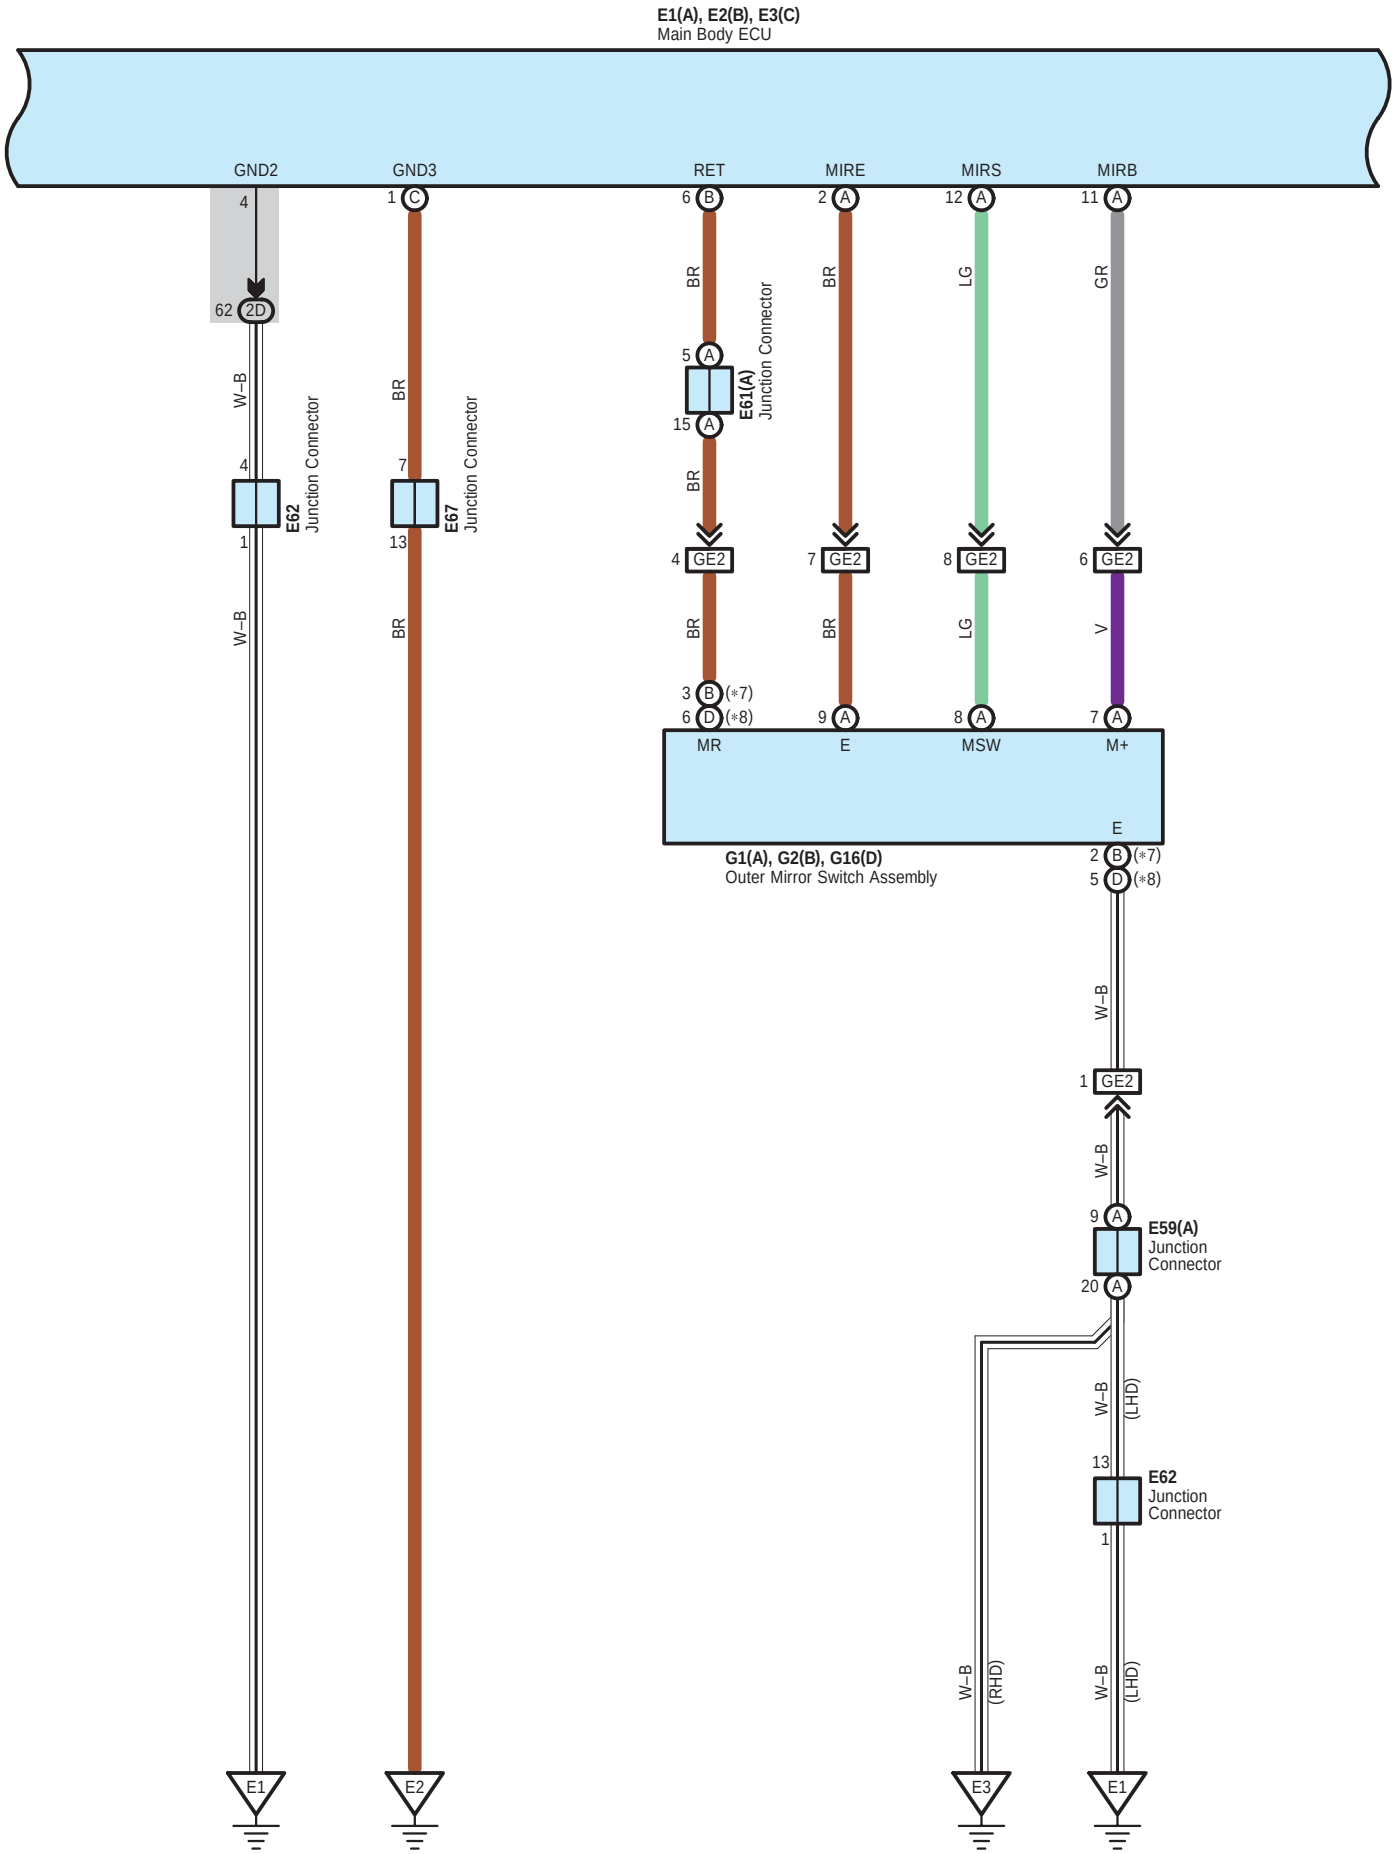
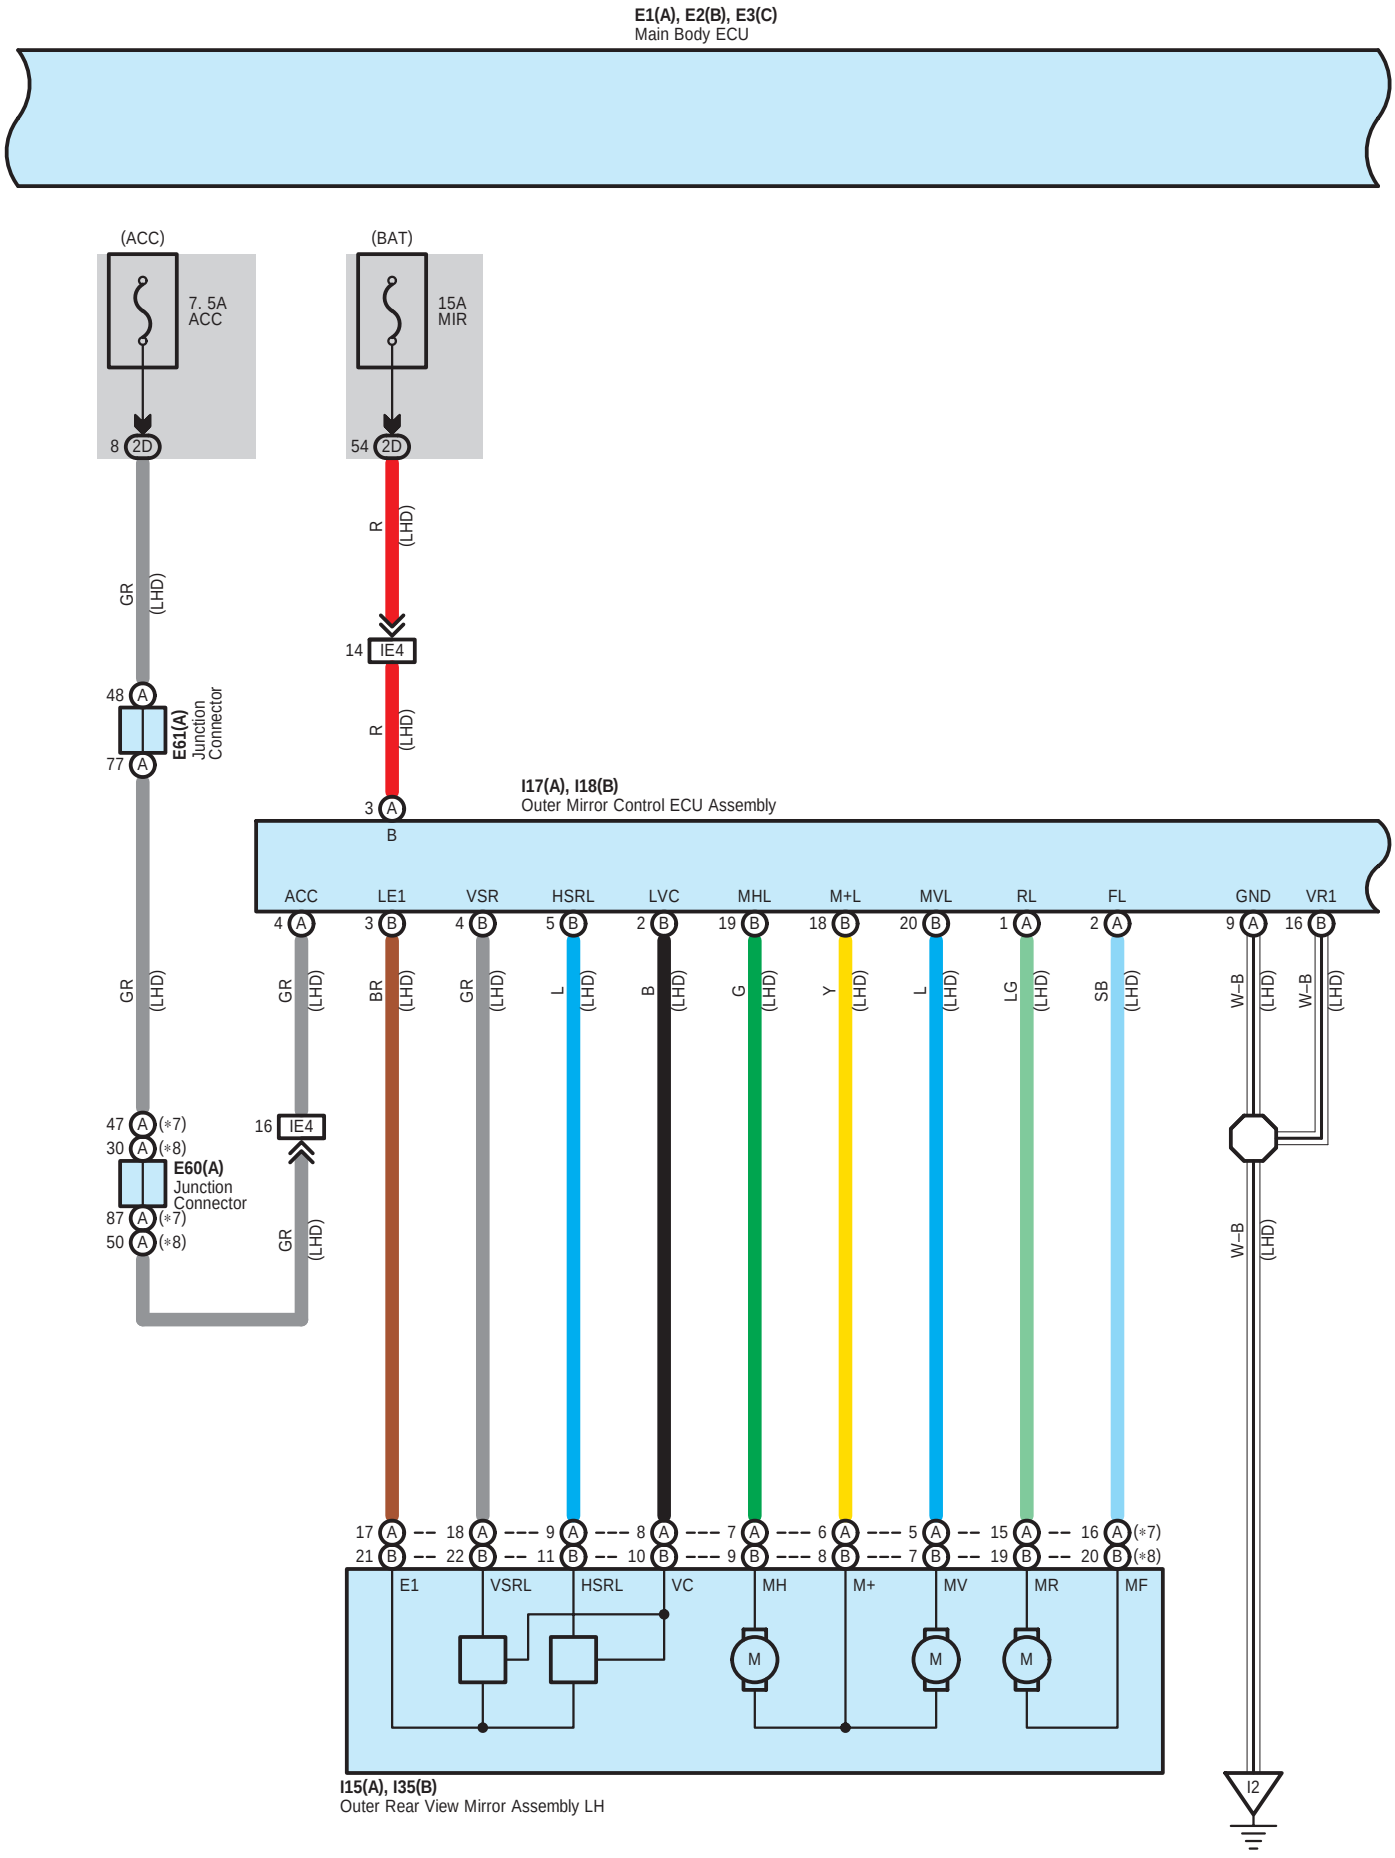



* 7 : Before Jan. 2012 Production
* 8 : From Jan. 2012 Production



E1(A), E2(B), E3(C)
Main Body ECU
GND2
GND3
RET
MIRE
MIRS
MIRB
4
62 2D
W–B
4
E62
Junction Connector
1
W–B
1 C
BR
7
E67
Junction Connector
13
BR
6 B
BR
5 A
E61(A)
Junction Connector
15 A
BR
4 GE2
BR
3 B (*7)
6 D (*8)
MR
2 A
BR
7 GE2
BR
9 A
E
12 A
LG
8 GE2
LG
8 A
MSW
11 A
GR
6 GE2
V
7 A
M+
G1(A), G2(B), G16(D)
Outer Mirror Switch Assembly
E
2 B (*7)
5 D (*8)
W–B
1 GE2
W–B
9 A
E59(A)
Junction
Connector
20 A
W–B
(LHD)
13
E62
Junction
Connector
1
W–B
(RHD)
W–B
(LHD)
E1
E2
E3
E1



E1(A), E2(B), E3(C)
Main Body ECU
(ACC)
(BAT)
7. 5A
ACC
15A
MIR
8 2D
54 2D
R (LHD)
14 IE4
R (LHD)
3 A
B
GR (LHD)
48 A
E61(A)
Junction
Connector
77 A
I17(A), I18(B)
Outer Mirror Control ECU Assembly
ACC
LE1
VSR
HSRL
LVC
MHL
M+L
MVL
RL
FL
GND
VR1
4 A
3 B
4 B
5 B
2 B
19 B
18 B
20 B
1 A
2 A
9 A
16 B
GR (LHD)
BR (LHD)
GR (LHD)
L (LHD)
B (LHD)
G (LHD)
Y (LHD)
L (LHD)
LG (LHD)
SB (LHD)
W–B (LHD)
W–B (LHD)
47 A (*7)
30 A (*8)
E60(A)
Junction
Connector
87 A (*7)
50 A (*8)
16 IE4
GR (LHD)
W–B (LHD)
17 A
21 B
18 A
22 B
9 A
11 B
8 A
10 B
7 A
9 B
6 A
8 B
5 A
7 B
15 A
19 B
16 A (*7)
20 B (*8)
E1
VSRL
HSRL
VC
MH
M+
MV
MR
MF
M
M
M
I15(A), I35(B)
Outer Rear View Mirror Assembly LH
I2


E1(A), E2(B), E3(C)
Main Body ECU

* 1 : LHD w/ Seat Position Memory
* 7 : Before Jan. 2012 Production
* 8 : From Jan. 2012 Production

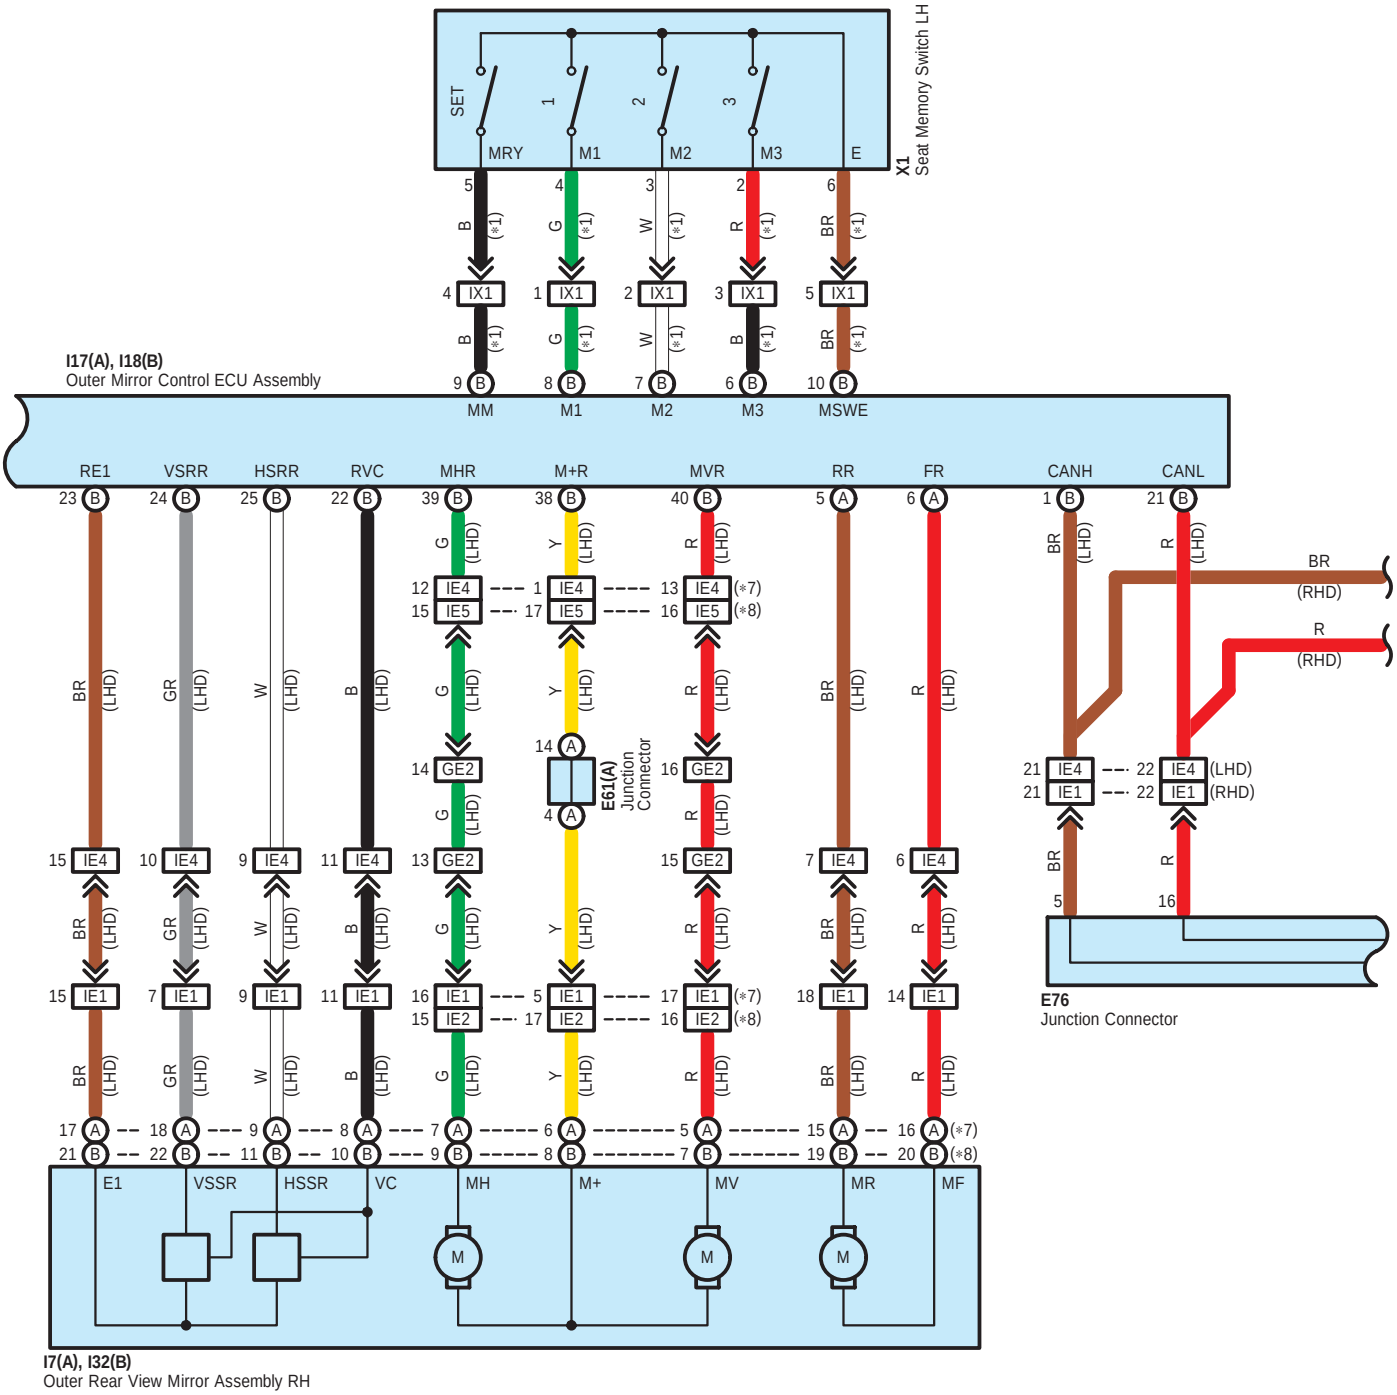


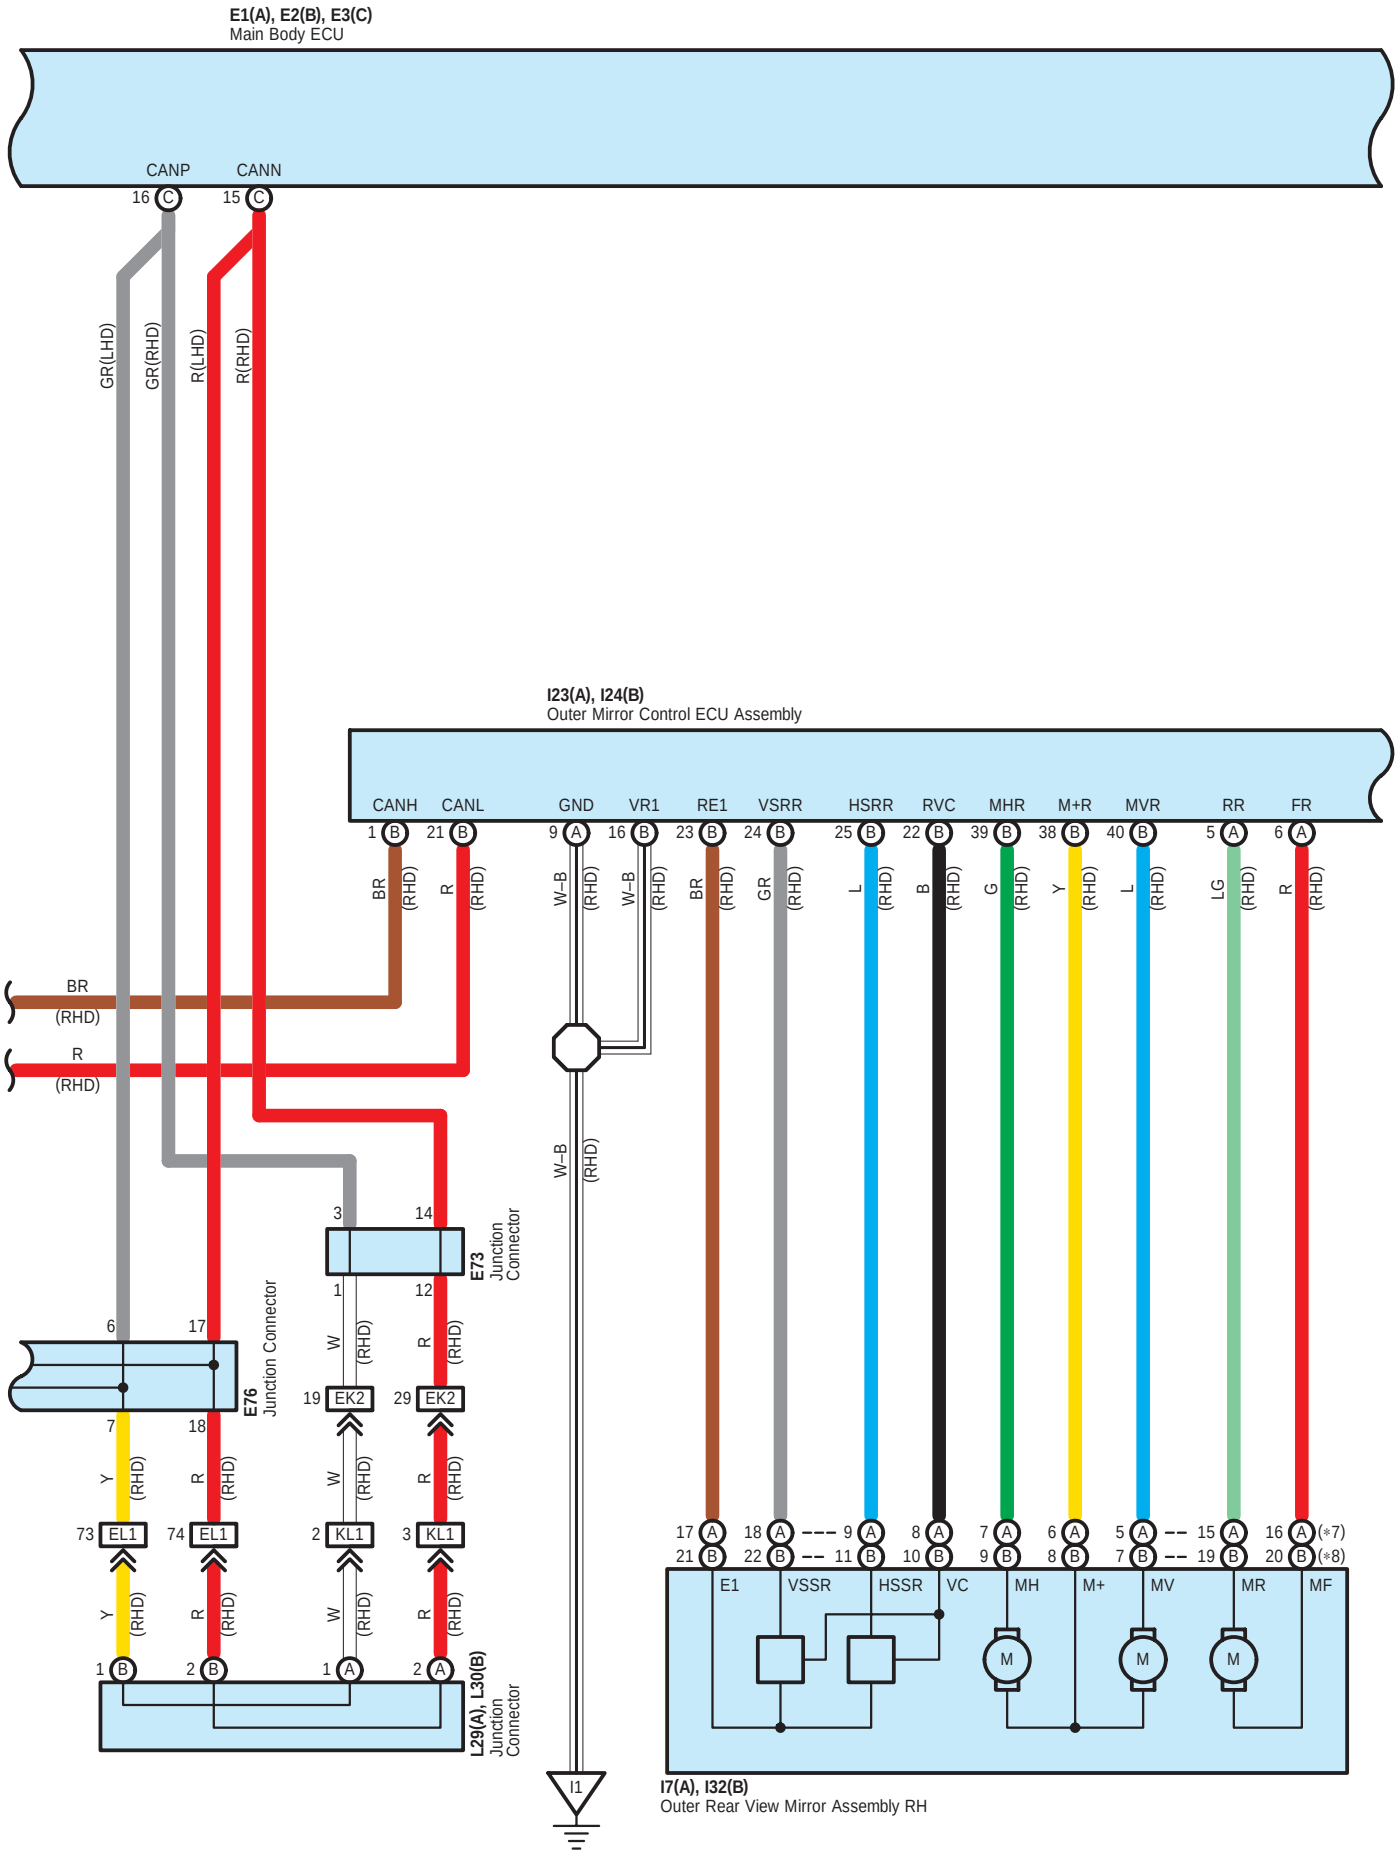
E1(A), E2(B), E3(C)
Main Body ECU
CANP
CANN
16 C
15 C
GR(LHD)
GR(RHD)
R(LHD)
R(RHD)
I23(A), I24(B)
Outer Mirror Control ECU Assembly
CANH
CANL
GND
VR1
RE1
VSRR
HSRR
RVC
MHR
M+R
MVR
RR
FR
1 B
21 B
9 A
16 B
23 B
24 B
25 B
22 B
39 B
38 B
40 B
5 A
6 A
BR (RHD)
R (RHD)
W–B (RHD)
W–B (RHD)
BR (RHD)
GR (RHD)
L (RHD)
B (RHD)
G (RHD)
Y (RHD)
L (RHD)
LG (RHD)
R (RHD)
BR (RHD)
R (RHD)
W–B (RHD)
E73 Junction Connector
3
14
1
12
W (RHD)
R (RHD)
E76 Junction Connector
6
17
19 EK2
29 EK2
7
18
Y (RHD)
R (RHD)
W (RHD)
R (RHD)
73 EL1
74 EL1
2 KL1
3 KL1
Y (RHD)
R (RHD)
W (RHD)
R (RHD)
1 B
2 B
1 A
2 A
L29(A), L30(B) Junction Connector
I1
17 A
21 B
18 A
22 B
9 A
11 B
8 A
10 B
7 A
9 B
6 A
8 B
5 A
7 B
15 A
19 B
16 A (*7)
20 B (*8)
E1
VSSR
HSSR
VC
MH
M+
MV
MR
MF
M
M
M
I7(A), I32(B)
Outer Rear View Mirror Assembly RH

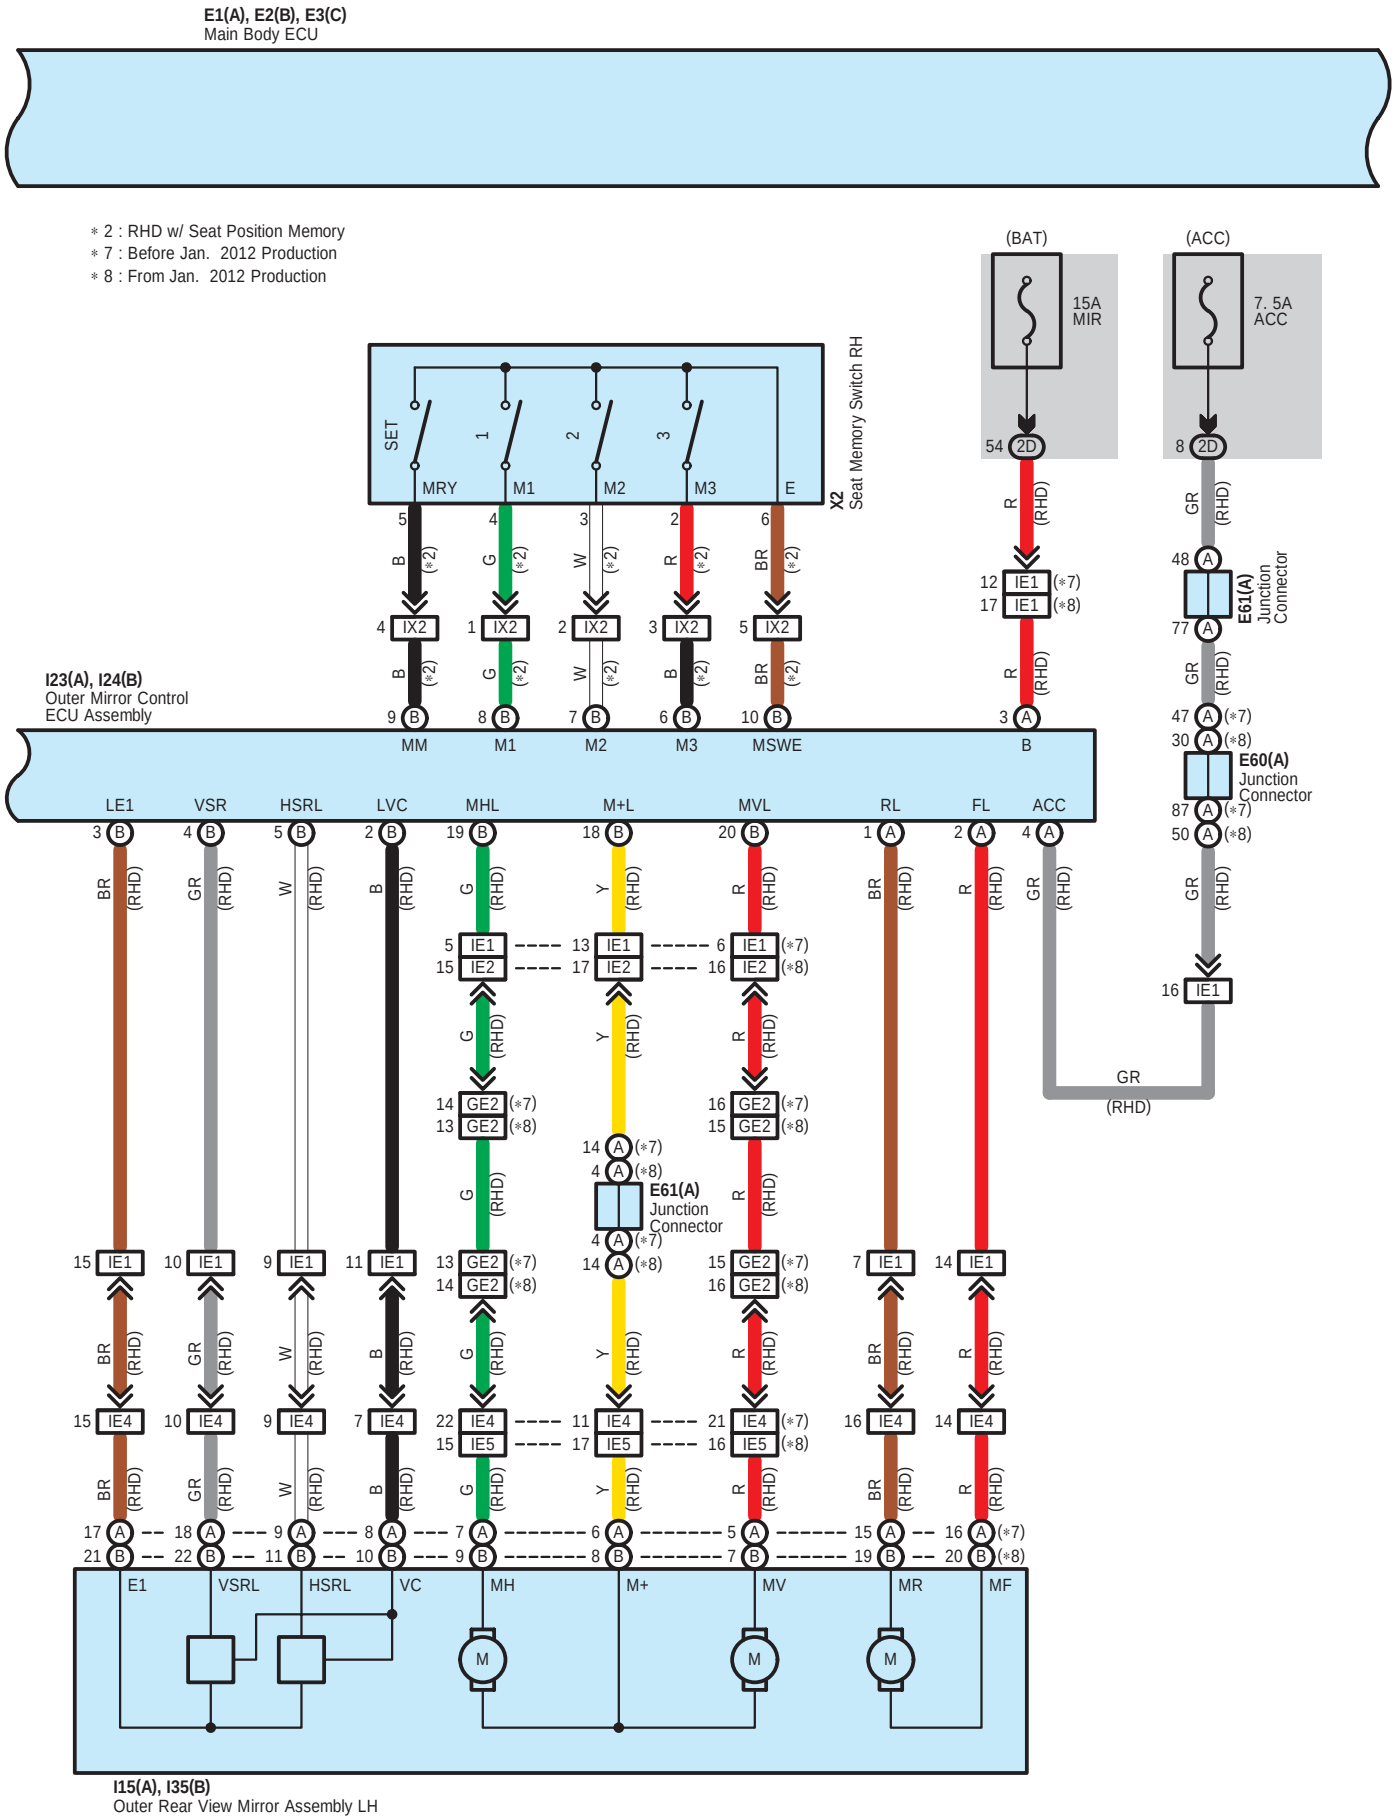

E1(A), E2(B), E3(C)
Main Body ECU
∗ 2 : RHD w/ Seat Position Memory
∗ 7 : Before Jan. 2012 Production
∗ 8 : From Jan. 2012 Production
(BAT)
(ACC)
15A MIR
7. 5A ACC
SET
MRY
M1
M2
M3
E
X2
Seat Memory Switch RH
I23(A), I24(B)
Outer Mirror Control ECU Assembly
MM
MSWE
B
E61(A) Junction Connector
E60(A) Junction Connector
LE1
VSR
HSRL
LVC
MHL
M+L
MVL
RL
FL
ACC
I15(A), I35(B)
Outer Rear View Mirror Assembly LH
E1
VSRL
HSRL
VC
MH
M+
MV
MR
MF

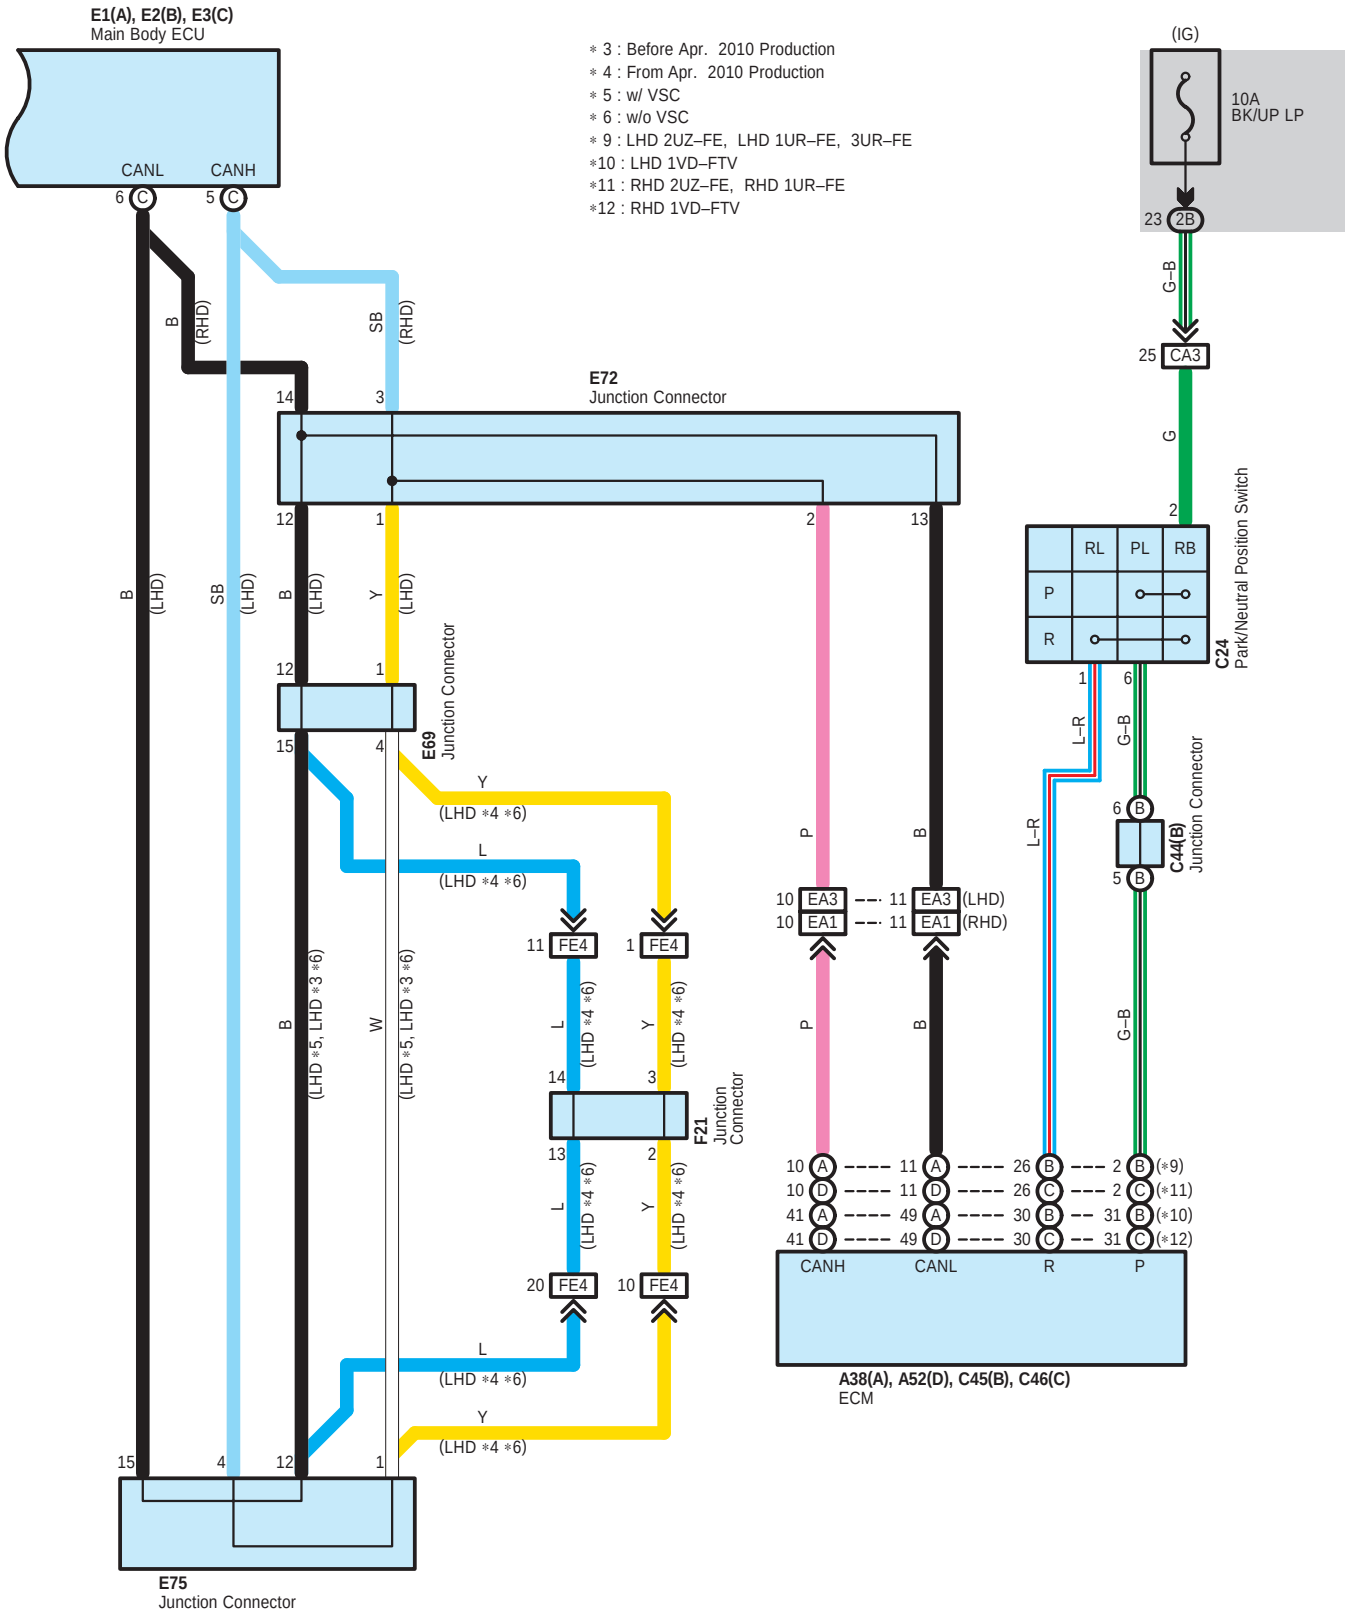
E1(A), E2(B), E3(C)
Main Body ECU
CANL
CANH
∗ 3 : Before Apr. 2010 Production
∗ 4 : From Apr. 2010 Production
∗ 5 : w/ VSC
∗ 6 : w/o VSC
∗ 9 : LHD 2UZ–FE, LHD 1UR–FE, 3UR–FE
∗10 : LHD 1VD–FTV
∗11 : RHD 2UZ–FE, RHD 1UR–FE
∗12 : RHD 1VD–FTV
(IG)
10A
BK/UP LP
E72
Junction Connector
E69
Junction Connector
F21
Junction
Connector
C24
Park/Neutral Position Switch
C44(B)
Junction Connector
RL
PL
RB
P
R
A38(A), A52(D), C45(B), C46(C)
ECM
E75
Junction Connector
(LHD)
(RHD)
(LHD ∗4 ∗6)
(LHD ∗5, LHD ∗3 ∗6)
L–R
G–B


A 38
Black

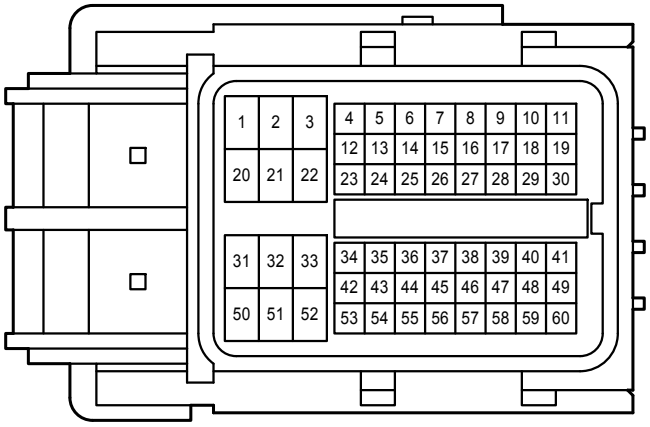


A 52
Black

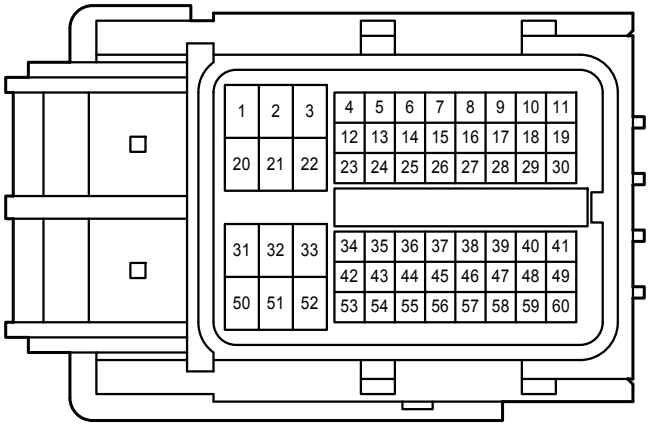


C 24
Gray

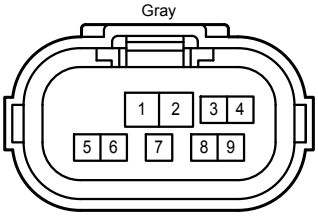


C 44
Blue

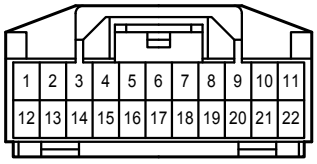


C 45
Black

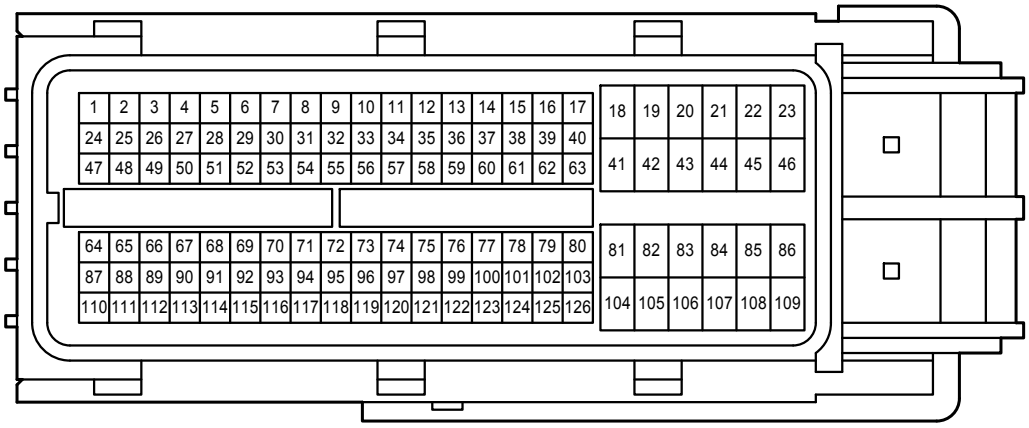


C 46
Black

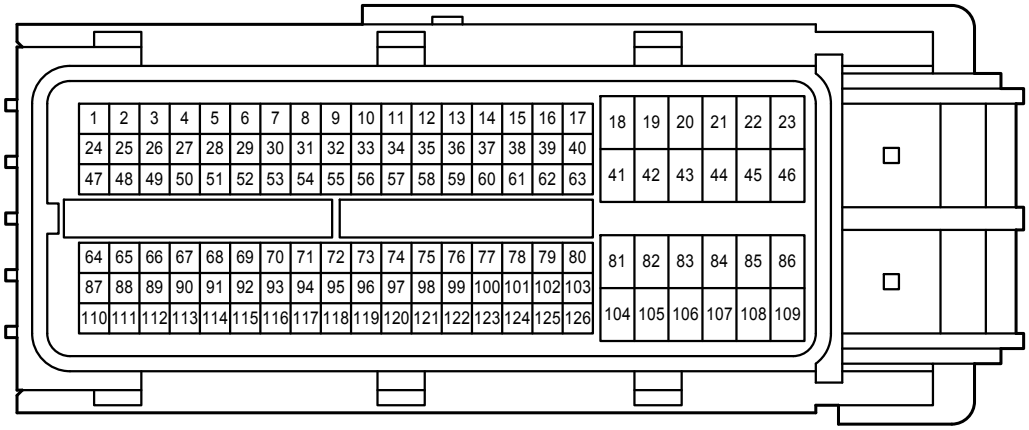


E 1
White

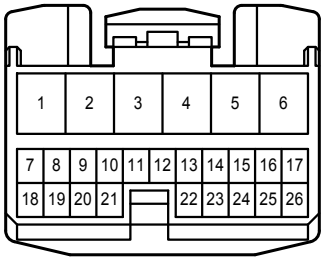


E 2
White

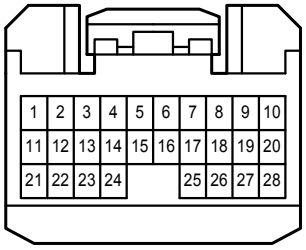


E 3
White

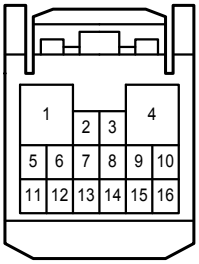


E 59

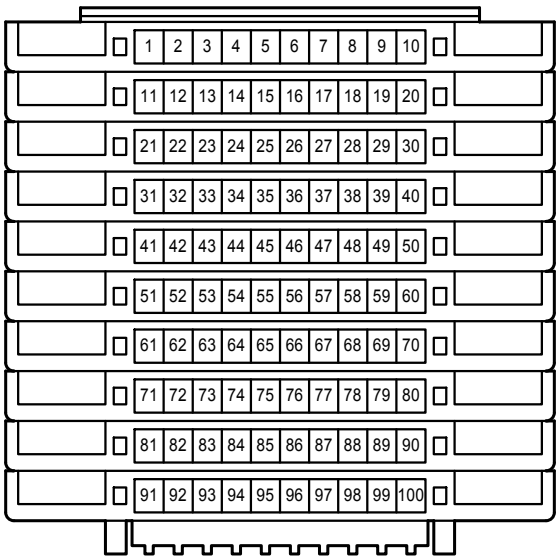


E 60

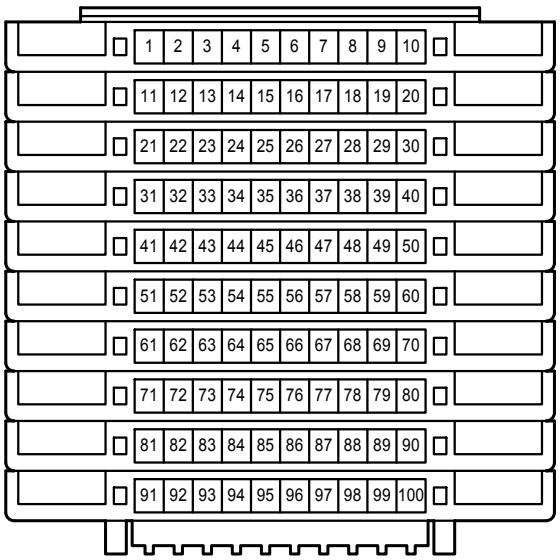


E 61

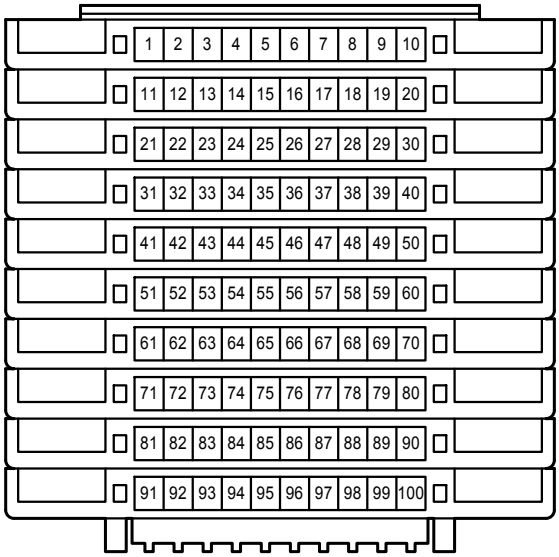


E 62
White

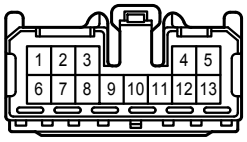


E 67
White

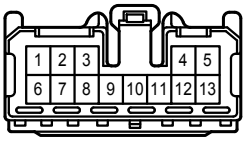


E 69
Gray

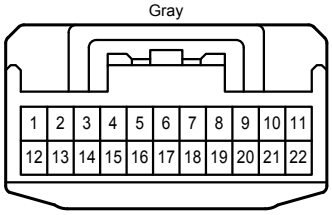


E 72
Gray

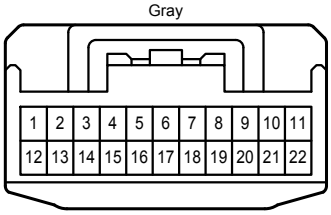


E 73
Gray

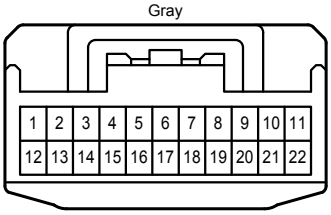


E 75
Gray

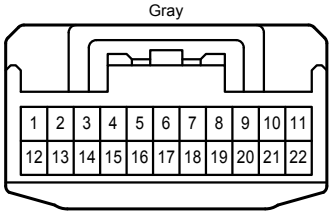


E 76
Gray

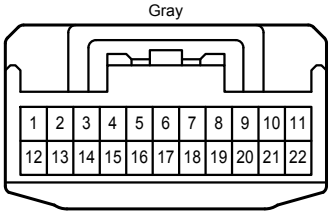


F 21
Black

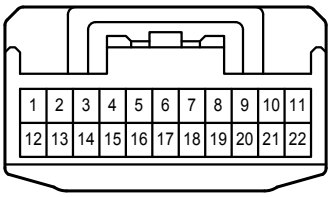


G 1
Black

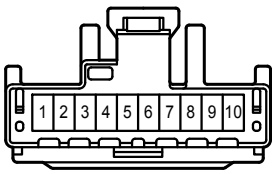


G 2
Black

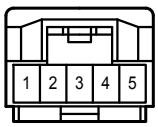


G 16
Black

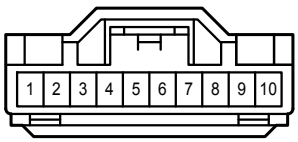


I 7
White

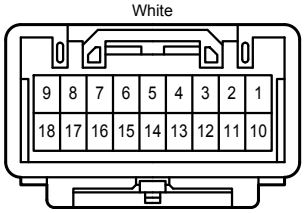


I 15
White

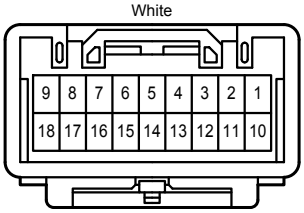


I 17
White

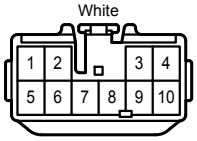


I 18
White

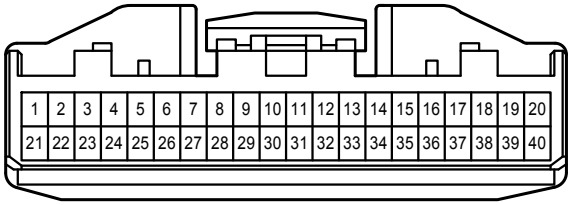


I 23
White

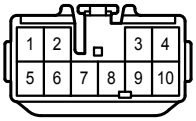


I 24
White

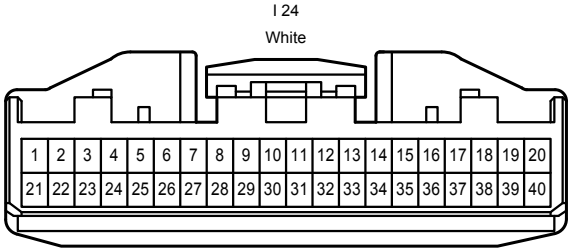


I 32
White

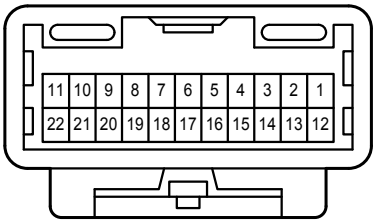


I 35
White

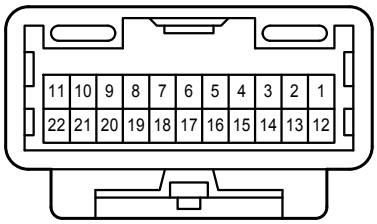


L 29
White




L 30
White




X 1
Black

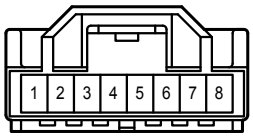


X 2
Black

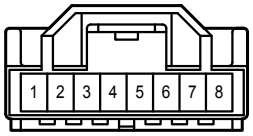


2B
White

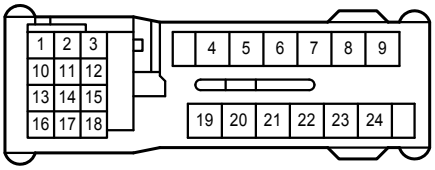

2D
White

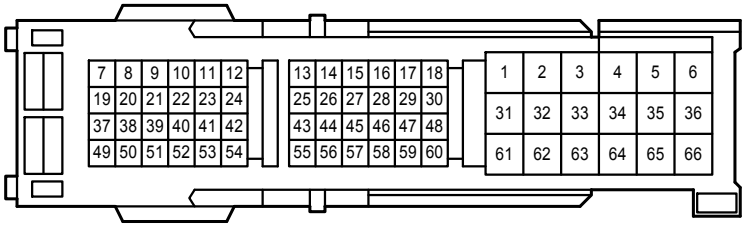


CA3
White

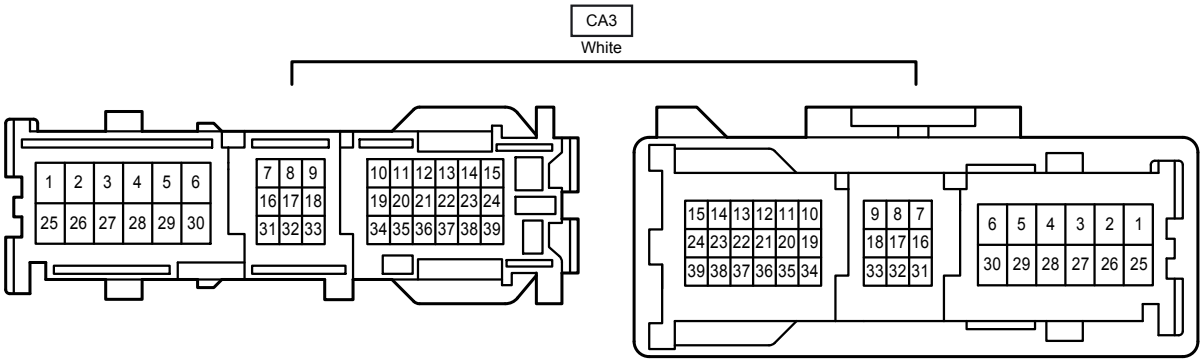

EA1


White

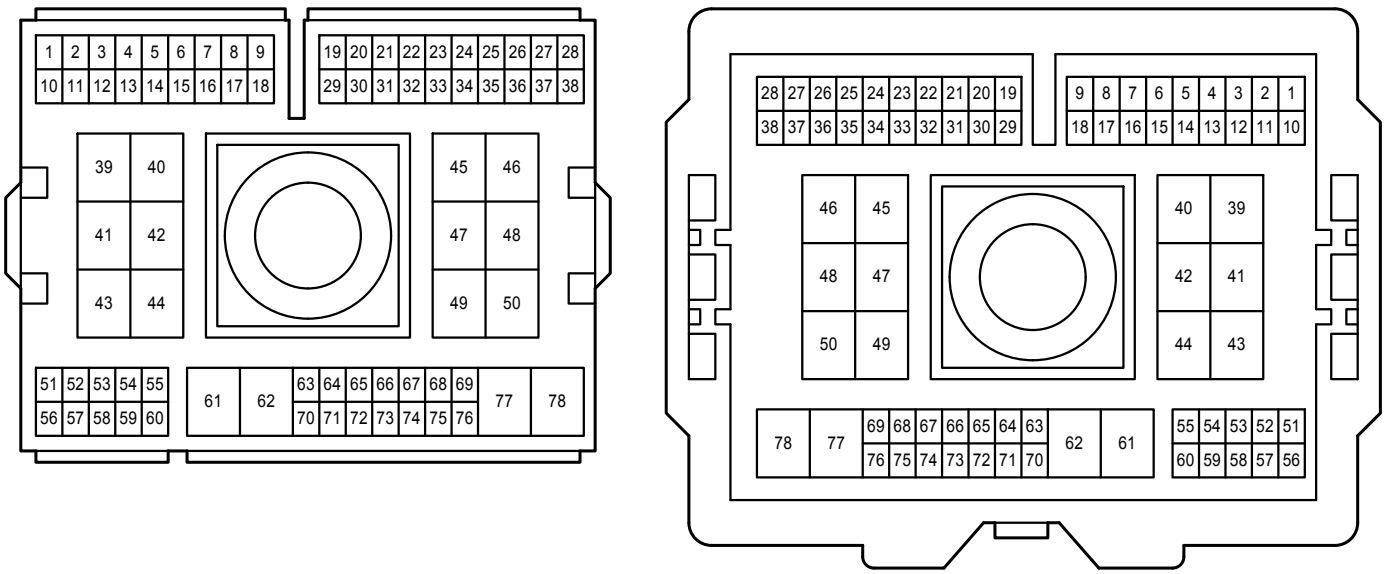


EA2

White


Gray

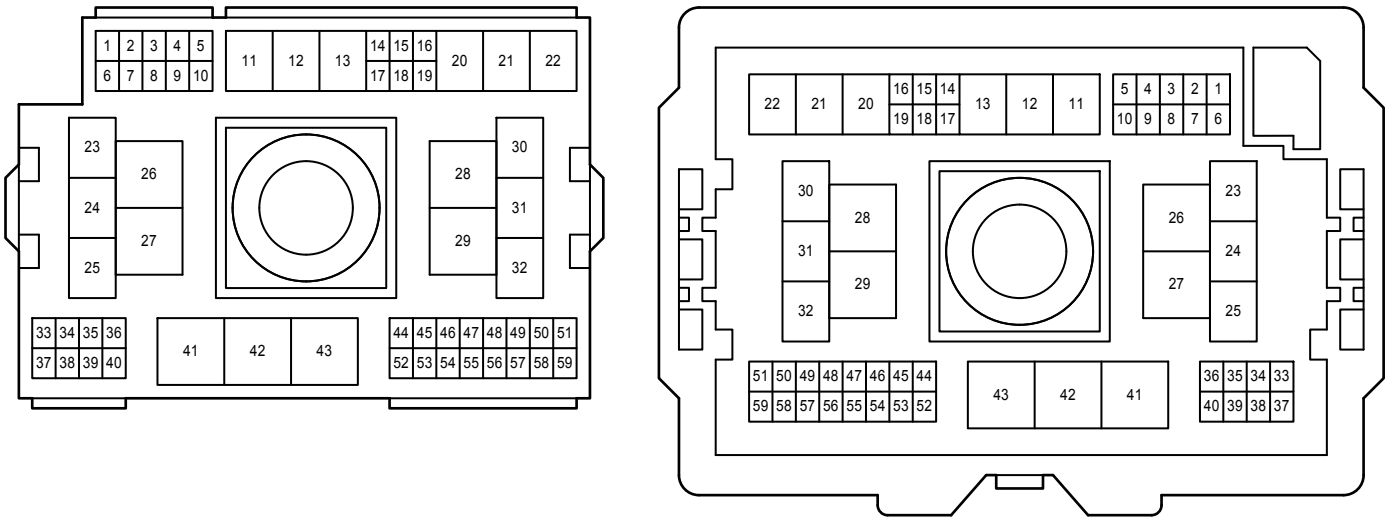


EA3
White

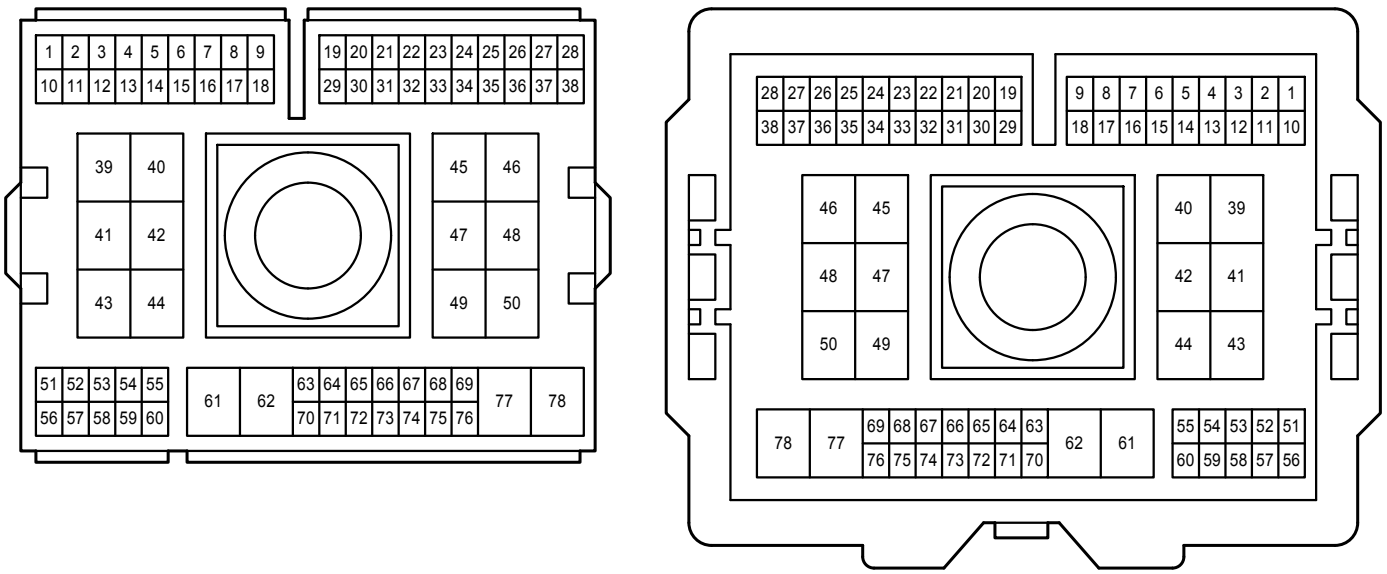


EK2
White

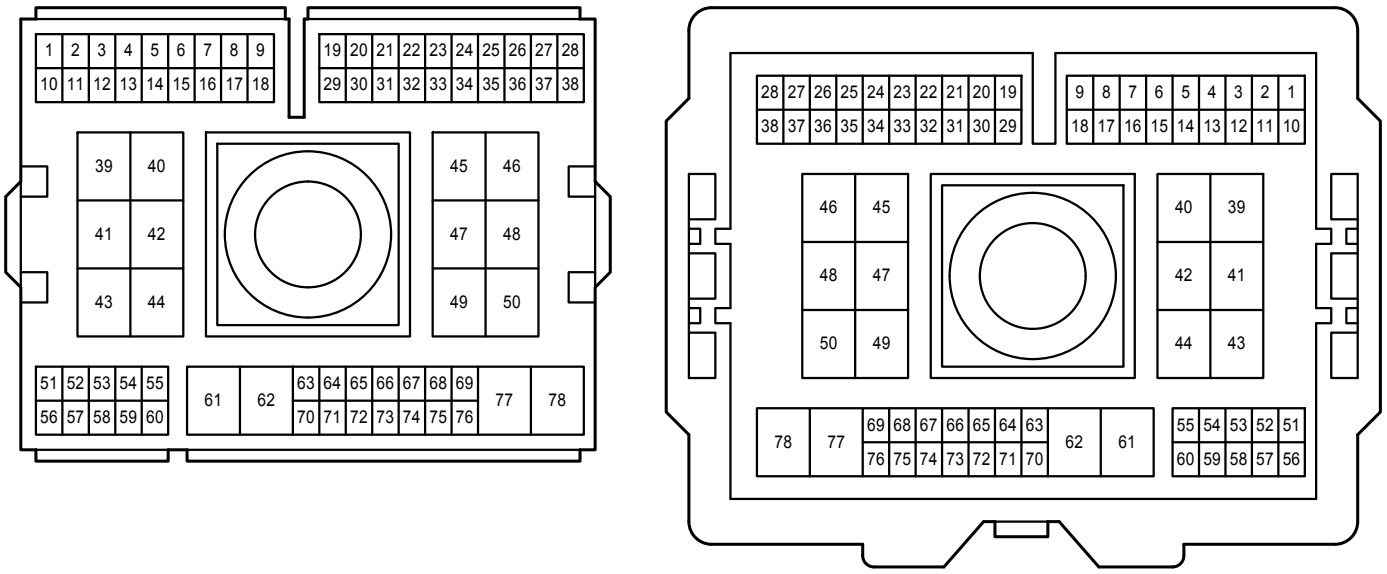


EL1
White

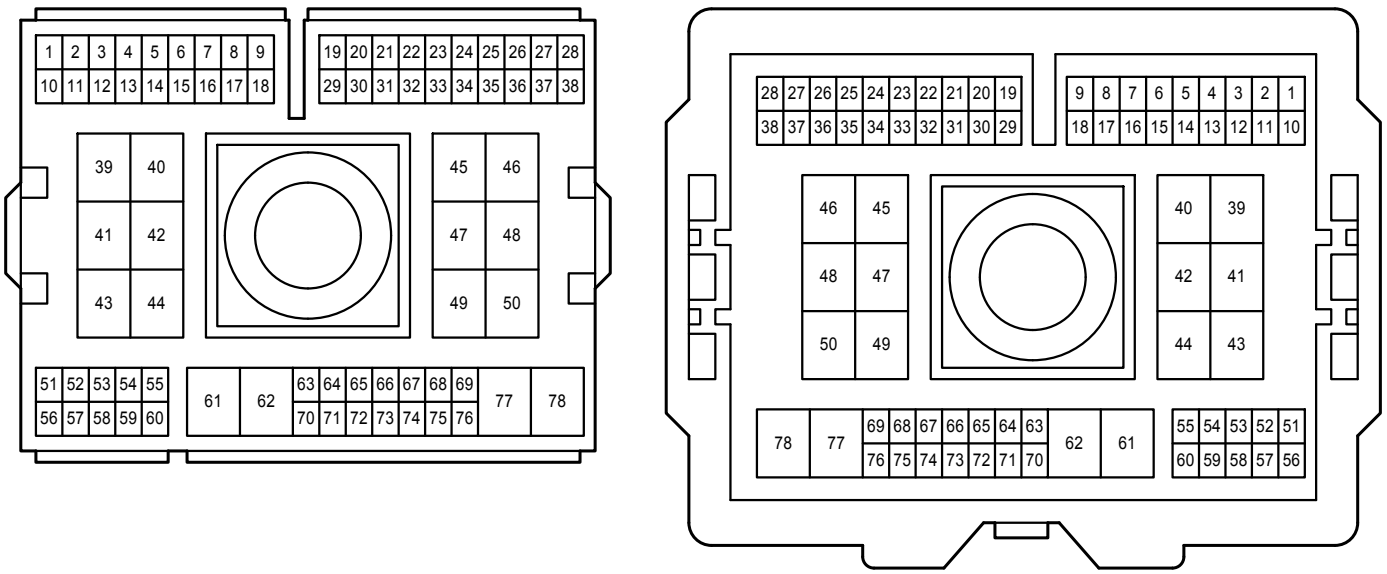


FE4
White

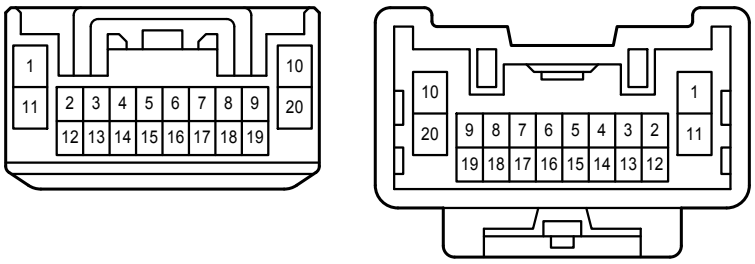


GE2
White

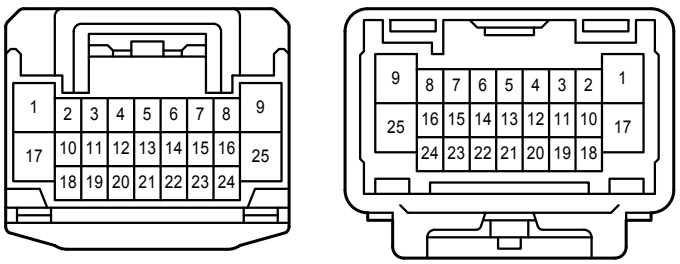


IE1
Gray

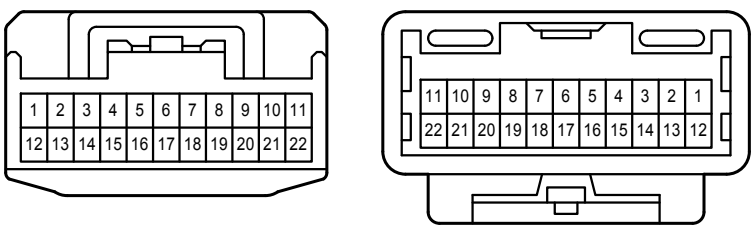


IE2
Blue

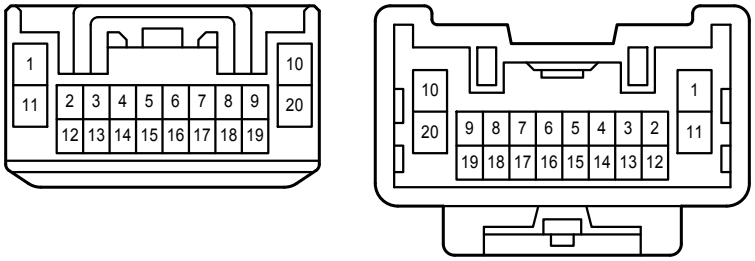


IE4
Gray

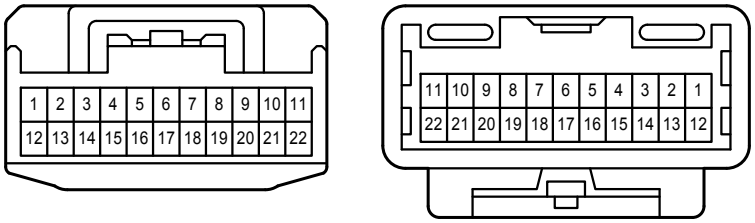


IE5
Blue

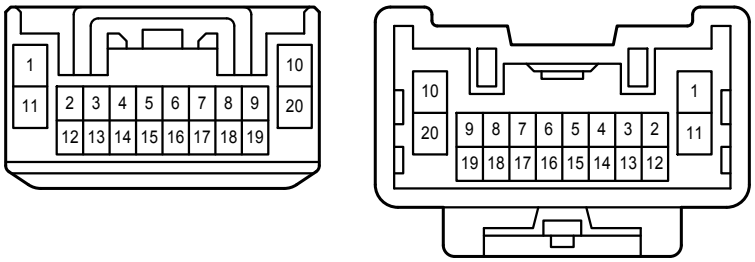

IX1
White

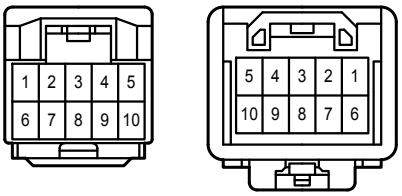

IX2
White

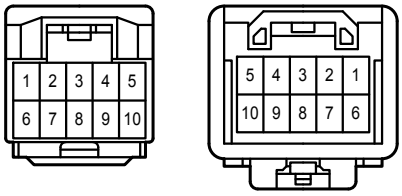

KL1
White

