



(IG)
20A
SEAT–HTR
3
3B
10
3C
G
G
17
EK1
G
17
Kc1
c13
Front Seat Heater Assembly LH
Seat Back
Seat Cushion
Thermistor
Seat Heater Control
B
E
THL
SWL
4
G
6
W–B
5
BR
1
B
(IG)
5A
LH–IG
55
2D
G
100
60
E58
Junction
Connector
G
24
Kc1
18
Kc1
BR
B
c23
Junction Connector
4
3
43
EK1
44
EK1
BR
B
15
VE2
14
VE2
13
VE2
BR
B
G
3
4
2
RV
SW
IG
9
Kc1
E
7
V1
Seat Heater Switch
W–B
1
VE1
(*1)
1
VE3
(*2)
W–B
9
E66
Junction
Connector
1
W–B
K1
E2

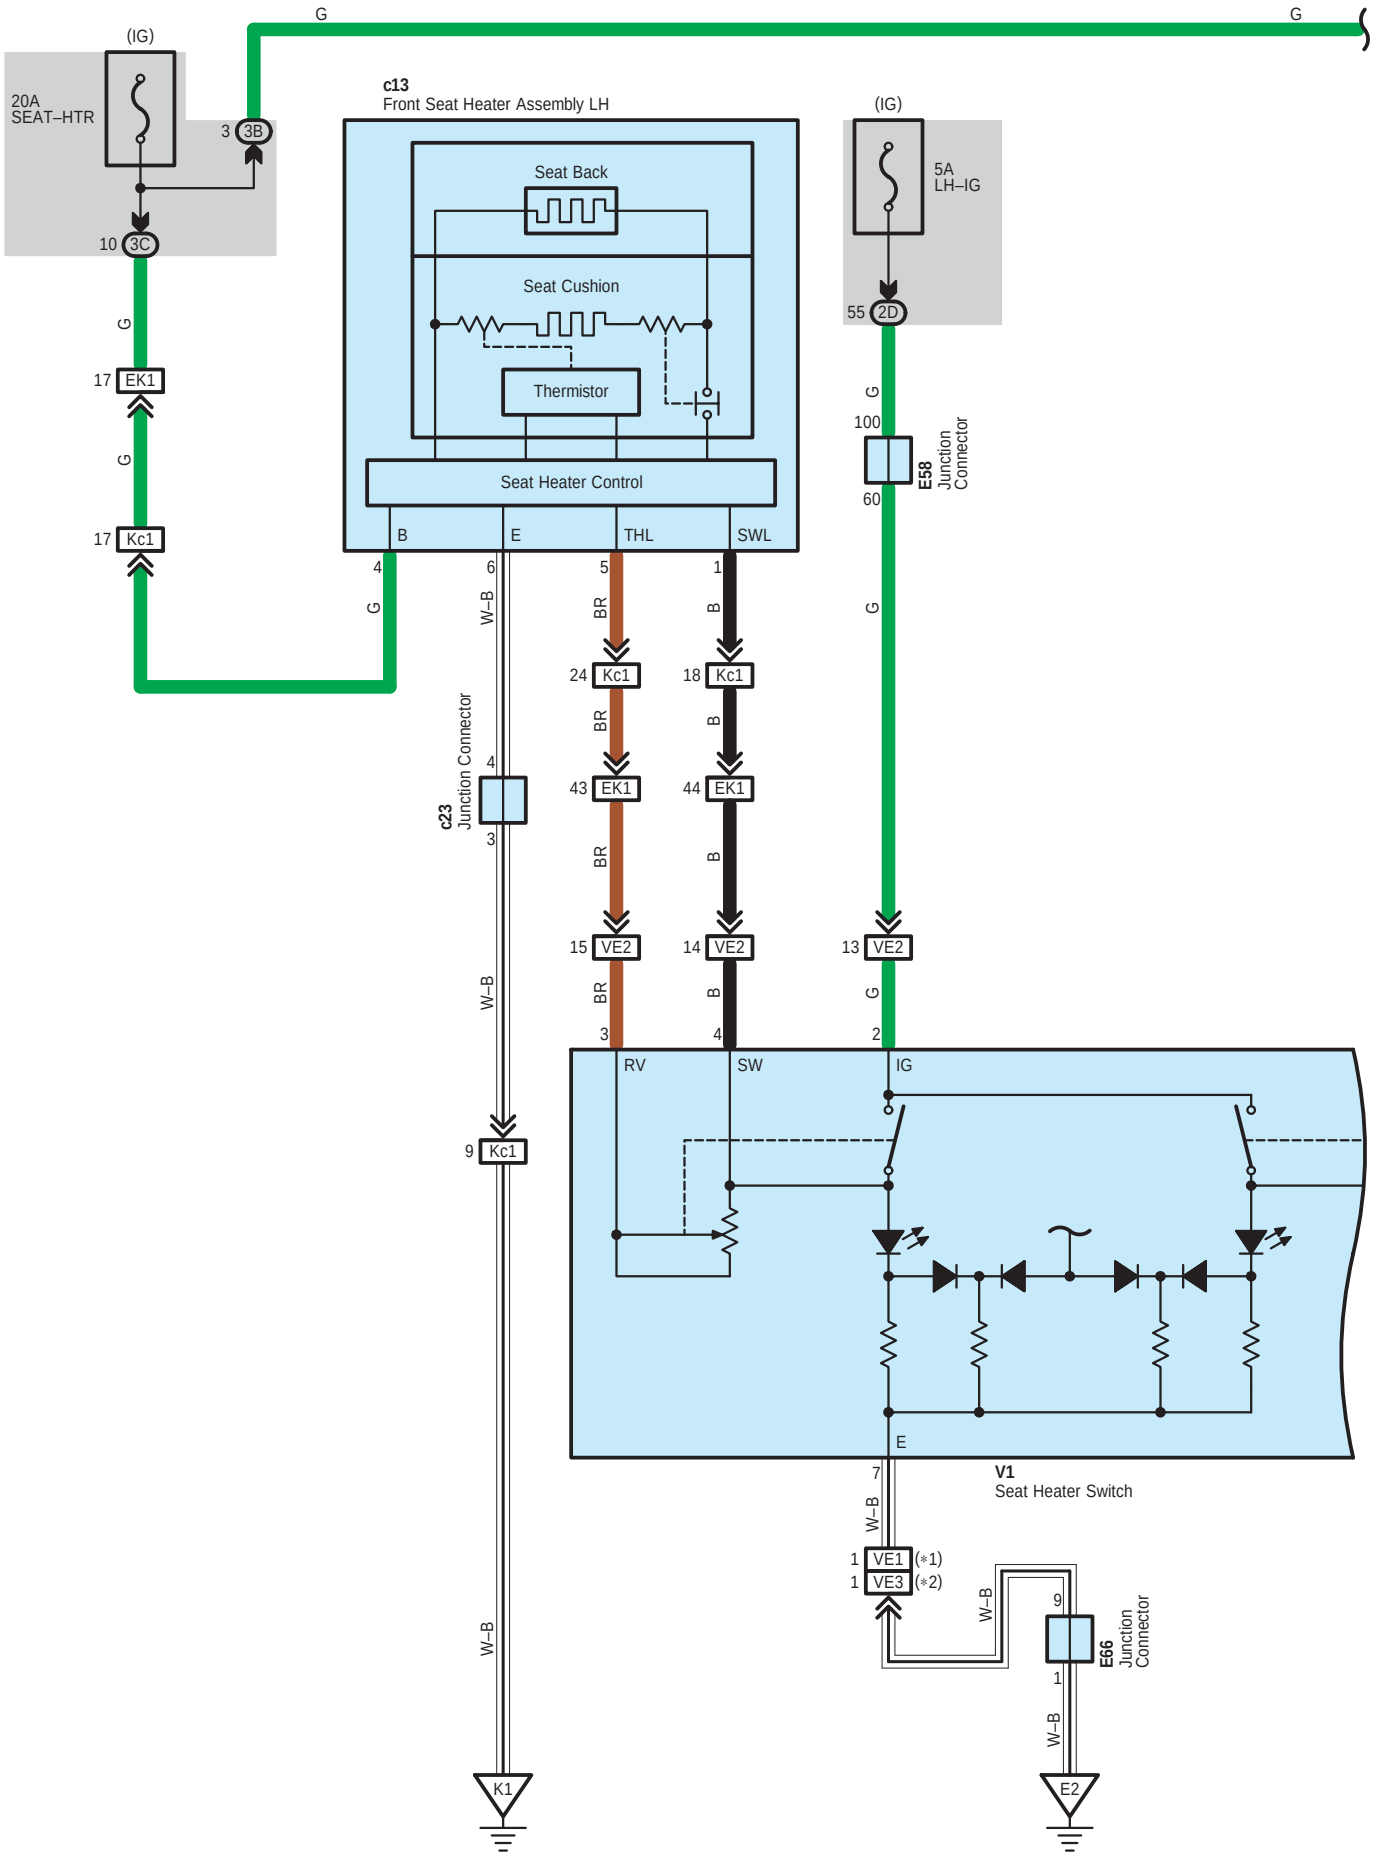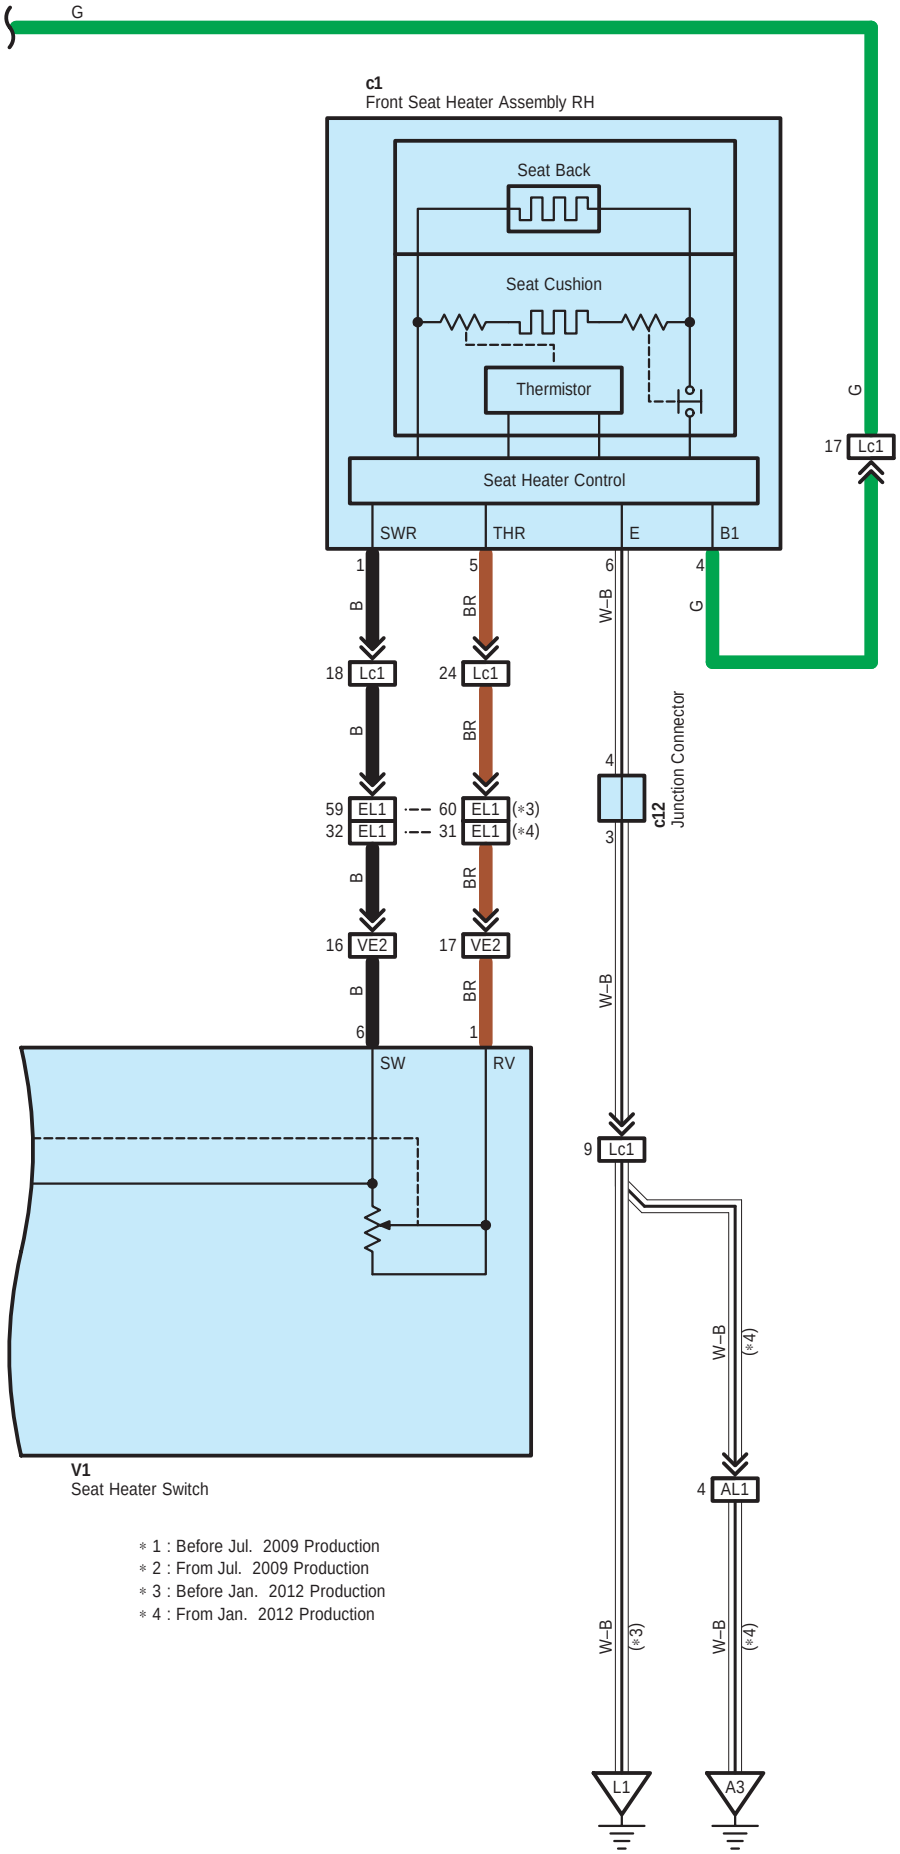


* 1 : Before Jul. 2009 Production
* 2 : From Jul. 2009 Production
* 3 : Before Jan. 2012 Production
* 4 : From Jan. 2012 Production


E 58

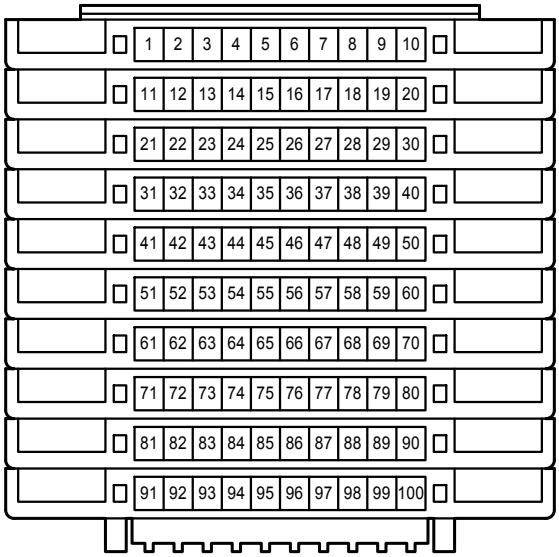

E 66
White

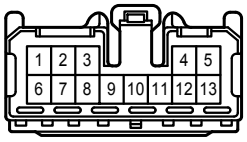


V 1
White

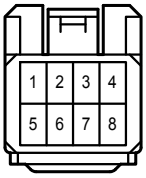

c 1
White




c 12
White




c 13
White




c 23
White




2D
White

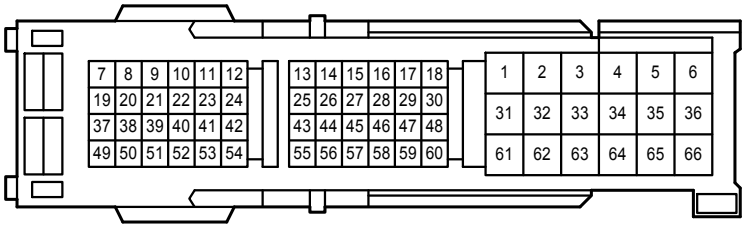


3B
Gray



3C
White

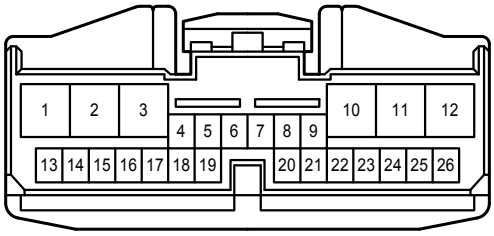


AL1
White

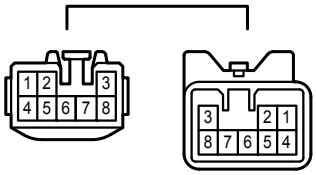


EK1

White

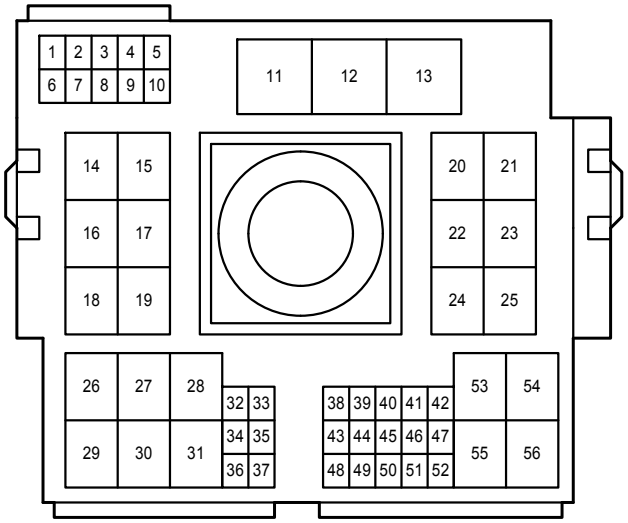



Blue

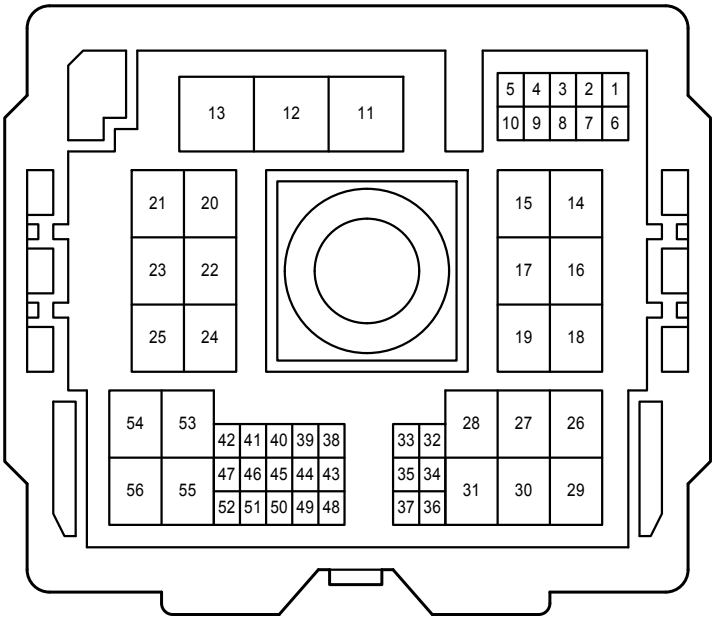

EL1


White

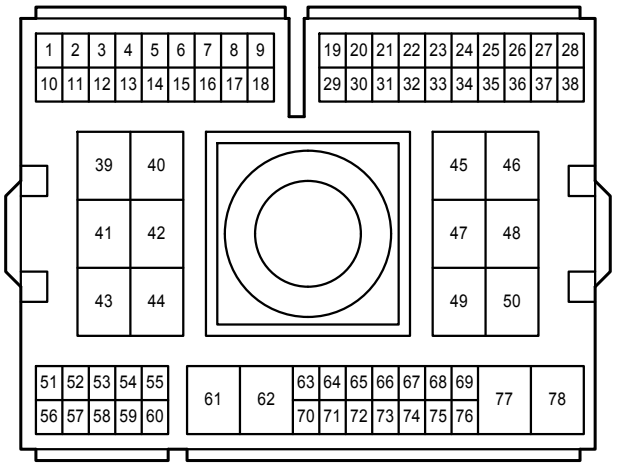


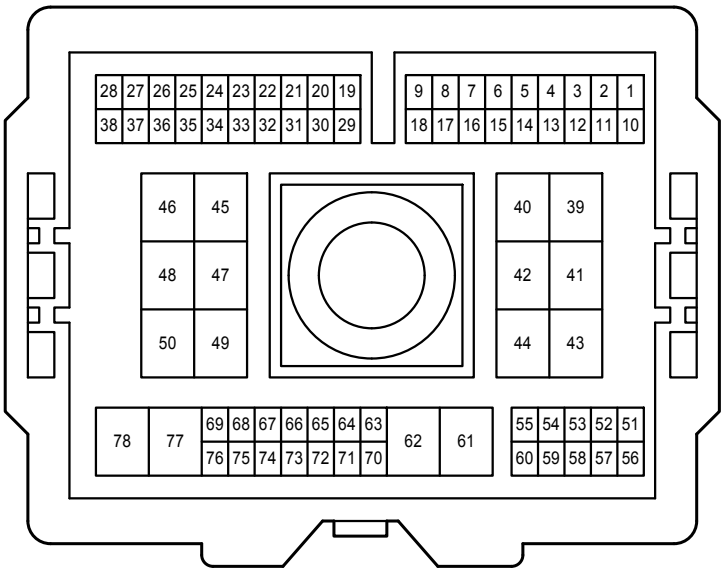



Kc1


White

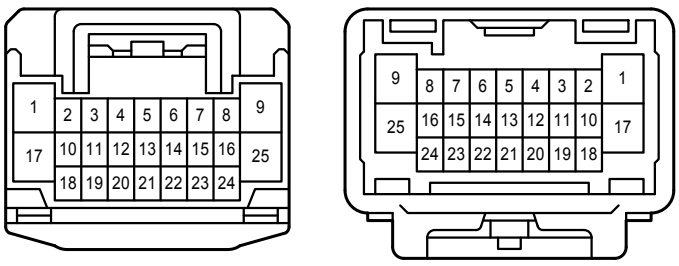

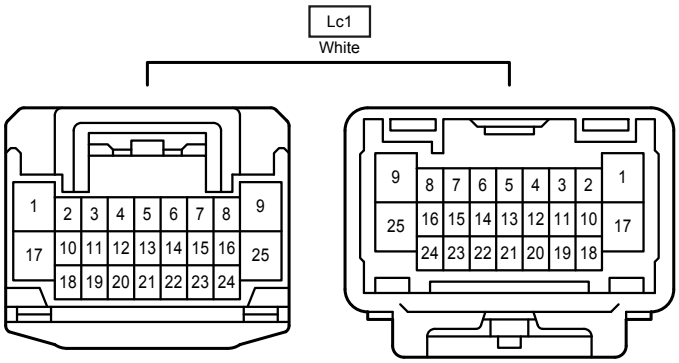
Lc1
White
1 2 3 4 5 6 7 8 9
17 10 11 12 13 14 15 16 25
18 19 20 21 22 23 24
9 8 7 6 5 4 3 2 1
25 16 15 14 13 12 11 10 17
24 23 22 21 20 19 18

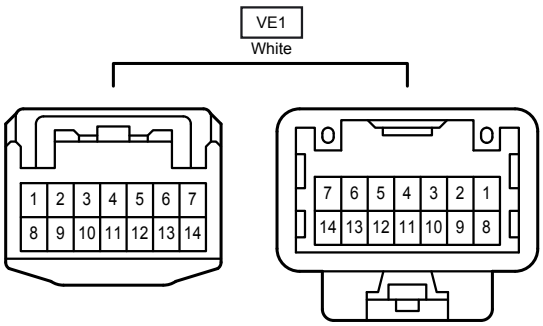
VE1
White
1 2 3 4 5 6 7
8 9 10 11 12 13 14
7 6 5 4 3 2 1
14 13 12 11 10 9 8

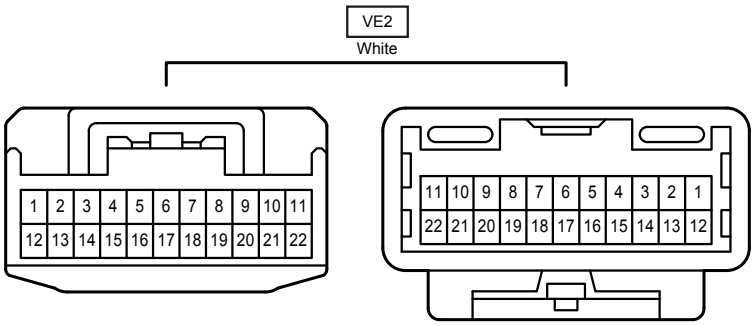
VE2
White
1 2 3 4 5 6 7 8 9 10 11
12 13 14 15 16 17 18 19 20 21 22
11 10 9 8 7 6 5 4 3 2 1
22 21 20 19 18 17 16 15 14 13 12

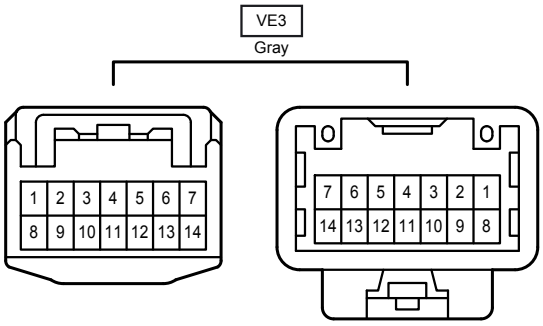
VE3
Gray
1 2 3 4 5 6 7
8 9 10 11 12 13 14
7 6 5 4 3 2 1
14 13 12 11 10 9 8