


∗ 1 : Liftgate Type
∗ 2 : Swing Type
∗ 3 : w/ Entry & Start System
∗ 4 : w/o Entry & Start System
∗ 5 : Before Jan. 2012 Production
∗ 6 : From Jan. 2012 Production
(IG)
(ACC)
(BAT)
5A ECU–IG No. 1
7. 5A ACC
15A STOP
56 2D
8 2D
2
1
G
44
E61 Junction Connector
74
GR (∗4)
L–B
G
E60(A) Junction Connector
42 A
62 A
48
E61 Junction Connector
68
2
A30 Stop Light Switch Assembly
1
G
44
E59 Junction Connector
24
GR (∗4)
R
22 2B
1 2D
E51(A), E99(B)
Shift Lock Control ECU Sub–Assembly
Shift Lock Solenoid
P Detection
G
12 A (∗3)
8 B (∗4)
6 B
SLS+
SLS–
P
E2
IG
ACC
KLS+
E
STP
5 B
3 A
1 B
6 A (∗3)
4 B (∗4)
R
B (∗4)
W–B
R
20 A (∗5 ∗1)
27 A (∗5 ∗2)
39 A (∗6)
E60(A) Junction Connector
1
E98 Key Inter Lock Solenoid
2
37 A (∗5)
49 A (∗6)
9 A (∗5 ∗1)
7 A (∗5 ∗2)
19 A (∗6)
W–B
(∗4)
W–B
W–B
12
E66 Junction Connector
1
W–B
E2


A 30
Gray

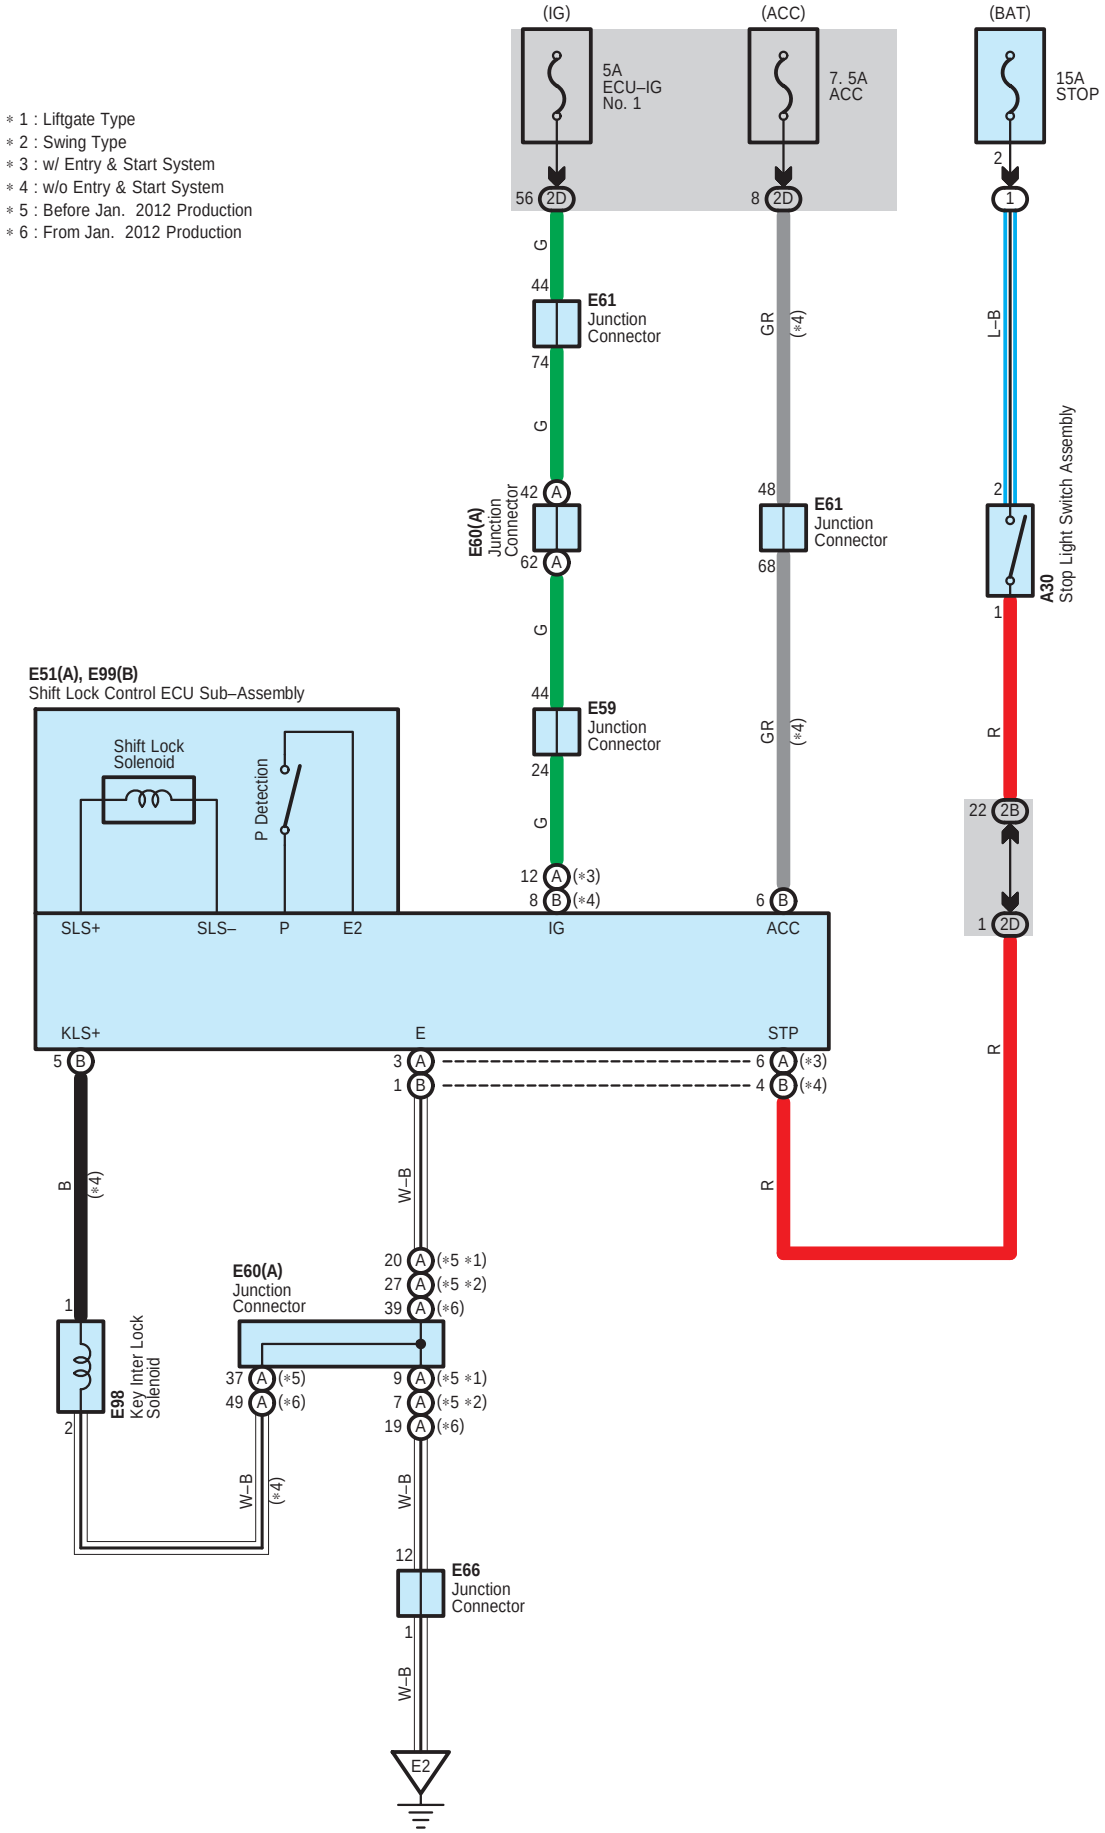


E 51
White




E 59

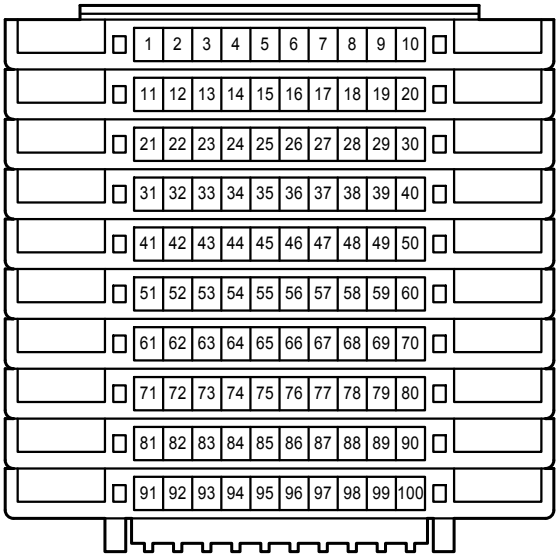


E 60

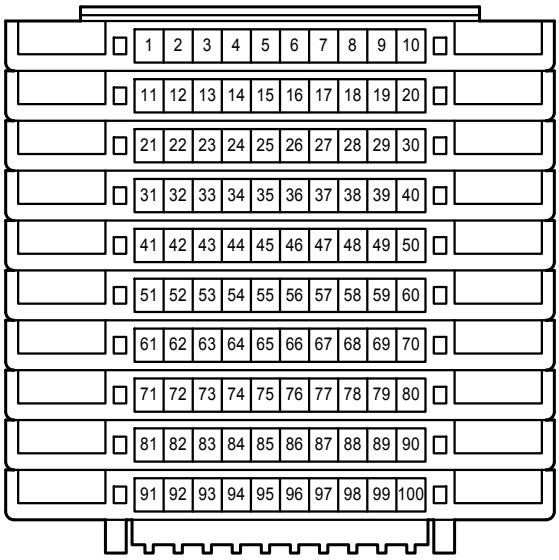


E 61

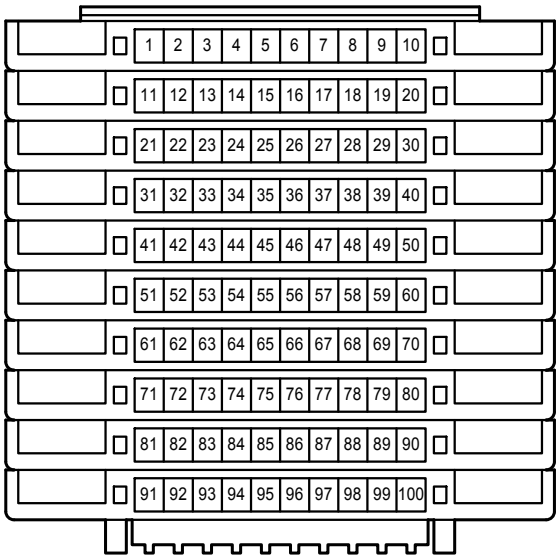


E 66
White

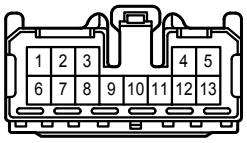


E 98
Black



E 99
White

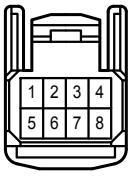

2B
White

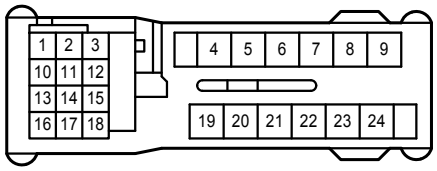

2D
White

