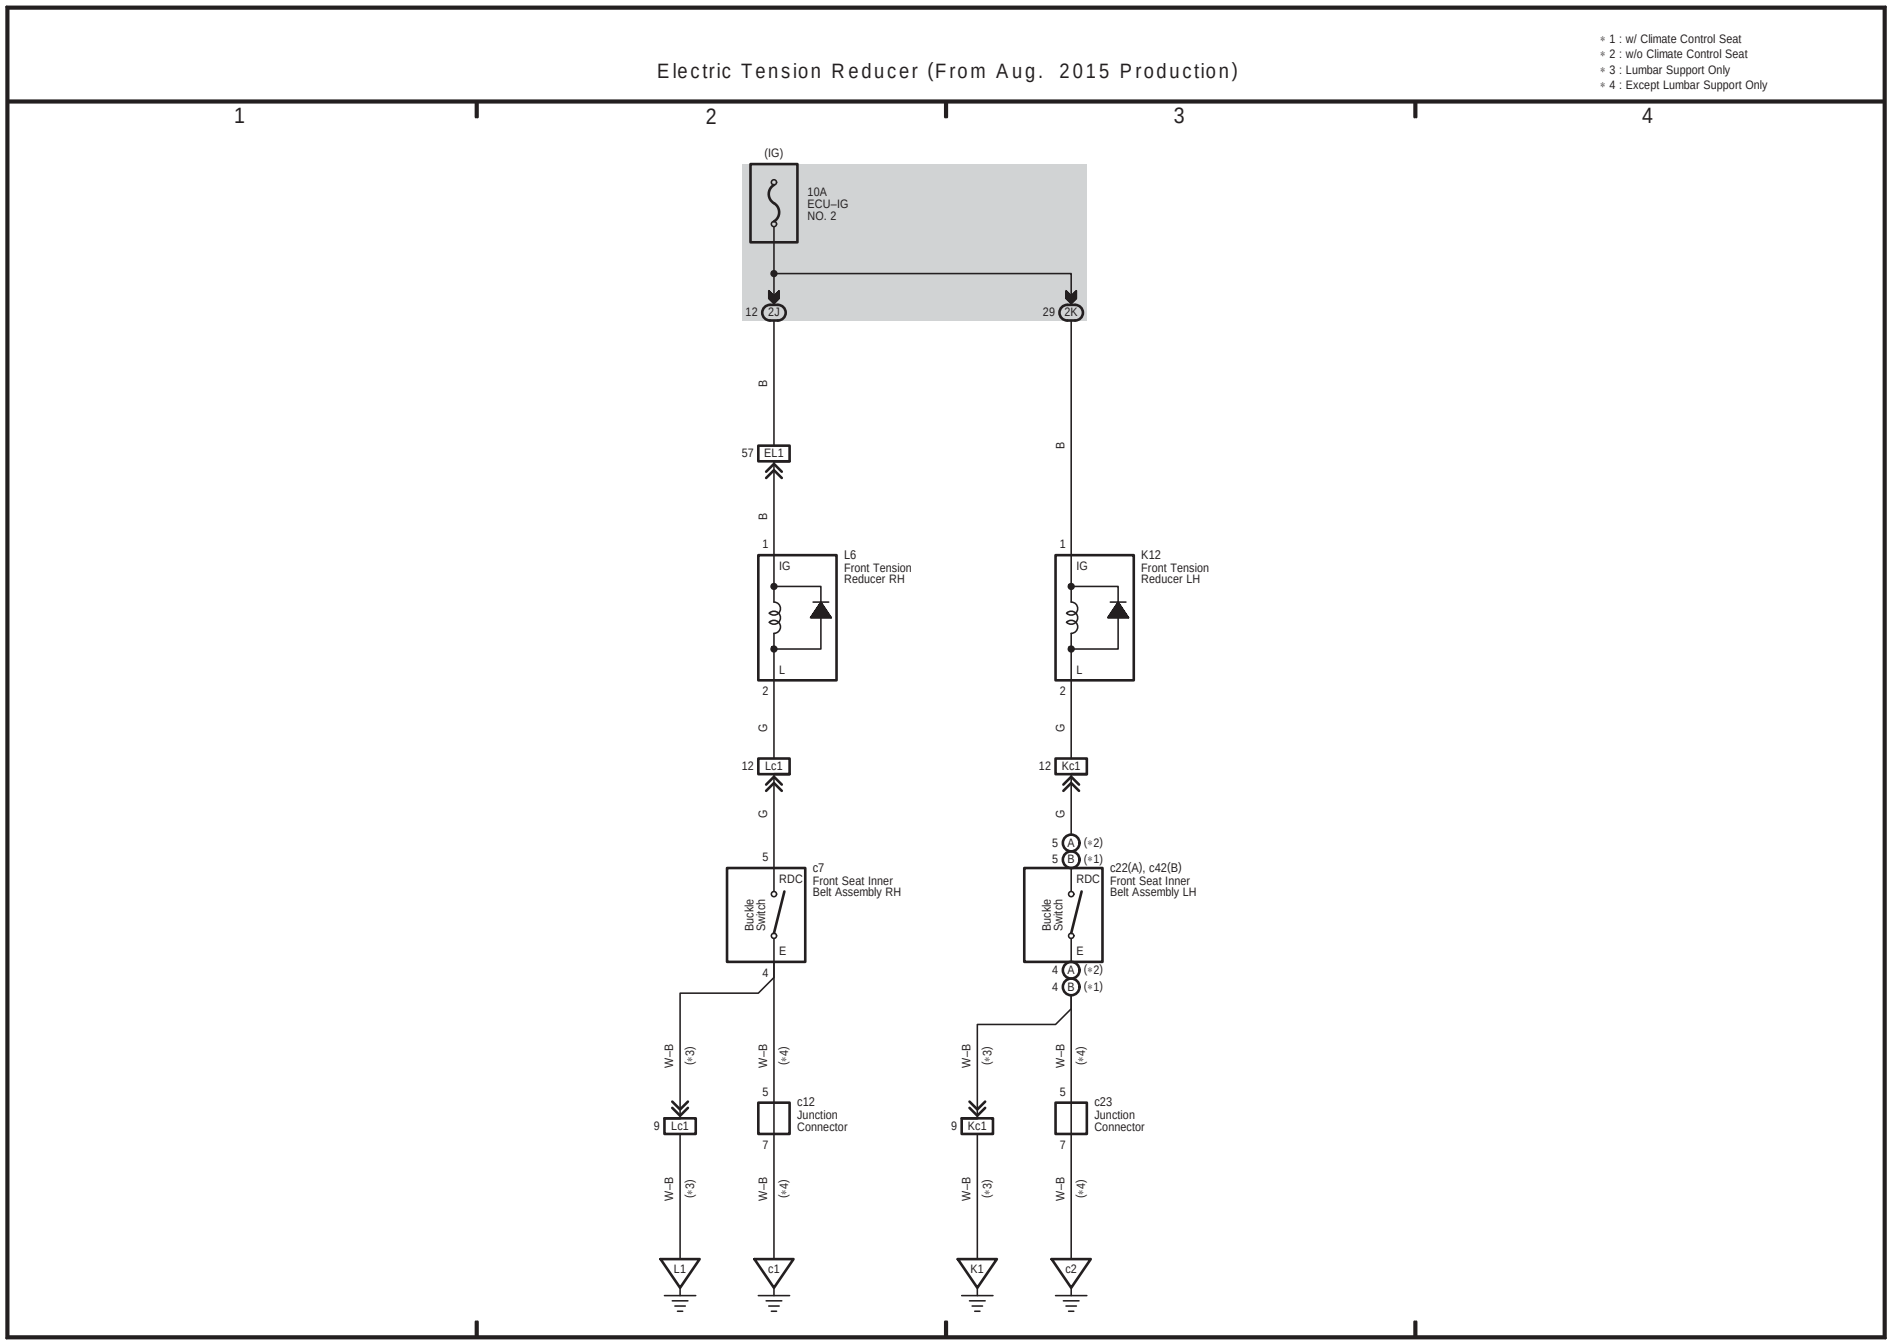

Electric Tension Reducer (From Aug. 2015 Production)
* 1 : w/ Climate Control Seat
* 2 : w/o Climate Control Seat
* 3 : Lumbar Support Only
* 4 : Except Lumbar Support Only
1
2
3
4
(IG)
10A
ECU–IG
NO. 2
12 2J
29 2K
B
57 EL1
B
1
IG
L6
Front Tension
Reducer RH
L
2
G
12 Lc1
G
5
RDC
Buckle
Switch
c7
Front Seat Inner
Belt Assembly RH
E
4
W–B (*3)
W–B (*4)
5
c12
Junction
Connector
7
9 Lc1
W–B (*3)
W–B (*4)
L1
c1
B
1
IG
K12
Front Tension
Reducer LH
L
2
G
12 Kc1
G
5 A (*2)
5 B (*1)
RDC
Buckle
Switch
c22(A), c42(B)
Front Seat Inner
Belt Assembly LH
E
4 A (*2)
4 B (*1)
W–B (*3)
W–B (*4)
5
c23
Junction
Connector
7
9 Kc1
W–B (*3)
W–B (*4)
K1
c2