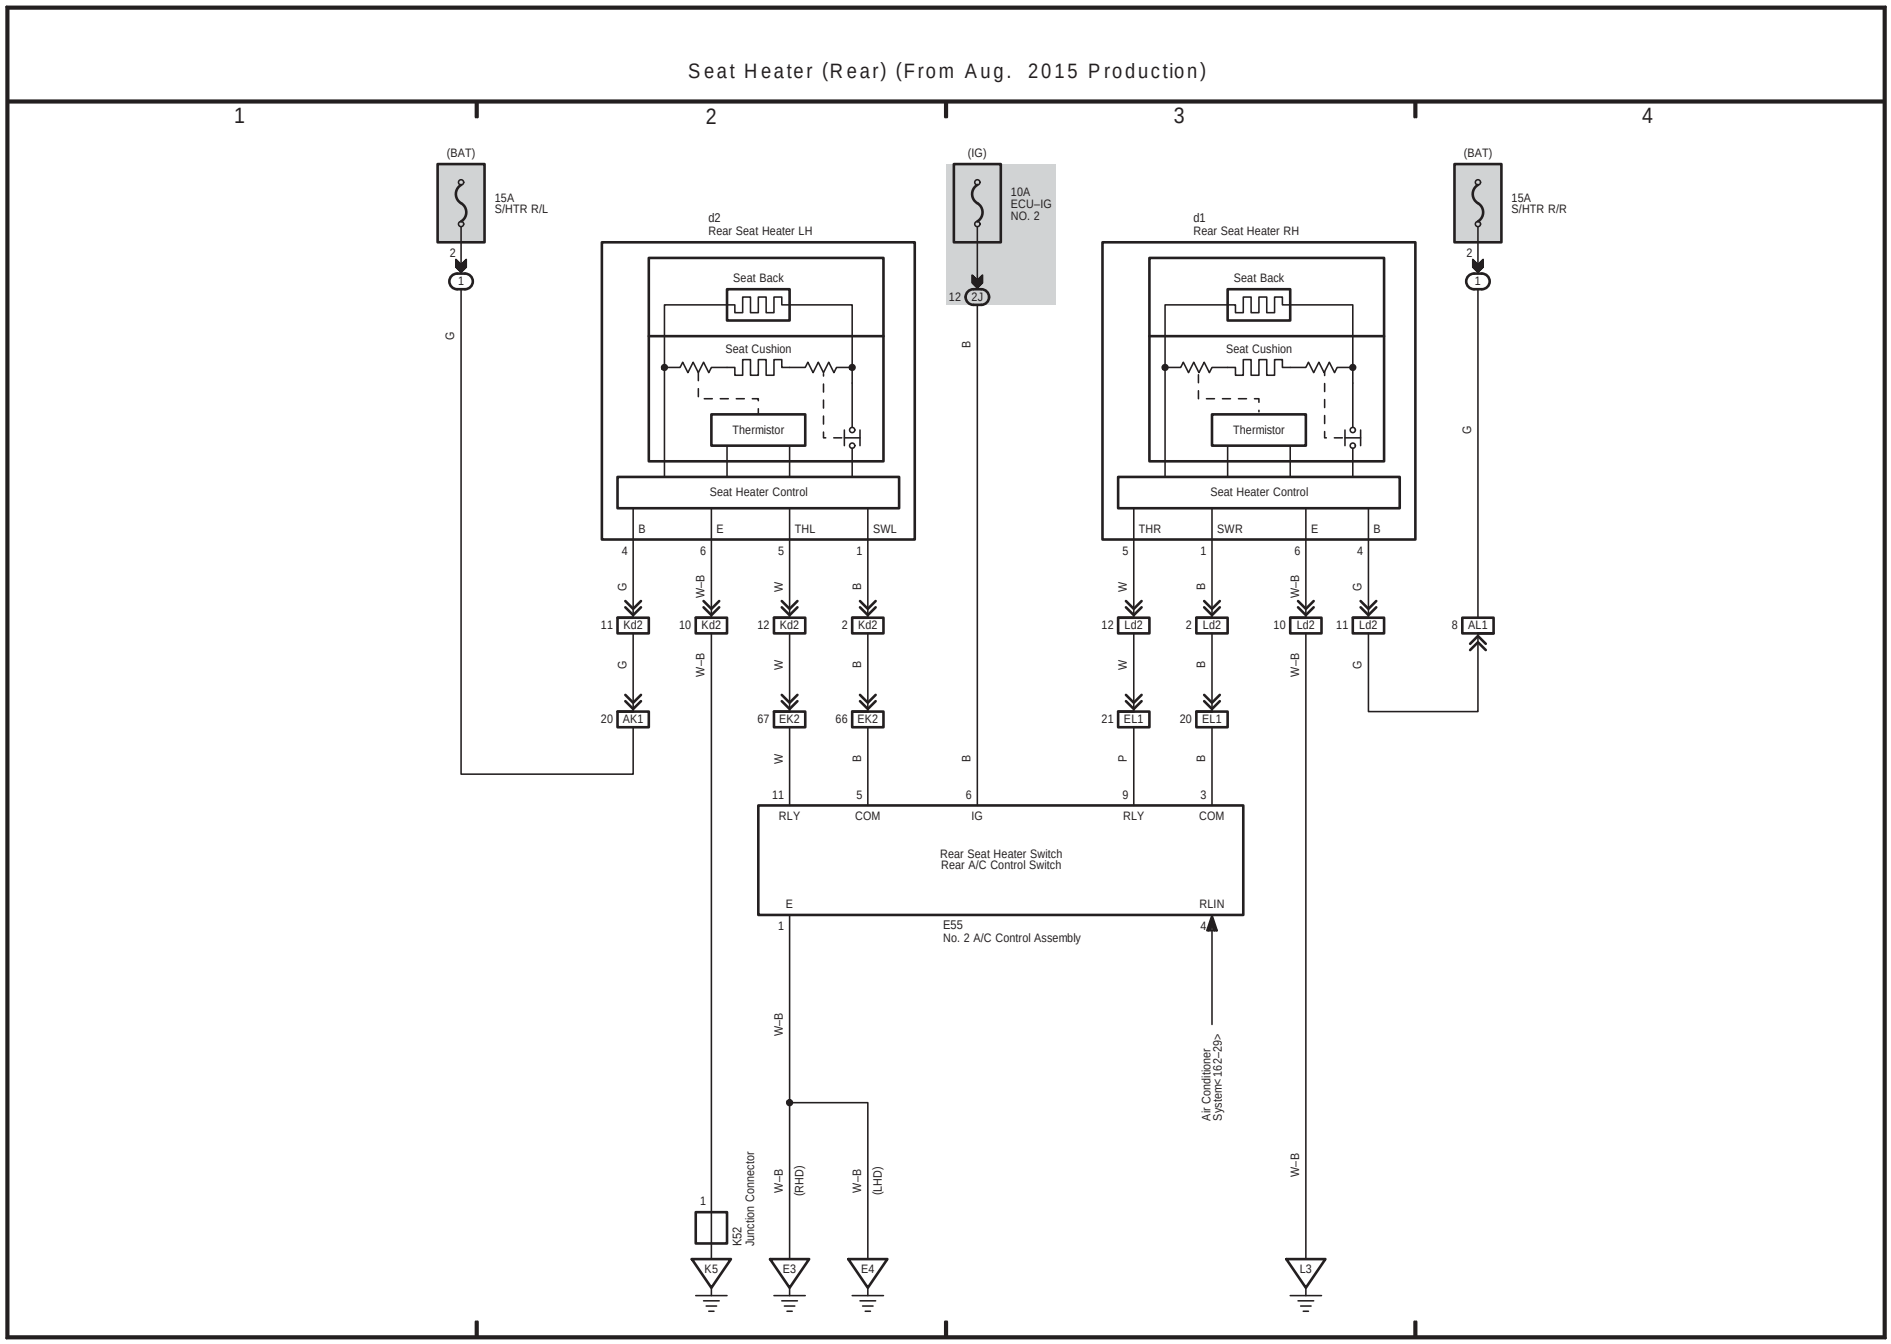

Seat Heater (Rear) (From Aug. 2015 Production)
1
2
3
4
(BAT)
15A
S/HTR R/L
(IG)
10A
ECU–IG
NO. 2
(BAT)
15A
S/HTR R/R
d2
Rear Seat Heater LH
d1
Rear Seat Heater RH
Seat Back
Seat Cushion
Thermistor
Seat Heater Control
B
E
THL
SWL
THR
SWR
Kd2
Ld2
EL1
EK2
AK1
AL1
RLY
COM
IG
Rear Seat Heater Switch
Rear A/C Control Switch
E55
No. 2 A/C Control Assembly
RLIN
Air Conditioner System<16Z–2dy>
K52
Junction Connector
(RHD)
(LHD)
K5
E3
E4
L3