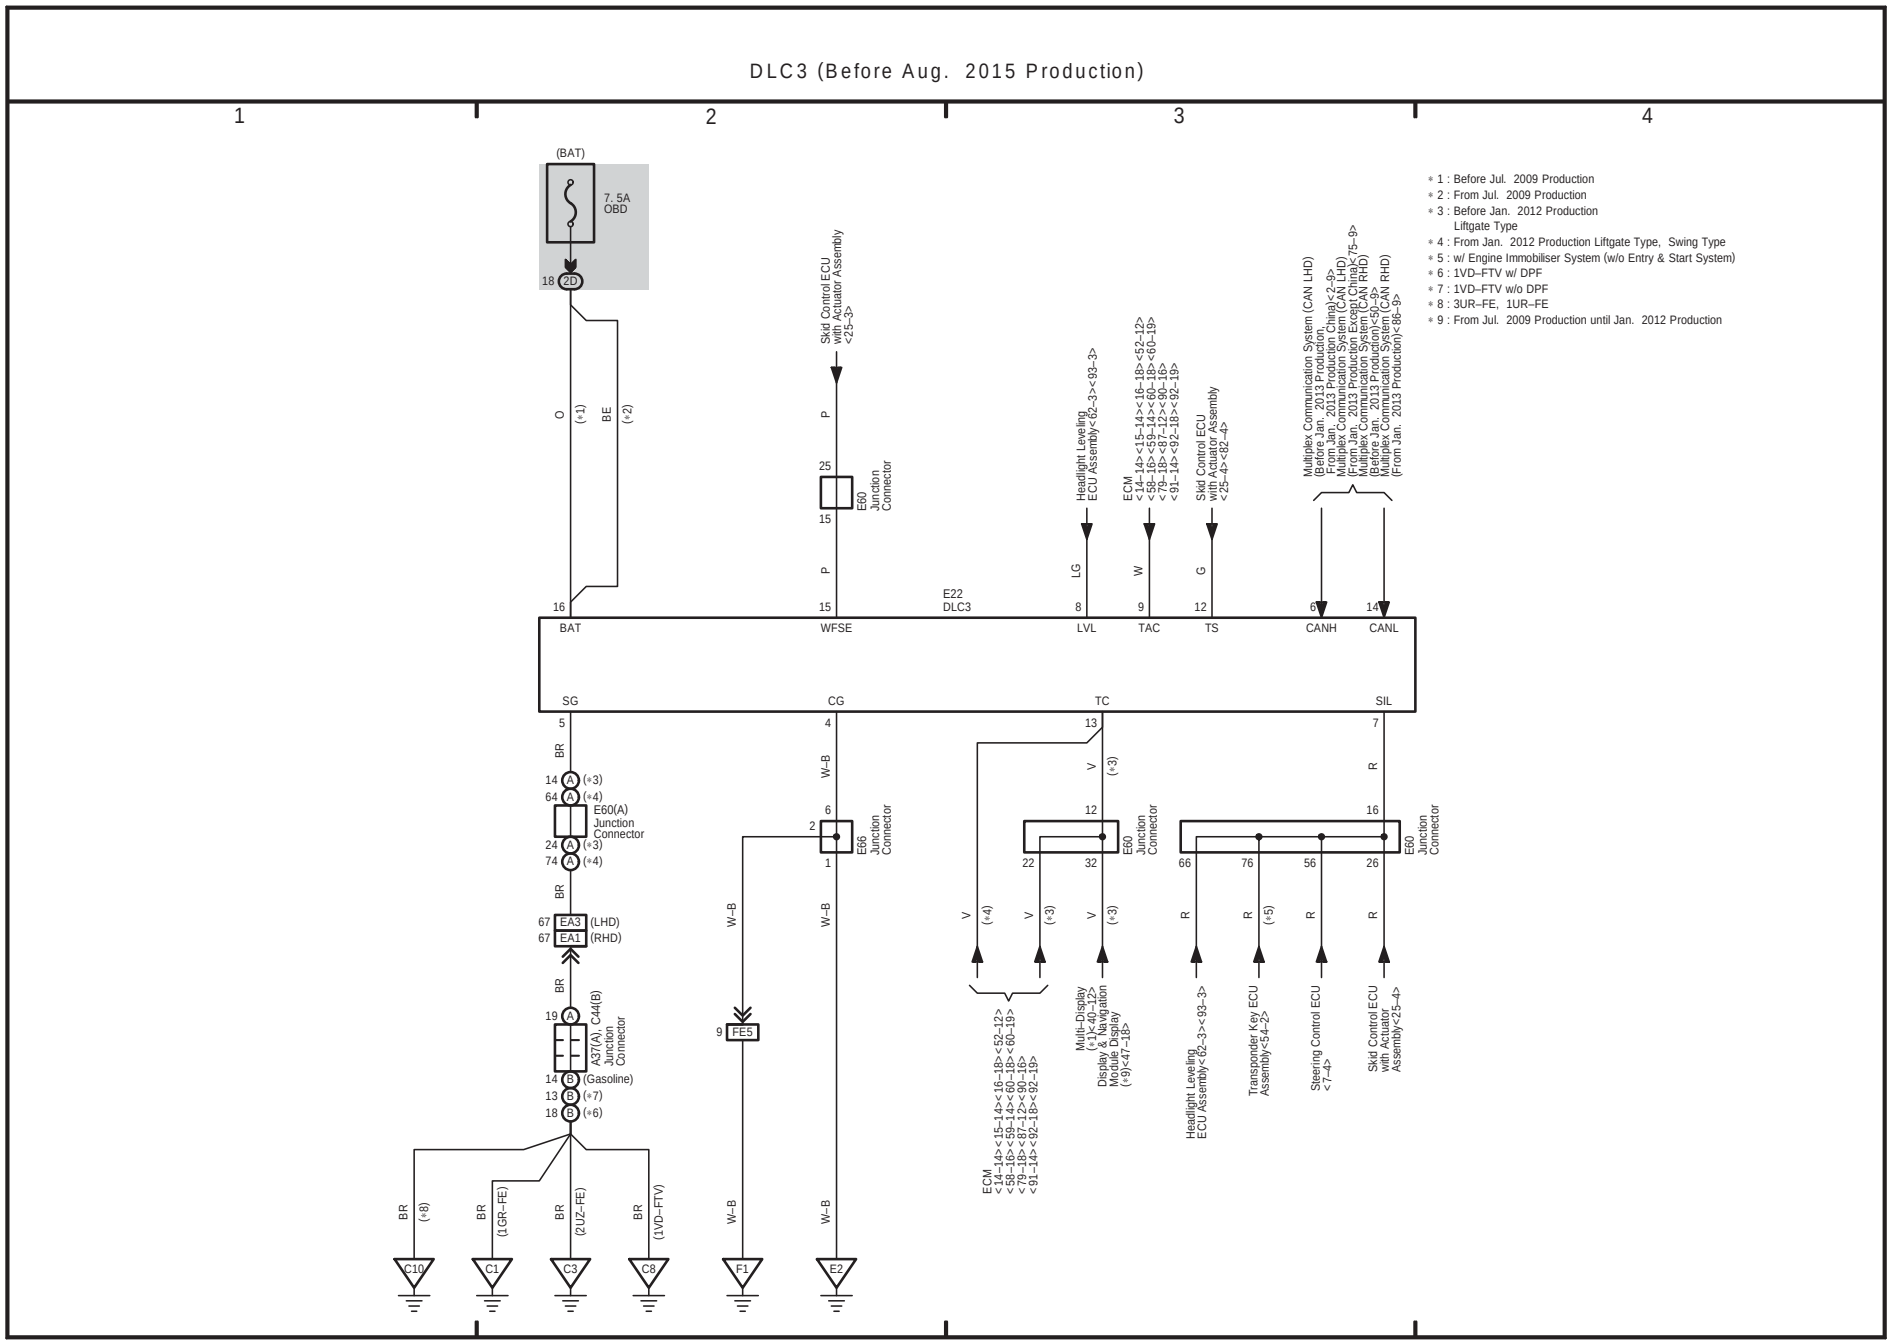

DLC3 (Before Aug. 2015 Production)
1
2
3
4
(BAT)
7. 5A
OBD
18 2D
16
BAT
O
(+1)
BE
(+2)
Skid Control ECU
with Actuator Assembly
<25–3>
P
25
E60
Junction
Connector
15
P
15
WFSE
E22
DLC3
Headlight Leveling
ECU Assembly<62–3><93–3>
LG
8
LVL
ECM
<14–14><15–14><16–18><52–12>
<59–16><59–14><60–18><60–19>
<78–18><87–12><90–18>
<91–14><92–18><92–19>
W
9
TAC
Skid Control ECU
with Actuator Assembly
<25–4><82–4>
G
12
TS
Multiplex Communication System (CAN LHD)
(Before Jan. 2013 Production)<2–9>
Multiplex Communication System (CAN LHD)
(From Jan. 2013 Production Except China)<2–9>
Multiplex Communication System (CAN RHD)
(From Jan. 2013 Production except China)<75–9>
Multiplex Communication System (CAN RHD)
(Before Jan. 2013 Production)<75–9>
Multiplex Communication System (CAN RHD)
(From Jan. 2013 Production)<86–9>
6
CANH
14
CANL
SG
CG
TC
SIL
5
BR
4
W–B
13
V
(+3)
7
R
14 A (+3)
64 A (+4)
E60(A)
Junction
Connector
24 A (+3)
74 A (+4)
6
2
E66
Junction
Connector
1
12
22
32
E60
Junction
Connector
16
66
76
56
26
67 EA3 (LHD)
67 EA1 (RHD)
19 A
A37(A), C44(B)
Junction
Connector
14 B (Gasoline)
13 B (+7)
18 B (+6)
9 FE5
V
(+4)
(+3)
R
(+5)
ECM
<14–14><15–14><16–18><52–12>
<59–16><59–14><60–18><60–19>
<78–18><87–12><90–18>
<91–14><92–18><92–19>
Multi-Display
(*1)<40–12>
Display & Navigation
Module Display
(*9)<47–18>
Headlight Leveling
ECU Assembly<62–3><93–3>
Transponder Key ECU
Assembly<54–2>
Steering Control ECU
<7–4>
Skid Control ECU
with Actuator
Assembly<25–4>
BR
(*8)
(1GR–FE)
(2UZ–FE)
(1VD–FTV)
W–B
C10
C1
C3
C8
F1
E2
* 1 : Before Jul. 2009 Production
* 2 : From Jul. 2009 Production
* 3 : Before Jan. 2012 Production
Liftgate Type
* 4 : From Jan. 2012 Production Liftgate Type, Swing Type
* 5 : w/ Engine Immobiliser System (w/o Entry & Start System)
* 6 : 1VD–FTV w/ DPF
* 7 : 1VD–FTV w/o DPF
* 8 : 3UR–FE, 1UR–FE
* 9 : From Jul. 2009 Production until Jan. 2012 Production