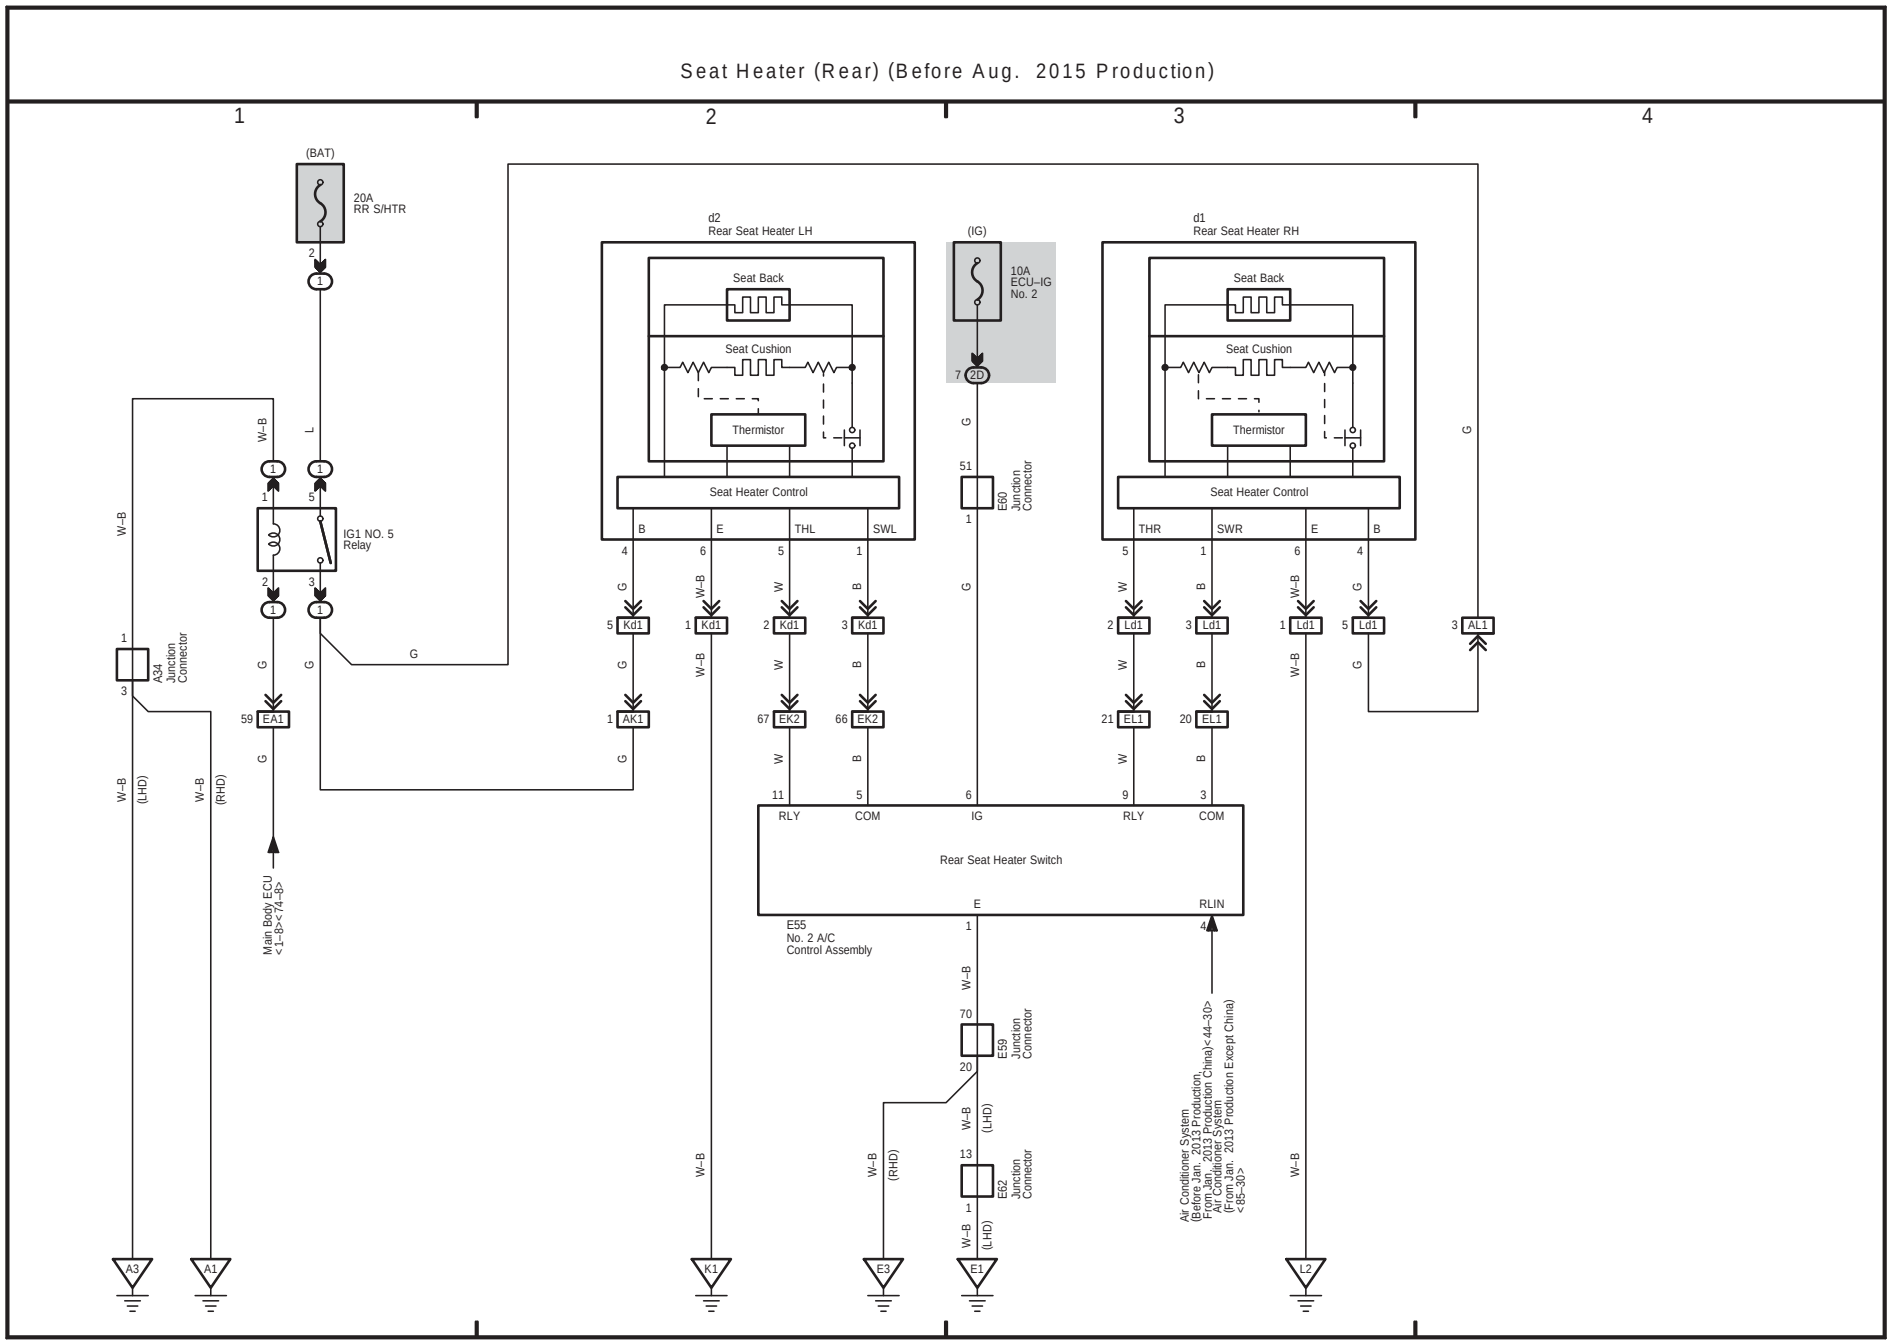

Seat Heater (Rear) (Before Aug. 2015 Production)
1
2
3
4
(BAT)
20A
RR S/HTR
d2
Rear Seat Heater LH
d1
Rear Seat Heater RH
(IG)
10A
ECU-IG
No. 2
Seat Back
Seat Cushion
Thermistor
Seat Heater Control
IG1 NO. 5
Relay
A34
Junction
Connector
E60
Junction
Connector
E59
Junction
Connector
E82
Junction
Connector
E55
No. 2 A/C
Control Assembly
Rear Seat Heater Switch
Main Body ECU
<1-8><7,4-8>
Air Conditioner System
(Before Jan. 2013 Production,
From Jan. 2013 Production China)<44-30>
Air Conditioner System
(From Jan. 2013 Production Except China)
<85-30>
B
E
THL
SWL
THR
SWR
RLY
COM
IG
RLIN
W-B
(LHD)
(RHD)
A3
A1
K1
E3
E1
L2