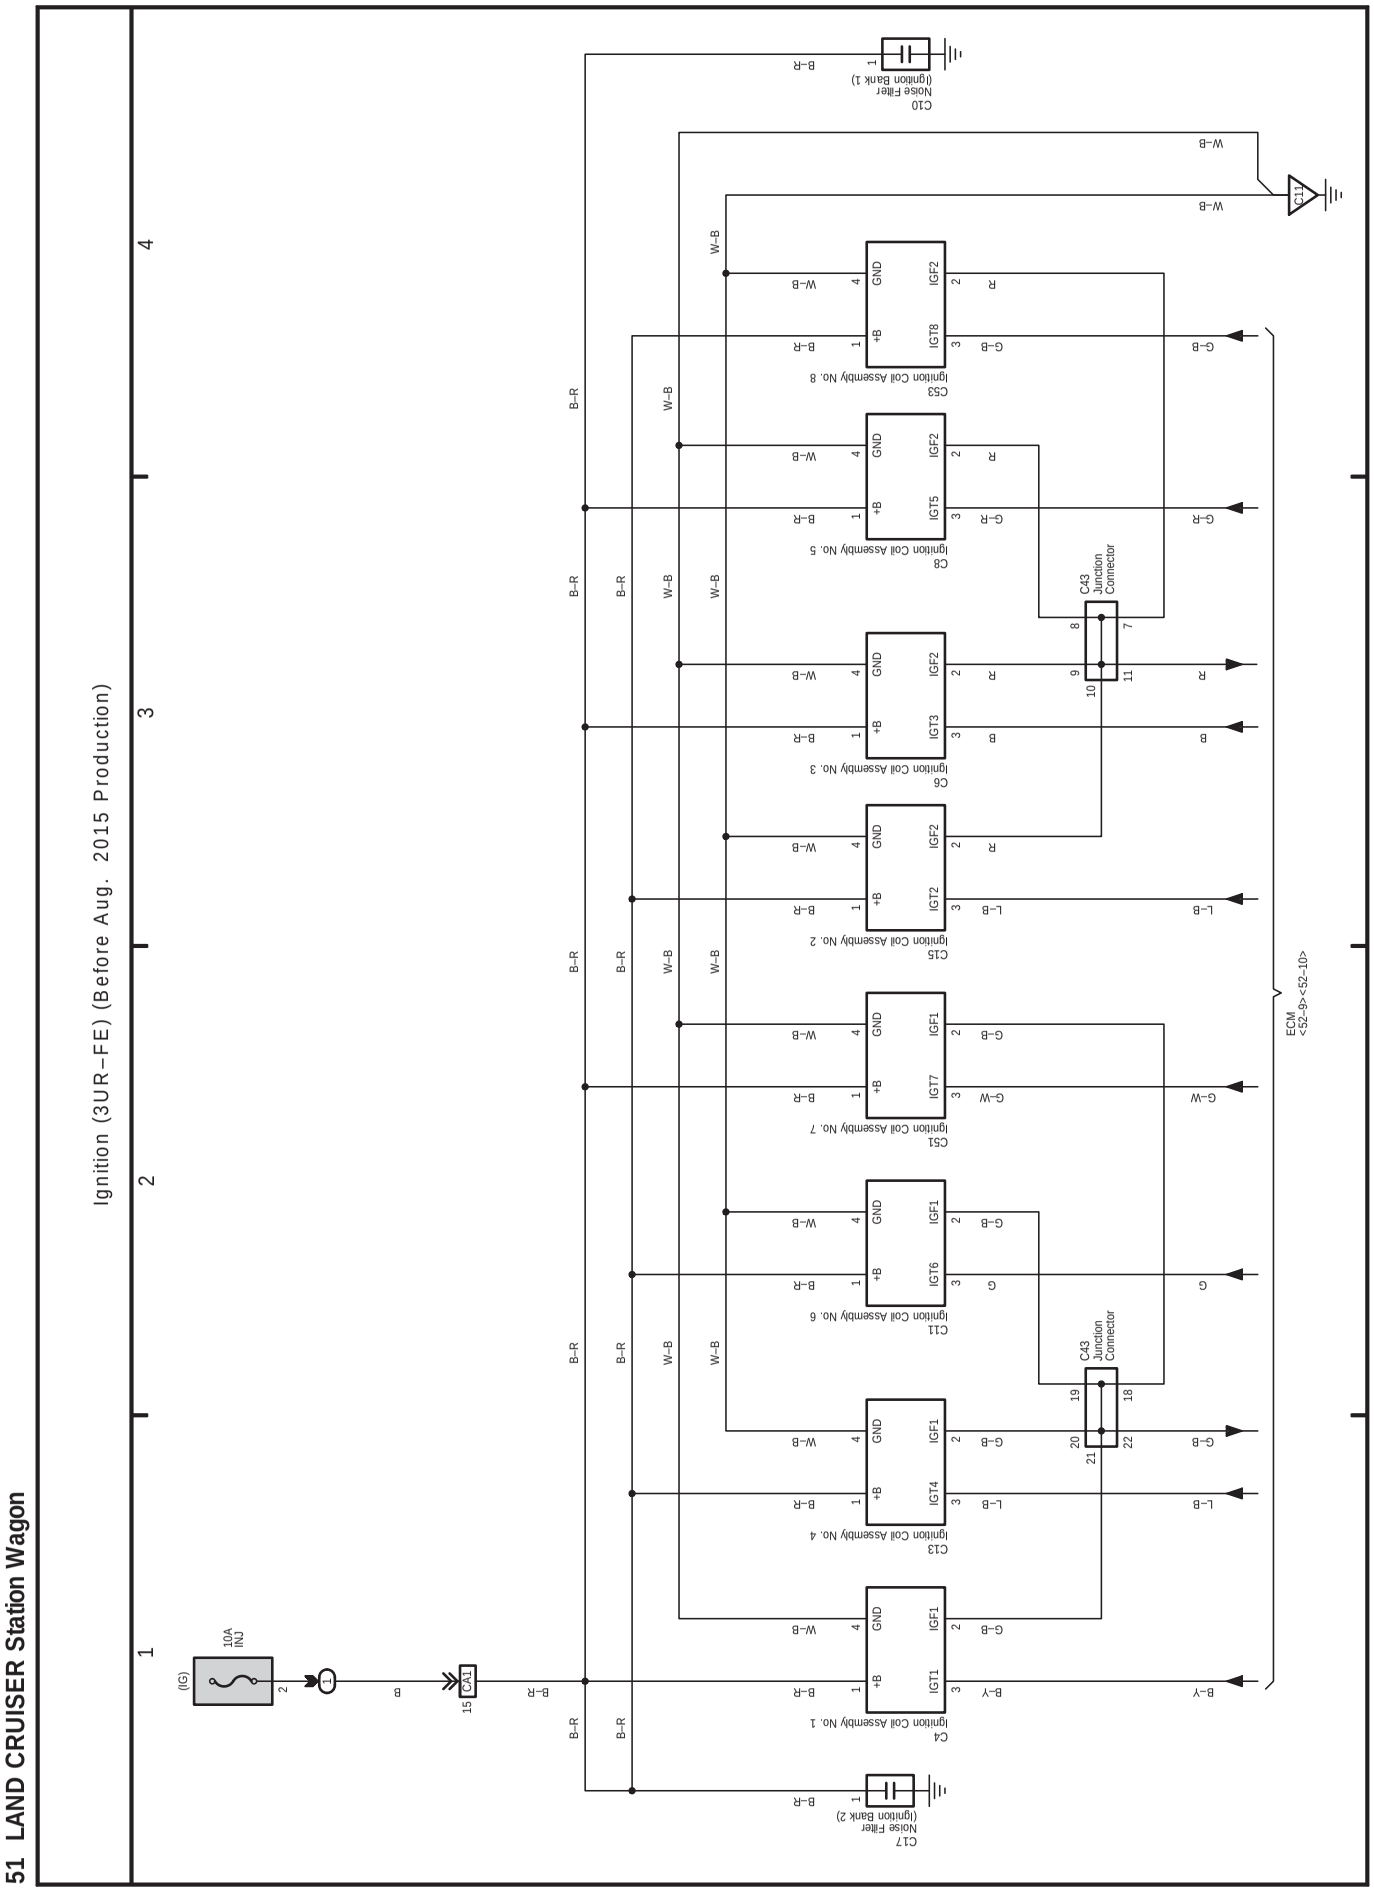

51 LAND CRUISER Station Wagon
Ignition (3UR–FE) (Before Aug. 2015 Production)
1
2
3
4
(IG)
10A
INJ
2
1
B
15
CA1
B–R
B–R
B–R
B–R
B–R
B–R
B–R
B–R
W–B
W–B
W–B
W–B
W–B
W–B
W–B
W–B
C4
Ignition Coil Assembly No. 1
GND
+B
IGF1
IGT1
C13
Ignition Coil Assembly No. 4
C11
Ignition Coil Assembly No. 6
C51
Ignition Coil Assembly No. 7
C15
Ignition Coil Assembly No. 2
C6
Ignition Coil Assembly No. 3
C8
Ignition Coil Assembly No. 5
C53
Ignition Coil Assembly No. 8
C43
Junction
Connector
C10
Noise Filter
(Ignition Bank 1)
C17
Noise Filter
(Ignition Bank 2)
ECM
<52–9><52–10>