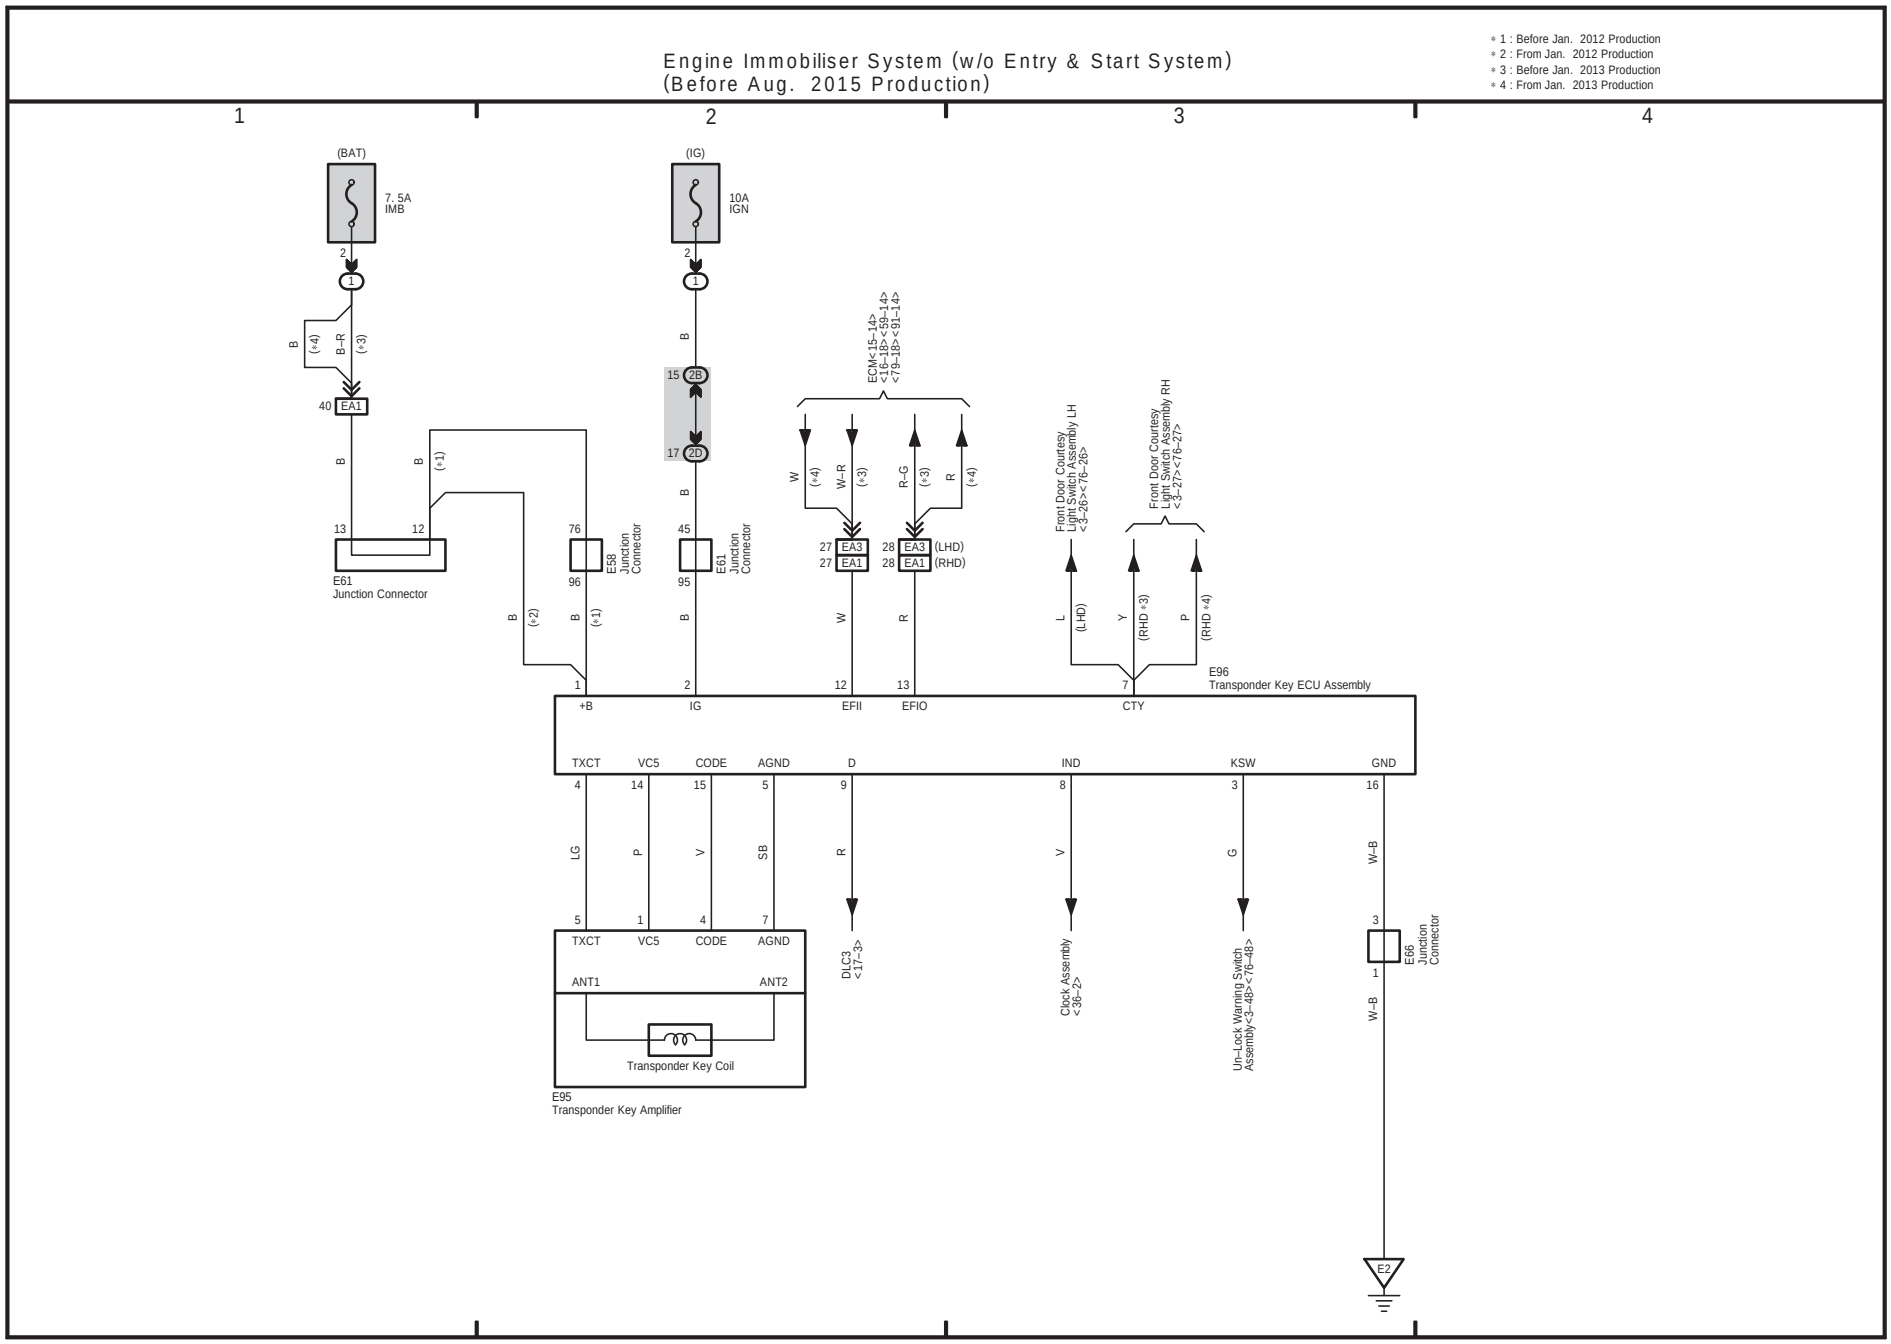

Engine Immobiliser System (w/o Entry & Start System)
(Before Aug. 2015 Production)
* 1 : Before Jan. 2012 Production
* 2 : From Jan. 2012 Production
* 3 : Before Jan. 2013 Production
* 4 : From Jan. 2013 Production
1
2
3
4
(BAT)
7.5A IMB
(IG)
10A IGN
ECM<15–14> <15–15><15–16> <79–18><81–14>
Front Door Courtesy Light Switch Assembly LH <3–26><76–26>
Front Door Courtesy Light Switch Assembly RH <3–27><76–27>
E61 Junction Connector
E58 Junction Connector
E61 Junction Connector
E96 Transponder Key ECU Assembly
+B
IG
EFII
EFIO
CTY
TXCT
VC5
CODE
AGND
D
IND
KSW
GND
E95 Transponder Key Amplifier
ANT1
ANT2
Transponder Key Coil
DLC3 <17–3>
Clock Assembly <36–2>
Un–Lock Warning Switch Assembly<3–48><76–48>
E66 Junction Connector
E2