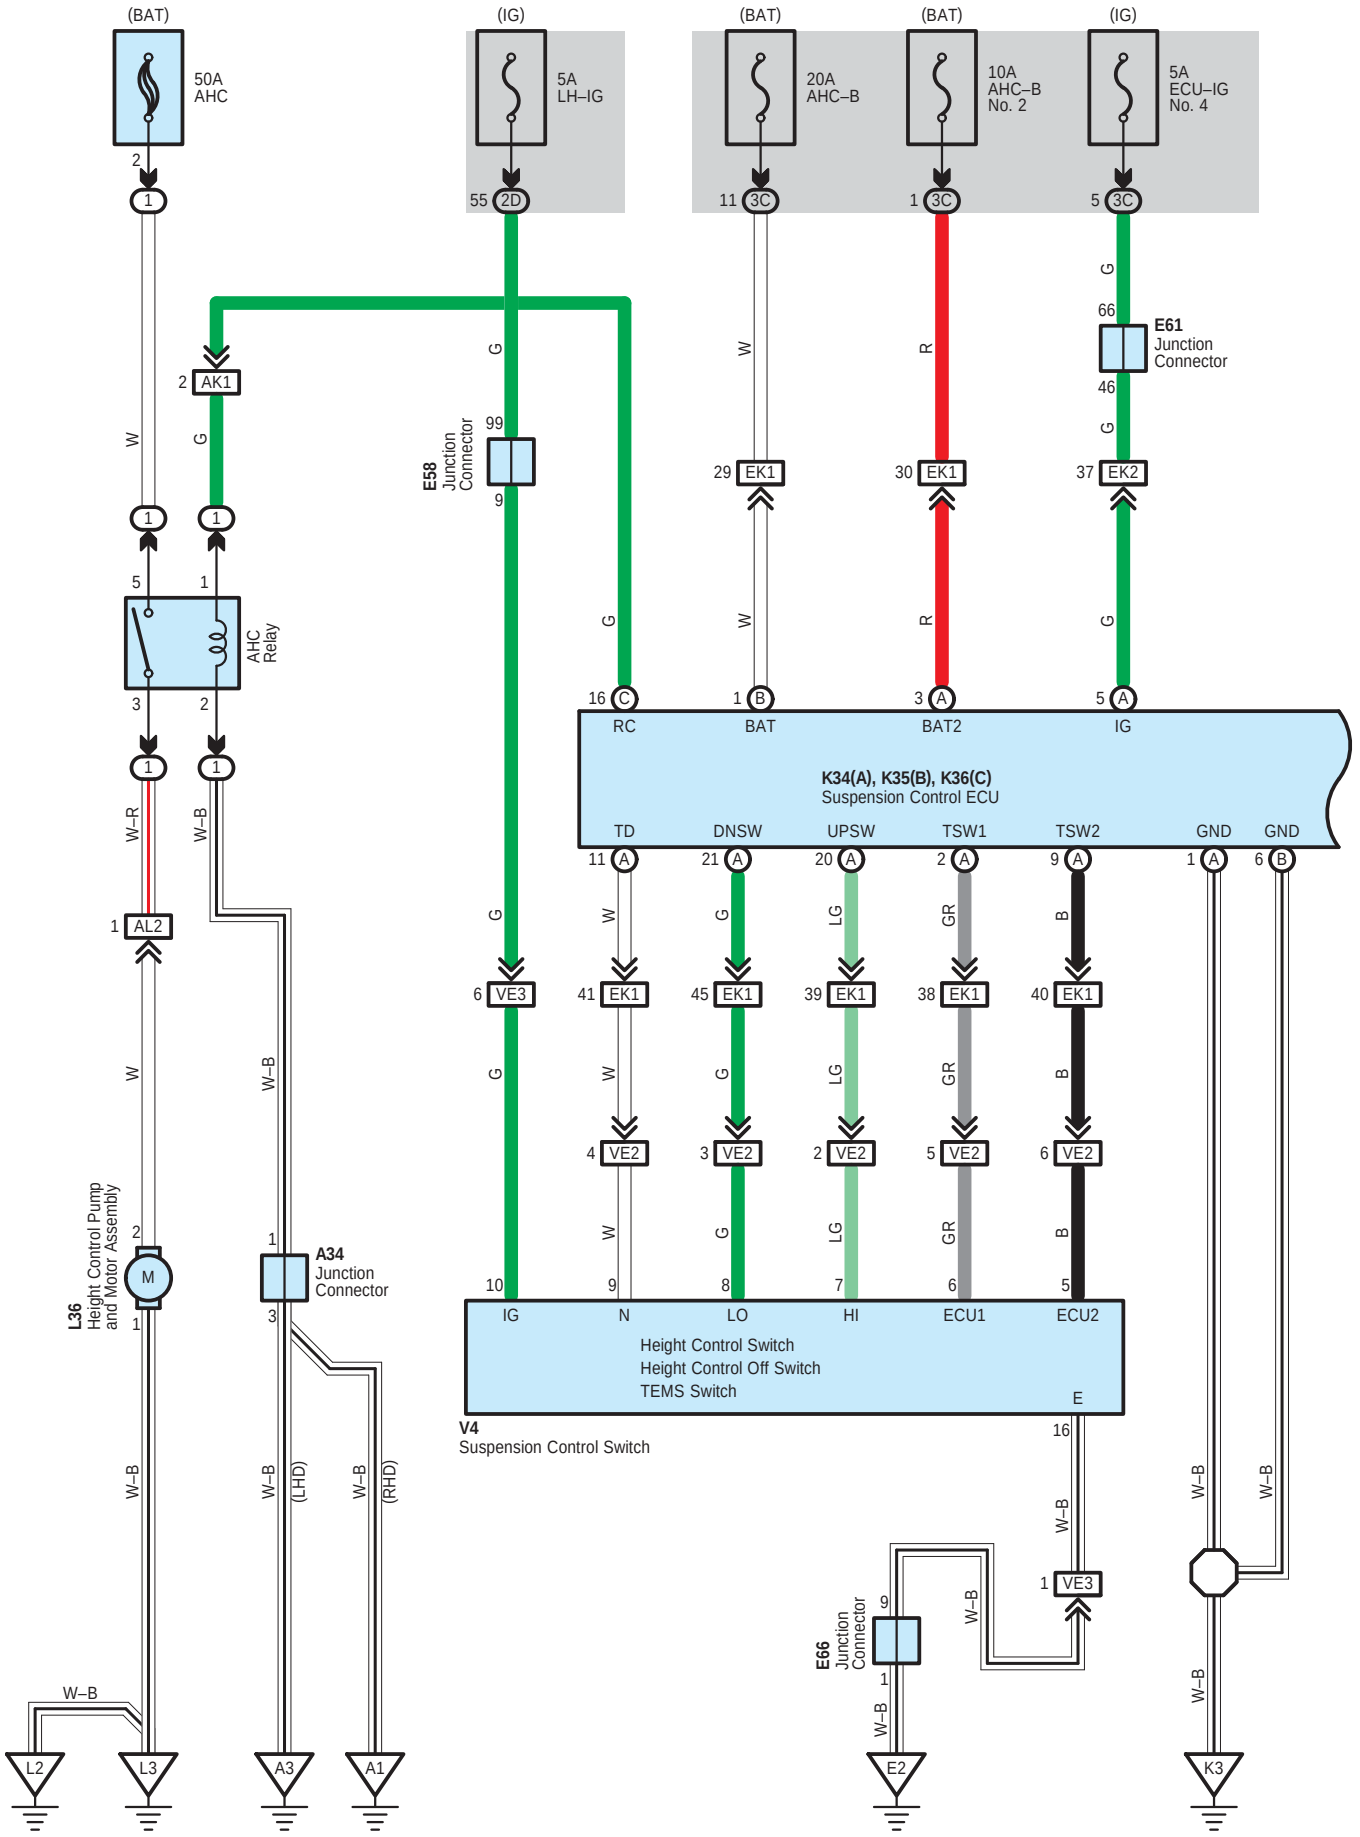
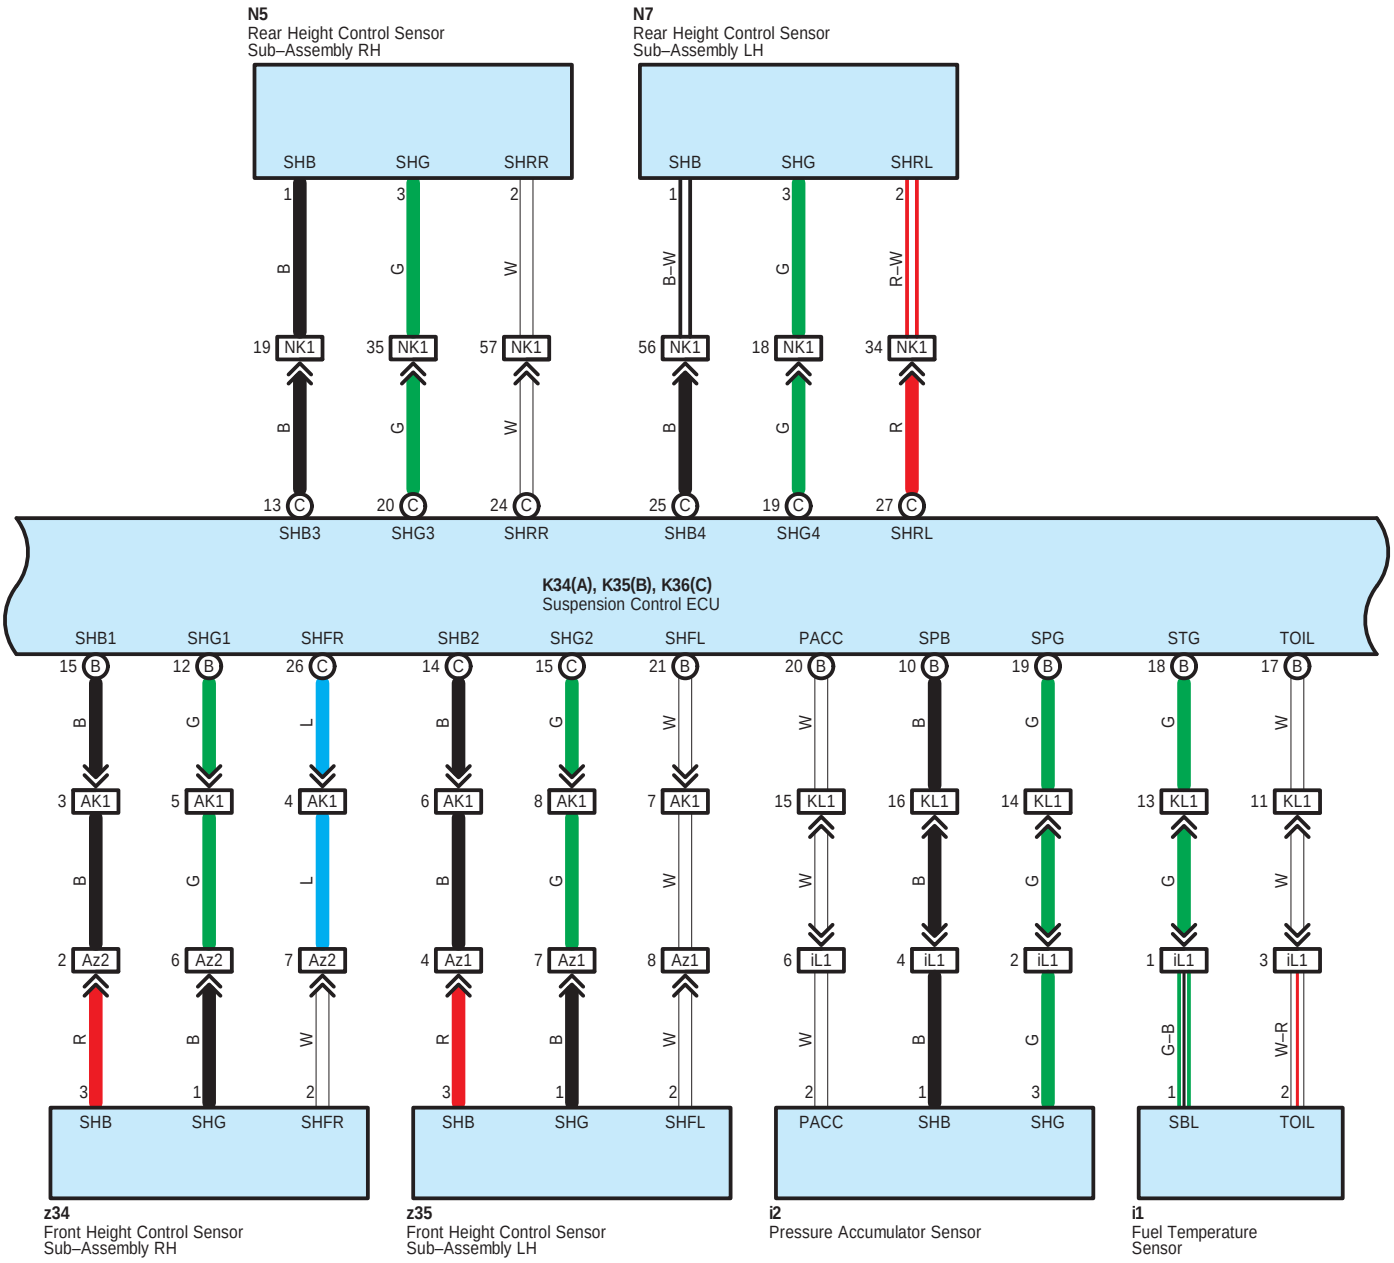
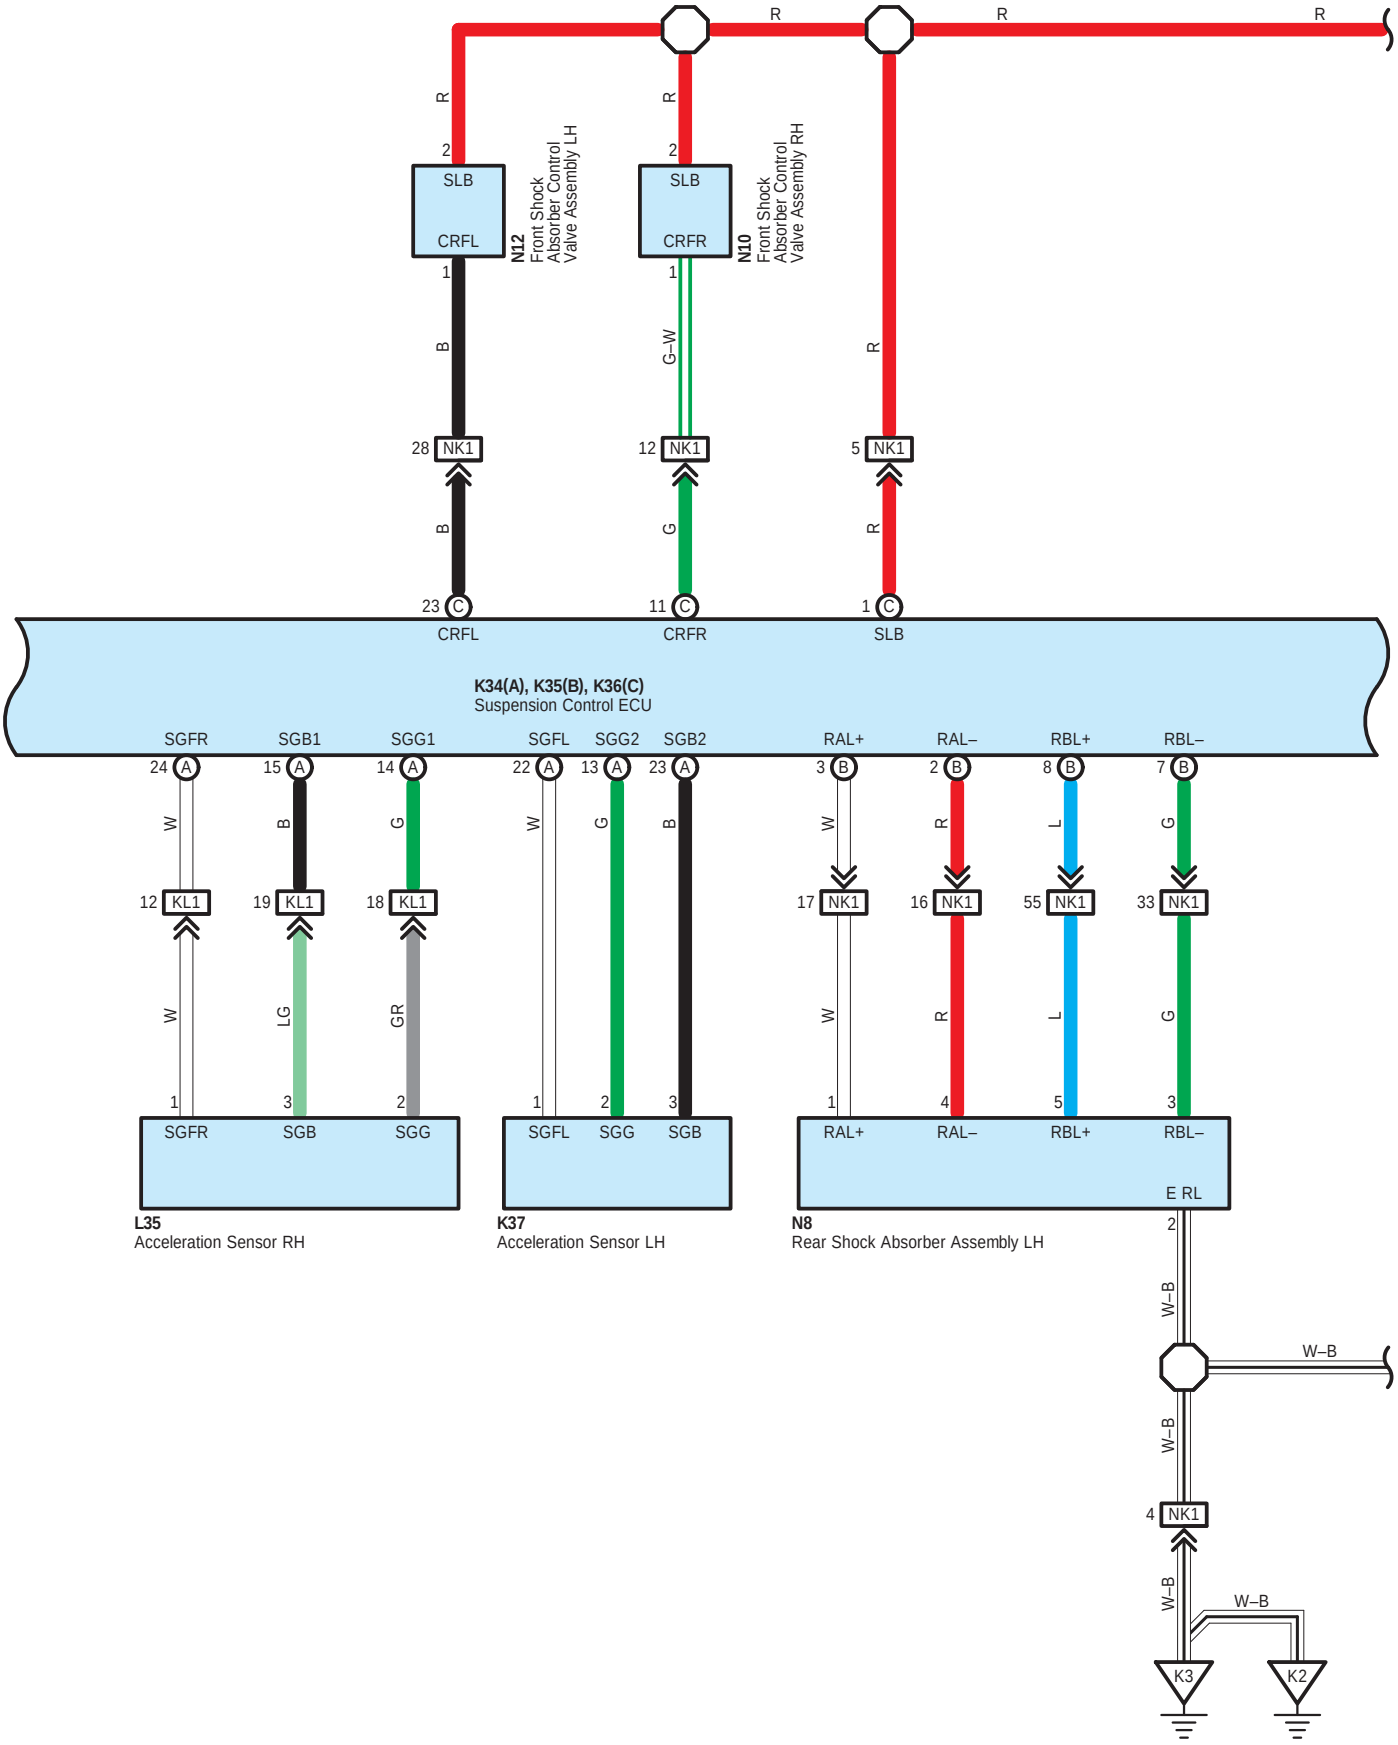
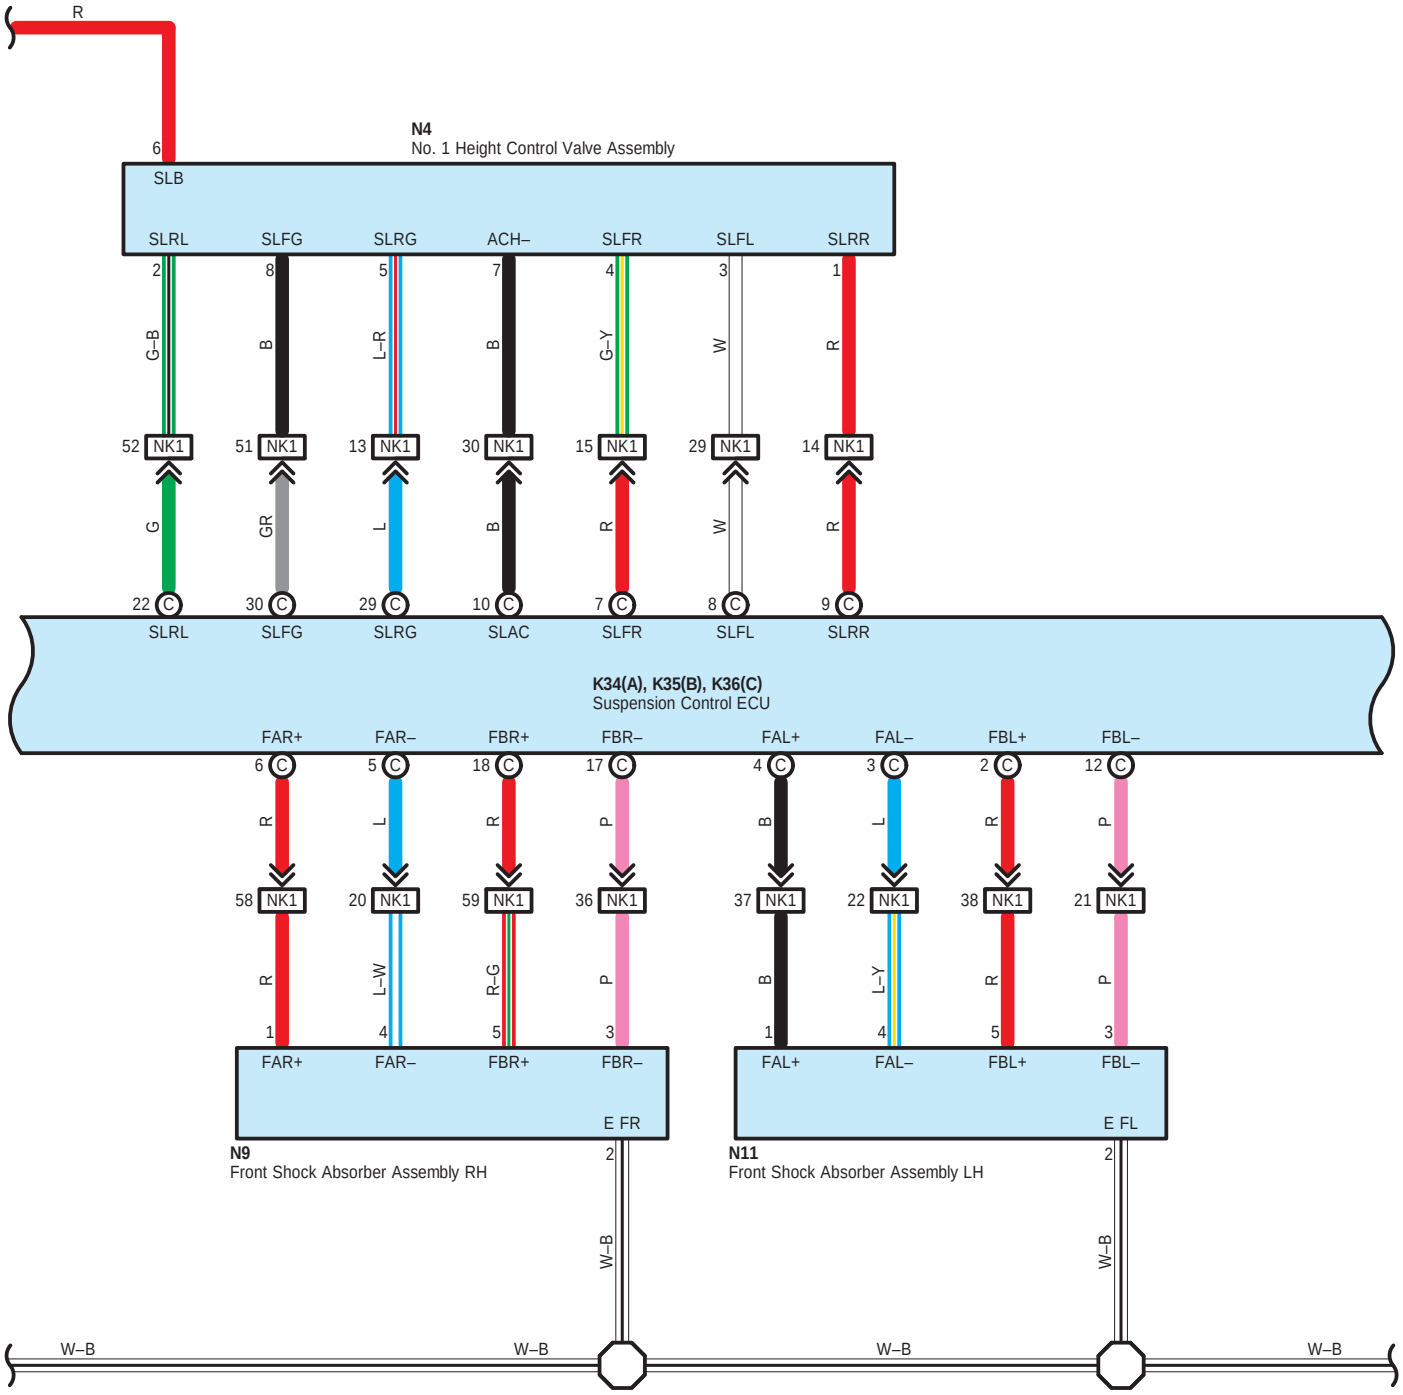
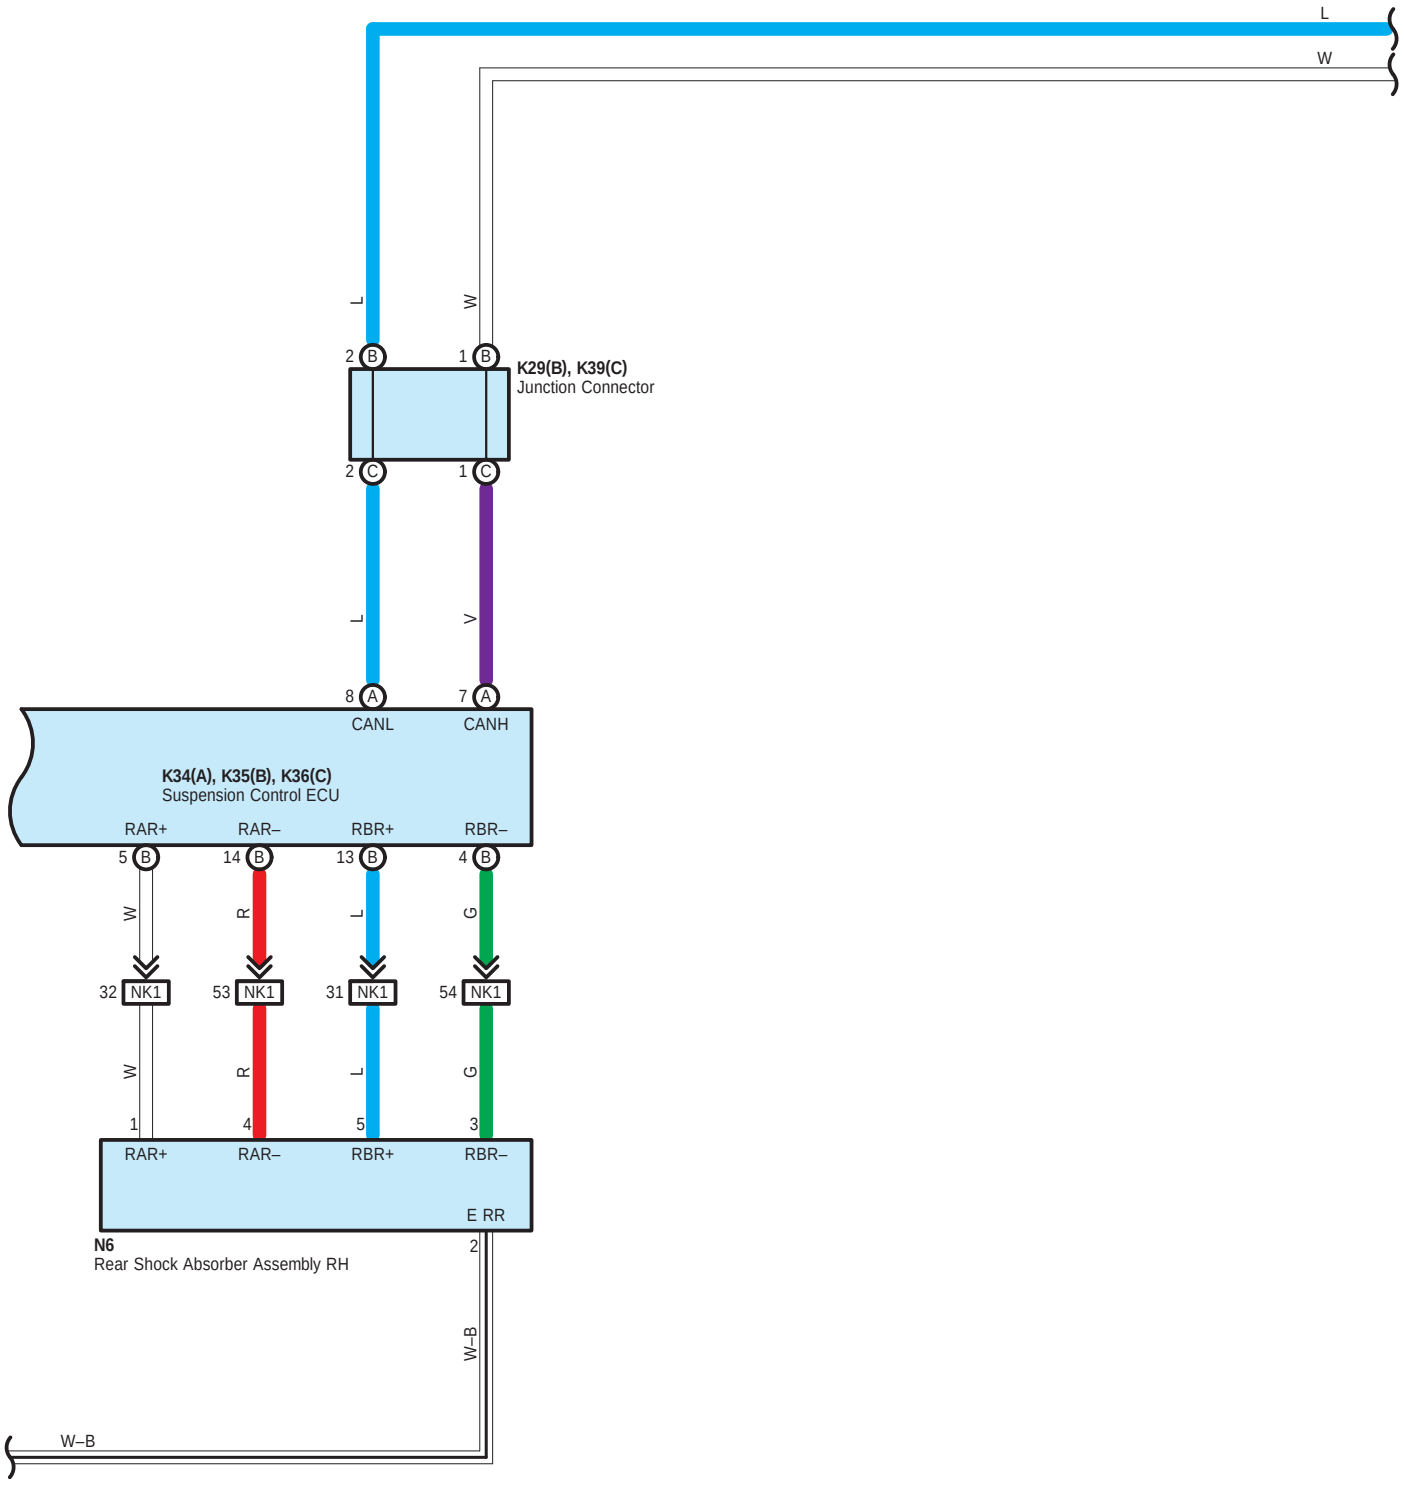
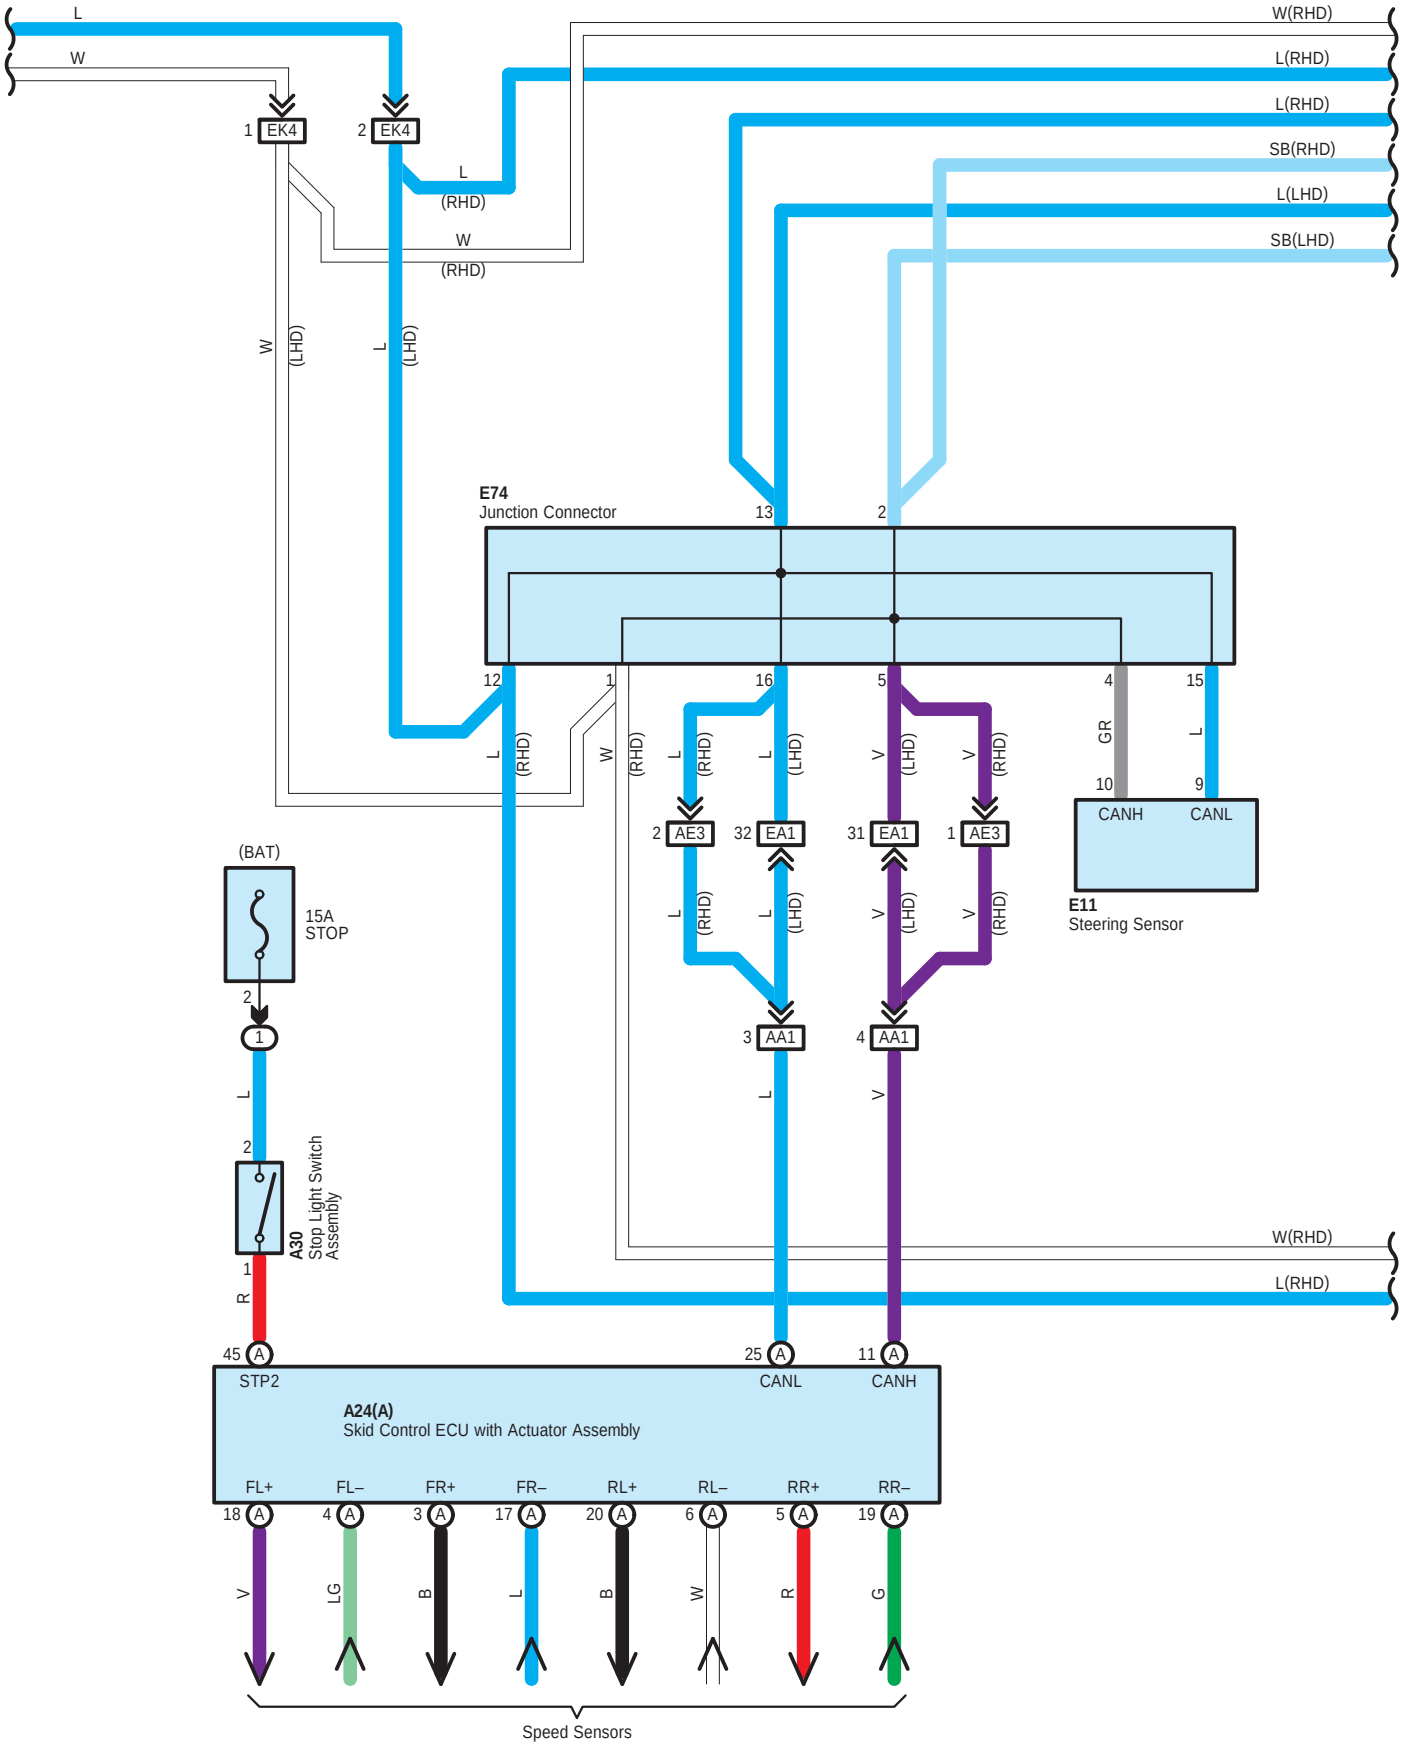

(BAT)
50A
AHC
(IG)
5A
LH–IG
(BAT)
20A
AHC–B
(BAT)
10A
AHC–B
No. 2
(IG)
5A
ECU–IG
No. 4
E58
Junction
Connector
E61
Junction
Connector
AHC
Relay
K34(A), K35(B), K36(C)
Suspension Control ECU
RC
BAT
BAT2
IG
TD
DNSW
UPSW
TSW1
TSW2
GND
GND
L36
Height Control Pump
and Motor Assembly
A34
Junction
Connector
V4
Suspension Control Switch
Height Control Switch
Height Control Off Switch
TEMS Switch
IG
N
LO
HI
ECU1
ECU2
E66
Junction
Connector
(LHD)
(RHD)
L2
L3
A3
A1
E2
K3



N5
Rear Height Control Sensor
Sub–Assembly RH
SHB
SHG
SHRR
1
3
2
B
G
W
19 NK1
35 NK1
57 NK1
B
G
W
13 C
20 C
24 C
SHB3
SHG3
SHRR
N7
Rear Height Control Sensor
Sub–Assembly LH
SHB
SHG
SHRL
1
3
2
B–W
G
R–W
56 NK1
18 NK1
34 NK1
B
G
R
25 C
19 C
27 C
SHB4
SHG4
SHRL
K34(A), K35(B), K36(C)
Suspension Control ECU
SHB1
SHG1
SHFR
SHB2
SHG2
SHFL
PACC
SPB
SPG
STG
TOIL
15 B
12 B
26 C
14 C
15 C
21 B
20 B
10 B
19 B
18 B
17 B
B
G
L
B
G
W
W
B
G
G
W
3 AK1
5 AK1
4 AK1
6 AK1
8 AK1
7 AK1
15 KL1
16 KL1
14 KL1
13 KL1
11 KL1
B
G
L
B
G
W
W
B
G
G
W
2 Az2
6 Az2
7 Az2
4 Az1
7 Az1
8 Az1
6 iL1
4 iL1
2 iL1
1 iL1
3 iL1
R
B
W
R
B
W
W
B
G
G–B
W–R
3
1
2
3
1
2
2
1
3
1
2
SHB
SHG
SHFR
SHB
SHG
SHFL
PACC
SHB
SHG
SBL
TOIL
z34
Front Height Control Sensor
Sub–Assembly RH
z35
Front Height Control Sensor
Sub–Assembly LH
i2
Pressure Accumulator Sensor
i1
Fuel Temperature
Sensor


R
R
R
R
2
SLB
CRFL
N12
Front Shock Absorber Control Valve Assembly LH
1
B
28 NK1
B
23 C
CRFL
2
SLB
CRFR
N10
Front Shock Absorber Control Valve Assembly RH
1
G–W
12 NK1
G
11 C
CRFR
R
5 NK1
R
1 C
SLB
K34(A), K35(B), K36(C)
Suspension Control ECU
SGFR
SGB1
SGG1
SGFL
SGG2
SGB2
RAL+
RAL–
RBL+
RBL–
24 A
15 A
14 A
22 A
13 A
23 A
3 B
2 B
8 B
7 B
W
B
G
W
G
B
W
R
L
G
12 KL1
19 KL1
18 KL1
17 NK1
16 NK1
55 NK1
33 NK1
W
LG
GR
R
L
G
1
3
2
1
2
3
1
4
5
3
SGFR
SGB
SGG
SGFL
SGG
SGB
RAL+
RAL–
RBL+
RBL–
E RL
L35
Acceleration Sensor RH
K37
Acceleration Sensor LH
N8
Rear Shock Absorber Assembly LH
2
W–B
W–B
W–B
4 NK1
W–B
W–B
K3
K2



R
6
N4
No. 1 Height Control Valve Assembly
SLB
SLRL
SLFG
SLRG
ACH–
SLFR
SLFL
SLRR
2
8
5
7
4
3
1
G–B
B
L–R
B
G–Y
W
R
52 NK1
51 NK1
13 NK1
30 NK1
15 NK1
29 NK1
14 NK1
G
GR
L
B
R
W
R
22 C
30 C
29 C
10 C
7 C
8 C
9 C
SLRL
SLFG
SLRG
SLAC
SLFR
SLFL
SLRR
K34(A), K35(B), K36(C)
Suspension Control ECU
FAR+
FAR–
FBR+
FBR–
FAL+
FAL–
FBL+
FBL–
6 C
5 C
18 C
17 C
4 C
3 C
2 C
12 C
R
L
R
P
B
L
R
P
58 NK1
20 NK1
59 NK1
36 NK1
37 NK1
22 NK1
38 NK1
21 NK1
R
L–W
R–G
P
B
L–Y
R
P
1
4
5
3
1
4
5
3
FAR+
FAR–
FBR+
FBR–
FAL+
FAL–
FBL+
FBL–
E FR
E FL
N9
Front Shock Absorber Assembly RH
N11
Front Shock Absorber Assembly LH
2
2
W–B
W–B
W–B
W–B
W–B


L
W
L
W
2 B
1 B
K29(B), K39(C)
Junction Connector
2 C
1 C
L
V
8 A
7 A
CANL
CANH
K34(A), K35(B), K36(C)
Suspension Control ECU
RAR+
RAR–
RBR+
RBR–
5 B
14 B
13 B
4 B
W
R
L
G
32 NK1
53 NK1
31 NK1
54 NK1
W
R
L
G
1
4
5
3
RAR+
RAR–
RBR+
RBR–
E RR
N6
Rear Shock Absorber Assembly RH
2
W–B
W–B



L
W
1 EK4
2 EK4
L (RHD)
W (RHD)
W (LHD)
L (LHD)
W(RHD)
L(RHD)
L(RHD)
SB(RHD)
L(LHD)
SB(LHD)
E74
Junction Connector
13
2
12
1
16
5
4
15
10
9
GR
L
CANH
CANL
E11
Steering Sensor
2 AE3
32 EA1
31 EA1
1 AE3
3 AA1
4 AA1
(BAT)
15A
STOP
A30
Stop Light Switch
Assembly
W(RHD)
L(RHD)
45 A
STP2
25 A
CANL
11 A
CANH
A24(A)
Skid Control ECU with Actuator Assembly
FL+
FL–
FR+
FR–
RL+
RL–
RR+
RR–
18 A
4 A
3 A
17 A
20 A
6 A
5 A
19 A
V
LG
B
L
B
W
R
G
Speed Sensors

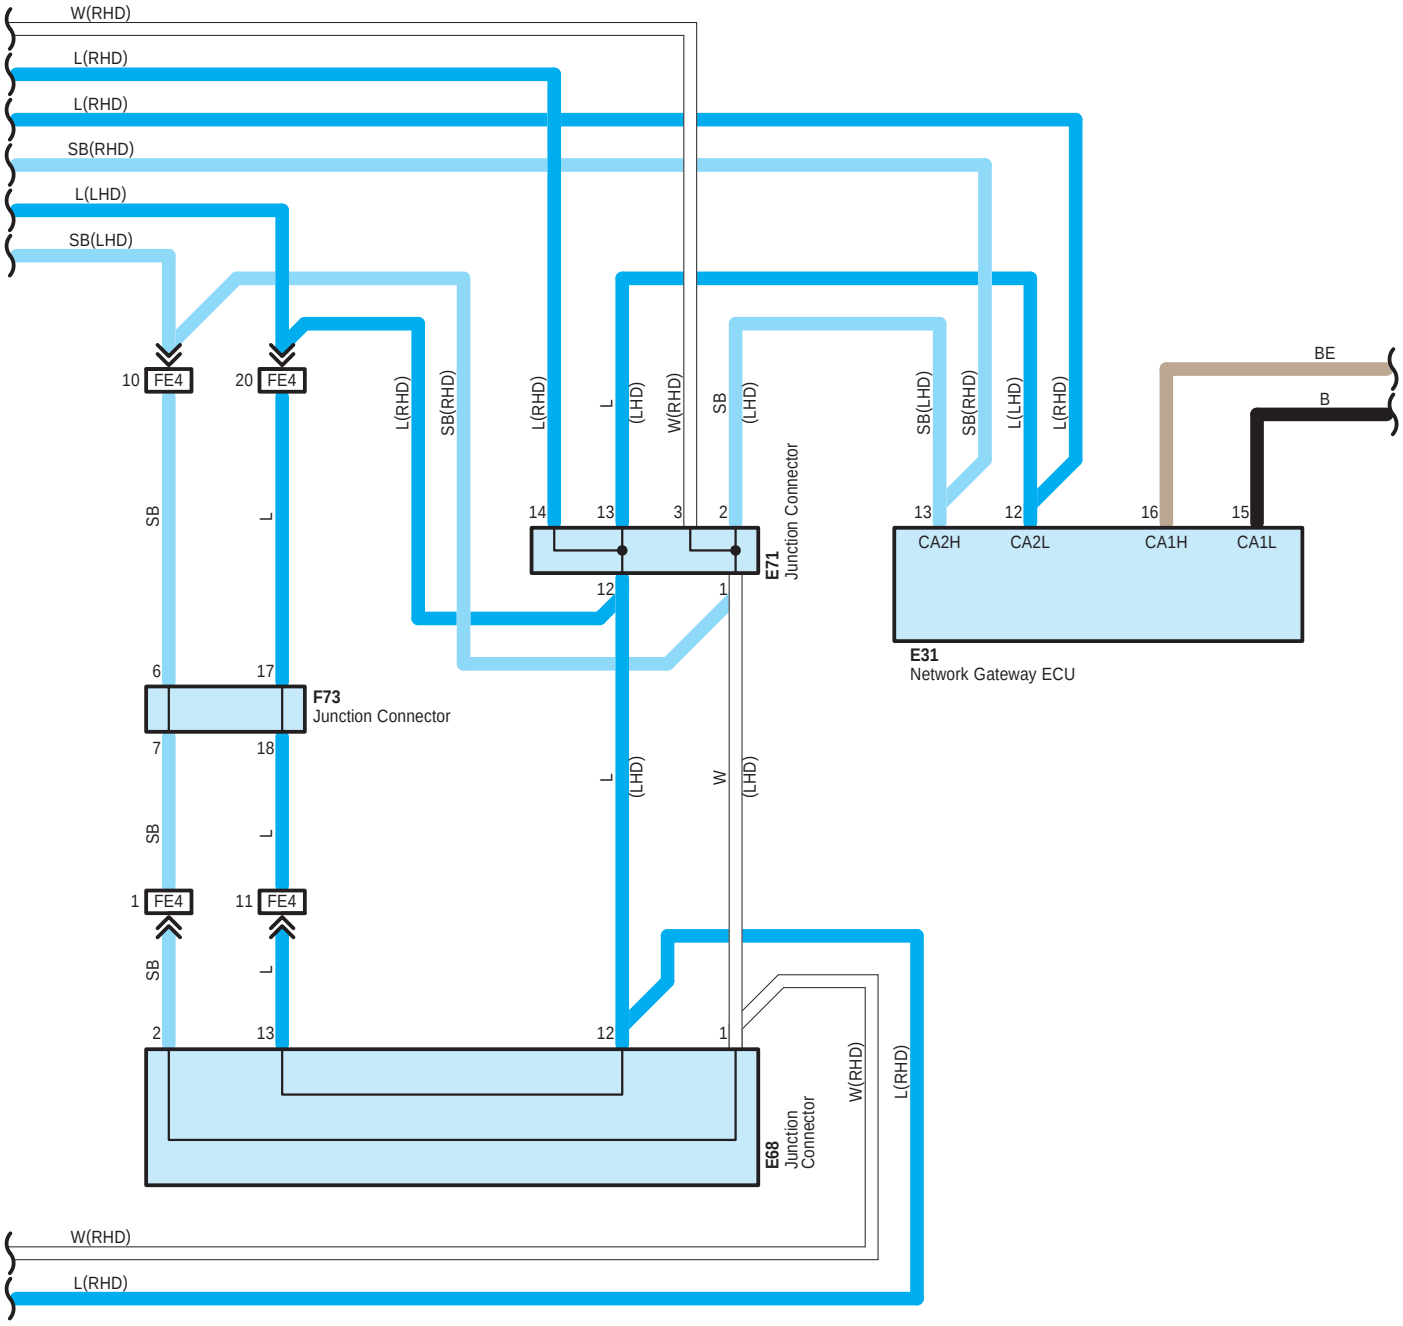


* 5 : 1VD–FTV w/ DPF
* 6 : 1VD–FTV w/o DPF

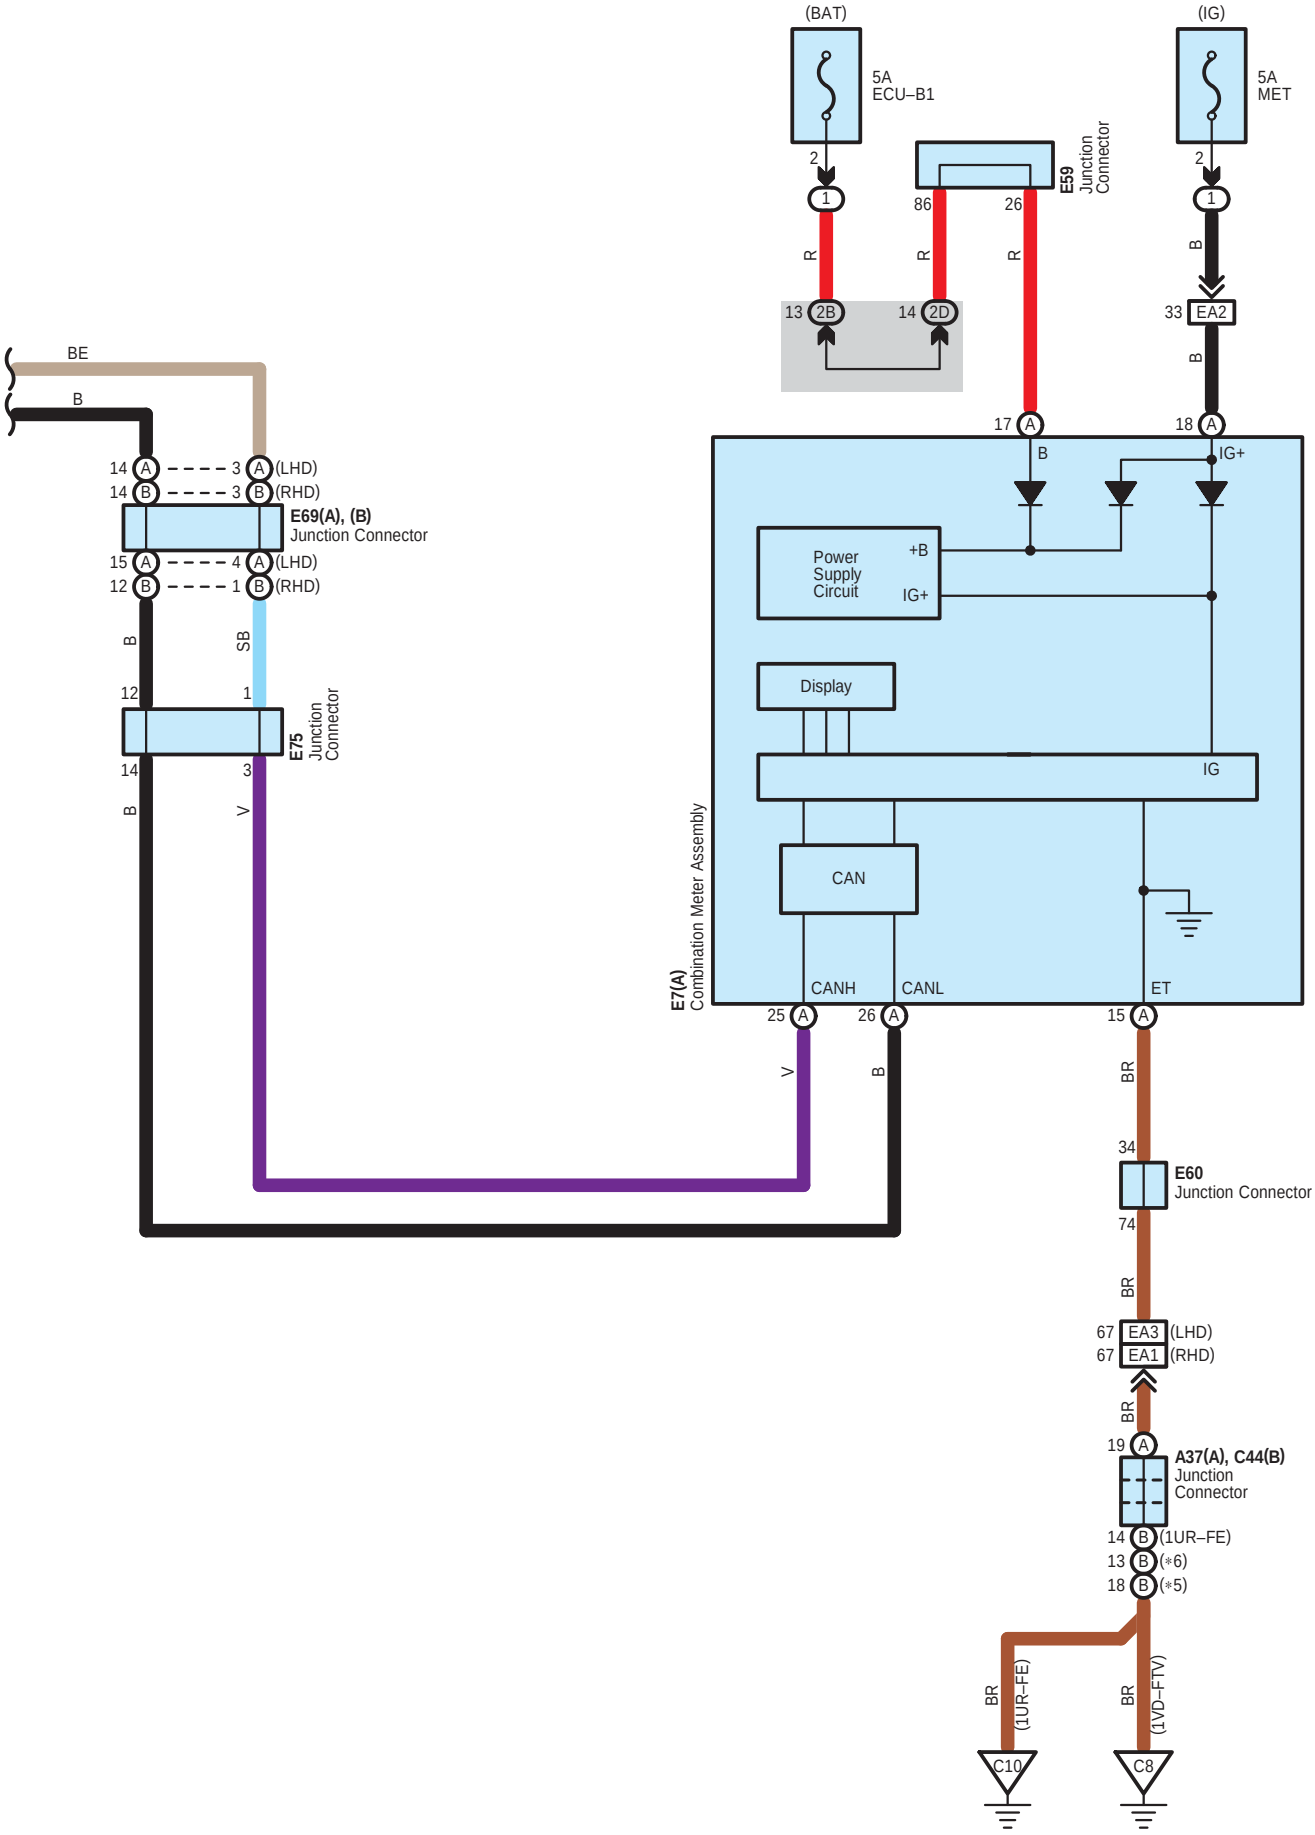
(BAT)
5A
ECU–B1
(IG)
5A
MET
E59
Junction
Connector
2
1
86
26
R
13 2B
14 2D
33 EA2
B
17 A
18 A
BE
B
14 A 3 A (LHD)
14 B 3 B (RHD)
E69(A), (B)
Junction Connector
15 A 4 A (LHD)
12 B 1 B (RHD)
SB
12
1
E75
Junction
Connector
14
3
V
IG+
Power
Supply
Circuit
+B
IG+
Display
IG
CAN
E7(A)
Combination Meter Assembly
CANH
CANL
ET
25 A
26 A
15 A
BR
34
E60
Junction Connector
74
67 EA3 (LHD)
67 EA1 (RHD)
19 A
A37(A), C44(B)
Junction
Connector
14 B (1UR–FE)
13 B (*6)
18 B (*5)
(1UR–FE)
(1VD–FTV)
C10
C8


A 24
Black

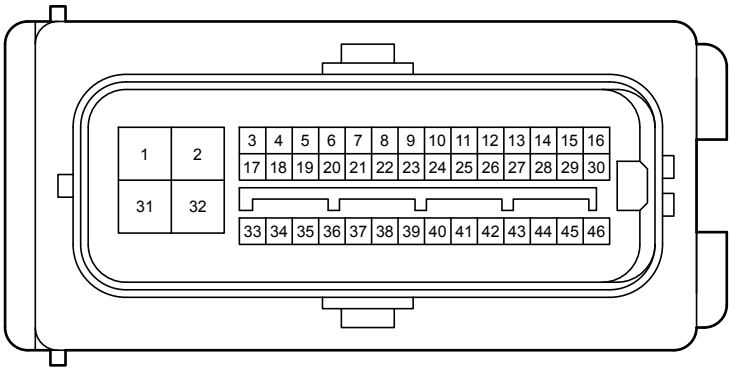


A 30
Gray




A 34
White

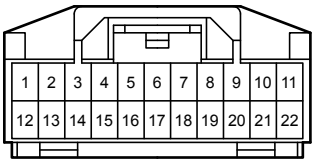


A 37
Blue

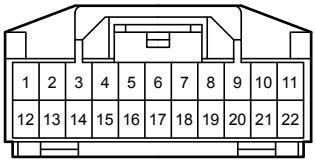


C 44
Blue

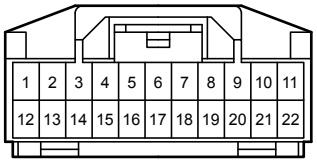


E 7
White

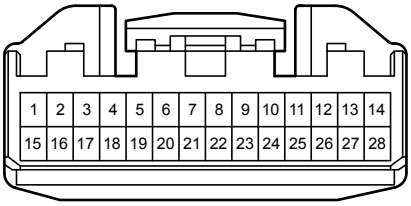


E 11
Gray

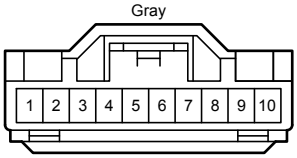


E 31
White

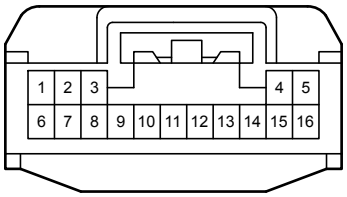


E 58

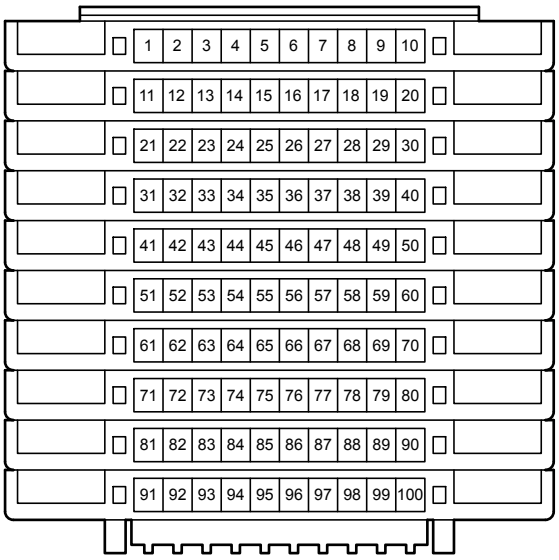


E 59

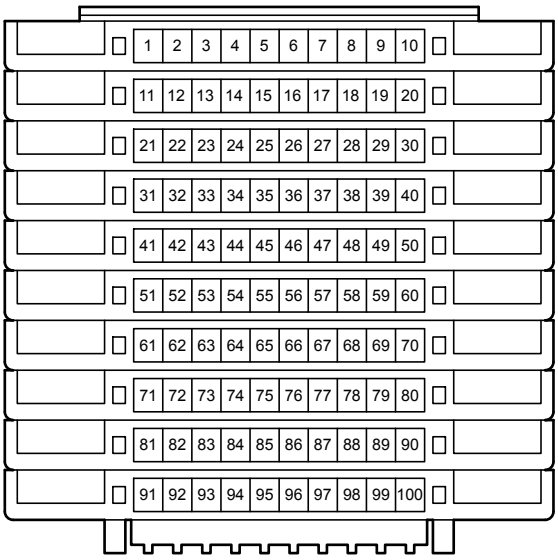


E 60

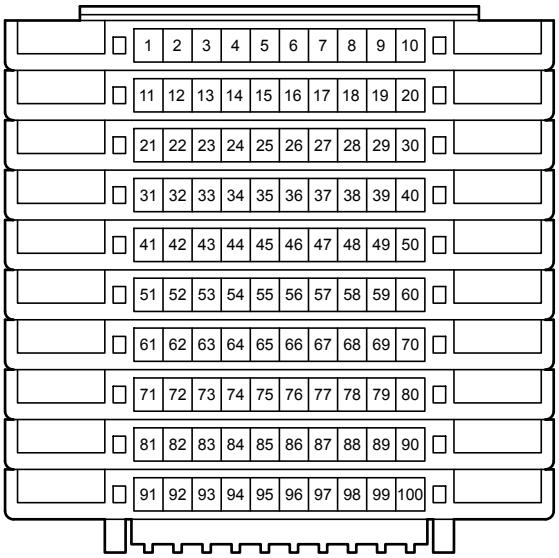


E 61

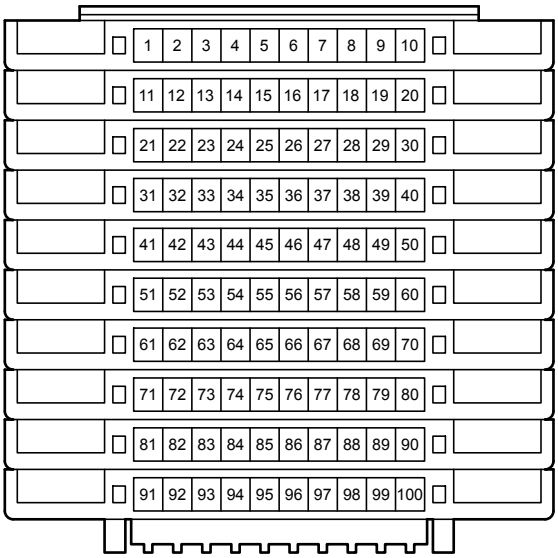


E 66
White

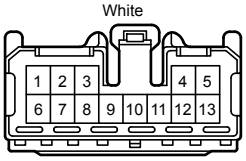


E 68
Gray

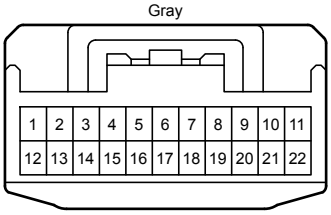


E 69
Gray

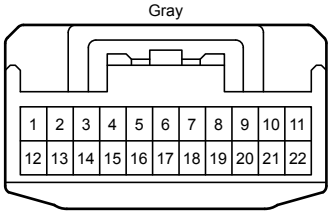


E 71
Gray

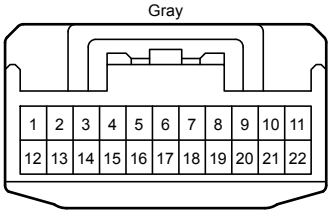


E 74
Gray

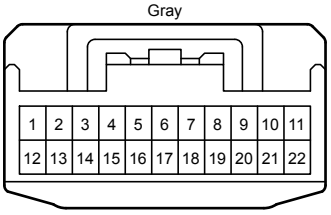


E 75
Gray

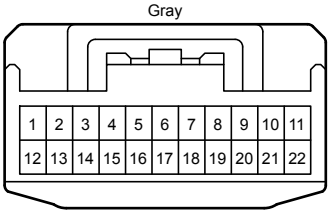


F 73
Blue

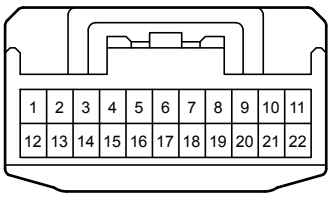


K 29
White




K 34
Black

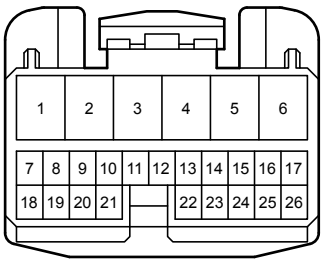


K 35
Black

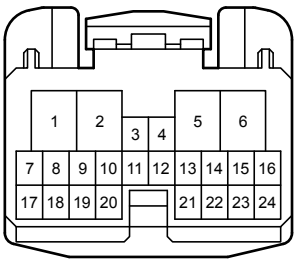


K 36
Black

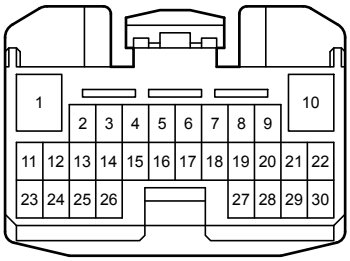


K 37
Black

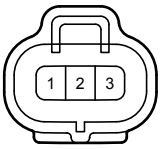


K 39
White




L 35
Black

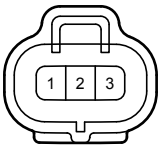


L 36
Black

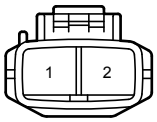


N 4
Black

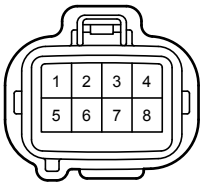


N 5
Black

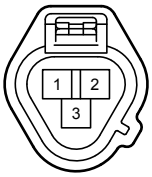


N 6
Gray

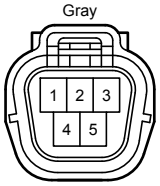


N 7
Black

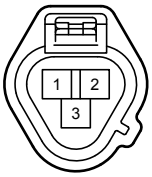

N 8
Gray

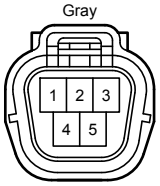


N 9
Gray

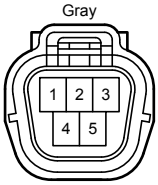

N 10
Gray




N 11
Gray

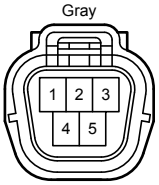

N 12
Gray




V 4
White

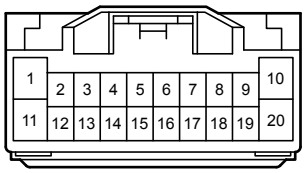


i 1
Gray




i 2
Black

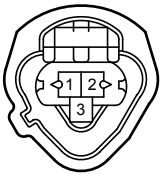


z 34
Black

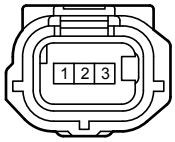


z 35
Black

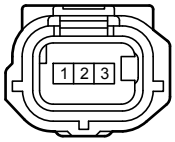


2B
White

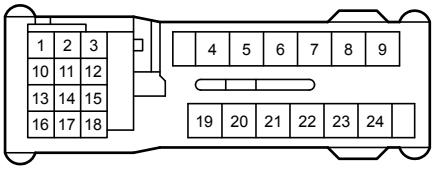


2D
White

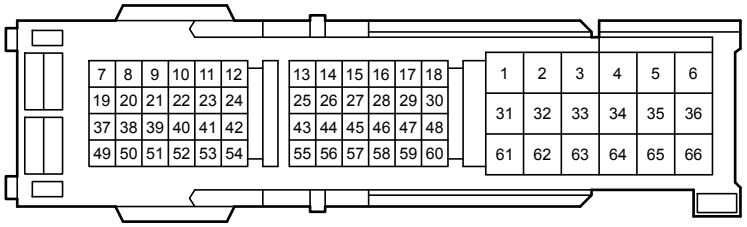


3C
White

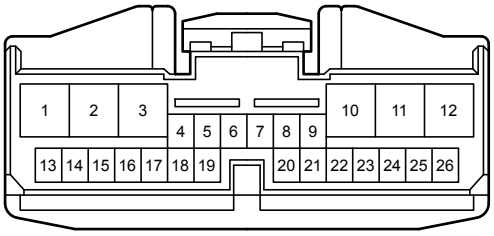


AA1
Gray

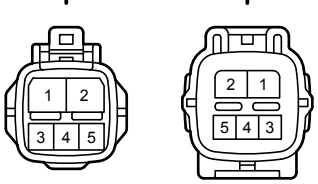


AE3
Gray

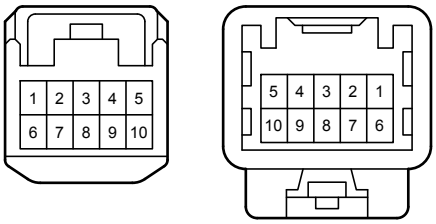


AK1
Blue

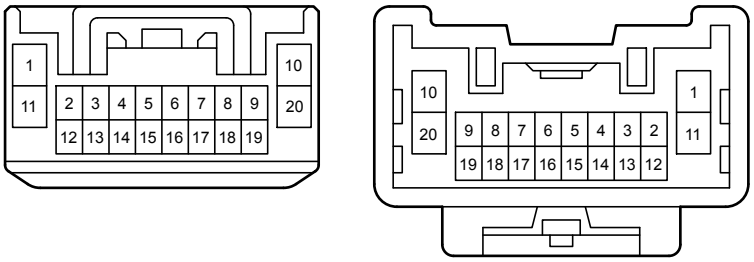


AL2
White

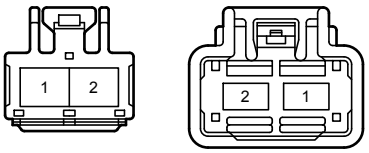

Az1
Gray

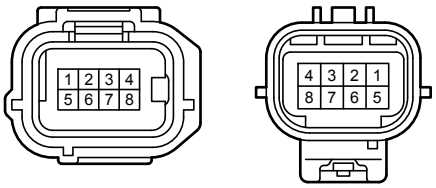



Az2
Gray

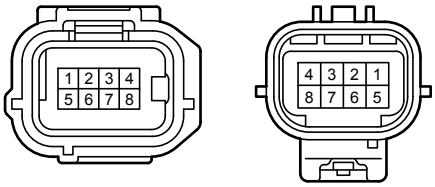

EA1

White

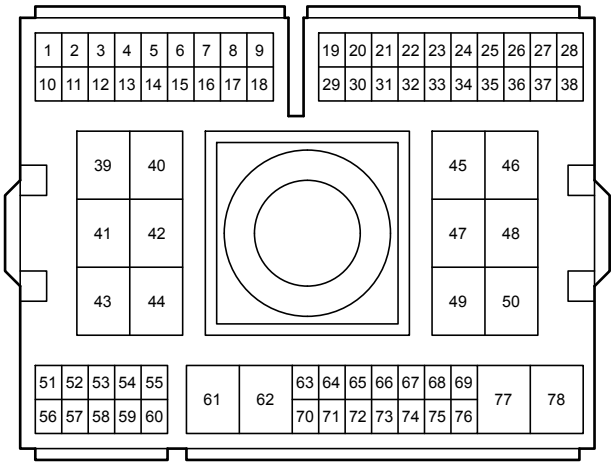


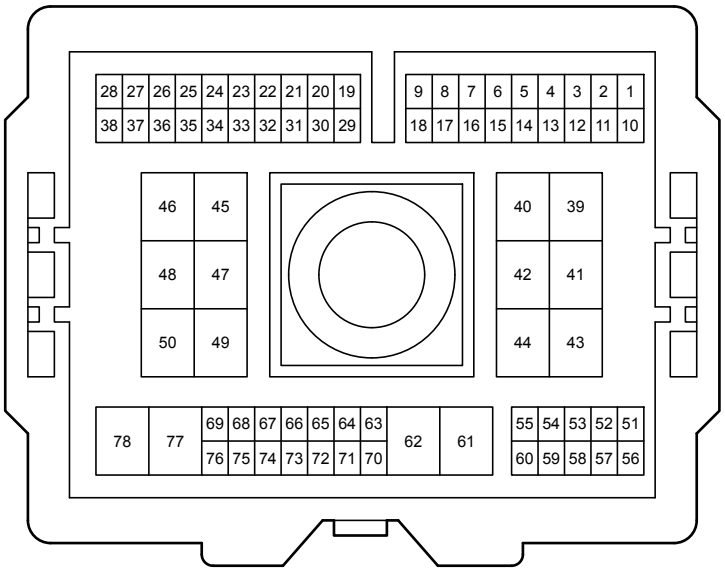


EA2

White


Gray

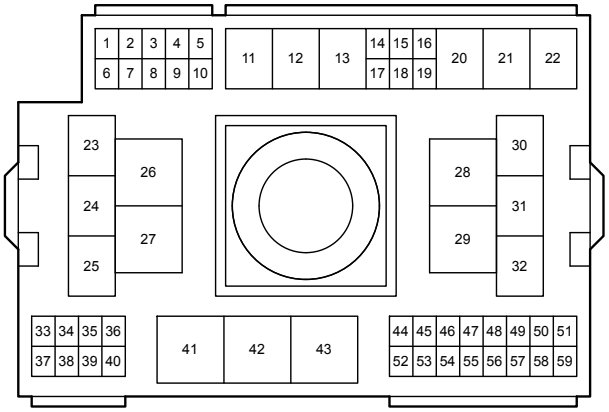

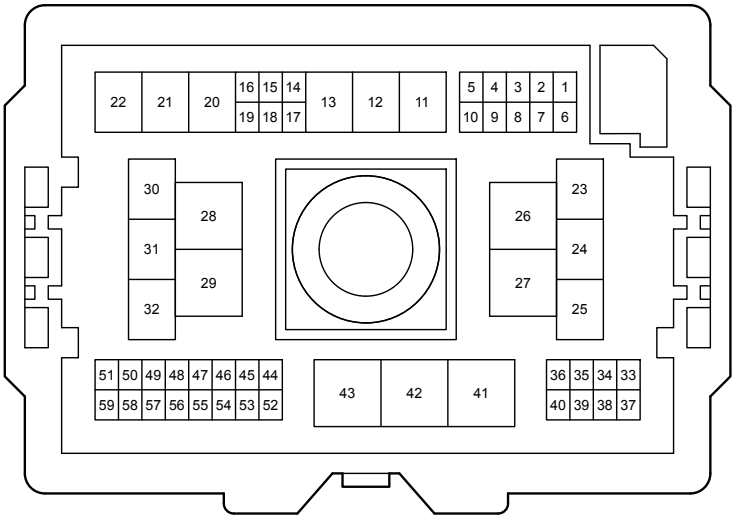

EA3


White

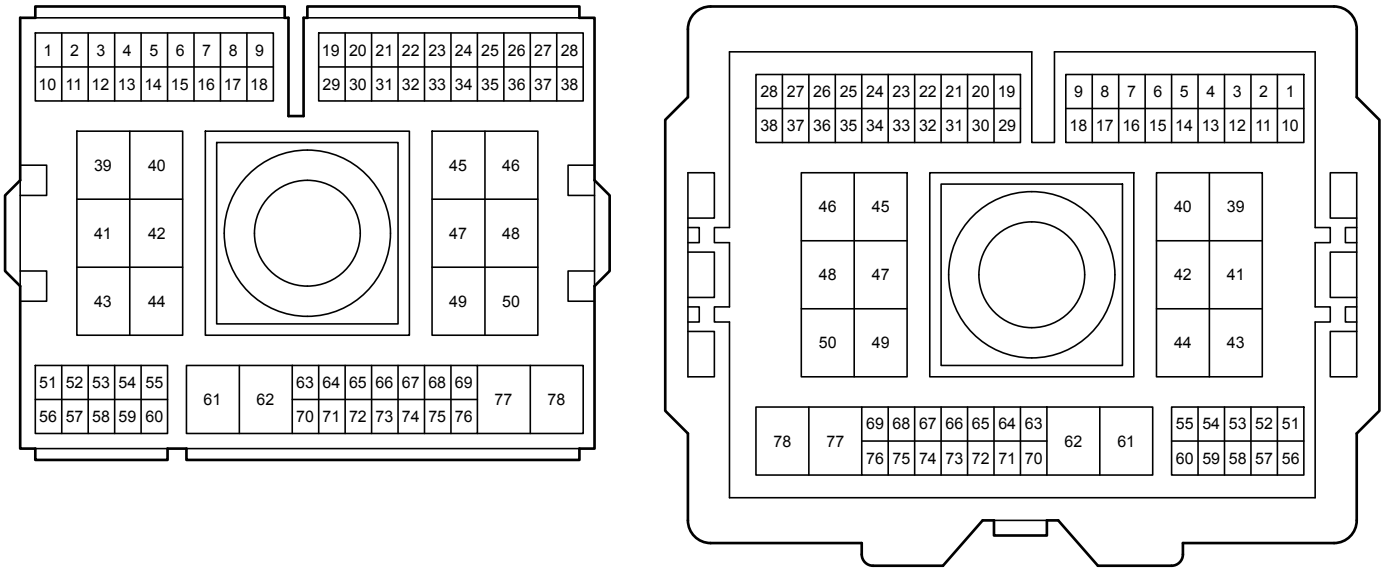


EK1

White


Blue

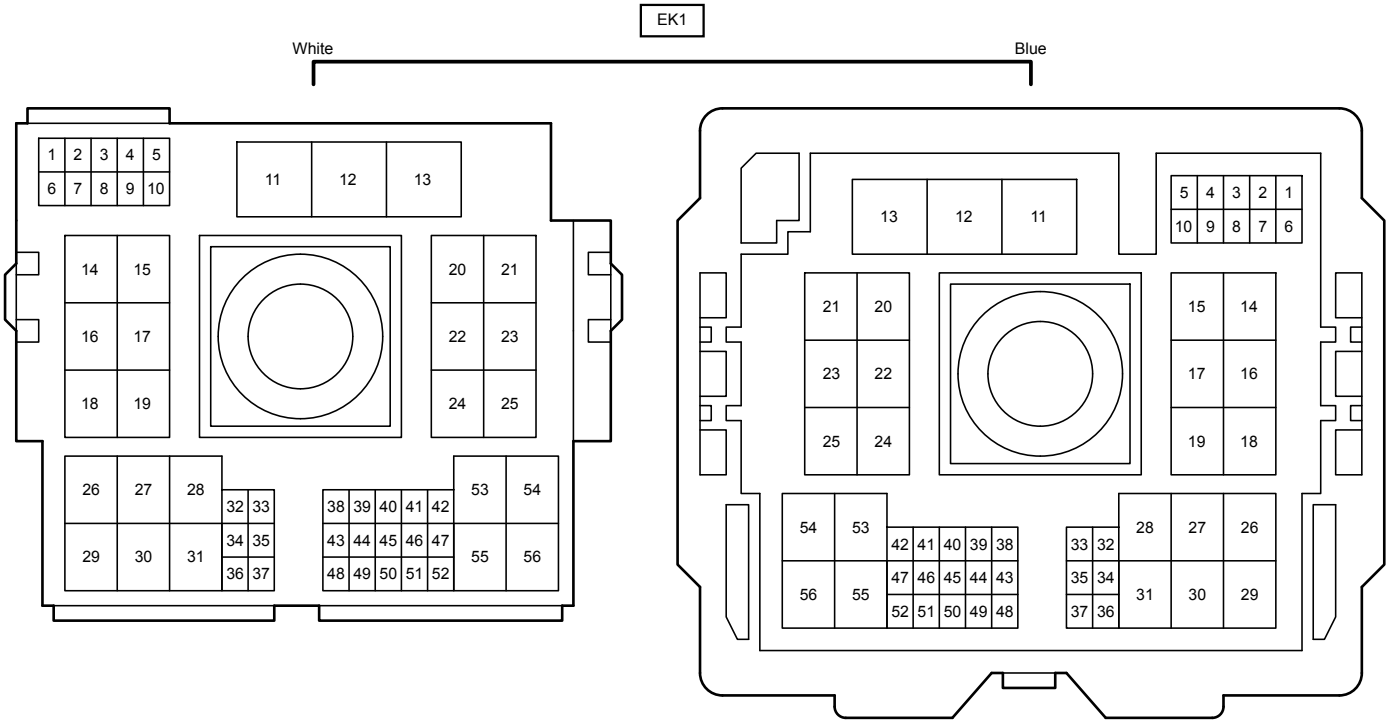


EK2
White

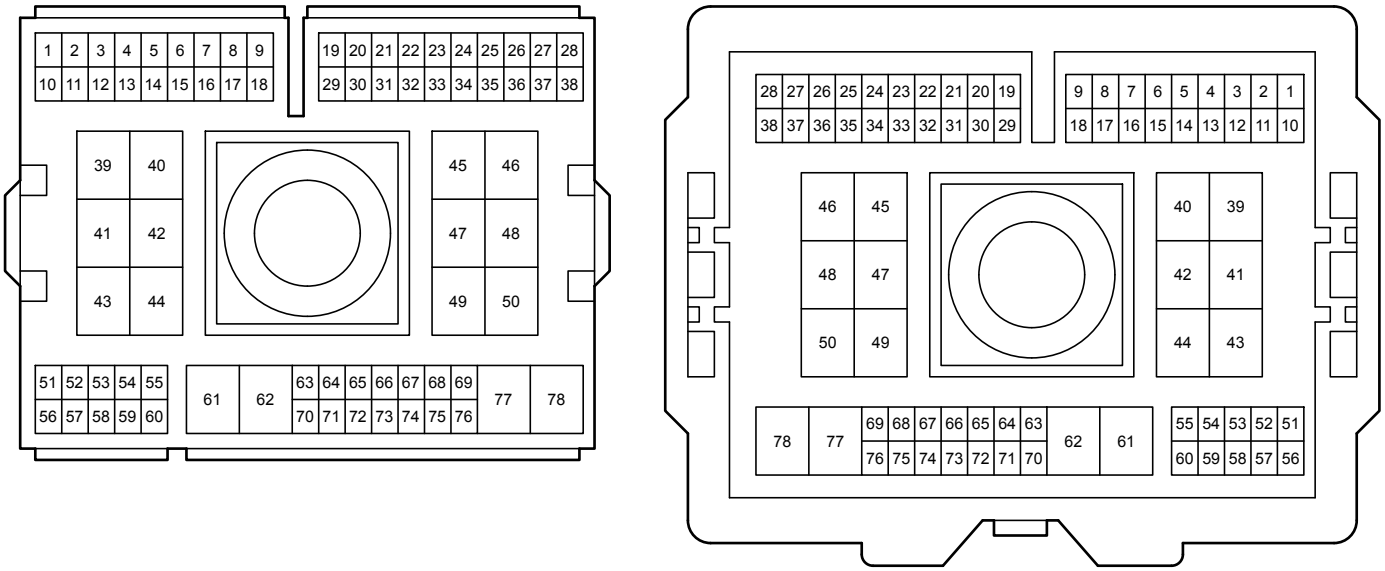


EK4
White

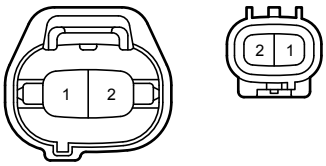


FE4
White

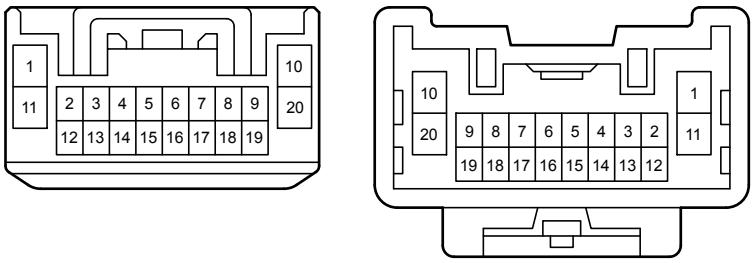


KL1
White

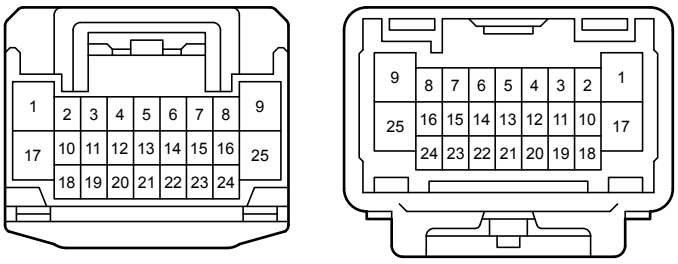



NK1
White

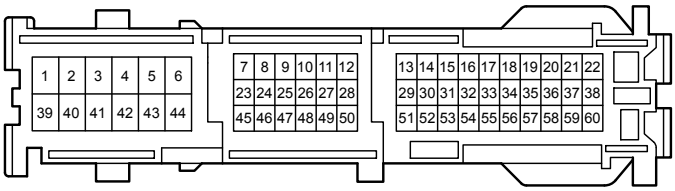

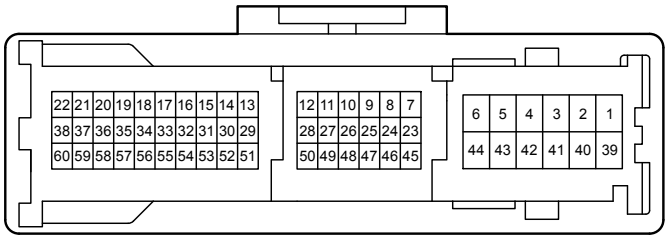



VE2
White

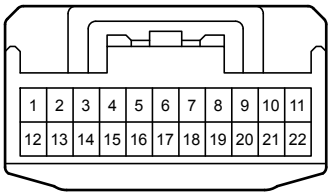

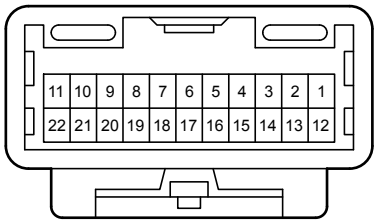

VE3
Gray

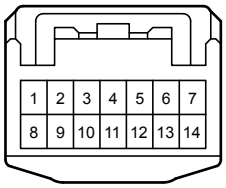

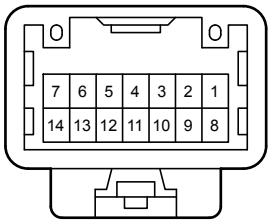

iL1
White

